


1. Pedal (MT Model)

1. 2200 cc MODEL

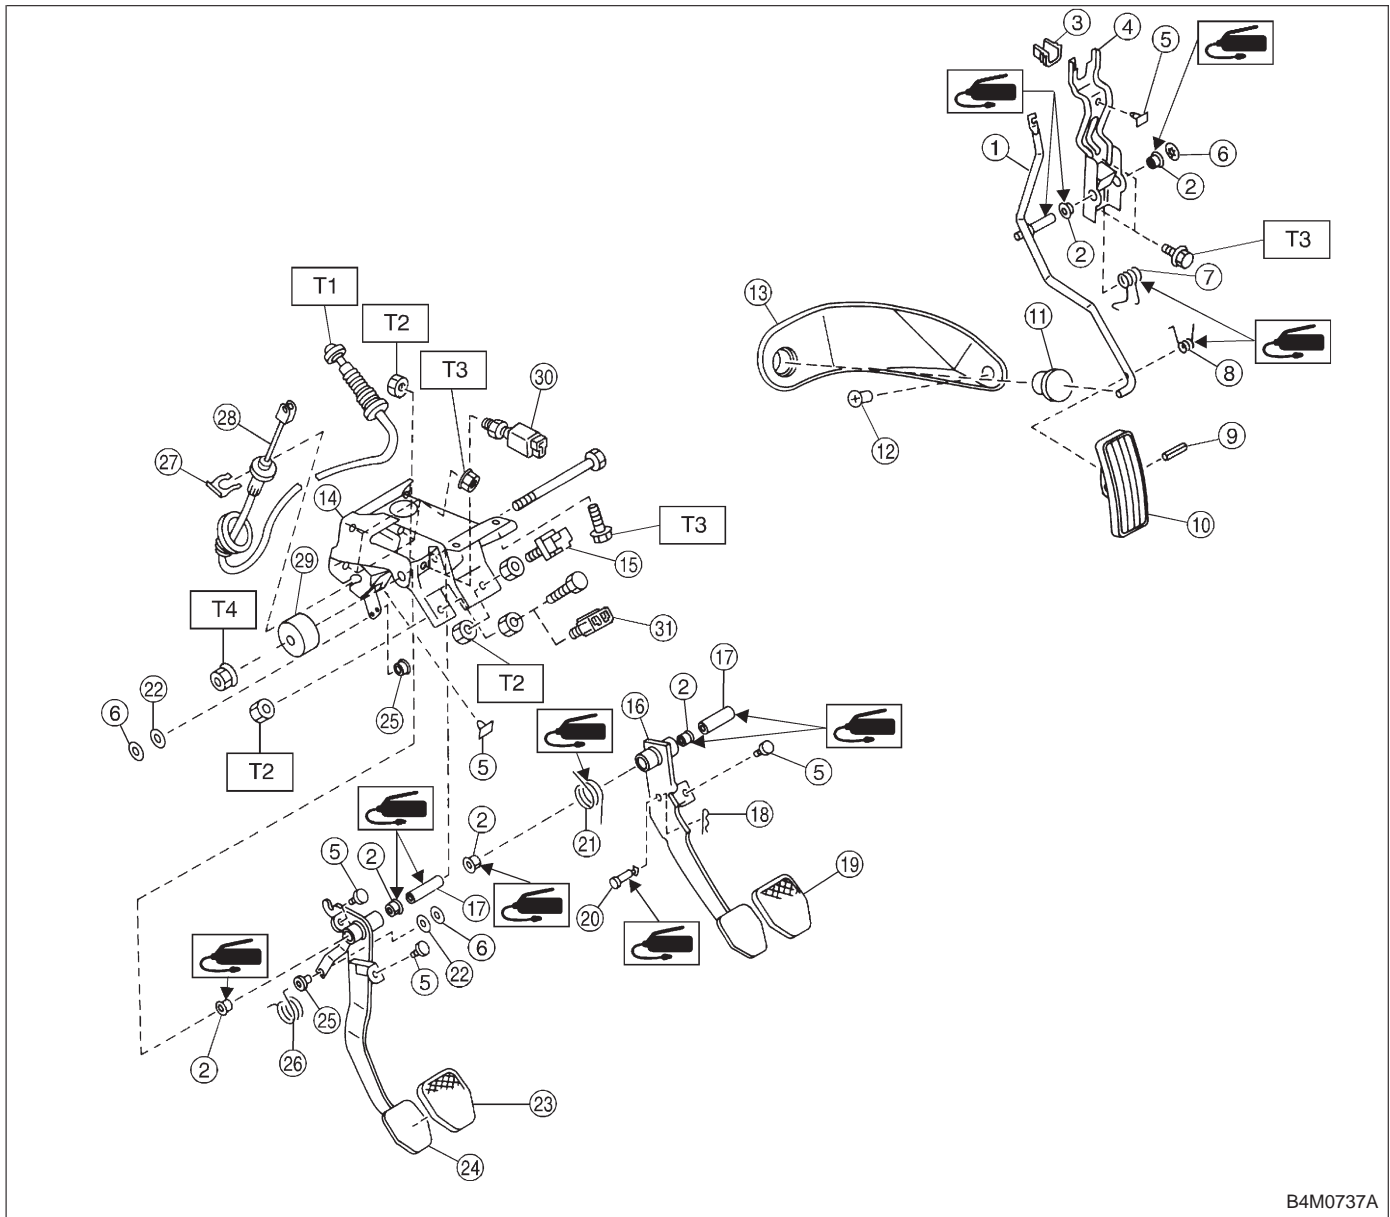


B4M0737A

- | | | |
|----------------------------|--|---------------------------------------|
| ① Accelerator pedal | ⑭ Pedal bracket | ⑳ Spring assist |
| ② Bushing | ⑮ Stop light switch (Without T.C.S.) / stroke sensor (With T.C.S.) | ㉑ Clutch cable clamp |
| ③ Holder | ⑯ Brake pedal | ㉒ Clutch cable |
| ④ Accelerator bracket | ⑰ Spacer | ㉓ Mass damper |
| ⑤ Stopper | ⑱ Snap pin | ㉔ Clutch switch (Starter interlock) |
| ⑥ Clip | ⑲ Brake pedal pad | ㉕ Clutch switch (With cruise control) |
| ⑦ Accelerator spring | ⑳ Clevis pin | |
| ⑧ Accelerator pedal spring | ㉑ Brake pedal spring | |
| ⑨ Spring pin | ㉒ Washer | |
| ⑩ Accelerator pedal pad | ㉓ Clutch pedal pad | |
| ⑪ Accelerator stopper | ㉔ Clutch pedal | |
| ⑫ Clip | ㉕ Bushing assist | |
| ⑬ Accelerator plate | | |

Tightening torque: N·m (kg·m, ft·lb)
T1: 5.9±1.5 (0.60±0.15, 4.3±1.1)
T2: 8±2 (0.8±0.2, 5.8±1.4)
T3: 18±5 (1.8±0.5, 13.0±3.6)
T4: 29±7 (3.0±0.7, 21.7±5.1)

2. 2500 cc MODEL

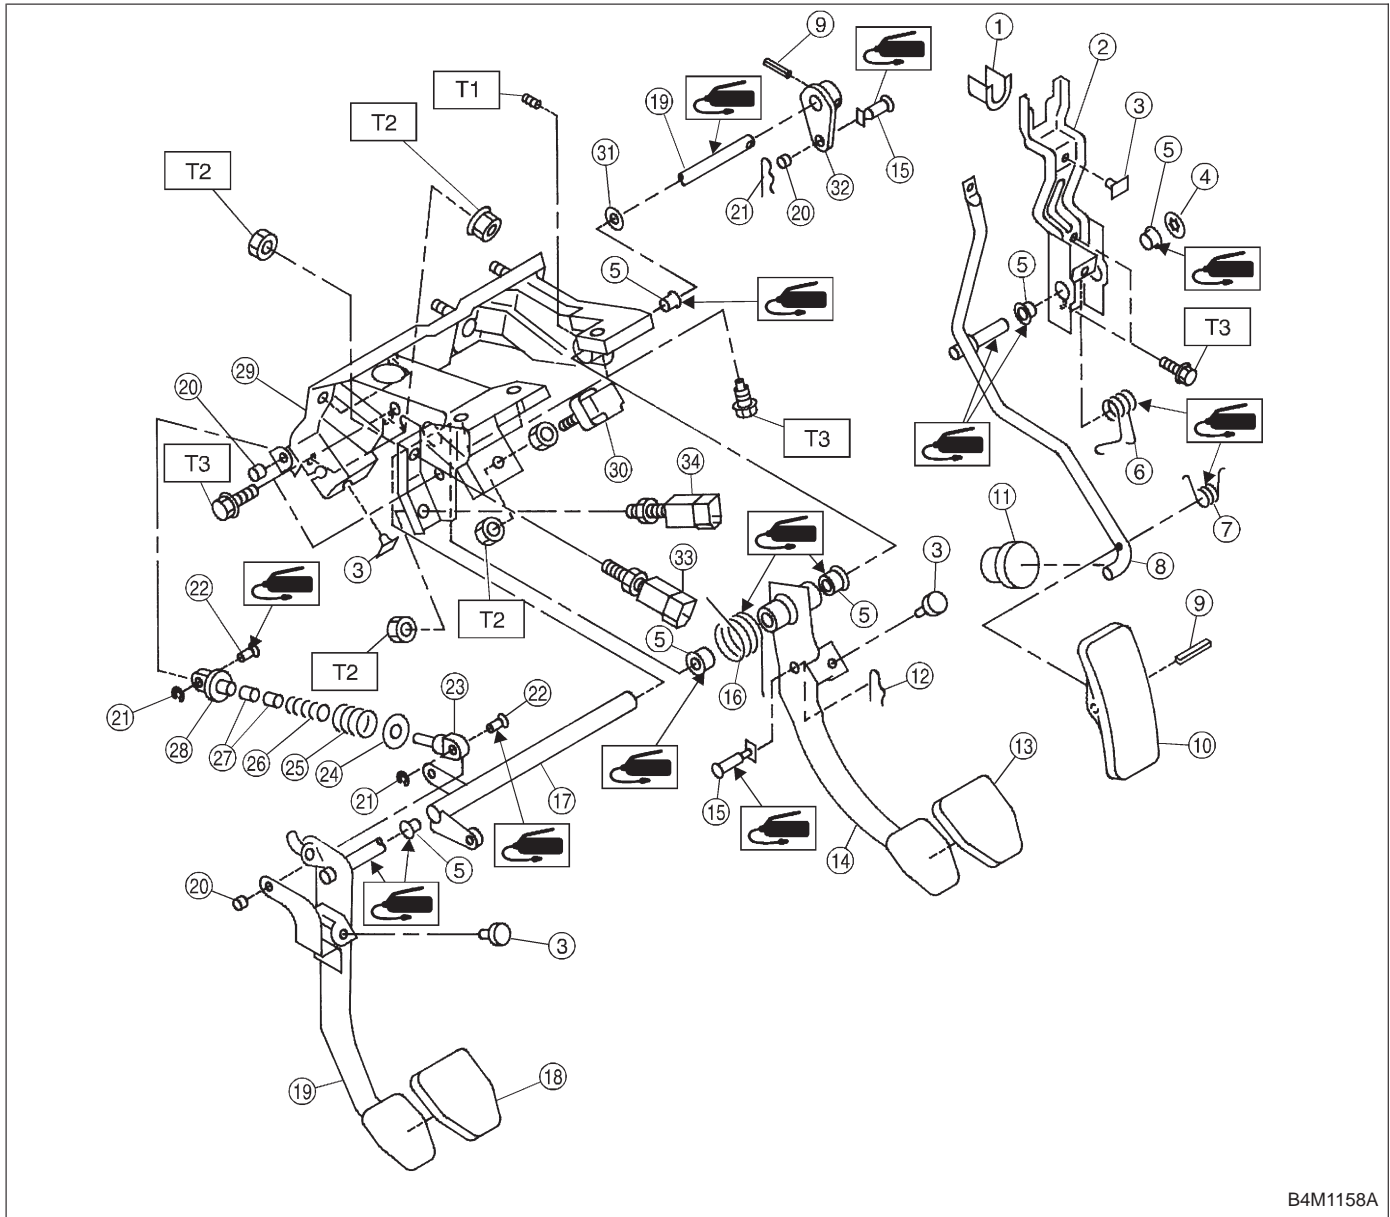

B4M1158A

- | | | |
|----------------------------|----------------------|---------------------------------------|
| ① Holder | ⑮ Clevis pin | ⑳ Pedal bracket |
| ② Accelerator bracket | ⑯ Brake pedal spring | ㉑ Stop light switch |
| ③ Stopper | ⑰ Bracket shaft | ㉒ Wave washer |
| ④ Clip | ⑱ Clutch pedal pad | ㉓ Lever |
| ⑤ Bushing | ⑲ Clutch pedal | ㉔ Clutch switch (Starter interlock) |
| ⑥ Accelerator spring | ⑳ Bushing C | ㉕ Clutch switch (With cruise control) |
| ⑦ Accelerator pedal spring | ㉑ Clip | |
| ⑧ Accelerator pedal | ㉒ Clutch clevis pin | |
| ⑨ Spring pin | ㉓ Assist rod | |
| ⑩ Accelerator pedal pad | ㉔ Assist plate A | |
| ⑪ Accelerator stopper | ㉕ Assist spring A | |
| ⑫ Snap pin | ㉖ Assist spring B | |
| ⑬ Brake pedal pad | ㉗ Assist bushing | |
| ⑭ Brake pedal | ㉘ Assist plate ASSY | |

Tightening torque: N·m (kg·m, ft·lb)
T1: 2.2±0.5 (0.22±0.05, 1.6±0.4)
T2: 8±2 (0.8±0.2, 5.8±1.4)
T3: 18±5 (1.8±0.5, 13.0±3.6)
T4: 29±7 (3.0±0.7, 21.7±5.1)