
15. Rear Combination Light Assembly 5914426


A: REMOVAL S914426A18

1. SEDAN S914426A1801


1) Remove clips and then detach trunk rear trim.

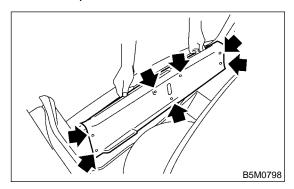

2) Remove hook (A) and then turn over the trunk side trim of rear portion.

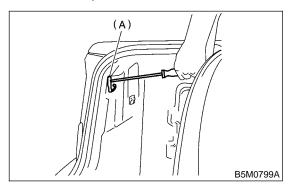

- 3) Remove harness clip (A).
- 4) Remove three nuts and then detach rear combination light while disconnecting connector.

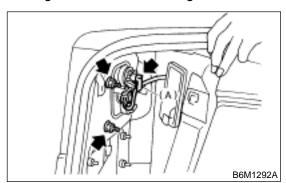


- 2. WAGON S914426A1802
- 1) Remove two rear quarter trim covers.

2) Remove two nuts and then remove rear combination light while disconnecting connector.

NOTE:

Before removing the nuts, apply a few turns of butyl tape to the tip of the service tool. This prevents the nuts from falling during removal.

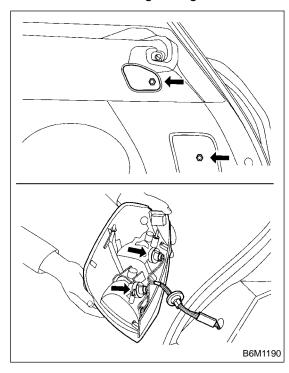

B: INSTALLATION S914426A11

Install in the reverse order of removal.