


21. Remote Control Mirror Switch

S905342


A: REMOVAL

S905342A18

- 1) Remove power window main switch panel.

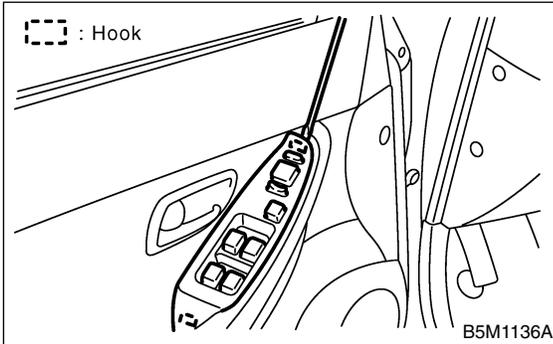

- 2) Remove four hook to remove remote control mirror switch.

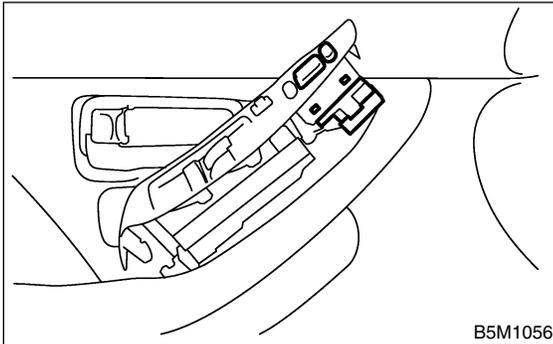

B: INSTALLATION

S905342A11


Install in the reverse order of removal.

REMOTE CONTROL MIRROR SWITCH

Glass/Windows/Mirrors

C: INSPECTION S905342A10

Move rearview mirror switch to each position and check continuity between terminals.

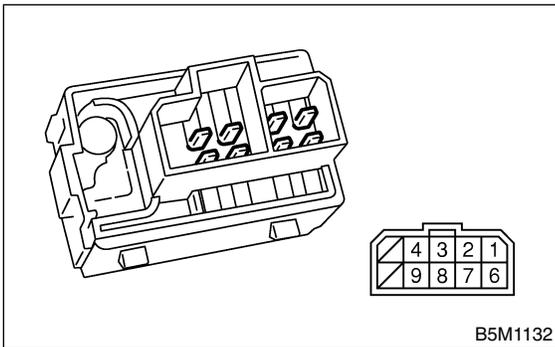

Change over switch left position:

Switch position	Terminal No.	Standard
OFF	—	More than 1M Ω
UP	7 and 4, 2 and 1	Less than 1 Ω
DOWN	7 and 2, 4 and 1	Less than 1 Ω
LEFT	9 and 4, 2 and 1	Less than 1 Ω
RIGHT	9 and 2, 4 and 1	Less than 1 Ω

Change over switch right position:

Switch position	Terminal No.	Standard
OFF	—	More than 1M Ω
UP	6 and 4, 2 and 1	Less than 1 Ω
DOWN	6 and 2, 4 and 1	Less than 1 Ω
LEFT	8 and 4, 2 and 1	Less than 1 Ω
RIGHT	8 and 2, 4 and 1	Less than 1 Ω

If NG, replace the switch.