


23. Wiper Deicer Switch S905623

A: REMOVAL S905623A18

Remove driver side switch panel, and then remove wiper deicer switch.

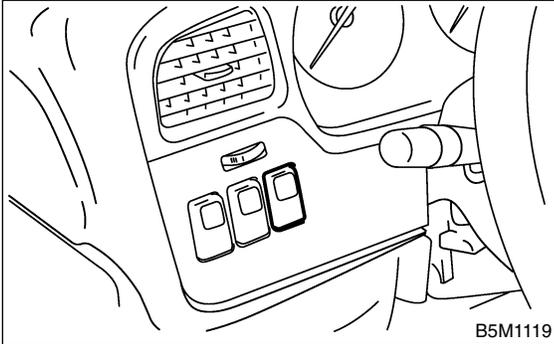

B: INSTALLATION S905623A11

Install in the reverse order of removal.

C: INSPECTION S905623A10

Move wiper deicer switch to each position and check continuity between terminals.

Switch position	Terminal No.	Standard
OFF	—	More than 1 M Ω
ON	3 and 5	Less than 1 Ω

If NG, replace the switch.