


# SUNROOF SWITCH

Sunroof/T-top/Convertible Top (Sunroof)

## 6. Sunroof Switch S910538

### A: REMOVAL S910538A18

- 1) Disconnect ground cable from battery.
- 2) Remove spot light lens (A) and sunroof switch mounting screw (B).

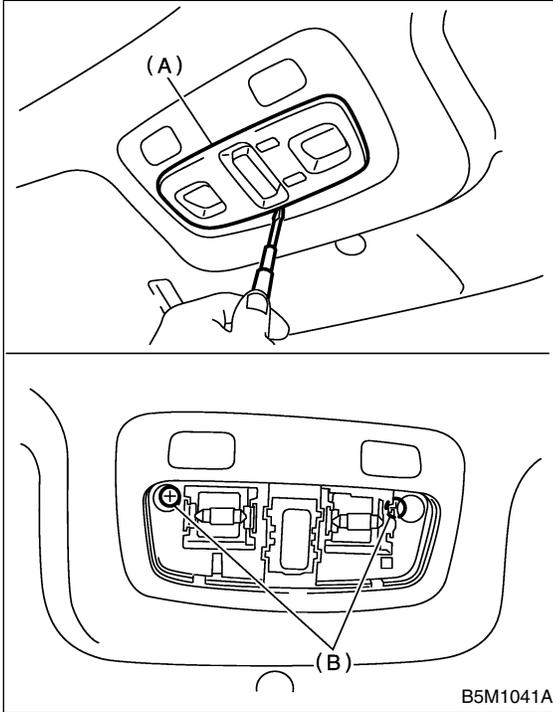

- 3) Disconnect harness connectors and remove sunroof switch.


### B: INSTALLATION S910538A11

Install in the reverse order of removal.

## C: INSPECTION S910538A10

### 1. SEDAN S910538A1001


Measure sunroof switch resistance.

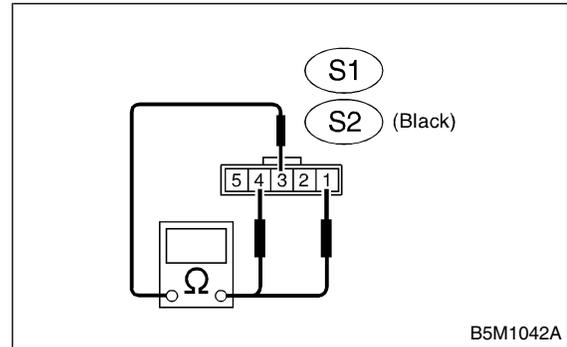

Switch position	Terminal No.	Standard
Open	S1: 3 and 4	Less than 1 Ω
Close	S1: 1 and 3	Less than 1 Ω
Tilt-up	S2: 3 and 4	Less than 1 Ω
Tilt-down	S2: 1 and 3	Less than 1 Ω

### 2. WAGON S910538A1002

Measure sunroof switch resistance.

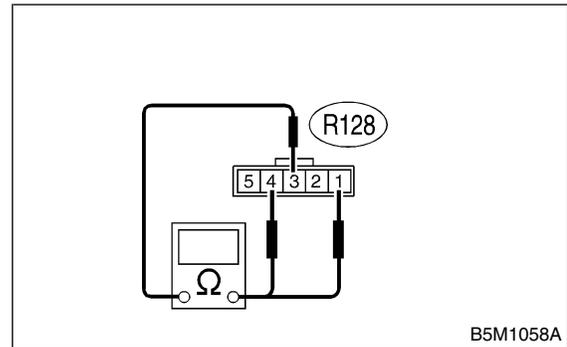

Switch position	Terminal No.	Standard
Open	3 and 4	Less than 1 Ω
Close	1 and 3	Less than 1 Ω