

## CLEAR MEMORY MODE


AIRBAG SYSTEM (DIAGNOSTICS)

---

### 9. Clear Memory Mode

#### A: OPERATION

- 1) Turn the ignition switch ON.
- 2) Connect the diagnosis terminal to diagnosis connector terminal No. 2 in the driver's seat lower cover area.

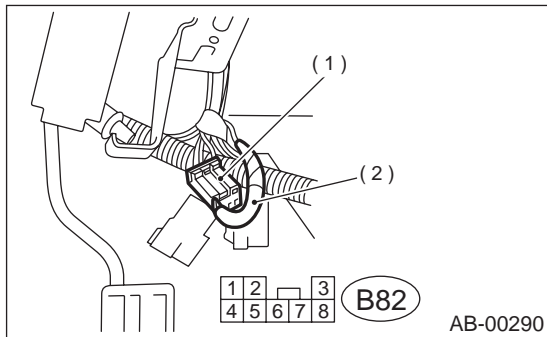

- 3) While the warning light flashes, connect another diagnosis terminal to diagnosis connector terminal No. 3.
- 4) Once the memory is erased, the warning light returns to the normal flash rate (0.6 sec on). The failure to recover the normal flash rate indicates that trouble parts still remain. Having repaired such parts, erase the memory again and confirm that the normal flash rate has returned.
- 5) When the memory has been cleared, disconnect the diagnosis terminal from the diagnosis connector.
- 6) Wind tape around the diagnosis terminal and return it to its original position.

## **CLEAR MEMORY MODE**

AIRBAG SYSTEM (DIAGNOSTICS)

---

**MEMO:**