

Bulkhead Wiring Harness (In Compartment)

WIRING SYSTEM

55. Bulkhead Wiring Harness (In Compartment)

A: LOCATION

| Connector | | | | Connecting to | |
|-----------|------|--------|------|---------------|--|
| No. | Pole | Color | Area | No. | Description |
| B31 | 12 | Yellow | C-1 | AB1 | Airbag wiring harness |
| B32 | 8 | ★ | C-2 | | Turn signal & hazard unit |
| B36 | 28 | ★ | B-2 | i1 | Instrument panel wiring harness |
| B37 | 8 | ★ | C-5 | i2 | Instrument panel wiring harness (Manual A/C) |
| B38 | 20 | ★ | B-5 | i3 | Instrument panel wiring harness |
| B40 | 16 | Black | C-2 | | Data link connector |
| B41 | 2 | ★ | B-2 | | Power window circuit breaker |
| B47 | 6 | Brown | B-5 | | Main relay |
| B52 | 24 | ★ | C-2 | | Fuse & relay box (F/B) |
| B53 | 20 | ★ | C-3 | | Shield joint connector (4AT model) |
| B54 | 24 | ★ | C-3 | | TCM |
| B55 | 24 | Gray | C-3 | | TCM (5AT model) |
| | 31 | ★ | | | TCM (4AT model) |
| B65 | 4 | Black | B-3 | | Stop and brake switch (Models with cruise control) |
| B68 | 8 | ★ | B-3 | | Roll connector |
| B69 | 4 | ★ | B-3 | | Parking switch |
| B70 | 18 | ★ | B-3 | | Combination switch |
| B71 | 17 | ★ | B-3 | | |
| B72 | 6 | ★ | B-3 | | Ignition switch |
| B75 | 2 | Green | C-4 | B76 | Test mode connector |
| B76 | 2 | Green | C-4 | B75 | |
| B77 | 7 | Green | B-4 | | Mode actuator (Manual A/C) |
| B83 | 8 | ★ | C-5 | | Joint connector |
| B85 | 2 | Black | B-2 | | Diode (Light) |
| B86 | 4 | ★ | B-4 | | Blower fan controller (Auto A/C) * Blower resistor (Manual A/C) |
| B87 | 2 | ★ | B-5 | | Blower fan motor |
| B88 | 5 | ★ | B-5 | | Evaporator thermo switch (Manual A/C) |
| | 2 | | | | Evaporator thermo switch (Auto A/C) |
| B90 | 16 | ★ | B-5 | R50 | Roof cord |
| B91 | 7 | Green | B-4 | | FRESH/RECIRC actuator |
| B96 | 8 | Black | B-1 | | Daytime running light control module |

| Connector | | | | Connecting to | |
|-----------|------|-------|------|---------------|---|
| No. | Pole | Color | Area | No. | Description |
| B97 | 20 | ★ | C-1 | R1 | Rear wiring harness |
| B98 | 16 | ★ | B-5 | R2 | |
| B106 | 2 | ★ | B-2 | | Clutch switch |
| B107 | 2 | Blue | B-2 | | Clutch switch (Model with cruise control) |
| B116 | 12 | ★ | D-4 | | AT select lever |
| B122 | 8 | ★ | C-5 | | Joint connector (E/G) |
| B134 | 34 | ★ | C-4 | | ECM |
| B135 | 35 | ★ | C-4 | | |
| B136 | 35 | ★ | C-4 | | |
| B137 | 31 | ★ | C-4 | | |
| B138 | 8 | ★ | C-5 | | Joint connector (H6 model and H4 Non-turbo model) |
| B152 | 10 | Gray | C-2 | | Fuse & relay box (F/B) |
| B158 | 8 | ★ | C-2 | | |
| B159 | 9 | Brown | C-2 | | |
| B177 | 2 | ★ | B-4 | | Wiper deicer |
| B224 | 2 | ★ | B-4 | | Key switch illumination |
| B225 | 40 | Black | C-2 | | Fuse (Relay block) |
| | | | | | Mirror heater relay |
| | | | | | Starter relay |
| | | | | | Front fog light relay |
| | | | | | Power window relay |
| | | | | | Blower fan relay |
| | | | | | Daytime running light relay |
| | | | | | Wiper deicer relay |
| | | | | | Seat heater relay |
| | | | | | |
| B228 | 15 | ★ | B-2 | | OP connector |
| B229 | 2 | Black | B-1 | | Diode (Parking brake) |
| B230 | 6 | Black | D-4 | | Yaw rate sensor (VDC) |
| B231 | 4 | ★ | B-4 | | Steering angle sensor (VDC) |
| B234 | 8 | ★ | B-4 | | CAN joint connector (VDC) |
| B235 | 7 | Green | B-4 | | Passenger seat air mix actuator (Auto A/C) |
| B242 | 10 | ★ | B-1 | | Daytime running light control module |
| B280 | 30 | ★ | C-3 | | Body integrated unit |
| B281 | 28 | ★ | C-3 | | |
| B282 | 16 | ★ | B-4 | | |
| B283 | 20 | ★ | B-4 | | Auto A/C control module |
| B292 | 3 | ★ | D-4 | | ABS G sensor |

Bulkhead Wiring Harness (In Compartment)


WIRING SYSTEM

| Connector | | | | Connecting to | |
|----------------------------|------|-------|------|---------------|---|
| No. | Pole | Color | Area | No. | Description |
| B315 | 6 | Black | B-3 | | Accelerator pedal position sensor |
| B327 | 6 | Brown | B-5 | | Oxygen sensor relay |
| B350 | 4 | ★ | B-3 | | Key lock solenoid |
| B351 | 2 | Black | B-4 | | Antenna |
| B352 | 8 | ★ | C-3 | | CAN joint connector |
| B355 | 8 | ★ | B-3 | | CAN joint connector (TCM) |
| B356 | 4 | Black | C-3 | | BACK-UP LIGHT RELAY (5AT MODEL) |
| B357 | 4 | Black | C-3 | | PV-IGN relay (5AT model) |
| B359 | 3 | Black | D-4 | | Lateral G sensor (5AT model) |
| B362 | 8 | Black | B-5 | | Relay holder |
| B370 | 2 | Black | C-1 | | Diode (Engine status) |
| B373 | 2 | ★ | B-1 | | Fuse & relay box (F/B) |
| B390 | 7 | Green | B-3 | | Driver seat air mix actuator (Auto A/C) |
| ★ : White or natural color | | | | | |

| Connector | | | | Connecting to | |
|----------------------------|------|--------|------|---------------|-----------------------------|
| No. | Pole | Color | Area | No. | Description |
| AB1 | 12 | Yellow | C-1 | B31 | Airbag wiring harness |
| AB2 | 4 | Yellow | B-4 | AB7 | Inflator (Driver seat) |
| AB6 | 28 | Yellow | C-4 | | Airbag control module |
| AB9 | 4 | Yellow | B-5 | AB10 | Inflator (Passenger's seat) |
| ★ : White or natural color | | | | | |

Bulkhead Wiring Harness (In Compartment)

WIRING SYSTEM

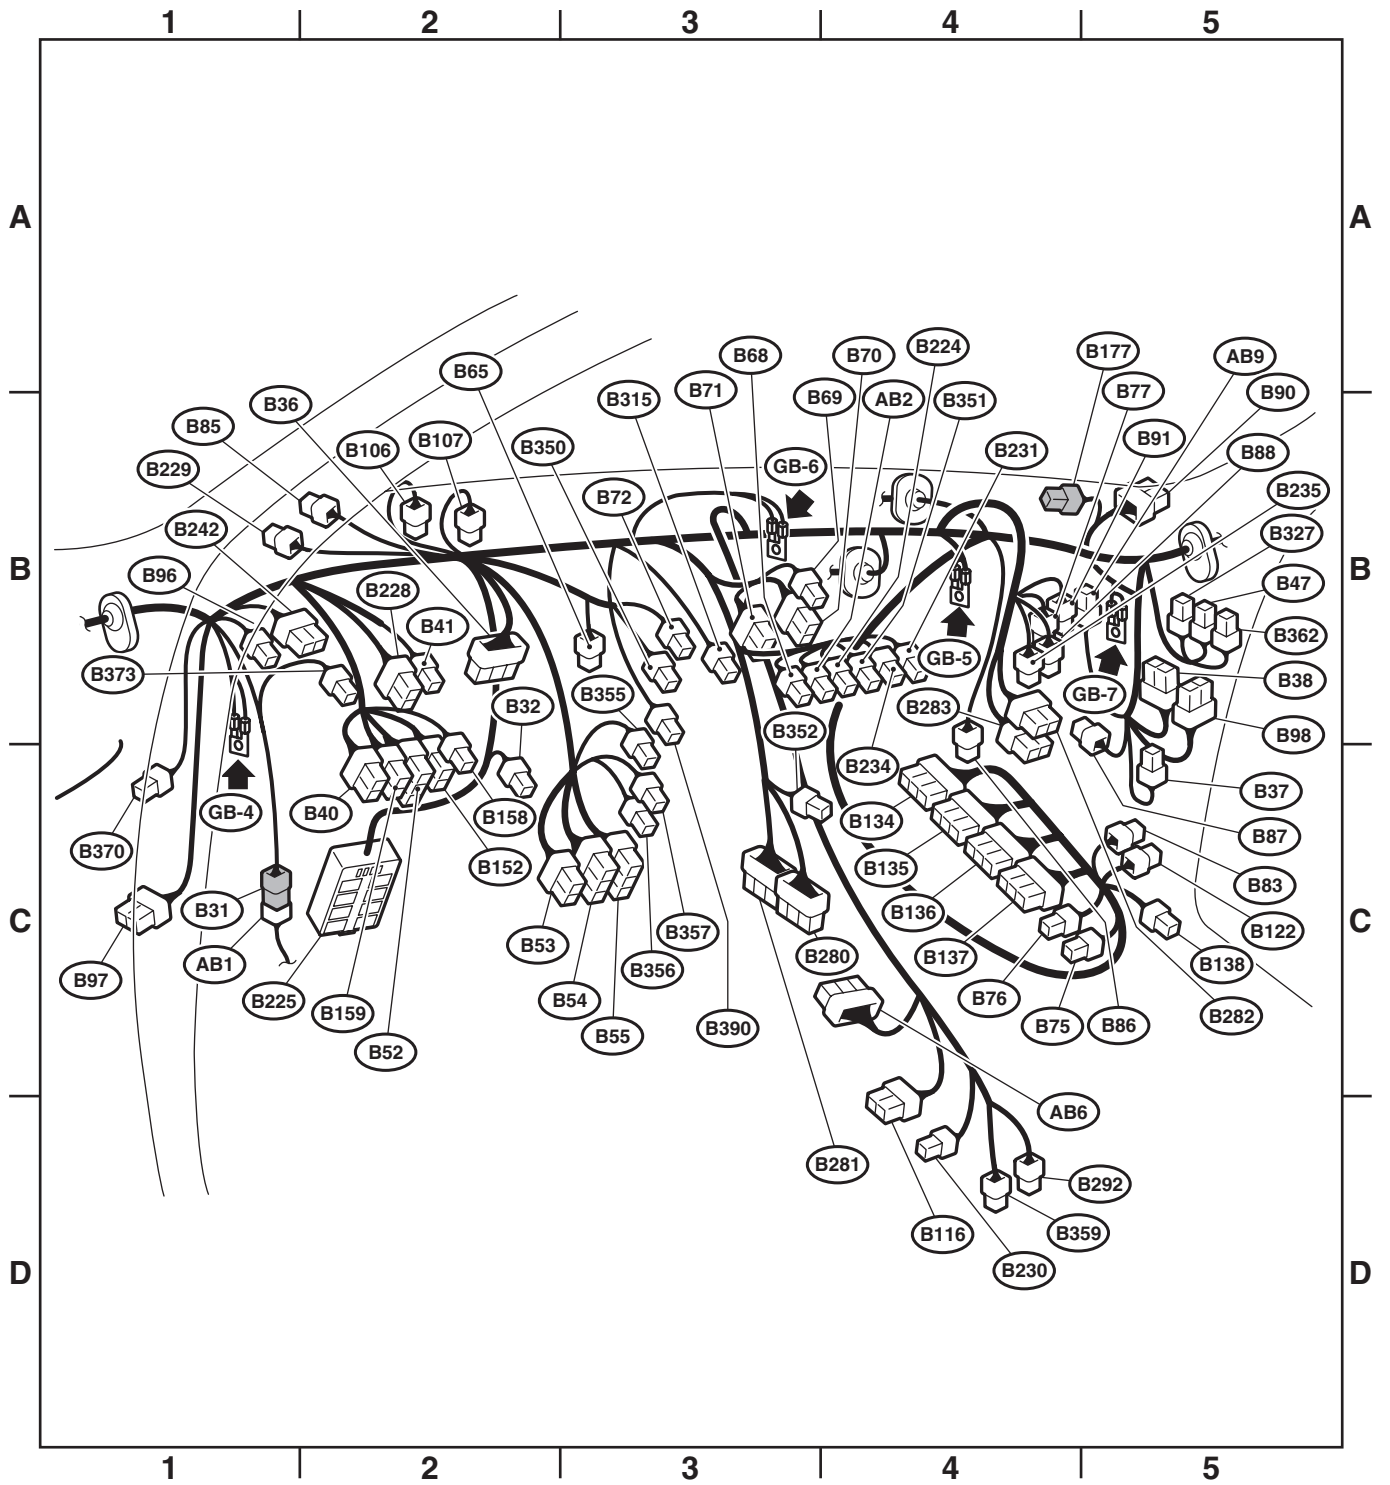

WI-09849