

## 60.Rear Wiring Harness and Trunk Lid Cord

## A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R15	8	★	C-2		Fuel cord 1
R19	2	★	B-2		High-mounted stop light
R20	2	★	B-4		Trunk room light
R22	3	★	B-1		Rear door switch LH
R24	8	★	B-4	R60	Trunk lid cord
R26	6	★	B-5		Rear combination light RH
R28	6	★	C-3		Rear combination light LH
R46	6	★	C-2	R67	Fuel cord 2
R47	3	Black	C-4		Fuel tank pressure sensor
R58	6	Gray	C-3		Fuel pump assembly
R59	2	★	C-3		Fuel gauge sub unit
R60	8	★	B-4	R24	Rear wiring harness
R65	1	★	B-2		Rear defogger
R66	2	★	B-4		High-mounted stop light (Rear spoiler)
R67	6	★	C-2	R46	Rear wiring harness
R68	2	Dark gray	C-3		Pressure control solenoid valve
R76	2	★	C-4		License plate light LH
R77	2	★	C-4		License plate light RH
R97	1	★	B-2		Radio antenna
R122	10	★	C-2		Fuel pump control unit
R143	2	Gray	C-4		Drain valve
R174	1	★	B-4		Noise filter
R186	3	★	C-4		Trunk lid actuator
R213	8	★	C-2		Rear wiring harness


★ : White or natural color

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB31	2	Yellow	B-2	AB39	Inflator (Curtain) LH
AB32	4	Yellow	C-1		Curtain airbag sensor LH
AB33	2	Yellow	B-4	AB40	Inflator (Curtain) RH

★ : White or natural color

# Rear Wiring Harness and Trunk Lid Cord

WIRING SYSTEM

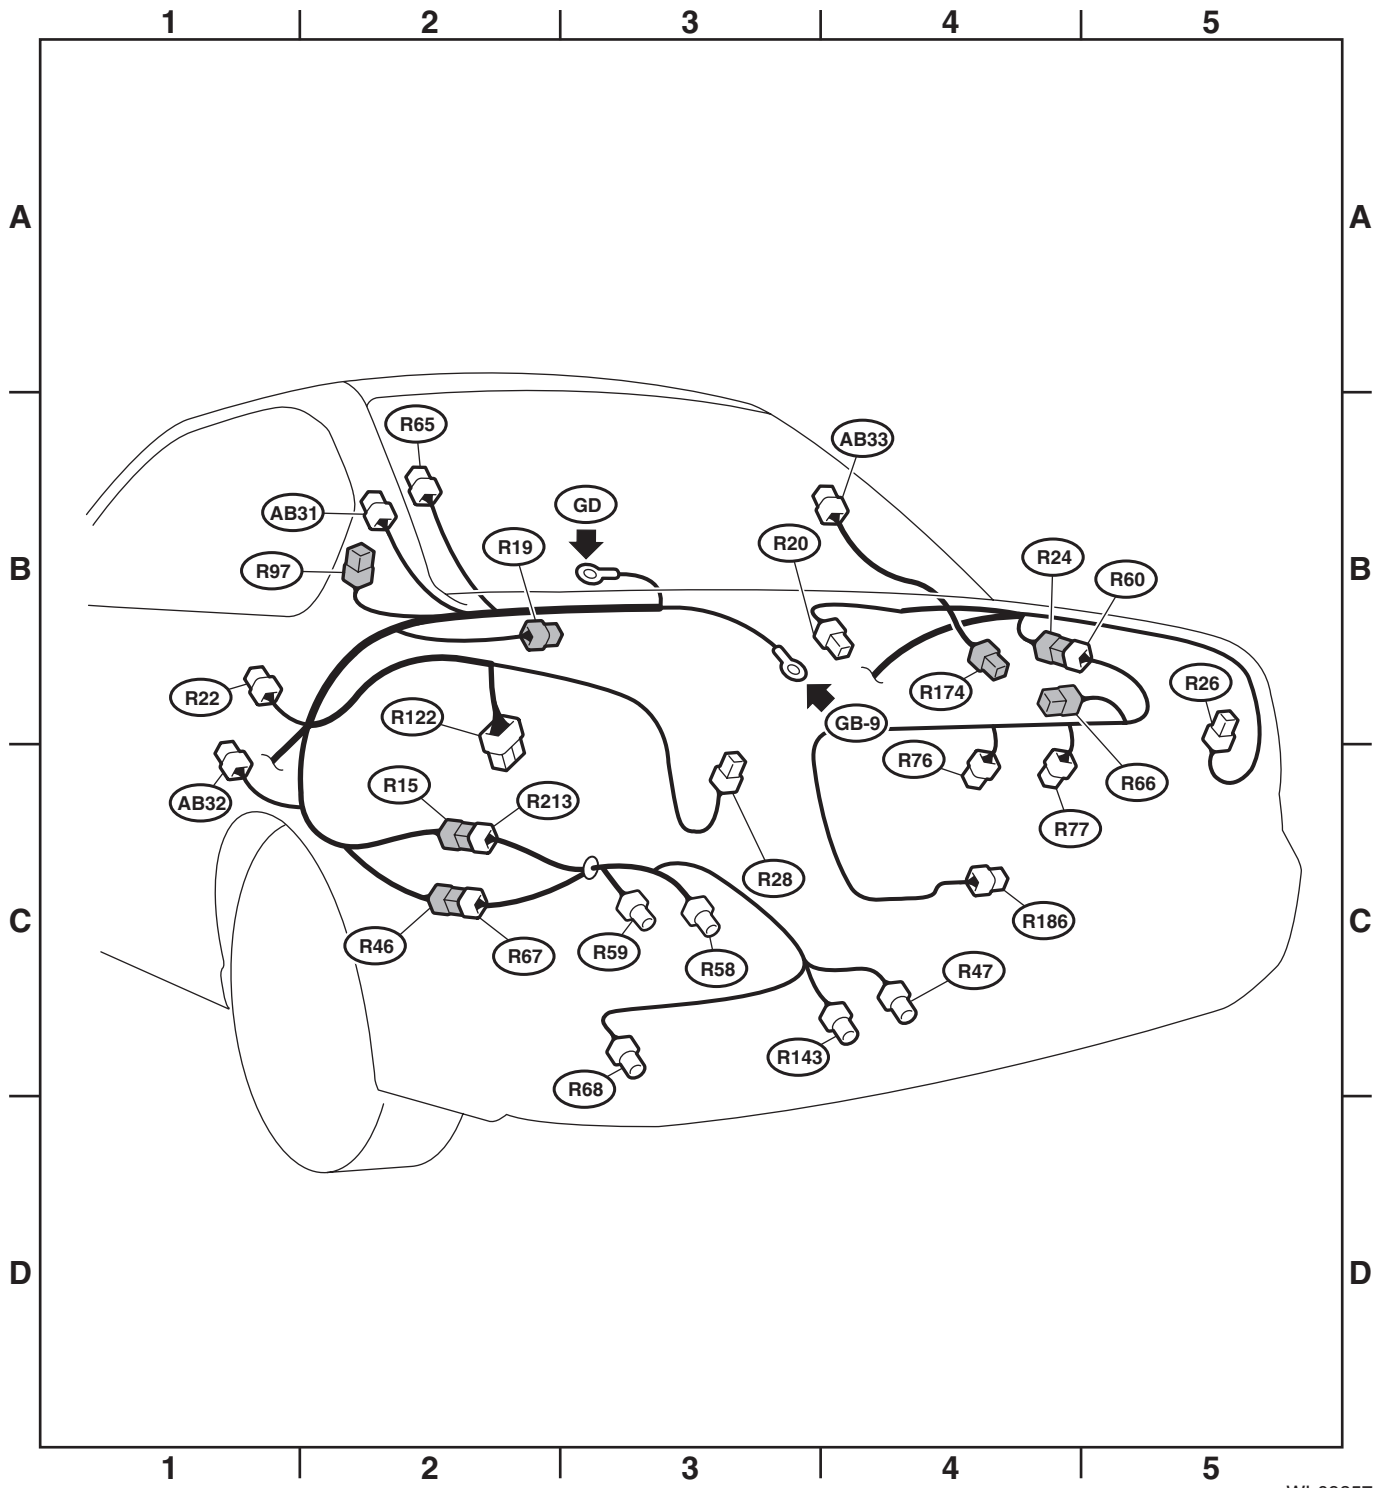

WI-09857