46. Vehicle Dynamic Control System S903441

A: SCHEMATIC S903441A21

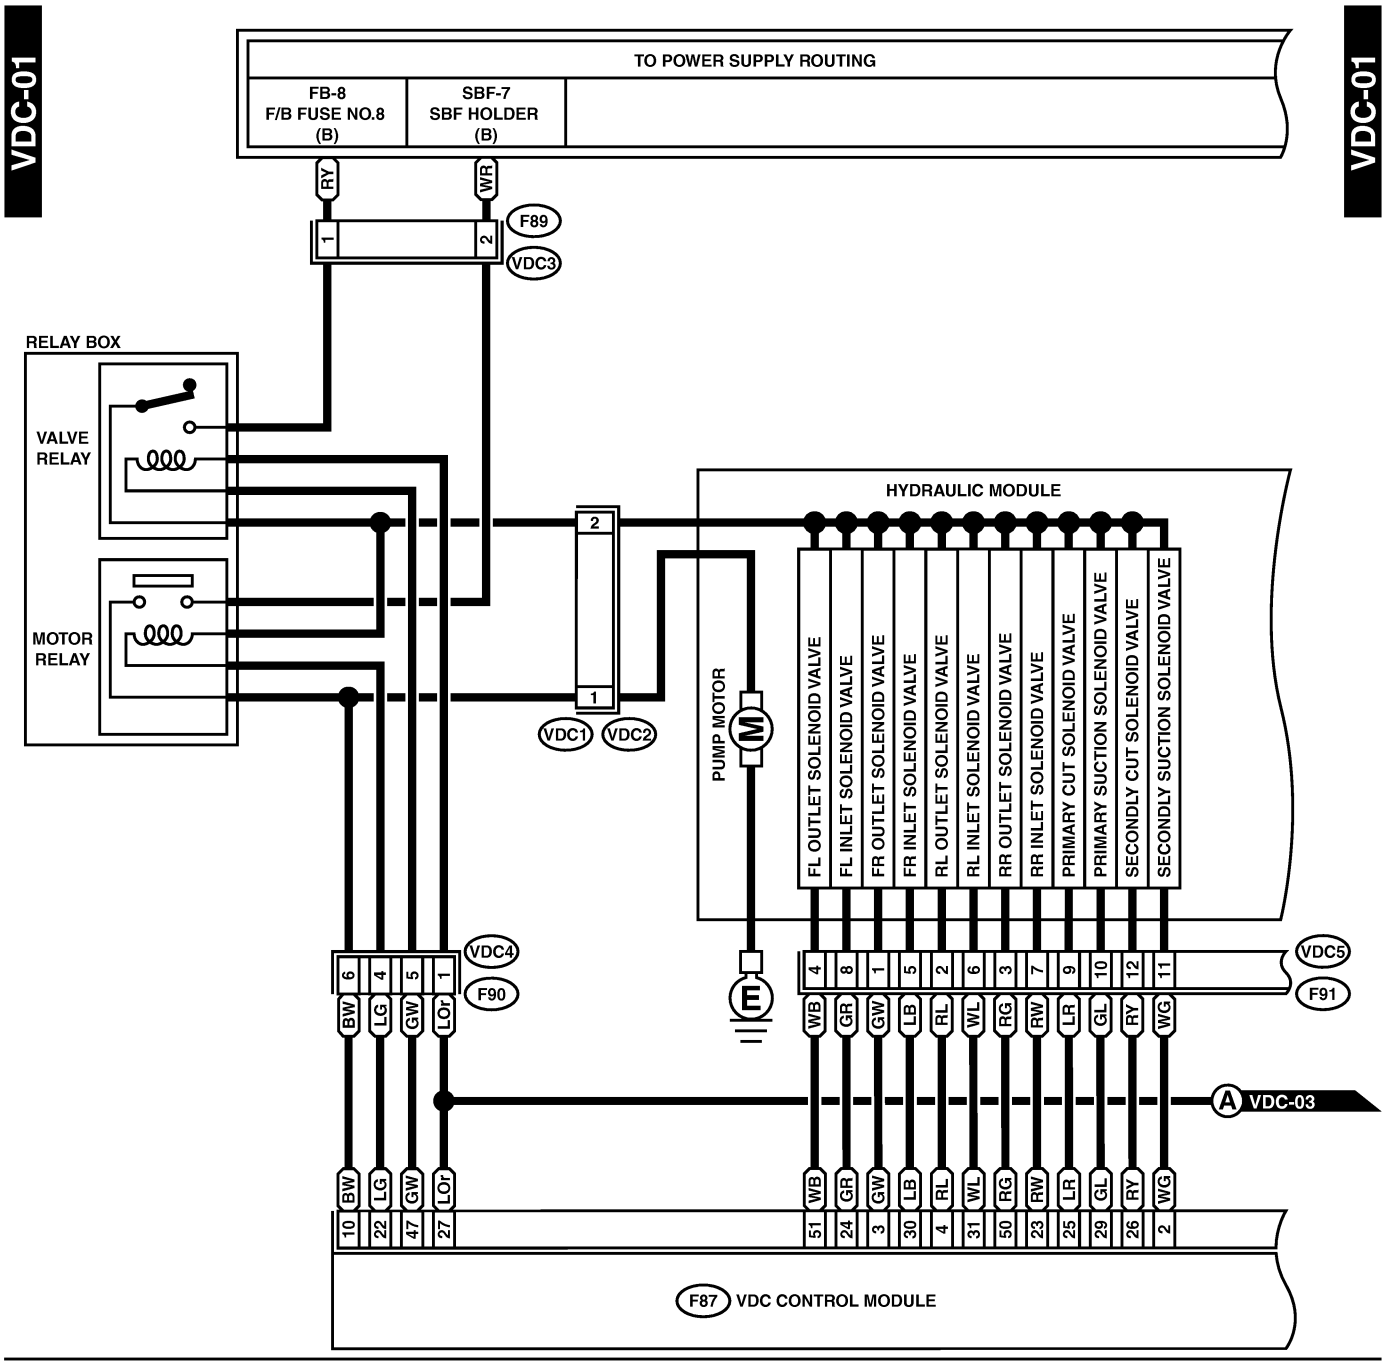

F89 (GRAY)

F90 (BLACK)

F91 (BLACK)



F87 (BLACK)

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28
	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55
	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83

BU95-22A

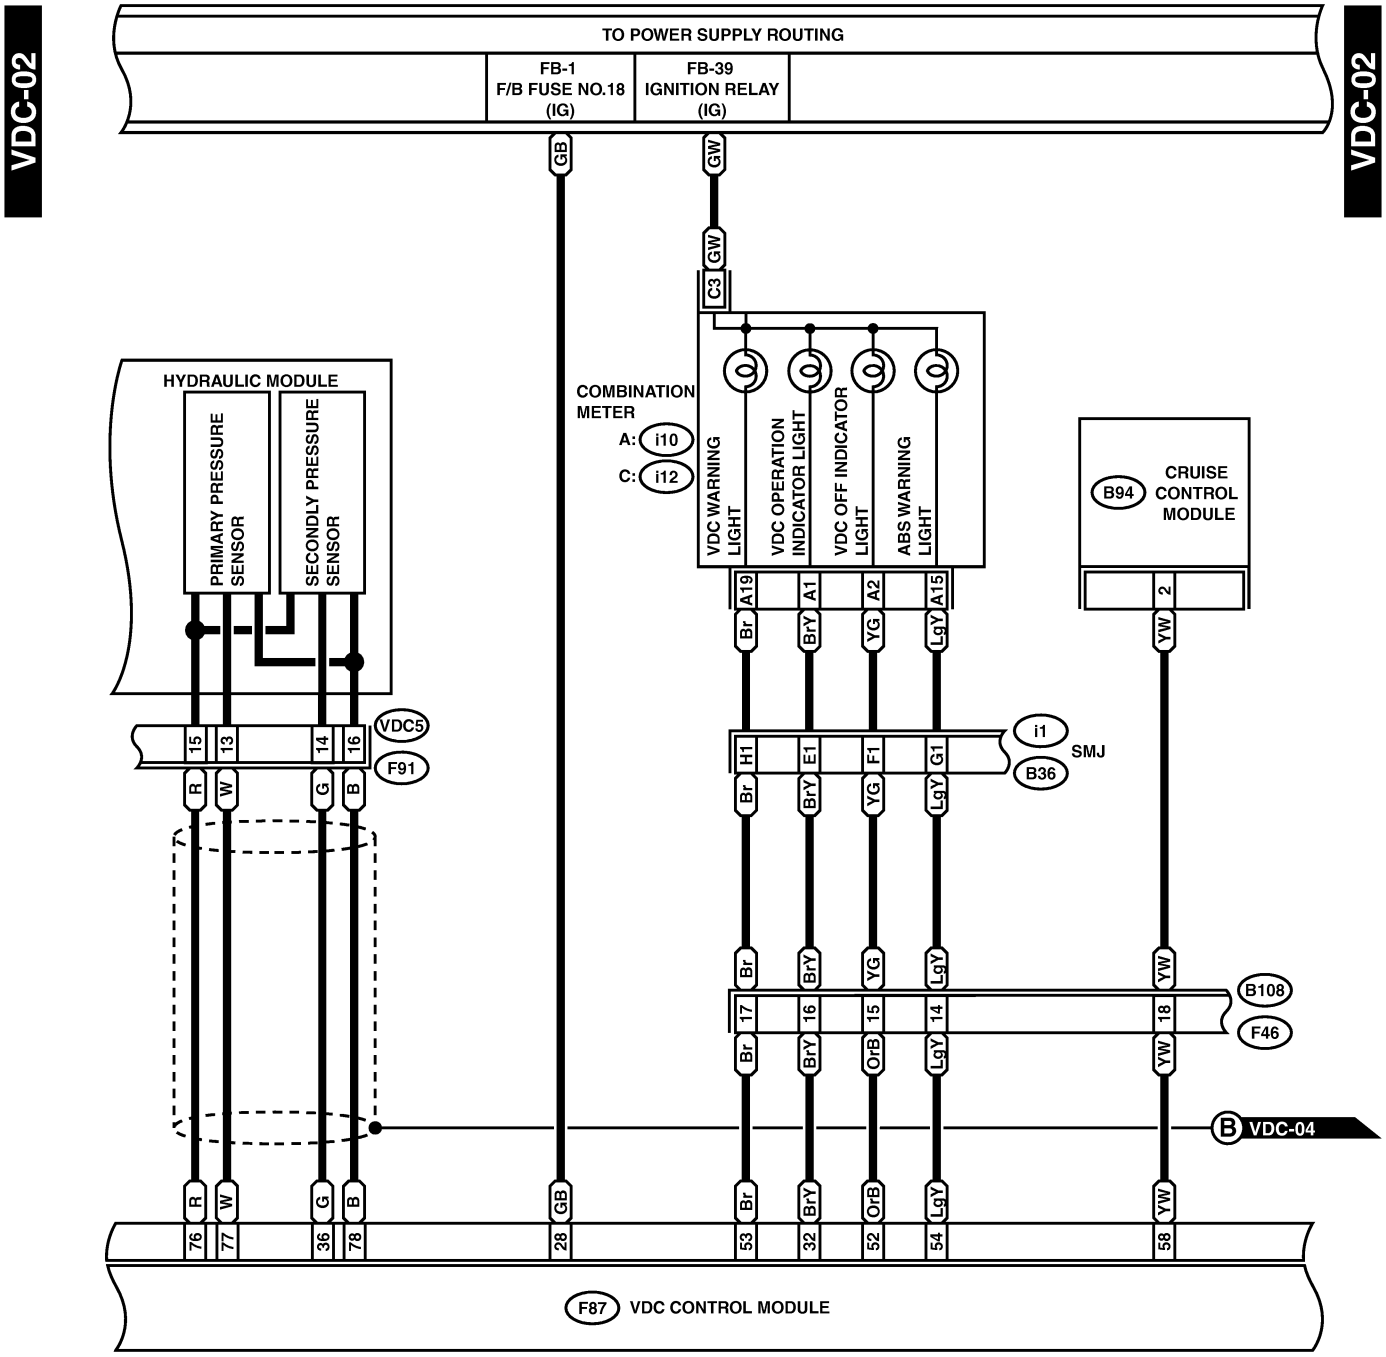

C: i12 (GREEN)

1	2	3		4	5	6	
7	8	9	10	11	12	13	14

F91 (BLACK)

4	3	2	1
8	7	6	5
12	11	10	9
16	15	14	13

B94 (BLACK)

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20

A: i10 (GREEN)

1	2	3	4	5	6	7		8	9	10	11	12	13	14
15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30

F46

1	2	3	4			5	6	7	8	9
10	11	12	13	14	15	16	17	18	19	20	21
22	23		24	25	26	27	28	29	30		31	32

F87 (BLACK)

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28
	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55
	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83

BU95-22B

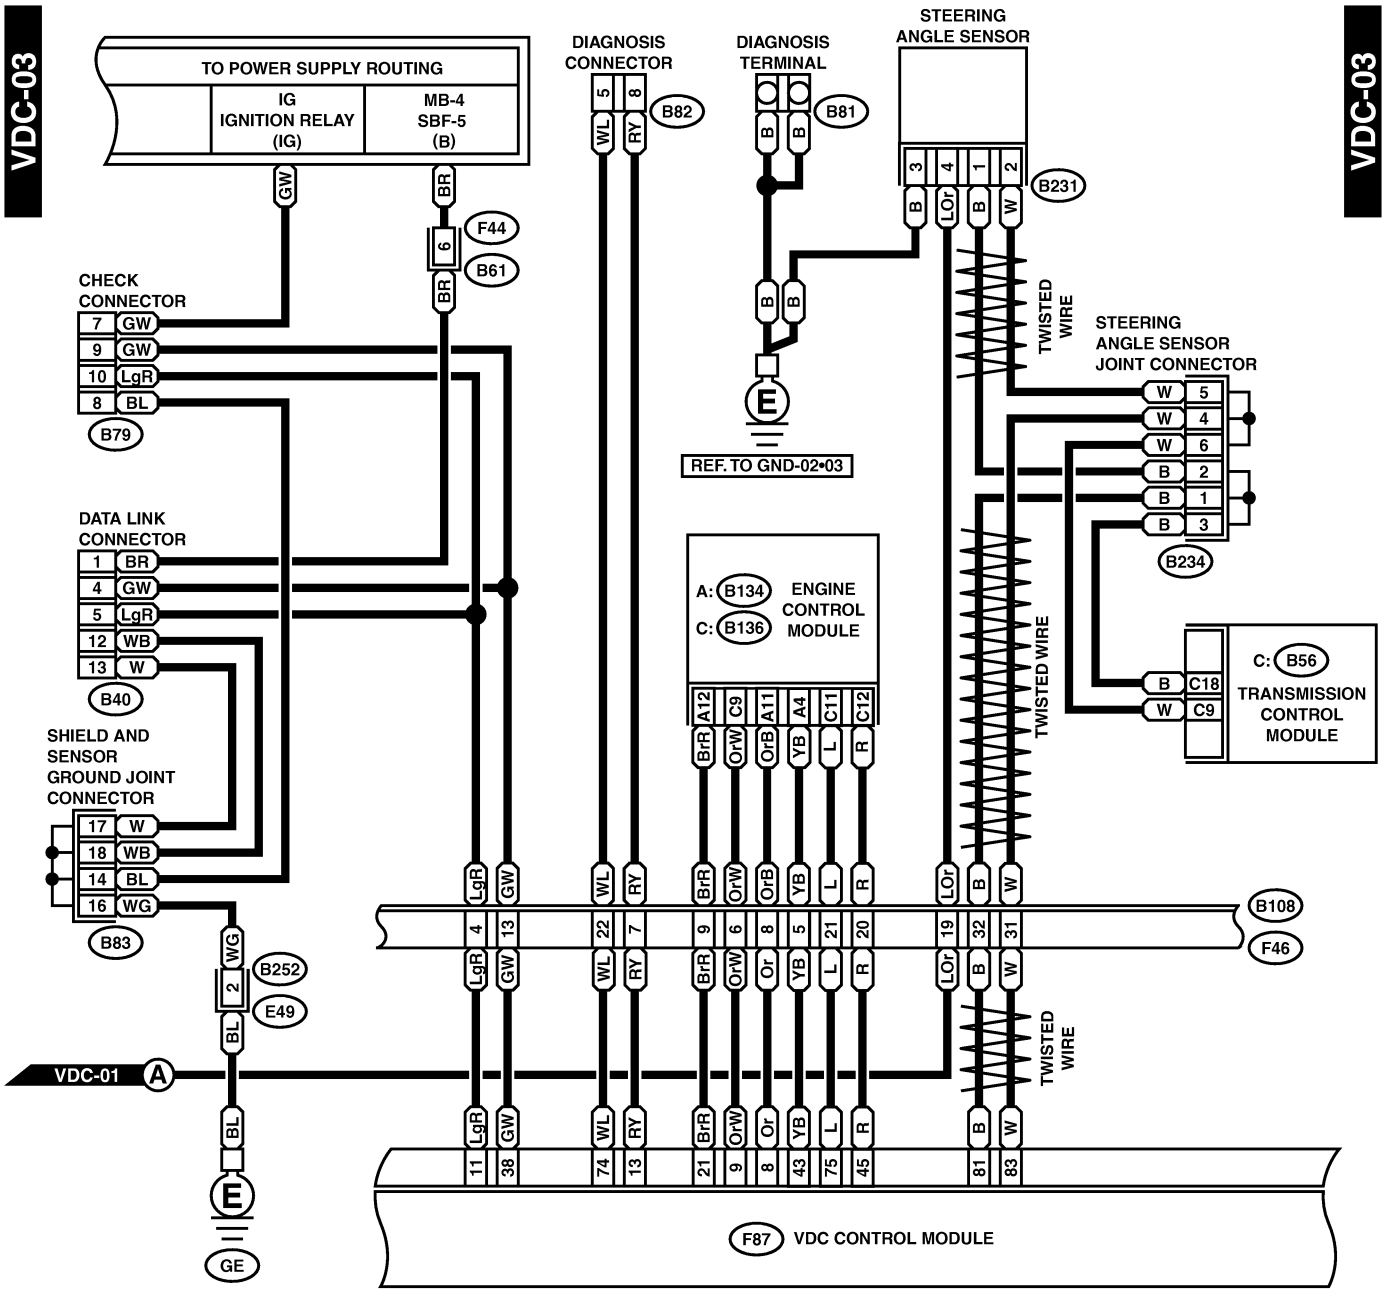
VDC-03
VDC-03
TO POWER SUPPLY ROUTING
IG
IGNITION RELAY
(IG)
MB-4
SBF-5
(B)
DIAGNOSIS
CONNECTOR
B82
DIAGNOSIS
TERMINAL
B81
STEERING
ANGLE SENSOR
B231
F44
B61
CHECK
CONNECTOR
B79
REF. TO GND-02•03
TWISTED
WIRE
STEERING
ANGLE SENSOR
JOINT CONNECTOR
B234
DATA LINK
CONNECTOR
B40
A: B134
C: B136
ENGINE
CONTROL
MODULE
C: B56
TRANSMISSION
CONTROL
MODULE
SHIELD AND
SENSOR
GROUND JOINT
CONNECTOR
B83
B252
E49
B108
F46
VDC-01
GE
F87 VDC CONTROL MODULE

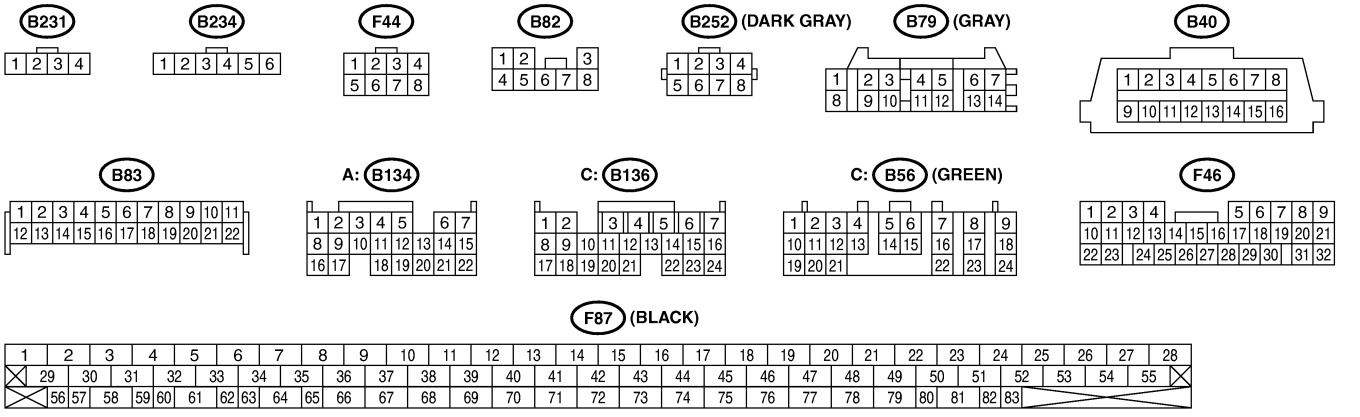
B231
B234
F44
B82
B252 (DARK GRAY)
B79 (GRAY)
B40
B83
A: B134
C: B136
C: B56 (GREEN)
F46
F87 (BLACK)

BU95-22C

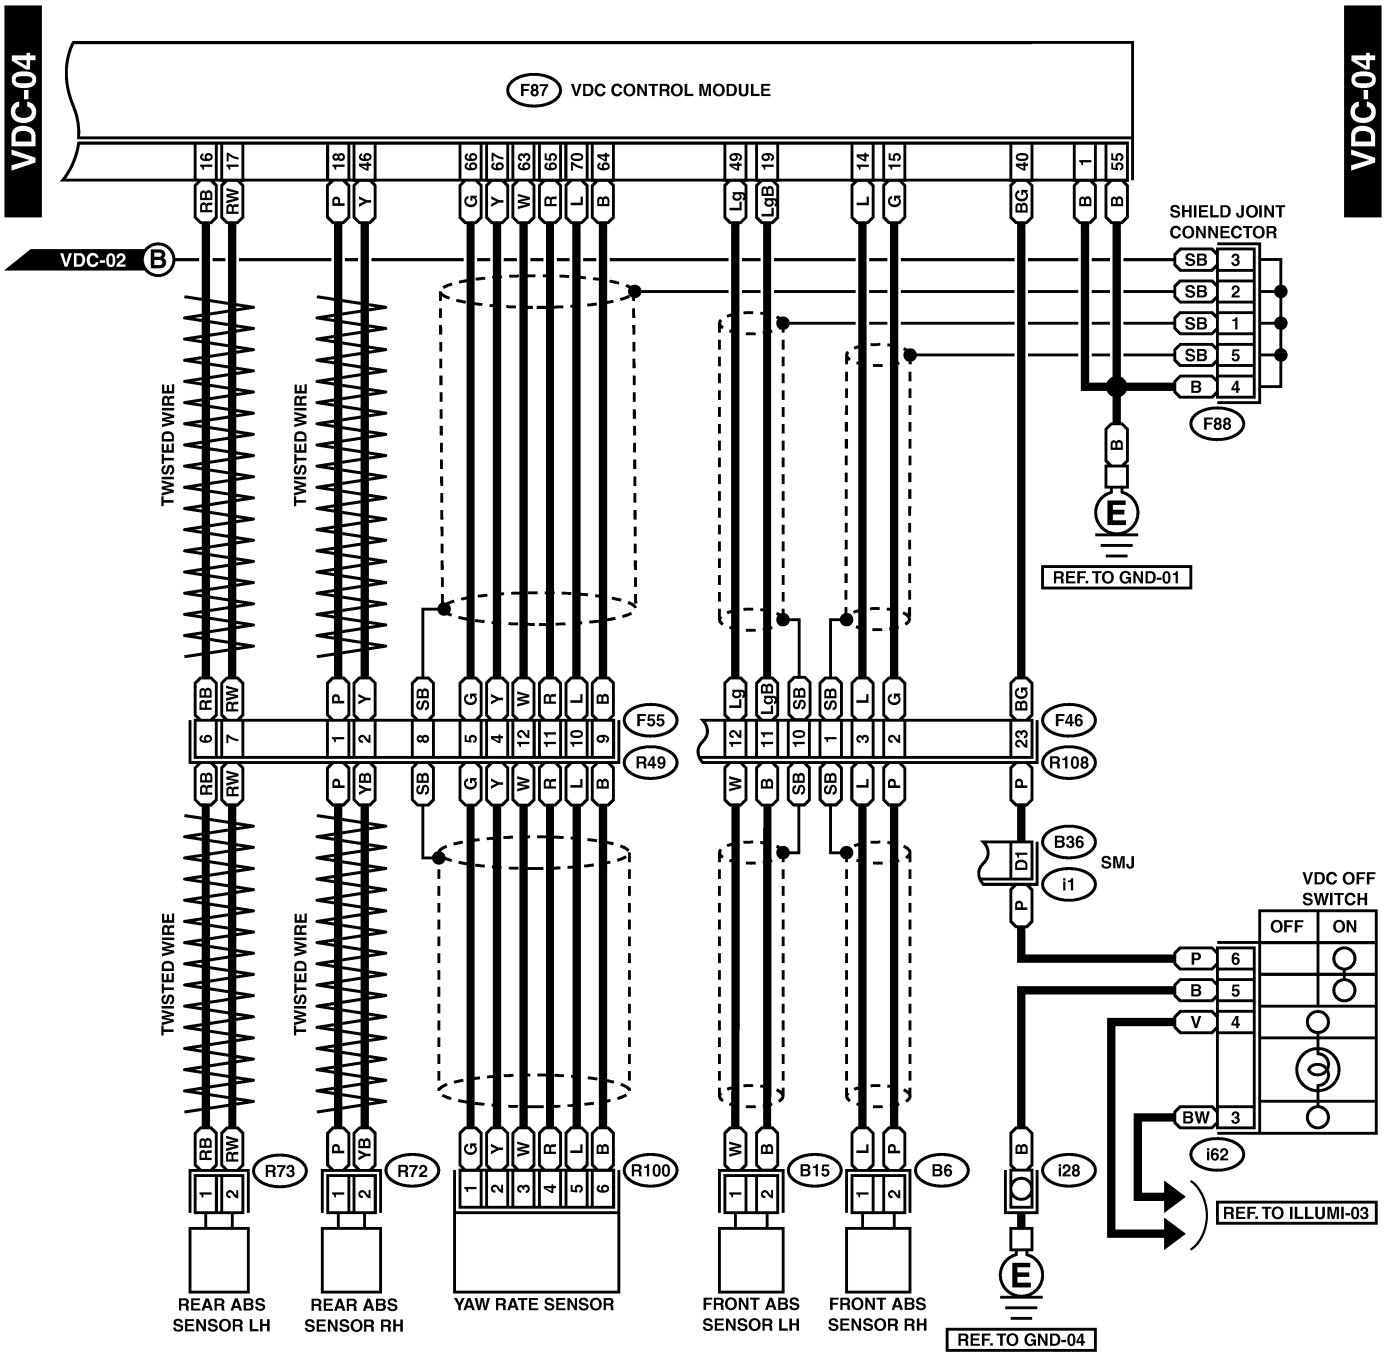

B6 (BROWN)
B15 (BROWN)
R73 (GRAY)
R72 (GRAY)

i62

R100 (BLACK)



F88

F55



F46



F87 (BLACK)