


DRAIN FILTER

Emission Control (Aux. Emission Control Devices)


12. Drain Filter S140567

A: REMOVAL S140567A18


- 1) Set the vehicle on the lift.
- 2) Disconnect battery ground cable.

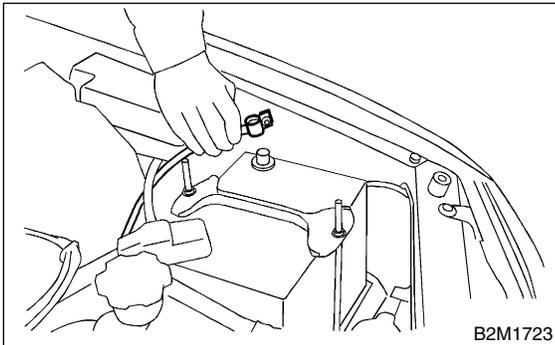


- 3) Lift-up the vehicle.
- 4) Remove canister. <Ref. to EC(H6)-7, REMOVAL, Canister.>
- 5) Disconnect connector from drain valve.

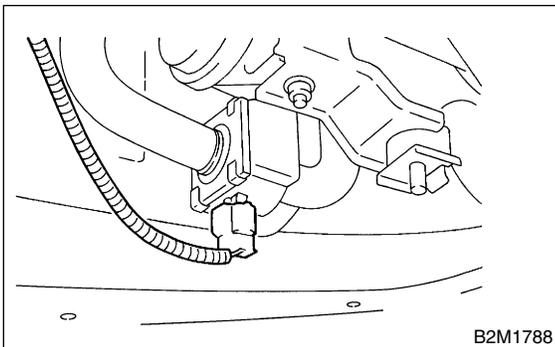

- 6) Remove nut which installs drain filter and drain valve brackets on body, and remove them as a unit.

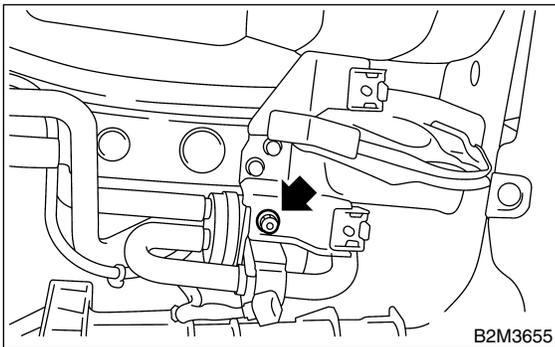


- 7) Disconnect evaporation hoses (A) and remove drain filter (B).

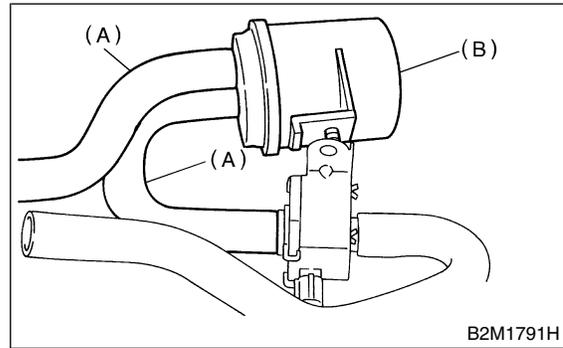

B: INSTALLATION S140567A11

Install in the reverse order of removal.

Tightening torque:
18 N·m (1.8 kgf·m, 13.0 ft·lb)

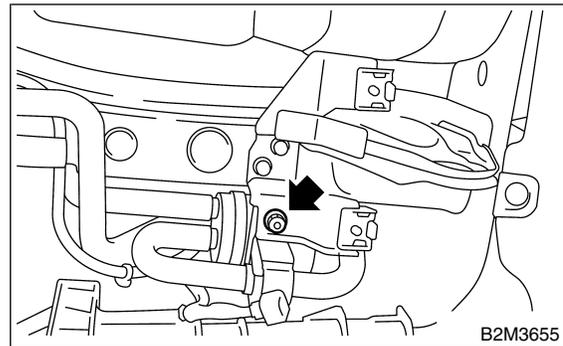

C: INSPECTION S140567A10

- 1) Make sure that all hoses are installed correctly.
- 2) Make sure that hoses are not cracked or loose.