

**ENGINE 2 SECTION**

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.

This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.

Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

**FUEL INJECTION (FUEL SYSTEMS) FU(SOHCw/oOBD)**

**EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES) EC(SOHCw/oOBD)**

**EXHAUST EX(SOHCw/oOBD)**

**IGNITION IG(SOHCw/oOBD)**

**ENGINE(DIAGNOSTICS) EN(SOHCw/oOBD)**

**FUEL INJECTION (FUEL SYSTEMS) FU(DOHC TURBO)**

**EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES) EC(DOHC TURBO)**

**INTAKE (INDUCTION) IN(DOHC TURBO)**

**MECHANICAL ME(DOHC TURBO)**

**EXHAUST EX(DOHC TURBO)**

**IGNITION IG(DOHC TURBO)**

**ENGINE (DIAGNOSTICS) EN(DOHC TURBO)**

# ENGINE (DIAGNOSTICS) *EN(DOHC TURBO)*

---

	<b>Page</b>
1. Basic Diagnostic Procedure .....	2
2. Check List for Interview .....	3
3. General Description .....	5
4. Electrical Components Location.....	8
5. Engine Control Module (ECM) I/O Signal .....	20
6. Engine Condition Data .....	24
7. Data Link Connector .....	25
8. OBD-II General Scan Tool .....	26
9. Subaru Select Monitor.....	28
10. Read Diagnostic Trouble Code .....	34
11. Inspection Mode.....	35
12. Clear Memory Mode.....	38
13. Compulsory Valve Operation Check Mode .....	39
14. Engine Malfunction Indicator Lamp (MIL) .....	41
15. Diagnostics for Engine Starting Failure .....	52
16. List of Diagnostic Trouble Code (DTC) .....	69
17. Diagnostic Procedure with Diagnostic Trouble Code (DTC) .....	74
18. General Diagnostic Table.....	301

# BASIC DIAGNOSTIC PROCEDURE

ENGINE (DIAGNOSTICS)

## 1. Basic Diagnostic Procedure

### A: PROCEDURE

#### 1. ENGINE

Step	Check	Yes	No
<b>1 CHECK ENGINE START FAILURE.</b> 1)Ask the customer when and how the trouble occurred using the interview check list. <Ref. to EN(DOHC TURBO)-3, CHECK, Check List for Interview.> 2)Start the engine.	Does the engine start?	Go to step 2.	Inspection using "Diagnostics for Engine Start Failure". <Ref. to EN(DOHC TURBO)-52, Diagnostics for Engine Starting Failure.>
<b>2 CHECK ILLUMINATION OF CHECK ENGINE MALFUNCTION INDICATOR LAMP (MIL).</b>	Does CHECK ENGINE malfunction indicator lamp illuminate?	Go to step 3.	Inspection using "General Diagnostics Table". <Ref. to EN(DOHC TURBO)-301, General Diagnostic Table.>
<b>3 CHECK INDICATION OF DTC ON DISPLAY.</b> 1)Turn ignition switch to OFF. 2)Connect the Subaru Select Monitor or the OBD-II general scan tool to data link connector. 3)Turn ignition switch to ON and the Subaru Select Monitor or OBD-II general scan tool switch to ON. 4)Read DTC on the Subaru Select Monitor or OBD-II general scan tool.	Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC?	Record diagnostic trouble code. Repair the trouble cause. <Ref. to EN(DOHC TURBO)-69, List of Diagnostic Trouble Code (DTC).> Go to step 4.	Repair the related parts. NOTE: If DTC is not shown on display although the MIL illuminates, perform diagnostics of MIL (CHECK ENGINE malfunction indicator lamp) circuit or combination meter. <Ref. to EN(DOHC TURBO)-41, Engine Malfunction Indicator Lamp (MIL).>
<b>4 PERFORM THE DIAGNOSIS.</b> 1)Perform the clear memory mode. <Ref. to EN(DOHC TURBO)-38, Clear Memory Mode.> 2)Perform the inspection mode. <Ref. to EN(DOHC TURBO)-35, Inspection Mode.>	Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC?	Inspect using "Diagnostics Procedure with Diagnostic Trouble Code (DTC)". <Ref. to EN(DOHC TURBO)-74, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Complete the diagnosis.

# CHECK LIST FOR INTERVIEW

ENGINE (DIAGNOSTICS)

## 2. Check List for Interview

Check the following items when problem has occurred.

### A: CHECK

NOTE:

#### 1. CHECK LIST NO. 1

Use copies of this page for interviewing customers.

Customer's name		Engine no.	
Date of sale		Fuel brand	
Date of repair		Odometer reading	km
Vin no.			miles
Weather	<input type="checkbox"/> Fine <input type="checkbox"/> Cloudy <input type="checkbox"/> Rainy <input type="checkbox"/> Snowy <input type="checkbox"/> Various/Others:		
Outdoor temperature	°C (°F)		
	<input type="checkbox"/> Hot <input type="checkbox"/> Warm <input type="checkbox"/> Cool <input type="checkbox"/> Cold		
Place	<input type="checkbox"/> Highway <input type="checkbox"/> Suburbs <input type="checkbox"/> Inner city <input type="checkbox"/> Uphill <input type="checkbox"/> Downhill <input type="checkbox"/> Rough road <input type="checkbox"/> Others:		
Engine temperature	<input type="checkbox"/> Cold <input type="checkbox"/> Warming-up <input type="checkbox"/> After warming-up <input type="checkbox"/> Any temperature <input type="checkbox"/> Others:		
Engine speed	rpm		
Vehicle speed	MPH		
Driving conditions	<input type="checkbox"/> Not affected <input type="checkbox"/> At starting <input type="checkbox"/> While idling <input type="checkbox"/> At racing <input type="checkbox"/> While accelerating <input type="checkbox"/> While cruising <input type="checkbox"/> While decelerating <input type="checkbox"/> While turning (RH/LH)		
Headlight	<input type="checkbox"/> ON/ <input type="checkbox"/> OFF	Rear defogger	<input type="checkbox"/> ON/ <input type="checkbox"/> OFF
Blower	<input type="checkbox"/> ON/ <input type="checkbox"/> OFF	Radio	<input type="checkbox"/> ON/ <input type="checkbox"/> OFF
A/C compressor	<input type="checkbox"/> ON/ <input type="checkbox"/> OFF	CD/Cassette	<input type="checkbox"/> ON/ <input type="checkbox"/> OFF
Cooling fan	<input type="checkbox"/> ON/ <input type="checkbox"/> OFF	Car phone	<input type="checkbox"/> ON/ <input type="checkbox"/> OFF
Front wiper	<input type="checkbox"/> ON/ <input type="checkbox"/> OFF	CB	<input type="checkbox"/> ON/ <input type="checkbox"/> OFF
Rear wiper	<input type="checkbox"/> ON/ <input type="checkbox"/> OFF		

# CHECK LIST FOR INTERVIEW

ENGINE (DIAGNOSTICS)

## 2. CHECK LIST NO. 2

Check the following items about the vehicle's state when MIL turns on.

NOTE:

Use copies of this page for interviewing customers.

a) Other warning lights or indicators turn on. <input type="checkbox"/> Yes/ <input type="checkbox"/> No
<input type="checkbox"/> Low fuel warning light <input type="checkbox"/> Charge indicator light <input type="checkbox"/> AT diagnostics indicator light <input type="checkbox"/> ABS warning light <input type="checkbox"/> Engine oil pressure warning light
b) Fuel level
<ul style="list-style-type: none"><li>• Lack of gasoline: <input type="checkbox"/> Yes/<input type="checkbox"/> No</li><li>• Indicator position of fuel gauge:</li></ul>
c) Intentional connecting or disconnecting of harness connectors or spark plug cords: <input type="checkbox"/> Yes/ <input type="checkbox"/> No
<ul style="list-style-type: none"><li>• What:</li></ul>
d) Intentional connecting or disconnecting of hoses: <input type="checkbox"/> Yes/ <input type="checkbox"/> No
<ul style="list-style-type: none"><li>• What:</li></ul>
e) Installing of parts other than genuine parts: <input type="checkbox"/> Yes/ <input type="checkbox"/> No
<ul style="list-style-type: none"><li>• What:</li><li>• Where:</li></ul>
f) Occurrence of noise: <input type="checkbox"/> Yes/ <input type="checkbox"/> No
<ul style="list-style-type: none"><li>• From where:</li><li>• What kind:</li></ul>
g) Occurrence of smell: <input type="checkbox"/> Yes/ <input type="checkbox"/> No
<ul style="list-style-type: none"><li>• From where:</li><li>• What kind:</li></ul>
h) Intrusion of water into engine compartment or passenger compartment: <input type="checkbox"/> Yes/ <input type="checkbox"/> No
i) Troubles occurred
<input type="checkbox"/> Engine does not start. <input type="checkbox"/> Engine stalls during idling. <input type="checkbox"/> Engine stalls while driving. <input type="checkbox"/> Engine speed decreases. <input type="checkbox"/> Engine speed does not decrease. <input type="checkbox"/> Rough idling <input type="checkbox"/> Poor acceleration <input type="checkbox"/> Back fire <input type="checkbox"/> After fire <input type="checkbox"/> No shift <input type="checkbox"/> Excessive shift shock

## 3. General Description

### A: CAUTION

1) Airbag system wiring harness is routed near the engine control module (ECM), main relay and fuel pump relay.

#### CAUTION:

- All Airbag system wiring harness and connectors are colored yellow. Do not use electrical test equipment on these circuit.

- Be careful not to damage Airbag system wiring harness when servicing the engine control module (ECM), transmission control module (TCM), main relay and fuel pump relay.

2) Never connect the battery in reverse polarity.

- The ECM will be destroyed instantly.
- The fuel injector and other part will be damaged in just a few minutes more.

3) Do not disconnect the battery terminals while the engine is running.

- A large counter electromotive force will be generated in the alternator, and this voltage may damage electronic parts such as ECM, etc.

4) Before disconnecting the connectors of each sensor and the ECM, be sure to turn OFF the ignition switch.

5) Poor contact has been identified as a primary cause of this problem. To measure the voltage and/or resistance of individual sensors or all electrical control modules at the harness side connector, use a tapered pin with a diameter of less than 0.64 mm (0.025 in). Do not insert the pin more than 5 mm (0.20 in) into the part.

6) Before removing ECM from the located position, disconnect two cables on battery.


- Otherwise, the ECM may be damaged.

#### CAUTION:


**When replacing ECM, be careful not to use the wrong spec. ECM to avoid any damage on fuel injection system.**

7) The connectors to each sensor in the engine compartment and the harness connectors on the engine side and body side are all designed to be waterproof. However, it is still necessary to take care not to allow water to get into the connectors when washing the vehicle, or when servicing the vehicle on a rainy day.


8) Use ECM mounting stud bolts at the body head grounding point when measuring voltage and resistance inside the passenger compartment.

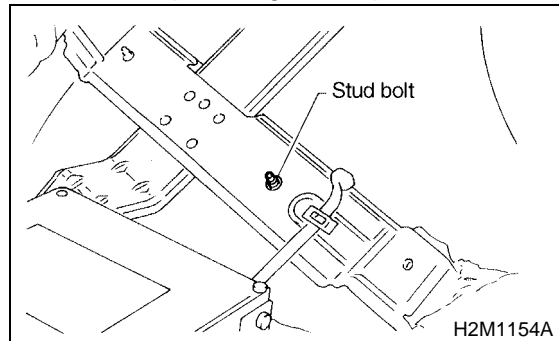

9) Use engine grounding terminal or engine proper as the grounding point to the body when measuring voltage and resistance in the engine compartment.

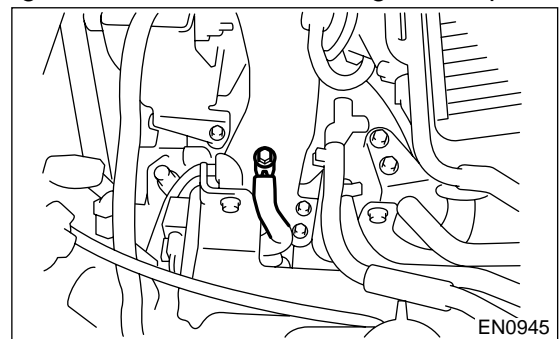

10) Use TCM mounting stud bolts at the body head grounding point when measuring voltage and resistance inside the passenger compartment.

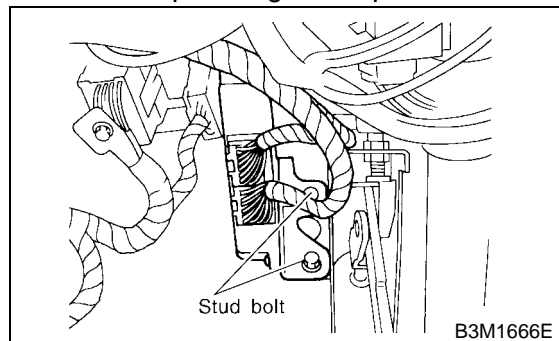

11) Every MFI-related part is a precision part. Do not drop them.

12) Observe the following cautions when installing a radio in MFI equipped models.

#### CAUTION:

- The antenna must be kept as far apart as possible from the control unit.

(The ECM is located under the steering column, inside of the instrument panel lower trim panel.)

- The antenna feeder must be placed as far apart as possible from the ECM and MFI harness.

- Carefully adjust the antenna for correct matching.

# GENERAL DESCRIPTION

## ENGINE (DIAGNOSTICS)

- When mounting a large power type radio, pay special attention to the three items above mentioned.

- Incorrect installation of the radio may affect the operation of the ECM.

13) Before disconnecting the fuel hose, disconnect the fuel pump connector and crank the engine for more than five seconds to release pressure in the fuel system. If engine starts during this operation, run it until it stops.

14) Problems in the electronic-controlled automatic transmission may be caused by failure of the engine, the electronic control system, the transmission proper, or by a combination of these. These three causes must be distinguished clearly when performing diagnostics.

15) Diagnostics should be conducted by rotating with simple, easy operations and proceeding to complicated, difficult operations. The most important thing in diagnostics is to understand the customer's complaint, and distinguish between the three causes.

16) On ABS vehicle, when performing driving test in jacked-up or lifted-up position, sometimes the warning light may be lit, but this is not a malfunction of the system. The reason for this is the speed difference between the front and rear wheels. After diagnosis of engine control system, perform the ABS memory clearance procedure of self-diagnosis system.

## B: INSPECTION

Before performing diagnostics, check the following items which might affect engine problems:

### 1. BATTERY

1) Measure battery voltage and specific gravity of electrolyte.


**Standard voltage: 12 V**

**Specific gravity: Above 1.260**

2) Check the condition of the main and other fuses, and harnesses and connectors. Also check for proper grounding.

## 2. ENGINE GROUNDING

Make sure the engine grounding terminal is properly connected to the engine.

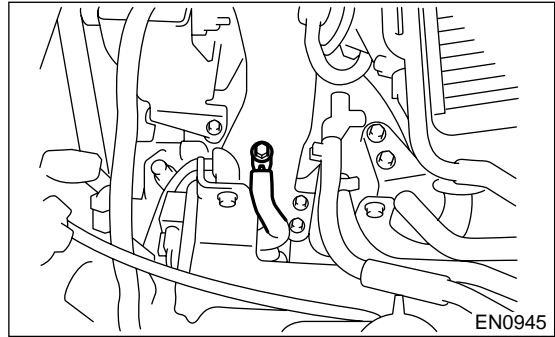

## C: NOTE

### 1. DESCRIPTION

- The on-board diagnostics (OBD) system detects and indicates a fault in various inputs and outputs of the complex electronic control. CHECK ENGINE malfunction indicator lamp (MIL) in the combination meter indicates occurrence of a fault or trouble.
- Further, against such a failure or sensors as may disable the drive, the fail-safe function is provided to ensure the minimal driveability.
- The OBD system incorporated with the vehicles within this engine family complies with Section 1968.1, California Code of Regulations (OBD-II regulation). The OBD system monitors the components and the system malfunction listed in Engine Section which affects on emissions.
- When the system decides that a malfunction occurs, MIL illuminates. At the same time of the MIL illumination or blinking, a diagnostic trouble code (DTC) and a freeze frame engine conditions are stored into on-board computer.
- The OBD system stores freeze frame engine condition data (engine load, engine coolant temperature, fuel trim, engine speed and vehicle speed, etc.) into on-board computer when it detects a malfunction first.
- If the OBD system detects the various malfunctions including the fault of fuel trim or misfire, the OBD system first stores freeze frame engine conditions about the fuel trim or misfire.
- When the malfunction does not occur again for three consecutive driving cycles, MIL is turned off, but DTC remains at on-board computer.
- The OBD-II system is capable of communication with a general scan tool (OBD-II general scan tool) formed by ISO 9141 CARB.
- The OBD-II diagnostics procedure is different from the usual diagnostics procedure. When troubleshooting OBD-II vehicles, connect Subaru Select Monitor or the OBD-II general scan tool to the vehicle.

# GENERAL DESCRIPTION

ENGINE (DIAGNOSTICS)

## 2. ENGINE AND EMISSION CONTROL SYSTEM

• The Multipoint Fuel Injection (MFI) system is a system that supplies the optimum air-fuel mixture to the engine for all the various operating conditions through the use of the latest electronic technology.

With this system fuel, which is pressurized at a constant pressure, is injected into the intake air passage of the cylinder head. The injection quantity of fuel is controlled by an intermittent injection system where the electro-magnetic injection valve (fuel injector) opens only for a short period of time, depending on the quantity of air required for one cycle of operation. In actual operation, the injection quantity is determined by the duration of an electric



pulse applied to the fuel injector and this permits simple, yet highly precise metering of the fuel.

• Further, all the operating conditions of the engine are converted into electric signals, and this results in additional features of the system, such as large improved adaptability, easier addition of compensating element, etc.

The MFI system also has the following features:

- Reduced emission of harmful exhaust gases.
- Reduced in fuel consumption.
- Increased engine output.
- Superior acceleration and deceleration.
- Superior startability and warm-up performance in cold weather since compensation is made for coolant and intake air temperature.

## D: PREPARATION TOOL

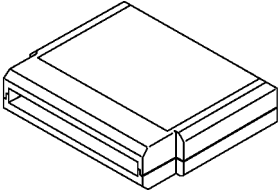ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p>B2M3876</p>	<p>24082AA150 (Newly adapted tool)</p>	CARTRIDGE	Troubleshooting for electrical systems.
 <p>B2M3877</p>	22771AA030	SELECT MONITOR KIT	<p>Troubleshooting for electrical systems.</p> <ul style="list-style-type: none"> <li>• English: 22771AA030 (Without printer)</li> <li>• German: 22771AA070 (Without printer)</li> <li>• French: 22771AA080 (Without printer)</li> <li>• Spanish: 22771AA090 (Without printer)</li> </ul>



# ELECTRICAL COMPONENTS LOCATION



ENGINE (DIAGNOSTICS)

## 4. Electrical Components Location

### A: LOCATION

#### 1. ENGINE





##### • MODULE

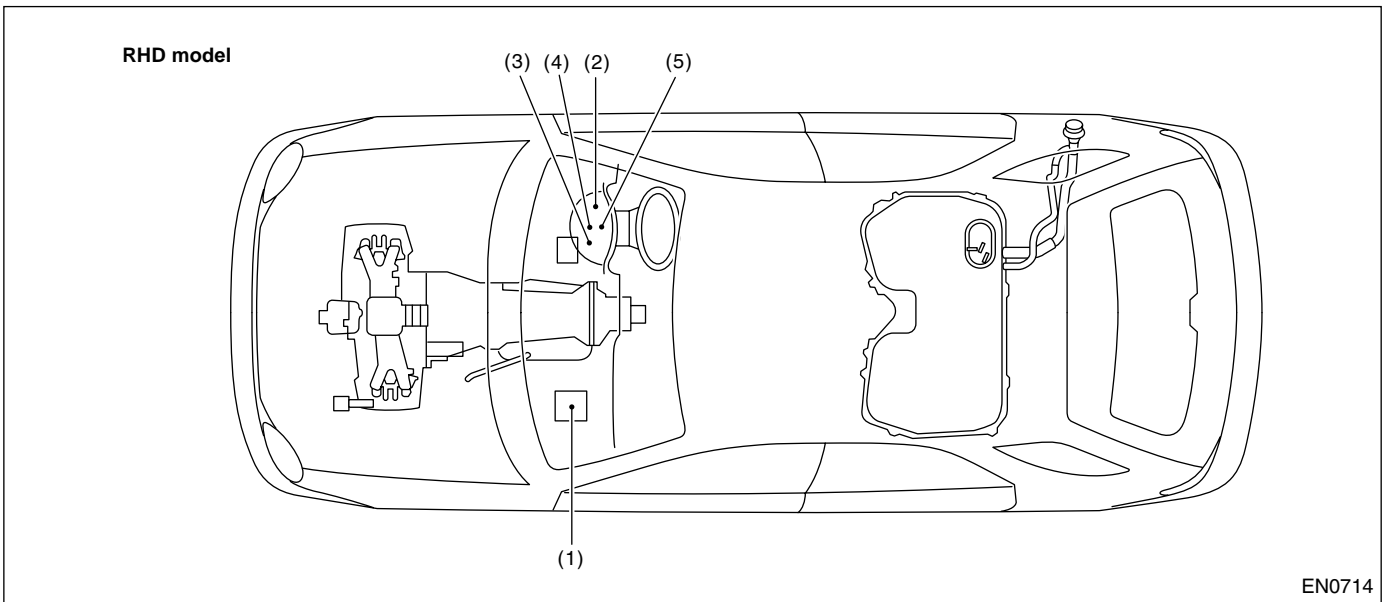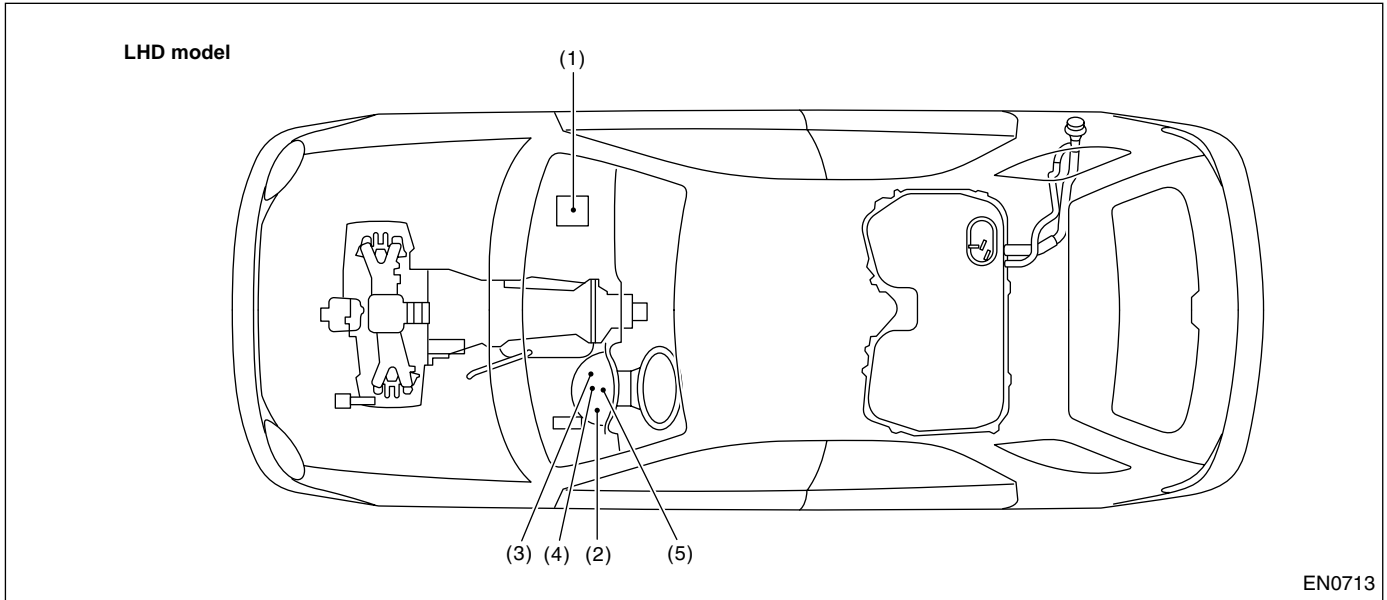

- |   |                           |
|---|---------------------------|
| (1) Engine control module (ECM)                   | (3) Read memory connector |
| (2) CHECK ENGINE malfunction indicator lamp (MIL) | (4) Test mode connector   |
|   | (5) Data link connector   |

# ELECTRICAL COMPONENTS LOCATION


ENGINE (DIAGNOSTICS)

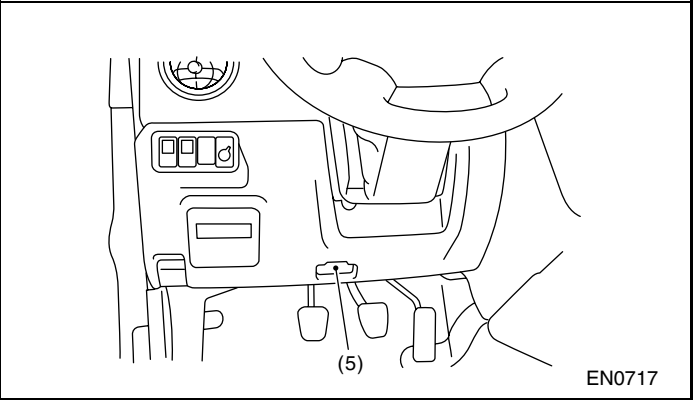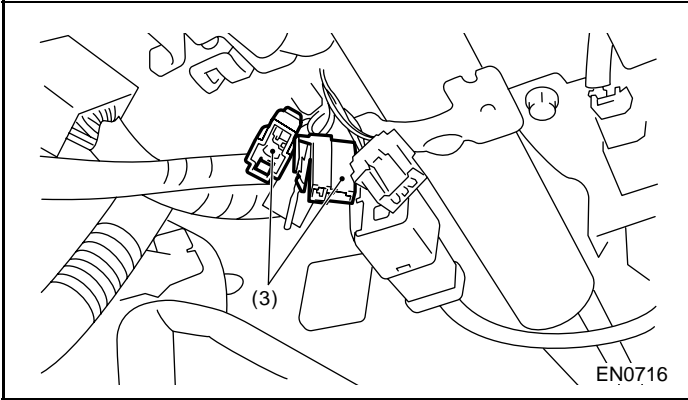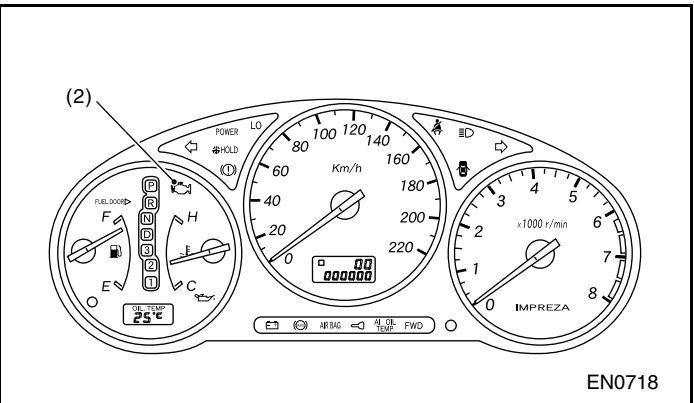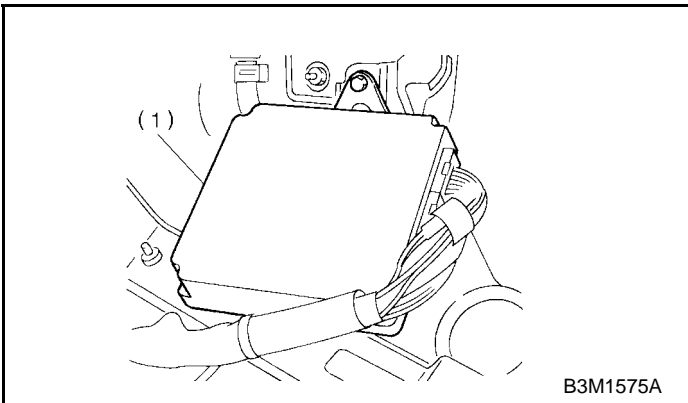

# ELECTRICAL COMPONENTS LOCATION

## ENGINE (DIAGNOSTICS)

### • SENSOR








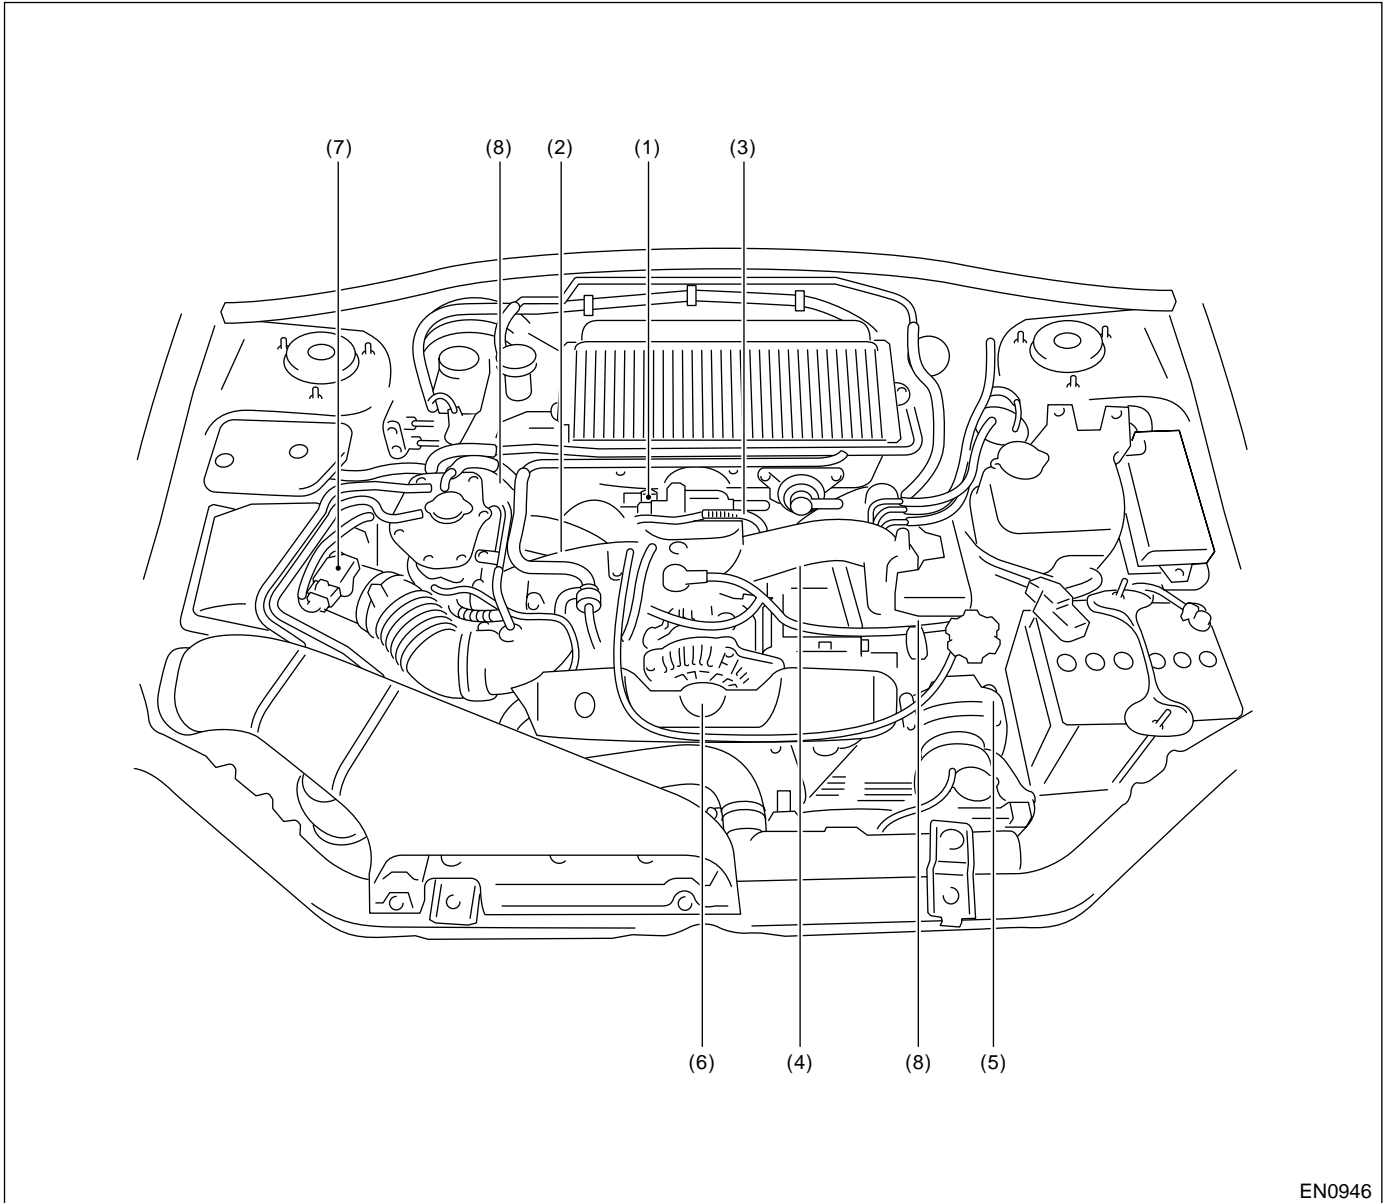


EN0946

- |                                       |   |  |
|---------------------------------------|---|--|
| (1) Pressure sensor                   | (4) Knock sensor                                    | (8) Tumble generator valve position sensor |
| (2) Engine coolant temperature sensor | (5) Camshaft position sensor                        |  |
| (3) Throttle position sensor          | (6) Crankshaft position sensor                      |  |
|                                       | (7) Mass air flow and intake air temperature sensor |  |


# ELECTRICAL COMPONENTS LOCATION

ENGINE (DIAGNOSTICS)

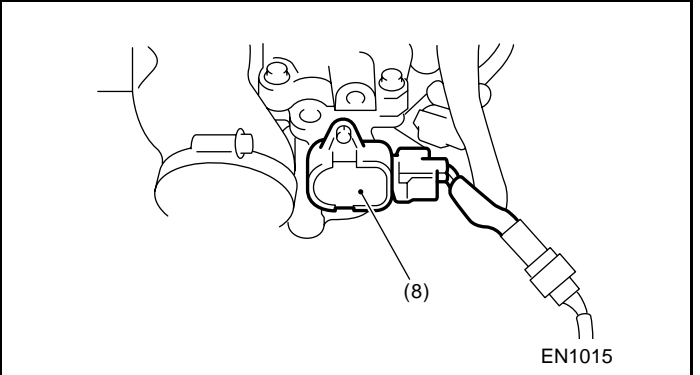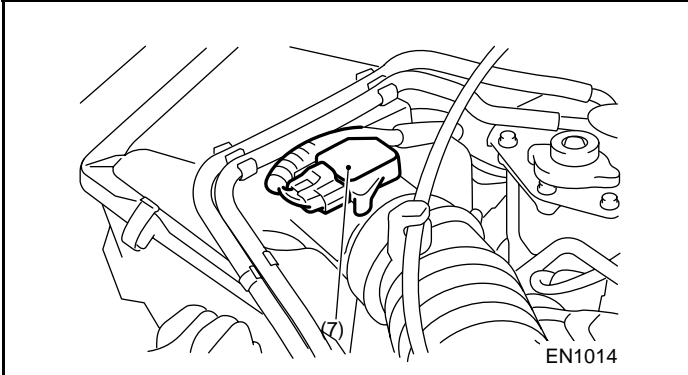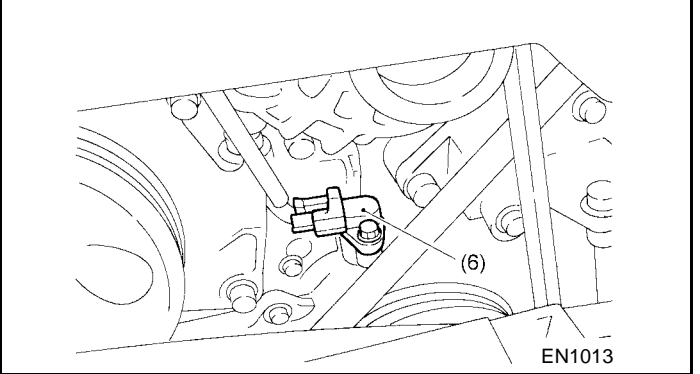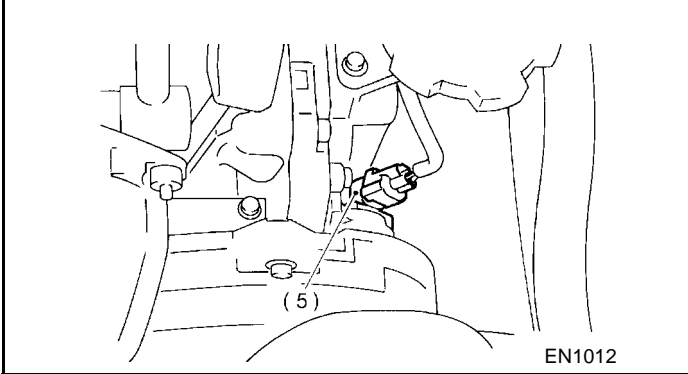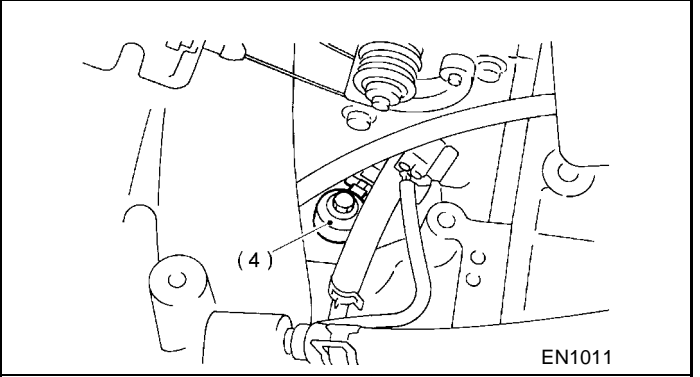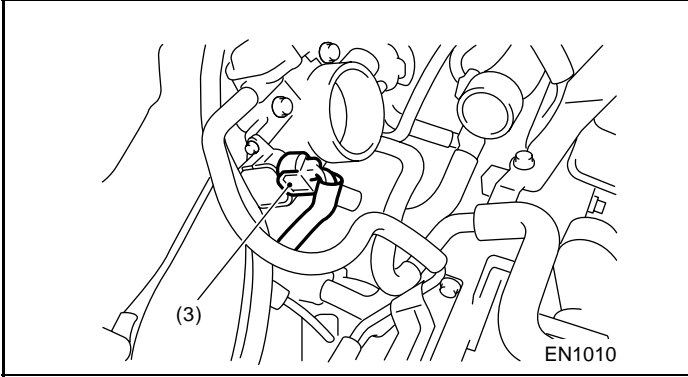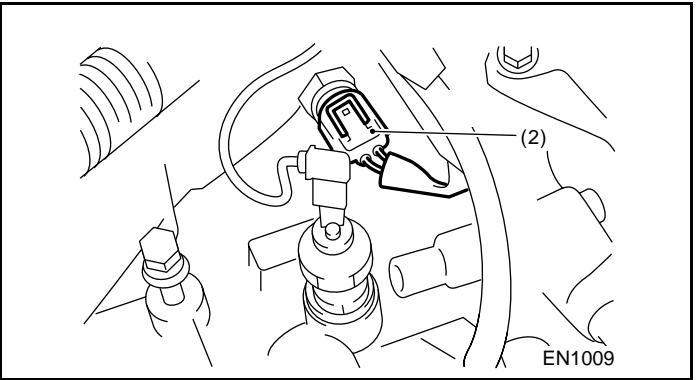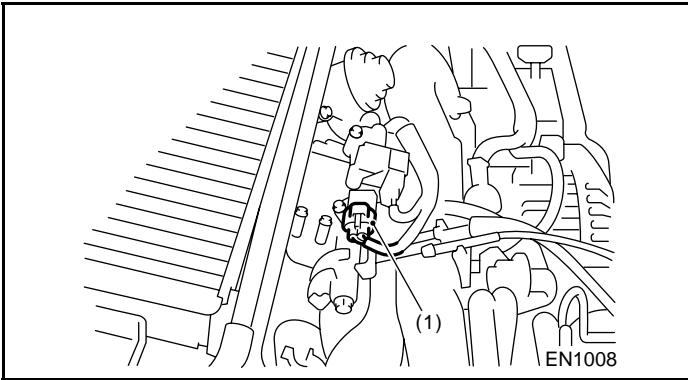

# ELECTRICAL COMPONENTS LOCATION

ENGINE (DIAGNOSTICS)

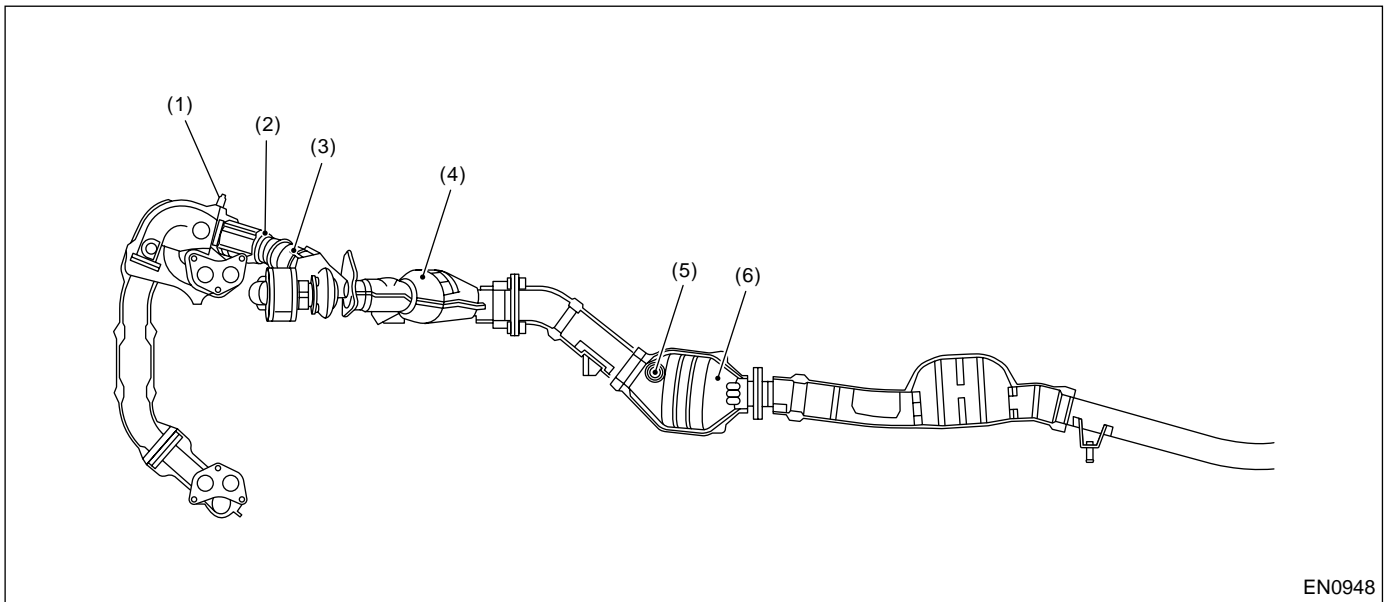

EN0948






(1) Front oxygen (A/F) sensor  
(2) Precatalytic converter

(3) Exhaust temperature sensor  
(4) Front catalytic converter

(5) Rear oxygen sensor  
(6) Rear catalytic converter

# ELECTRICAL COMPONENTS LOCATION


ENGINE (DIAGNOSTICS)

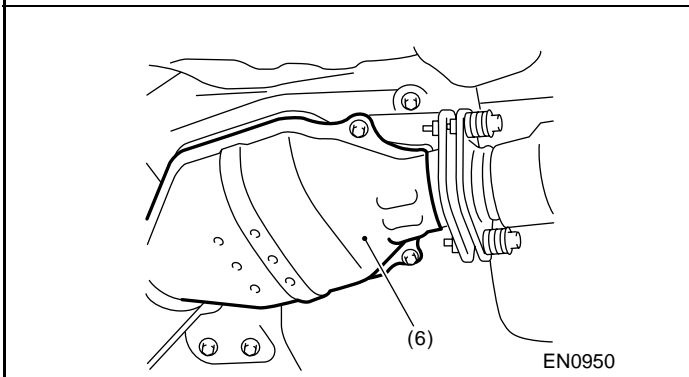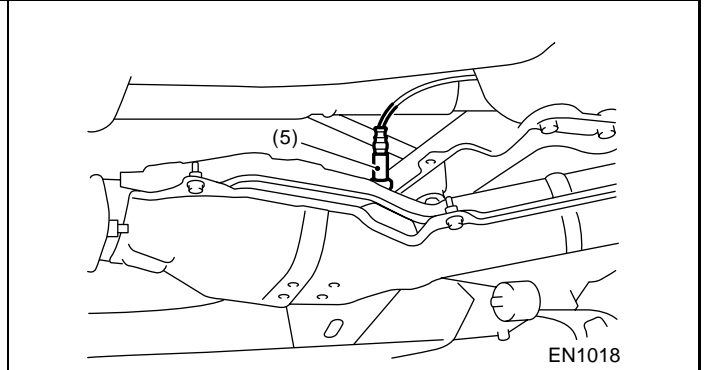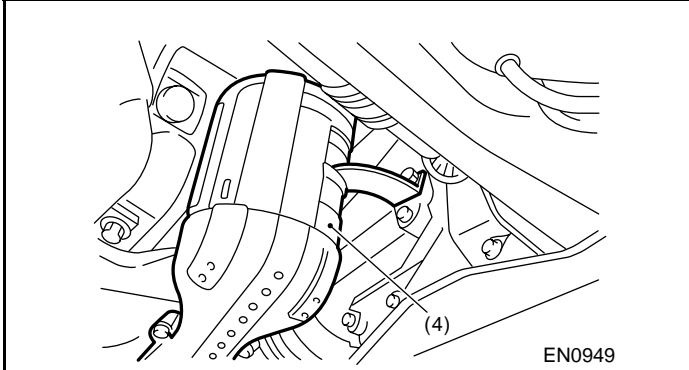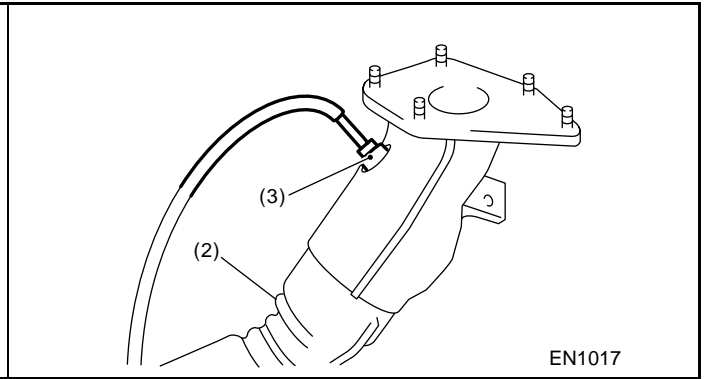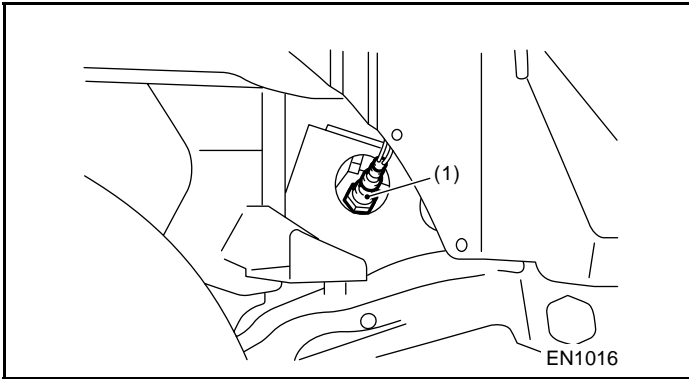

# ELECTRICAL COMPONENTS LOCATION


## ENGINE (DIAGNOSTICS)

LHD model

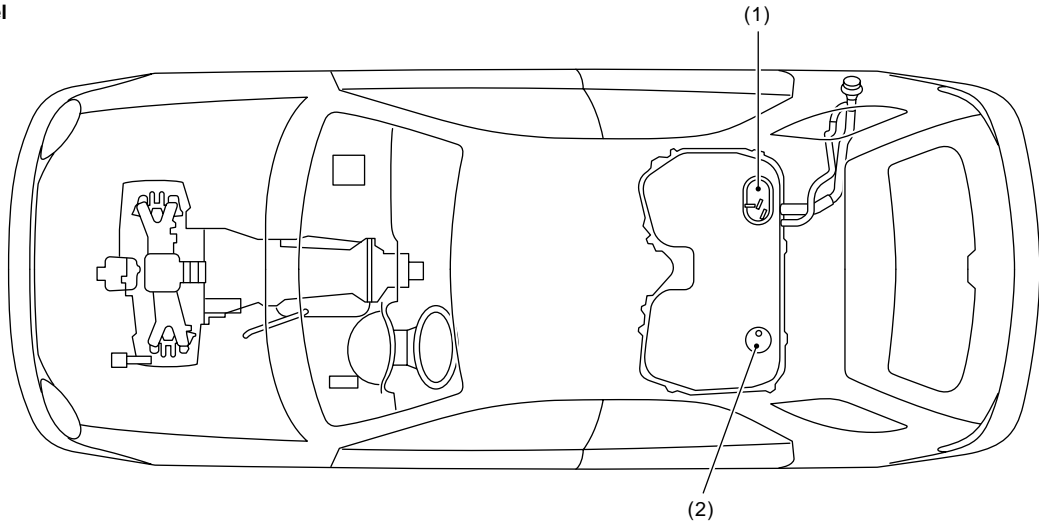

EN1019


RHD model

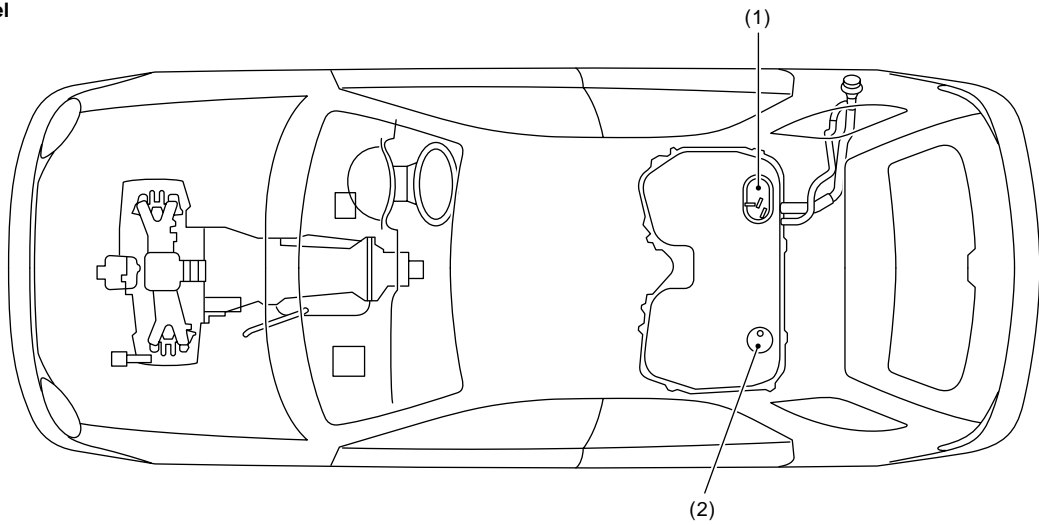


EN1020

(1) Fuel level sensor

(2) Fuel sub level sensor

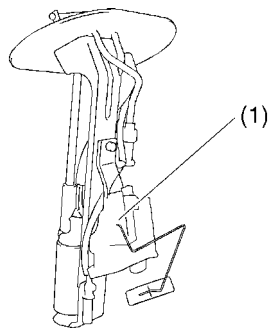

EN1036

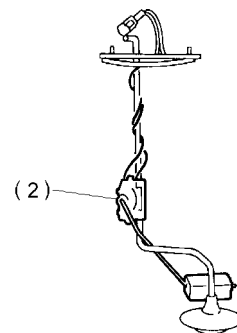

EN1037






# ELECTRICAL COMPONENTS LOCATION

## ENGINE (DIAGNOSTICS)

### • SOLENOID VALVE, ACTUATOR, EMISSION CONTROL SYSTEM PARTS AND IGNITION SYSTEM PARTS

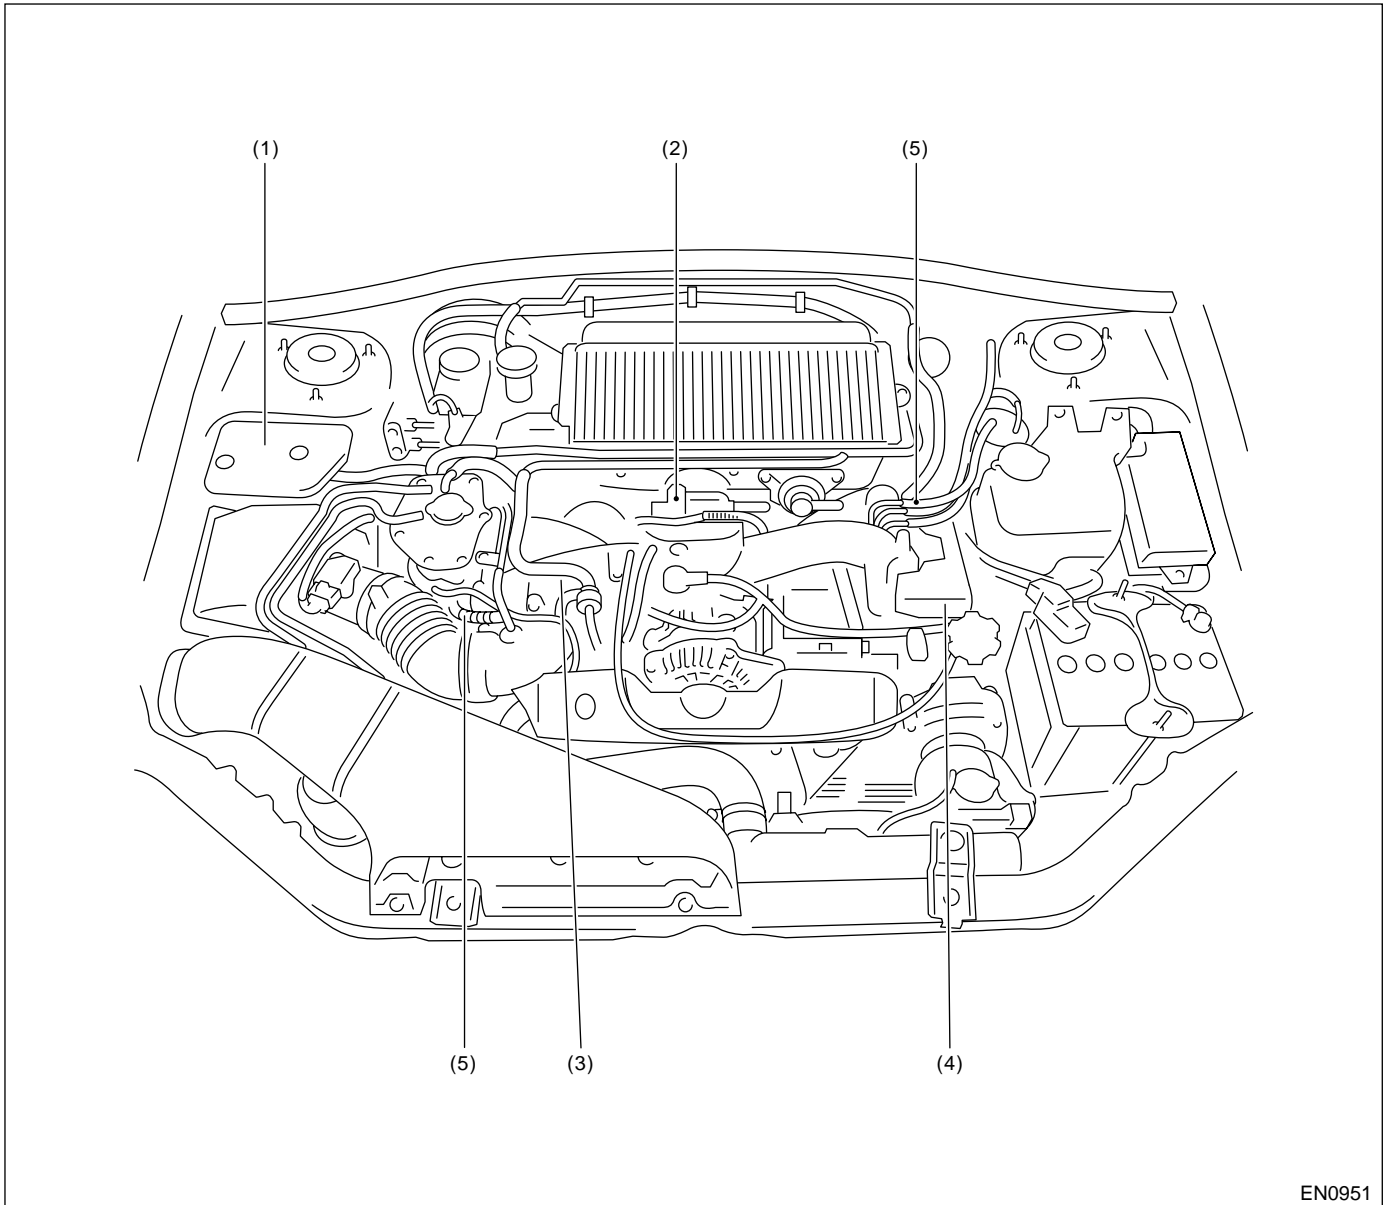

EN0951

(1) Wastegate control solenoid valve

(3) Purge control solenoid valve


(5) Tumble generator valve actuator

(2) Idle air control solenoid valve


(4) Ignition coil

# ELECTRICAL COMPONENTS LOCATION


ENGINE (DIAGNOSTICS)

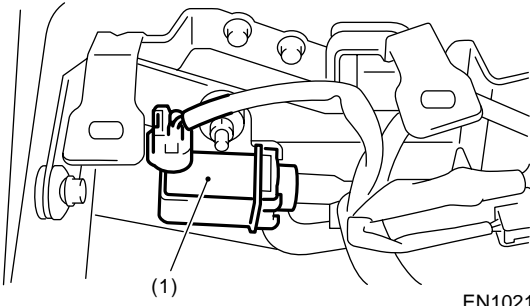


EN1021

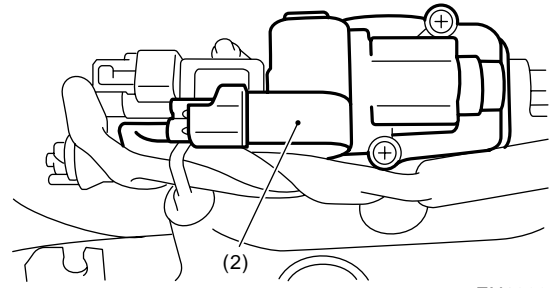


EN1022

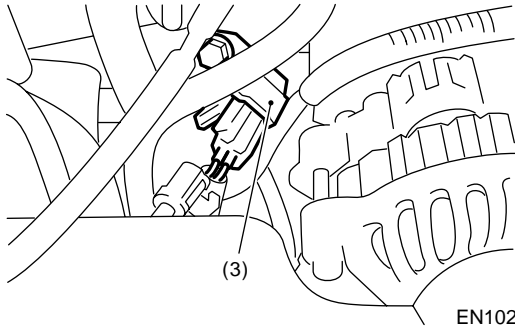

EN1023

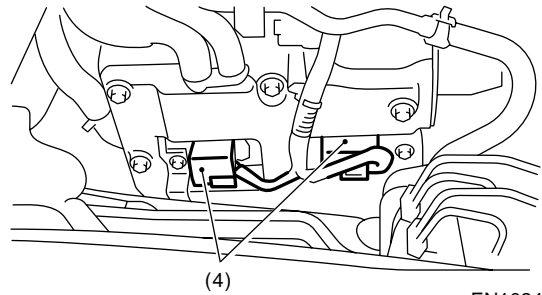

EN1024


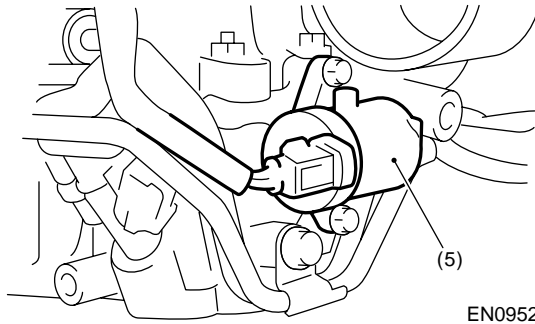


EN0952

**SUBARU.**

# ELECTRICAL COMPONENTS LOCATION


## ENGINE (DIAGNOSTICS)

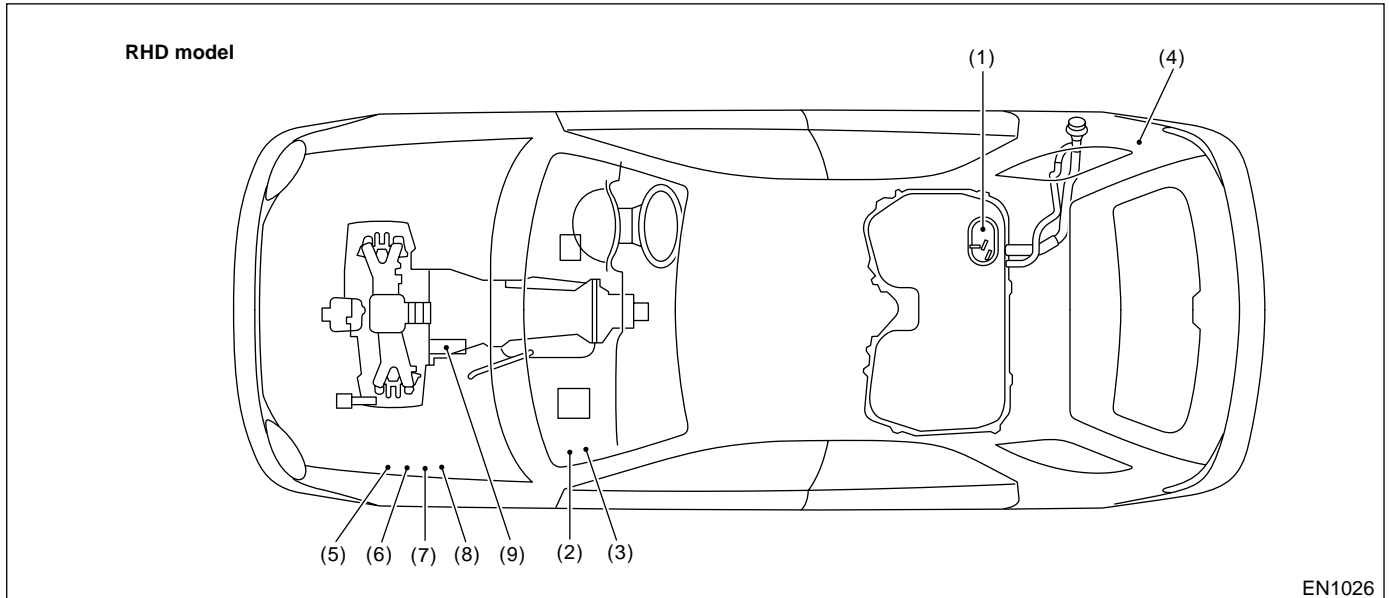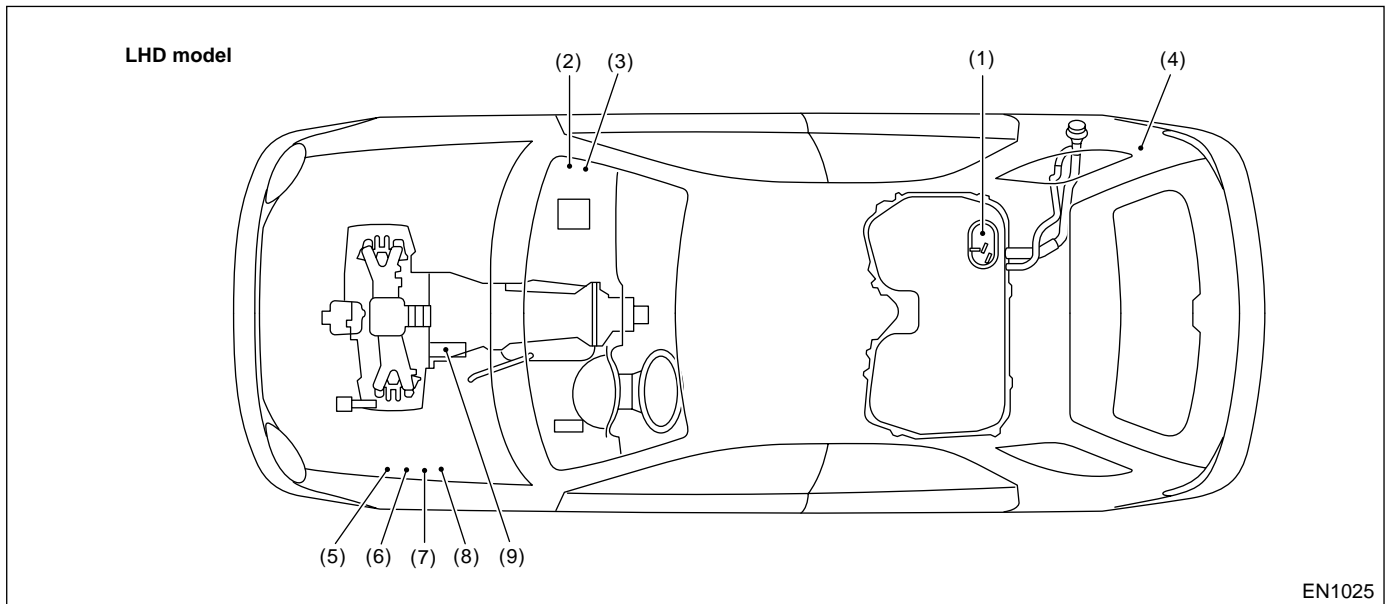

- |                     |                               |                              |
|---------------------|-------------------------------|------------------------------|
| (1) Fuel pump       | (4) Fuel pump controller      | (7) Radiator sub fan relay 1 |
| (2) Main relay      | (5) Radiator main fan relay 1 | (8) Radiator sub fan relay 2 |
| (3) Fuel pump relay | (6) Radiator main fan relay 2 | (9) Starter                  |


# ELECTRICAL COMPONENTS LOCATION

ENGINE (DIAGNOSTICS)

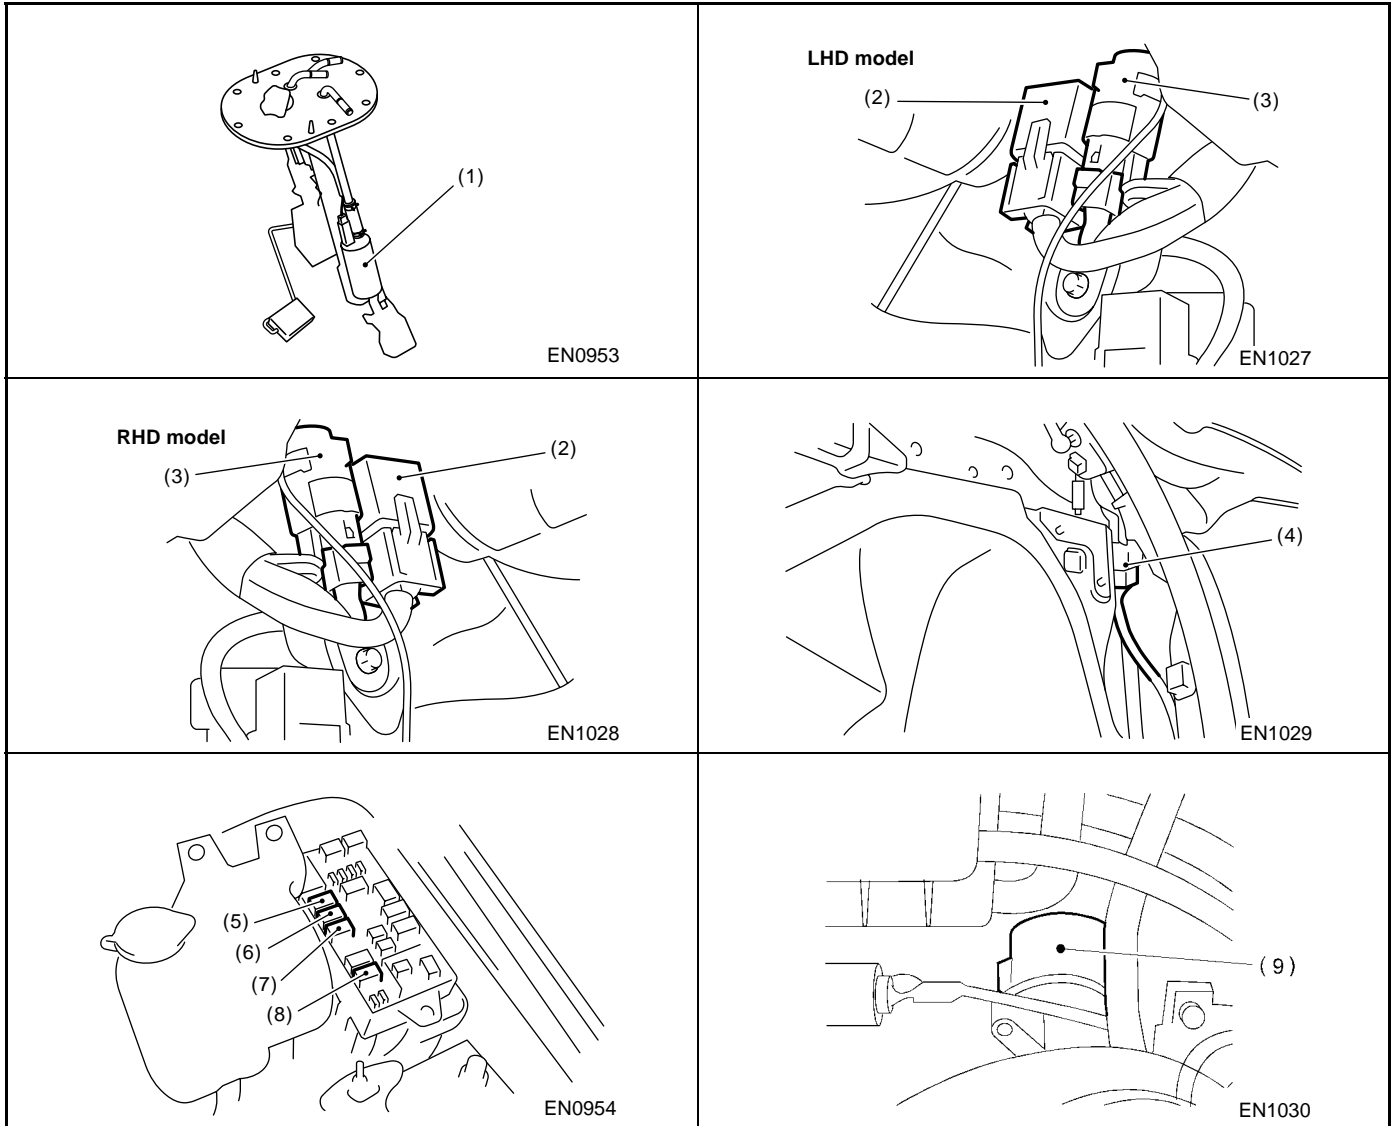

## 2. TRANSMISSION

### • SOLENOID VALVE AND SWITCH (MT VEHICLES)

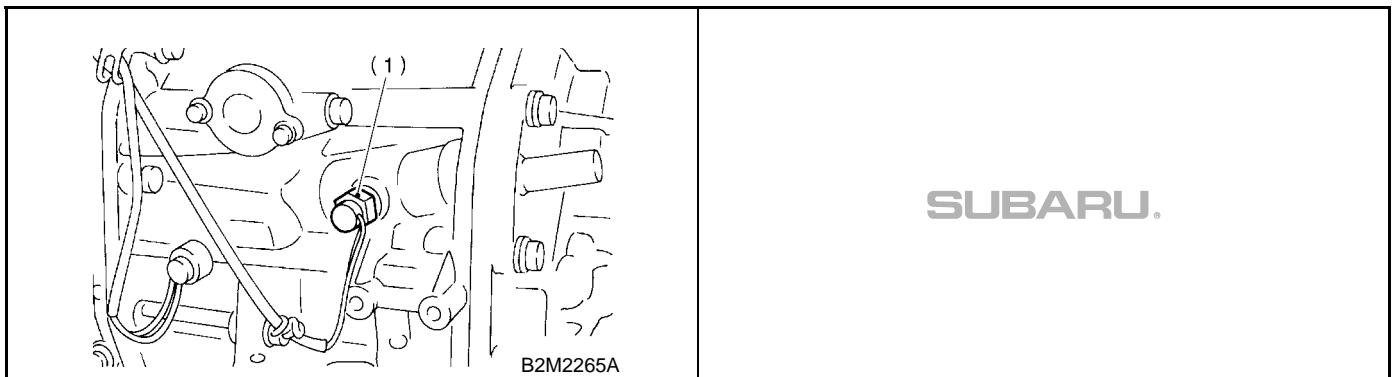


(1) Neutral position switch

# ENGINE CONTROL MODULE (ECM) I/O SIGNAL

ENGINE (DIAGNOSTICS)

## 5. Engine Control Module (ECM) I/O Signal

### A: ELECTRICAL SPECIFICATION

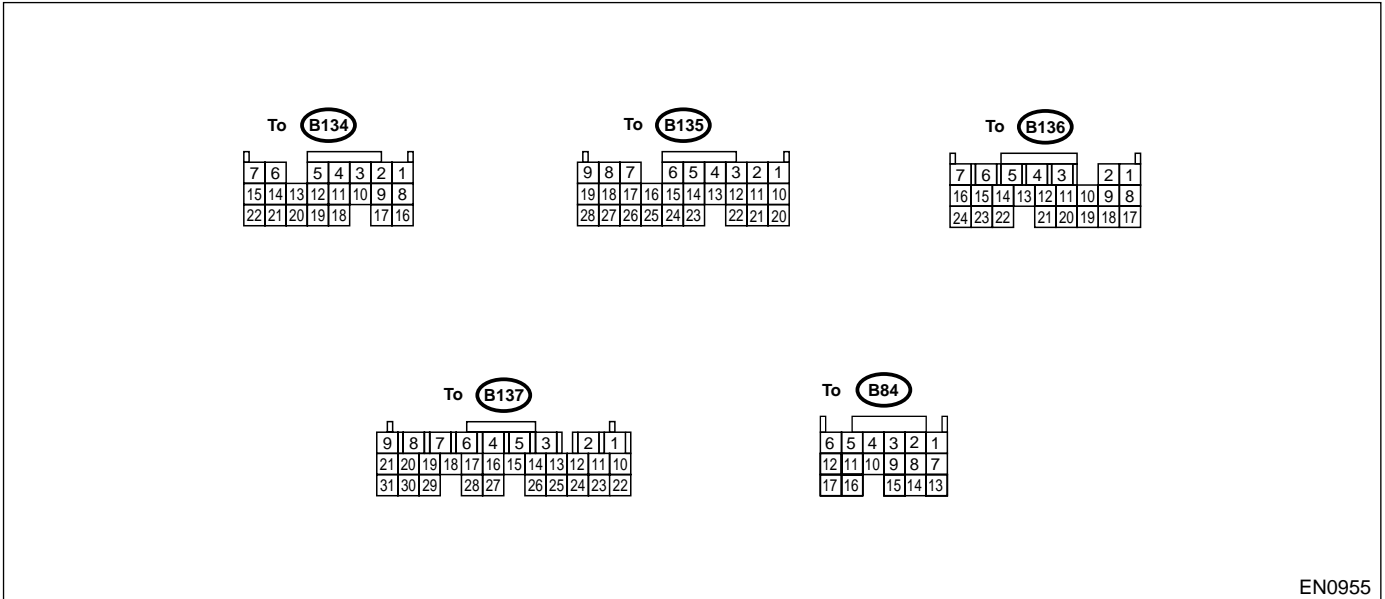

EN0955

Content		Connector No.	Terminal No.	Signal (V)		Note
				Ignition SW ON (Engine OFF)	Engine ON (Idling)	
Crankshaft position sensor	Signal (+)	B135	2	0	-7 — +7	Sensor output waveform
	Signal (-)	B135	11	0	0	—
	Shield	B135	21	0	0	—
Camshaft position sensor	Signal (+)	B135	1	0	-7 — +7	Sensor output waveform
	Signal (-)	B135	10	0	0	—
	Shield	B135	21	0	0	—
Throttle position sensor	Signal	B135	7	Fully closed: 0.2 — 1.0 Fully opened: 4.2 — 4.7		—
	Power supply	B135	9	5	5	—
	GND (sensor)	B135	19	0	0	—
Rear oxygen sensor	Signal	B135	17	0	0 — 0.9	—
	Shield	B135	26	0	0	—
	GND (sensor)	B135	19	0	0	—
Front oxygen (A/F) sensor heater	Signal 1	B137	4	0 — 1.0	0 — 1.0	—
	Signal 2	B137	5	0 — 1.0	0 — 1.0	—
Rear oxygen sensor heater signal		B136	13	0 — 1.0	0 — 1.0	—
Engine coolant temperature sensor	Signal	B135	18	1.0 — 1.4	1.0 — 1.4	After warm-up the engine.
	GND (sensor)	B135	19	0	0	After warm-up the engine.
Vehicle speed signal		B134	1	0 or 5	0 or 5	"5" and "0" are repeatedly displayed when vehicle is driven.

# ENGINE CONTROL MODULE (ECM) I/O SIGNAL

ENGINE (DIAGNOSTICS)

Content		Connector No.	Terminal No.	Signal (V)		Note
				Ignition SW ON (Engine OFF)	Engine ON (Idling)	
Mass air flow sensor	Signal	B84	13	—	0.3 — 4.5	—
	Shield	B84	8	0	0	—
	GND	B84	7	0	0	—
Intake air temperature sensor signal		B135	27	—	—	—
Exhaust gas temperature sensor	Signal	B135	16	—	—	—
	GND (sensor)	B135	19	0	0	—
Tumble generator valve position sensor RH	Signal	B84	23	Fully closed: 0.2 — 1.0 Fully opened: 4.2 — 4.7		—
	Power supply	B135	9	5	5	—
	GND (sensor)	B135	19	0	0	—
Tumble generator valve position sensor LH	Signal	B84	13	Fully closed: 0.2 — 1.0 Fully opened: 4.2 — 4.7		—
	Power supply	B135	9	5	5	—
	GND (sensor)	B135	19	0	0	—
Tumble generator valve RH (open)		B84	4	0 or 5	0 or 5	—
Tumble generator valve RH (close)		B84	5	0 or 5	0 or 5	—
Tumble generator valve LH (open)		B84	11	0 or 5	0 or 5	—
Tumble generator valve LH (close)		B84	10	0 or 5	0 or 5	—
Wastegate control solenoid valve		B137	24	10 — 13	13 — 14	—
Starter switch		B134	16	0	0	Cranking: 8 — 14
A/C switch		B134	6	ON: 10 — 13 OFF: 0	ON: 13 — 14 OFF: 0	—
Ignition switch		B134	14	10 — 13	13 — 14	—
Neutral position switch		B134	8	ON: 12±0.5 OFF: 0		Switch is ON when gear is in neutral position.
Test mode connector		B134	5	5	5	When connected: 0
Knock sensor	Signal	B135	4	2.8	2.8	—
	Shield	B135	22	0	0	—
Back-up power supply		B137	10	10 — 13	13 — 14	Ignition switch "OFF": 10 — 13
Control unit power supply		B137	2	10 — 13	13 — 14	—
		B137	3	10 — 13	13 — 14	—
Sensor power supply		B135	9	5	5	—
Line end check 1		B134	10	0	0	—
Ignition control	#1	B136	24	0	13 — 14	Waveform
	#2	B136	23	0	13 — 14	Waveform
	#3	B136	22	0	13 — 14	Waveform
	#4	B136	21	0	13 — 14	Waveform

# ENGINE CONTROL MODULE (ECM) I/O SIGNAL

## ENGINE (DIAGNOSTICS)

Content		Con- nector No.	Termi- nal No.	Signal (V)		Note
				Ignition SW ON (Engine OFF)	Engine ON (Idling)	
Fuel injec- tor	#1	B137	1	10 — 13	1 — 14	Waveform
	#2	B136	6	10 — 13	1 — 14	Waveform
	#3	B136	5	10 — 13	1 — 14	Waveform
	#4	B136	4	10 — 13	1 — 14	Waveform
Idle air control solenoid valve	Signal	B136	10	0 or 13 — 14	0 or 13 — 14	Waveform
Fuel pump controller	Signal 1	B134	13	—	—	—
	Signal 2	B136	16	—	—	—
A/C relay control		B137	27	ON: 0.5, or less OFF: 10 — 13	ON: 0.5, or less OFF: 13 — 14	—
Radiator fan relay 1 control		B137	17	ON: 0.5, or less OFF: 10 — 13	ON: 0.5, or less OFF: 13 — 14	—
Radiator fan relay 2 control		B137	28	ON: 0.5, or less OFF: 10 — 13	ON: 0.5, or less OFF: 13 — 14	With A/C vehicles only
Malfunction indicator lamp		B137	15	—	—	Light "ON": 1, or less Light "OFF": 10 — 14
Engine speed output		B136	9	—	0 — 13, or more	Waveform
Purge control solenoid valve		B137	16	ON: 1, or less OFF: 10 — 13	ON: 1, or less OFF: 13 — 14	—
pressure sensor	Signal	B135	8	1.7 — 2.4	1.1 — 1.6	—
	Power supply	B135	9	5	5	
	GND (sen- sor)	B135	19	0	0	
Fuel level sensor		B135	25	0.12 — 4.75	0.12 — 4.75	—
Small light switch		B134	17	ON: 0 OFF: 10 — 13	ON: 0 OFF: 13 — 14	—
Blower fan switch		B134	9	ON: 0 OFF: 10 — 13	ON: 0 OFF: 13 — 14	—
Rear defogger switch		B134	3	ON: 0 OFF: 10 — 13	ON: 0 OFF: 13 — 14	—
Power steering oil pres- sure switch		B135	24	10 — 13	ON: 0 OFF: 13 — 14	—
Front oxygen (A/F) sen- sor signal (+)		B137	19	2.8 — 3.2	2.8 — 3.2	—
Front oxygen (A/F) sen- sor signal (-)		B137	29	2.4 — 2.7	2.4 — 2.7	—
Front oxygen (A/F) sen- sor shield		B136	7	0	0	—
SSM/GST communica- tion line		B134	21	Less than 1 ←→ More than 4	Less than 1 ←→ More than 4	—
GND (sensors)		B135	19	0	0	—
GND (injectors)		B136	8	0	0	—
GND (ignition system)		B136	18	0	0	—
GND (power supply)	B136	17	0	0	0	—
	B134	22	0	0	0	—
GND (control systems)	B134	7	0	0	0	—
	B134	15	0	0	0	—

# ENGINE CONTROL MODULE (ECM) I/O SIGNAL

ENGINE (DIAGNOSTICS)

Content	Con- nector No.	Termi- nal No.	Signal (V)		Note
			Ignition SW ON (Engine OFF)	Engine ON (Idling)	
GND (oxygen sensor heater 1)	B137	9	0	0	—
GND (oxygen sensor heater 2)	B137	8	0	0	—



# ENGINE CONDITION DATA

ENGINE (DIAGNOSTICS)

---

## 6. Engine Condition Data

### A: ELECTRICAL SPECIFICATION

Content	Specified data
Engine load	1.6 — 2.9 (%): Idling
	6.4 — 12.8 (%): 2,500 rpm racing

Measuring condition:

- After warm-up the engine.
- Gear position is in neutral position.
- A/C is turned OFF.
- All accessory switches are turned OFF.


## 7. Data Link Connector

### A: NOTE

- 1) This connector is used both for OBD-II general scan tools and the Subaru Select Monitor.
- 2) Terminal No. 4 to No. 6 of the data link connector is used for the Subaru Select Monitor signal.

### CAUTION:

**Do not connect any scan tools other than the OBD-II general scan tools and the Subaru Select Monitor, because the circuit for the Subaru Select Monitor may be damaged.**

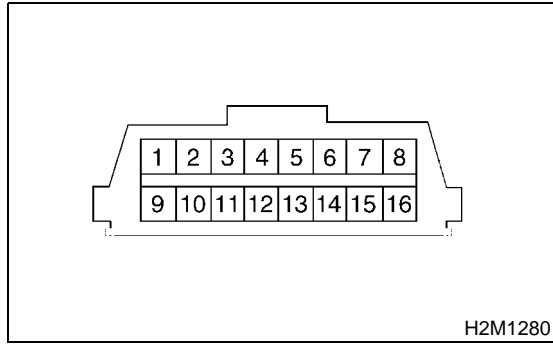

Terminal No.	Contents	Terminal No.	Contents
1	Power supply	9	Blank
2	Blank	10	K line of ISO 9141 CARB
3	Blank	11	Blank
4	Subaru Select Monitor signal (ECM to Subaru Select Monitor)*	12	Ground
5	Subaru Select Monitor signal (Subaru Select Monitor to ECM)*	13	Ground
6	Line end check signal 1	14	Blank
7	Blank	15	Blank
8	Blank	16	Blank

\*: Circuit only for Subaru Select Monitor

# OBD-II GENERAL SCAN TOOL


ENGINE (DIAGNOSTICS)

## 8. OBD-II General Scan Tool

### A: OPERATION

#### 1. HOW TO USE OBD-II GENERAL SCAN TOOL

- 1) Prepare a general scan tool (OBD-II general scan tool) required by SAE J1978.
- 2) Open the cover and connect the OBD-II general scan tool to the data link connector located in the lower portion of the instrument panel (on the driver's side).

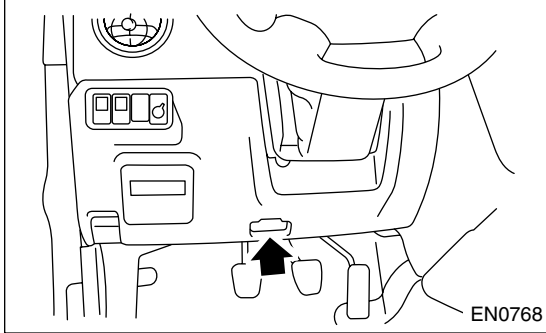

#### 2. MODE \$01 (CURRENT POWERTRAIN DIAGNOSTIC DATA)

Refers to data denoting the current operating condition of analog input/output, digital input/output and/or the powertrain system.

A list of the support data and PID (Parameter Identification) codes are shown in the following table.

PID	Data	Unit of measure
01	Number of emission-related powertrain trouble codes and MIL status	ON/OFF
03	Fuel system control status	—
04	Calculated engine load value	%
05	Engine coolant temperature	°C
06	Short term fuel trim	%
07	Long term fuel trim	%
0B	Intake manifold absolute pressure	kPa
0C	Engine revolution	rpm
0D	Vehicle speed	km/h
0E	Ignition timing advance	°
0F	Intake air temperature	°C
10	Air flow rate from pressure sensor	g/sec
11	Throttle valve opening angle	%
13	Check whether oxygen sensor is installed.	—
15	Oxygen sensor output voltage and short term fuel trim associated with oxygen sensor—bank 2	V and %
24	A/F sensor 1 output voltage and short term fuel trim associated with A/F sensor 1	V and %
1C	On-board diagnosis system	—

NOTE:

Refer to OBD-II general scan tool manufacturer's instruction manual to access generic OBD-II PIDs (MODE \$01).

- 3) Using the OBD-II general scan tool, call up diagnostic trouble code(s) and freeze frame data.

OBD-II general scan tool functions consist of:

- (1) MODE \$01: Current powertrain diagnostic data
- (2) MODE \$02: Powertrain freeze frame data
- (3) MODE \$03: Emission-related powertrain diagnostic trouble codes
- (4) MODE \$04: Clear/Reset emission-related diagnostic information

Read out data according to repair procedures. (For detailed operation procedures, refer to the OBD-II General Scan Tool Operation Manual.)

NOTE:

For details concerning diagnostic trouble codes, refer to the List of Diagnostic Trouble Code (DTC). <Ref. to EN(DOHC TURBO)-69, List of Diagnostic Trouble Code (DTC).>

### 3. MODE \$02 (POWERTRAIN FREEZE FRAME DATA)

Refers to data denoting the operating condition when trouble is sensed by the on-board diagnosis system. A list of the support data and PID (Parameter Identification) codes are shown in the following table.

PID	Data	Unit of measure
02	Trouble code that caused CARB required freeze frame data storage	—
03	Fuel system control status	—
04	Calculated engine load value	%
05	Engine coolant temperature	°C
06	Short term fuel trim	%
07	Long term fuel trim	%
0B	Intake manifold absolute pressure	kPa
0C	Engine revolution	rpm
0D	Vehicle speed	km/h

**NOTE:**

Refer to OBD-II general scan tool manufacturer's instruction manual to access freeze frame data (MODE \$02).

### 4. MODE \$03 (EMISSION-RELATED POWERTRAIN DIAGNOSTIC TROUBLE CODE)

Refer to Read Diagnostic Trouble Code for information about data denoting emission-related powertrain diagnostic trouble codes. <Ref. to EN(DOHC TURBO)-34, Read Diagnostic Trouble Code.>

### 5. MODE \$04 (CLEAR/RESET EMISSION-RELATED DIAGNOSTIC INFORMATION)

Refers to the mode used to clear or reset emission-related diagnostic information (OBD-II trouble diagnostic information).

**NOTE:**

Refer to OBD-II general scan tool manufacturer's instruction manual to clear or reset emission-related diagnostic information (MODE \$04).

# SUBARU SELECT MONITOR


ENGINE (DIAGNOSTICS)

## 9. Subaru Select Monitor

### A: OPERATION


#### 1. HOW TO USE SUBARU SELECT MONITOR

1) Prepare Subaru Select Monitor kit. <Ref. to EN(DOHC TURBO)-7, PREPARATION TOOL, General Description.>

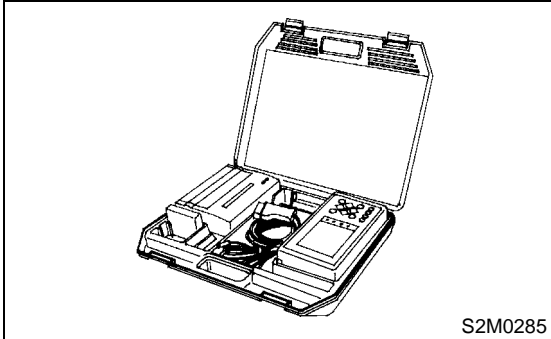


2) Connect diagnosis cable to Subaru Select Monitor.

3) Insert cartridge into Subaru Select Monitor. <Ref. to EN(DOHC TURBO)-7, PREPARATION TOOL, General Description.>

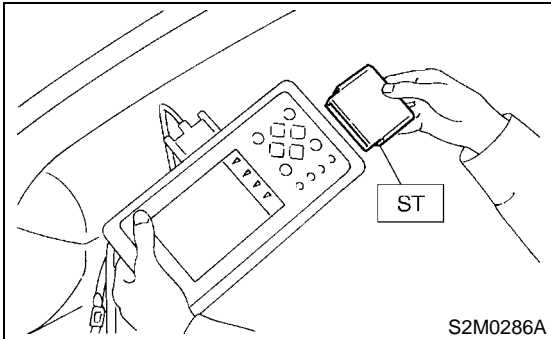


4) Connect Subaru Select Monitor to data link connector.

(1) Data link connector located in the lower portion of the instrument panel (on the driver's side).

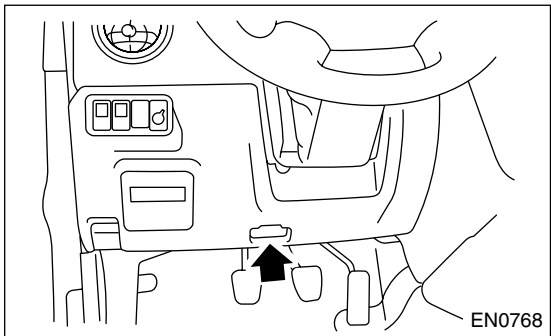

(2) Connect diagnosis cable to data link connector.

5) Turn ignition switch to ON (engine OFF) and Subaru Select Monitor switch to ON.

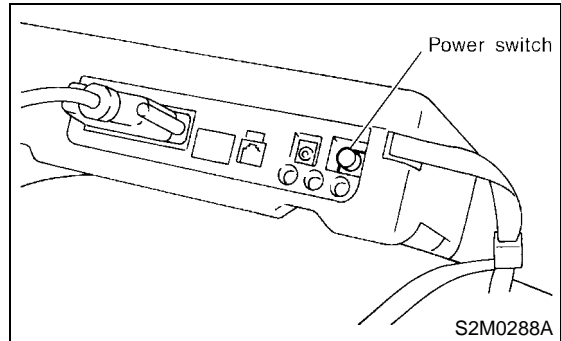

6) Using Subaru Select Monitor, call up diagnostic trouble code(s) and various data, then record them.

#### 2. READ DIAGNOSTIC TROUBLE CODE (DTC) FOR ENGINE. (NORMAL MODE)

Refer to Read Diagnostic Trouble Code for information about how to indicate DTC. <Ref. to EN(DOHC TURBO)-34, Read Diagnostic Trouble Code.>

#### 3. READ DIAGNOSTIC TROUBLE CODE (DTC) FOR ENGINE. (OBD MODE)

Refer to Read Diagnostic Trouble Code for information about how to indicate DTC. <Ref. to EN(DOHC TURBO)-34, Read Diagnostic Trouble Code.>

### CAUTION:

Do not connect scan tools except for Subaru Select Monitor and OBD-II general scan tool.

## 4. READ CURRENT DATA FOR ENGINE. (NORMAL MODE)

- 1) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
  - 2) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
  - 3) Press the [YES] key after displayed the information of engine type.
  - 4) On the «Engine Diagnosis» display screen, select the {Current Data Display & Save} and press the [YES] key.
  - 5) On the «Data Display Menu» display screen, select the {Data Display} and press the [YES] key.
  - 6) Using the scroll key, move the display screen up or down until the desired data is shown.
- A list of the support data is shown in the following table.

Contents	Display	Unit of measure
Battery voltage	Battery Voltage	V
Vehicle speed signal	Vehicle Speed	km/h or MPH
Engine speed signal	Engine Speed	rpm
Engine coolant temperature signal	Coolant Temp.	°C or °F
Ignition timing signal	Ignition Timing	deg
Throttle position signal	Throttle Opening Angle	%
Throttle position signal	Throttle Sensor Voltage	V
Injection pulse width	Fuel Injection #1 Pulse	ms
Idle air control signal	ISC Valve Duty Ratio	%
Alternator duty control signal	ALT Duty	%
Fuel pump duty control signal	Fuel Pump Duty	%
A/F sensor current	A/F Sensor #1 Current	mA
A/F sensor resistance	A/F Sensor #1 Resistance	Ω
Front oxygen (A/F) sensor output signal	A/F Sensor #1	—
Rear oxygen sensor output signal	Rear O2 Sensor	V
Short term fuel trim	A/F Correction #1	%
Knock sensor signal	Knocking Correction	deg
Atmospheric absolute pressure signal	Atmosphere Pressure	mmHg or kPa or inHg or psi
Intake manifold relative pressure signal	Mani. Relative Pressure	mmHg or kPa or inHg or psi
Intake manifold absolute pressure signal	Mani. Absolute Pressure	mmHg or kPa or inHg or psi
A/F correction (short term fuel trim) by rear oxygen sensor	A/F Correction #3	%
Long term whole fuel trim	A/F Learning #1	%
Front oxygen (A/F) sensor heater current	A/F Heater Current 1	A
Rear oxygen sensor heater voltage	Rear O2 Heater Voltage	V
Canister purge control solenoid valve duty ratio	CPC Valve Duty Ratio	%
Primary supercharged pressure control signal	Primary Control	%
Tumble generator valve position sensor signal (right side)	TGV Position Sensor R	V
Tumble generator valve position sensor signal (left side)	TGV Position Sensor L	V
Tumble generator valve drive signal	TGV Drive	OPEN or CLOSE
Fuel level signal	Fuel Level	V
Intake air temperature signal	Intake Air Temp.	°C or °F
Learned ignition timing	Learned Ignition Timing	deg
Mass air flow sensor signal	Mass Air Flow	g/s
Mass air flow sensor signal	Air Flow Sensor Voltage	V
Ignition switch signal	Ignition Switch	ON or OFF
Test mode connector signal	Test Mode Signal	ON or OFF
Neutral position switch signal	Neutral Position Switch	ON or OFF
Air conditioning switch signal	A/C Switch	ON or OFF
Air conditioning signal	A/C Compressor Signal	ON or OFF

# SUBARU SELECT MONITOR

## ENGINE (DIAGNOSTICS)

Contents	Display	Unit of measure
Radiator main fan relay signal	Radiator Fan Relay #1	ON or OFF
Fuel pump relay signal	Fuel Pump Relay	ON or OFF
Knocking signal	Knocking Signal	ON or OFF
Radiator sub fan relay signal	Radiator Fan Relay #2	ON or OFF
Power steering switch signal	P/S Switch	ON or OFF
Engine torque control signal #1	Torque Control Signal #1	ON or OFF
Engine torque control signal #2	Torque Control Signal #2	ON or OFF
Engine torque control permission signal	Torque Permission Signal	ON or OFF
Rear oxygen sensor rich signal	Rear O2 Rich Signal	ON or OFF
Starter switch signal	Starter Switch	ON or OFF
Idle switch signal	Idle Switch	ON or OFF
Crankshaft position sensor signal	Crankshaft Position Sig.	ON or OFF
Camshaft position sensor signal	Camshaft Position Sig.	ON or OFF
Rear defogger switch signal	Rear Defogger SW	ON or OFF
Blower fan switch signal	Blower Fan SW	ON or OFF
Small light switch signal	Light Switch	ON or OFF
Tumble generator valve output signal	TGV Output	ON or OFF

**NOTE:**

For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

# SUBARU SELECT MONITOR

ENGINE (DIAGNOSTICS)

## 5. READ CURRENT DATA FOR ENGINE. (OBD MODE)

- 1) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
  - 2) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
  - 3) Press the [YES] key after displayed the information of engine type.
  - 4) On the «Engine Diagnosis» display screen, select the {OBD System} and press the [YES] key.
  - 5) On the «OBD Menu» display screen, select the {Current Data Display & Save} and press the [YES] key.
  - 6) On the «Data Display Menu» display screen, select the {Data Display} and press the [YES] key.
  - 7) Using the scroll key, move the display screen up or down until the desired data is shown.
- A list of the support data is shown in the following table.

Contents	Display	Unit of measure
Number of diagnosis code	Number of Diagnosis Code	—
Malfunction indicator lamp status	MI (MIL)	Complete or incomplete
Monitoring test of misfire	Misfire monitoring	Complete or incomplete
Monitoring test of fuel system	Fuel system monitoring	Complete or incomplete
Monitoring test of comprehensive component	Component monitoring	Complete or incomplete
Test of catalyst	Catalyst Diagnosis	No support
Test of heated catalyst	Heated catalyst	No support
Test of evaporative emission purge control system	Evaporative purge system	No support
Test of secondary air system	Secondary air system	No support
Test of air conditioning system refrigerant	A/C system refrigerant	No support
Test of oxygen sensor	Oxygen sensor	Complete or incomplete
Test of oxygen sensor heater	O2 Heater Diagnosis	Complete or incomplete
Test of EGR system	EGR system	No support
Air fuel ratio control system for bank 1	Fuel System for Bank 1	—
Engine load data	Calculated load value	%
Engine coolant temperature signal	Coolant Temp.	°C or °F
Short term fuel trim by front oxygen (A/F) sensor	Short term fuel trim B1	%
Long term fuel trim by front oxygen (A/F) sensor	Long term fuel trim B1	%
Intake manifold absolute pressure signal	Mani. Absolute Pressure	mmHg or kPa or inHg or psi
Engine speed signal	Engine Speed	rpm
Vehicle speed signal	Vehicle Speed	km/h or MPH
Ignition timing advance for #1 cylinder	Ignition timing adv. #1	°
Intake air temperature signal	Intake Air Temp.	°C or °F
Intake air amount	Mass Air Flow	g/s
Throttle position signal	Throttle Opening Angle	%
A/F sensor equipment	A/F sensor	ON or OFF
Rear oxygen sensor output signal	Oxygen Sensor #12	V
Air fuel ratio correction by rear oxygen sensor	Short term fuel trim #12	%
On-board diagnostic system	OBD System	—

### NOTE:

For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.



# SUBARU SELECT MONITOR

## ENGINE (DIAGNOSTICS)

### 6. READ FREEZE FRAME DATA FOR ENGINE. (OBD MODE)

- 1) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
  - 2) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
  - 3) Press the [YES] key after displayed the information of engine type.
  - 4) On the «Engine Diagnosis» display screen, select the {OBD System} and press the [YES] key.
  - 5) On the «OBD Menu» display screen, select the {Freeze Frame Data} and press the [YES] key.
- A list of the support data is shown in the following table.

Contents	Display	Unit of measure
Diagnostic trouble code (DTC) for freeze frame data	Freeze frame data	DTC
Air fuel ratio control system for bank 1	Fuel system for Bank1	ON or OFF
Engine load data	Engine Load	%
Engine coolant temperature signal	Coolant Temp.	°C or °F
Short term fuel trim by front oxygen (A/F) sensor	Short term fuel trim B1	%
Long term fuel trim by front oxygen (A/F) sensor	Long term fuel trim B1	%
Intake manifold absolute pressure signal	Mani. Absolute Pressure	mmHg or kPa or inHg or psi
Engine speed signal	Engine Speed	rpm
Vehicle speed signal	Vehicle Speed	km/h or MPH

**NOTE:**

For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

### 7. READ OXYGEN SENSOR MONITORING TEST RESULTS DATA FOR ENGINE. (OBD MODE)

- 1) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
  - 2) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
  - 3) Press the [YES] key after displayed the information of engine type.
  - 4) On the «Engine Diagnosis» display screen, select the {OBD System} and press the [YES] key.
  - 5) On the «OBD Menu» display screen, select the {O2 Sensor Monitor} and press the [YES] key.
  - 6) On the «O2 Sensor Select» display screen, select the {Bank 1-Sensor1} or {Bank 1-Sensor2} and press the [YES] key.
- Bank 1-Sensor1 indicates the front oxygen or A/F sensor, and Bank 1-Sensor2 indicates the rear oxygen sensor.
  - A list of the support data is shown in the following table.

Contents	Display	Unit of measure
Oxygen sensor for monitoring test	<O2 Sensor Monitor (-----)>	—
Rich to lean oxygen sensor threshold voltage	Rich to lean sensor volt	V
Lean to rich oxygen sensor threshold voltage	Lean to rich sensor volt	V
Low oxygen sensor voltage for switch time calculation	Low sensor voltage	V
High oxygen sensor voltage for switch time calculation	High sensor voltage	V
Rich to lean oxygen sensor switch time	Rich to lean switch time	sec
Lean to rich oxygen sensor switch time	Lean to rich switch time	sec
Maximum oxygen sensor voltage for test cycle	Maximum sensor Voltage	V
Minimum oxygen sensor voltage for test cycle	Minimum sensor Voltage	V

**NOTE:**

For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

## 8. LED OPERATION MODE FOR ENGINE

- 1) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
  - 2) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
  - 3) Press the [YES] key after displayed the information of engine type.
  - 4) On the «Engine Diagnosis» display screen, select the {Current Data Display & Save} and press the [YES] key.
  - 5) On the «Data Display Menu» display screen, select the {Data & LED Display} and press the [YES] key.
  - 6) Using the scroll key, move the display screen up or down until the desired data is shown.
- A list of the support data is shown in the following table.

Contents	Display	Message	LED "ON" requirements
Ignition switch signal	Ignition Switch	ON or OFF	When ignition switch is turned ON.
Test mode connector signal	Test Mode Signal	ON or OFF	When test mode connector is connected.
Neutral position switch signal	Neutral SW	ON or OFF	When neutral position signal is entered.
Air conditioning switch signal	A/C SW	ON or OFF	When air conditioning switch is turned ON.
Air conditioning relay signal	A/C Relay	ON or OFF	When air conditioning relay is in function.
Radiator main fan relay signal	Radiator Fan Relay #1	ON or OFF	When radiator main fan relay is in function.
Knocking signal	Knocking Signal	ON or OFF	When knocking signal is entered.
Radiator sub fan relay signal	Radiator Fan Relay #2	ON or OFF	When radiator sub fan relay is in function.
Engine torque control signal #1	Torque Control Signal #1	ON or OFF	When engine torque control signal 1 is entered.
Engine torque control signal #2	Torque Control Signal #2	ON or OFF	When engine torque control signal 2 is entered.
Engine torque control permission signal	Torque Control Permit	ON or OFF	When engine torque control permission signal is entered.
Rear oxygen sensor rich signal	Rear O2 Rich Signal	ON or OFF	When rear oxygen sensor mixture ratio is rich.
Starter switch signal	Starter Switch Signal	ON or OFF	When starter switch signal is entered.
Idle switch signal	Idle Switch Signal	ON or OFF	When idle switch signal is entered.
Crankshaft position sensor signal	Crankshaft Position Sig.	ON or OFF	When crankshaft position sensor signal is entered.
Camshaft position sensor signal	Camshaft Position Sig.	ON or OFF	When camshaft position sensor signal is entered.
Power steering switch signal	P/S SW	ON or OFF	When power steering switch is entered.
Rear defogger switch signal	Rear Defogger SW	ON or OFF	When rear defogger switch is turned ON.
Blower fan switch signal	Blower Fan SW	ON or OFF	When blower fan switch is turned ON.
Light switch signal	Light SW	ON or OFF	When small light switch is turned ON.
Tumble generator valve actuator signal	TGV Signal	ON or OFF	When TGV actuator signal is entered.
Tumble generator valve drive signal	TGV Drive	ON or OFF	When TGV moves and valve opens.

**NOTE:**

For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

### 10. Read Diagnostic Trouble Code

#### A: OPERATION

##### 1. SUBARU SELECT MONITOR (NORMAL MODE)

- 1) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
- 3) Press the [YES] key after displayed the information of engine type.
- 4) On the «Engine Diagnosis» display screen, select the {Diagnostic Code(s) Display} and press the [YES] key.
- 5) On the «Diagnostic Code(s) Display» display screen, select the {Current Diagnostic Code(s)} or {History Diagnostic Code(s)} and press the [YES] key.

#### NOTE:

- For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.
- For detailed concerning diagnostic trouble codes, refer to the List of Diagnostic Trouble Code (DTC). <Ref. to EN(DOHC TURBO)-69, List of Diagnostic Trouble Code (DTC).>

##### 2. SUBARU SELECT MONITOR (OBD MODE)

- 1) On the «Main Menu» display screen, select the {2. Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
- 3) Press the [YES] key after displayed the information of engine type.
- 4) On the «Engine Diagnosis» display screen, select the {OBD System} and press the [YES] key.
- 5) On the «OBD Menu» display screen, select the {Diagnosis Code(s) Display} and press the [YES] key.
- 6) Make sure that a diagnostic trouble code (DTC) is shown on the display screen.

#### NOTE:

- For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.
- For detailed concerning diagnostic trouble codes, refer to the List of Diagnostic Trouble Code (DTC). <Ref. to EN(DOHC TURBO)-69, List of Diagnostic Trouble Code (DTC).>

##### 3. OBD-II GENERAL SCAN TOOL

Refers to data denoting emission-related powertrain diagnostic trouble codes.

For details concerning diagnostic trouble codes, refer to the List of Diagnostic Trouble Code (DTC). <Ref. to EN(DOHC TURBO)-69, List of Diagnostic Trouble Code (DTC).>

#### NOTE:

Refer to OBD-II general scan tool manufacturer's instruction manual to access emission-related powertrain diagnostic trouble codes (MODE \$03).

## 11. Inspection Mode


### A: OPERATION

#### 1. PREPARATION FOR THE INSPECTION MODE

Raise the vehicle using a garage jack and place on safety stands or drive the vehicle onto free rollers.

#### WARNING:


- Before raising the vehicle, ensure parking brakes are applied.
- Do not use a pantograph jack in place of a safety stand.
- Secure a rope or wire to the front and rear towing or tie-down hooks to prevent the lateral runout of front wheels.
- Do not abruptly depress/release clutch pedal or accelerator pedal during works even when engine is operating at low speeds since this may cause vehicle to jump off free rollers.
- In order to prevent the vehicle from slipping due to vibration, do not place any wooden blocks or similar items between the safety stands and the vehicle.
- Since the rear wheels will also rotate, do not place anything near them. Also, make sure that nobody goes in front of the vehicle.

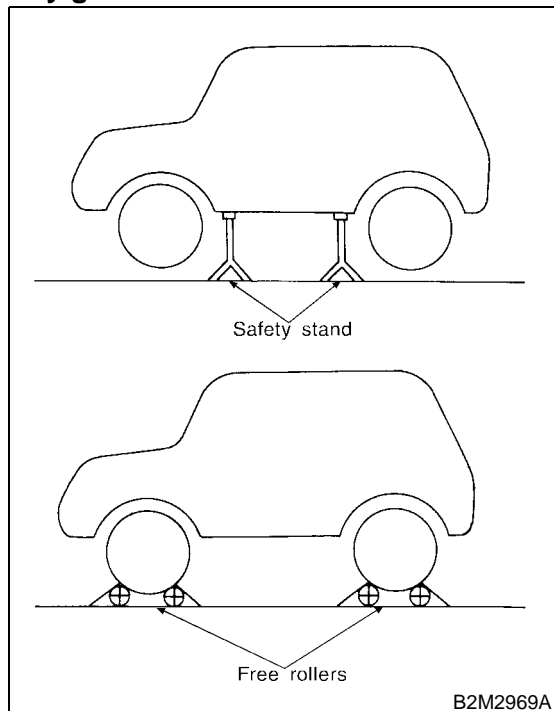


#### 2. SUBARU SELECT MONITOR

After performing diagnostics and clearing the memory, check for any remaining unresolved trouble data.


- 1) Prepare Subaru Select Monitor kit. <Ref. to EN(DOHC TURBO)-7, PREPARATION TOOL, General Description.>

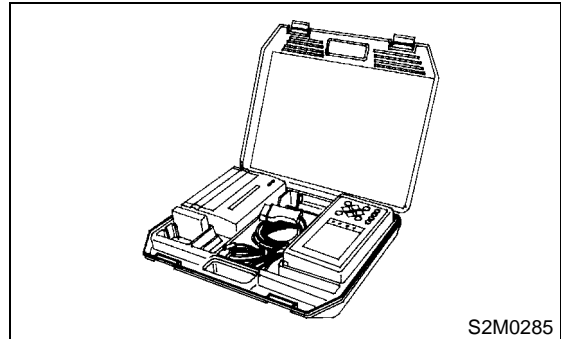

- 2) Connect diagnosis cable to Subaru Select Monitor.
- 3) Insert cartridge into Subaru Select Monitor. <Ref. to EN(DOHC TURBO)-7, PREPARATION TOOL, General Description.>

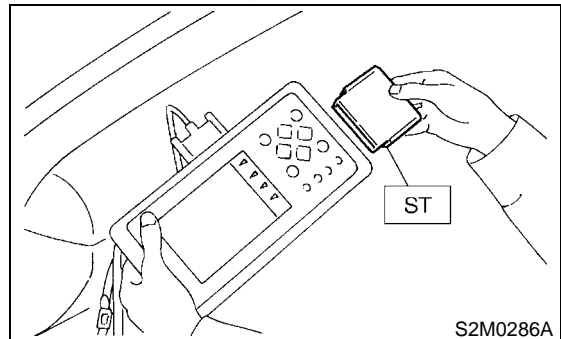

- 4) Connect test mode connector at the lower portion of instrument panel (on the driver's side), to the side of the center console box.

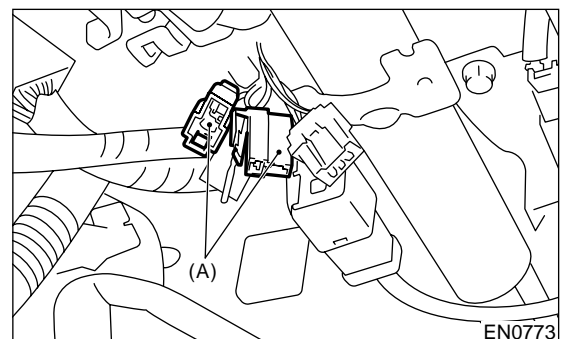


- 5) Connect Subaru Select Monitor to data link connector.

# INSPECTION MODE

## ENGINE (DIAGNOSTICS)

- (1) Connect Subaru Select Monitor to data link connector located in the lower portion of the instrument panel (on the driver's side).

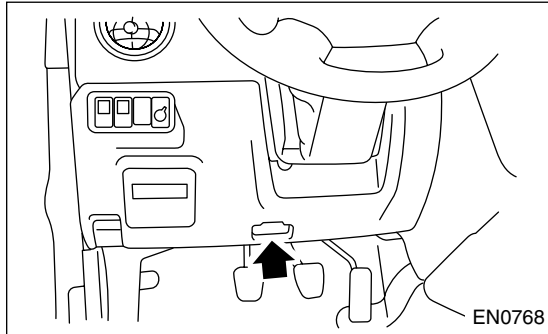


- (2) Connect diagnosis cable to data link connector.

### CAUTION:

**Do not connect scan tools except for Subaru Select Monitor and OBD-II general scan tool.**

- 6) Turn ignition switch to ON (engine OFF) and Subaru Select Monitor switch to ON.

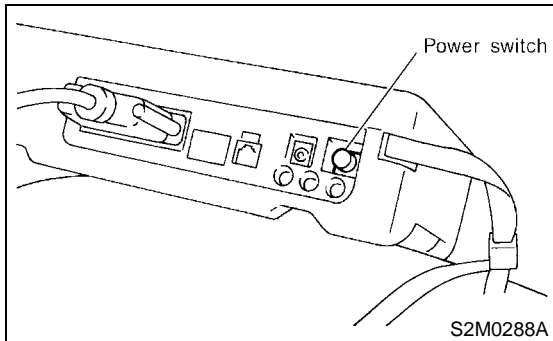

- 7) On the «Main Menu» display screen, select the {2. Each System Check} and press the [YES] key.
- 8) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
- 9) Press the [YES] key after displayed the information of engine type.
- 10) On the «Engine Diagnosis» display screen, select the {Dealer Check Mode Procedure} and press the [YES] key.
- 11) When the “Perform Inspection (Dealer Check) Mode?” is shown on the display screen, press the [YES] key.
- 12) Perform subsequent procedures as instructed on the display screen.
  - If trouble still remains in the memory, the corresponding diagnostic trouble code (DTC) appears on the display screen.

### NOTE:

- For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.
- For detailed concerning diagnostic trouble codes, refer to the List of Diagnostic Trouble Code


(DTC). <Ref. to EN(DOHC TURBO)-69, List of Diagnostic Trouble Code (DTC).>

- Release the parking brake.
- The speed difference between front and rear wheels may light either the ABS warning light, but this indicates no malfunctions. When engine control diagnosis is finished, perform the ABS memory clearance procedure of self-diagnosis system.

### 3. OBD-II GENERAL SCAN TOOL

After performing diagnostics and clearing the memory, check for any remaining unresolved trouble data:


- 1) Connect test mode connector at the lower side of the instrument panel (on the driver's side), to the side of the center console box.

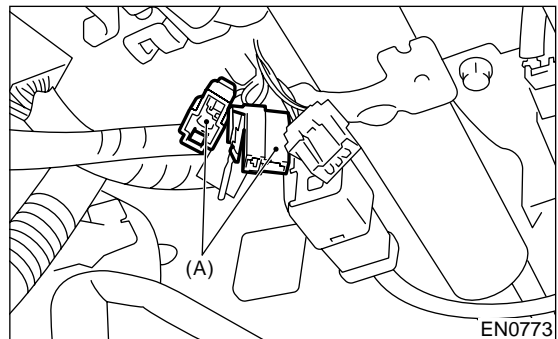

- 2) Connect the OBD-II general scan tool to its data link connector in the lower portion of the instrument panel (on the driver's side).

### CAUTION:

**Do not connect the scan tools except for Subaru Select Monitor and OBD-II general scan tool.**

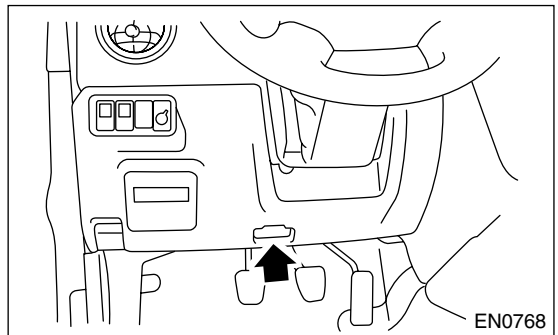

- 3) Start the engine.

### NOTE:

- Depress clutch pedal when starting the engine.
- 4) Using the shift lever, turn the “N” position switch to ON.
  - 5) Keep engine speed in the 2,500 — 3,000 rpm range for 40 seconds.
  - 6) Place the shift lever in the “1st” gear and drive the vehicle at 5 to 10 km/h (3 to 6 MPH).

### NOTE:

The speed difference between front and rear wheels may light the ABS warning light, but this in-

icates no malfunctions. When engine control diagnosis is finished, perform the ABS memory clearance procedure of self-diagnosis system.

7) Using the OBD-II general scan tool, check for diagnostic trouble code(s) and record the result(s).

**NOTE:**

- For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.
- For detailed concerning diagnostic trouble codes, refer to the List of Diagnostic Trouble Code (DTC). <Ref. to EN(DOHC TURBO)-69, List of Diagnostic Trouble Code (DTC).>

## 12. Clear Memory Mode

### A: OPERATION

#### 1. SUBARU SELECT MONITOR (NORMAL MODE)

- 1) On the «Main Menu» display screen, select the {2. Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
- 3) Press the [YES] key after displayed the information of engine type.
- 4) On the «Engine Diagnosis» display screen, select the {Clear Memory} and press the [YES] key.
- 5) When the `Done' and `Turn Ignition Switch OFF' are shown on the display screen, turn the Subaru Select Monitor and ignition switch to OFF.

#### NOTE:

- For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

#### 2. SUBARU SELECT MONITOR (OBD MODE)

- 1) On the «Main Menu» display screen, select the {2. Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
- 3) Press the [YES] key after displayed the information of engine type.
- 4) On the «Engine Diagnosis» display screen, select the {OBD System} and press the [YES] key.
- 5) On the «OBD Menu» display screen, select the {4. Diagnosis Code(s) Cleared} and press the [YES] key.
- 6) When the `Clear Diagnostic Code?' is shown on the display screen, press the [YES] key.
- 7) Turn Subaru Select Monitor and ignition switch to OFF.

#### NOTE:

- For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.


#### 3. OBD-II GENERAL SCAN TOOL

For clear memory procedures using the OBD-II general scan tool, refer to the OBD-II General Scan Tool Instruction Manual.

## 13. Compulsory Valve Operation Check Mode


### A: OPERATION

1) Prepare Subaru Select Monitor kit. <Ref. to EN(DOHC TURBO)-7, PREPARATION TOOL, General Description.>

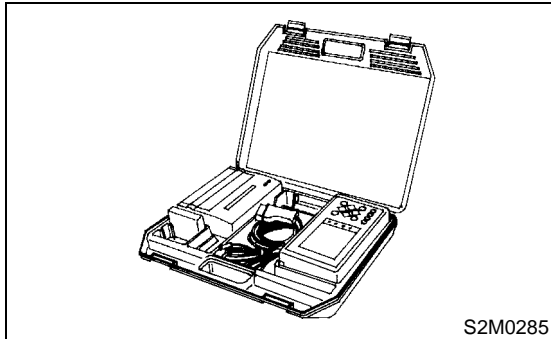


2) Connect diagnosis cable to Subaru Select Monitor.

3) Insert cartridge into Subaru Select Monitor. <Ref. to EN(DOHC TURBO)-7, PREPARATION TOOL, General Description.>

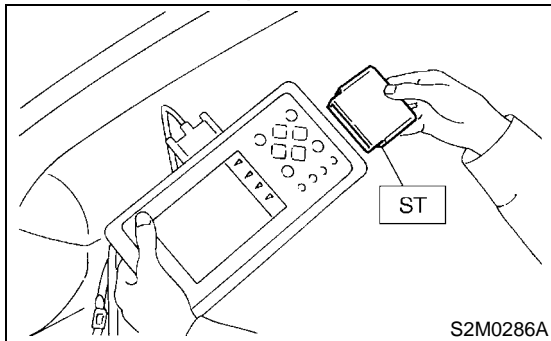


4) Connect test mode connector (A) at the lower portion of instrument panel (on the driver's side), to the side of the center console box.

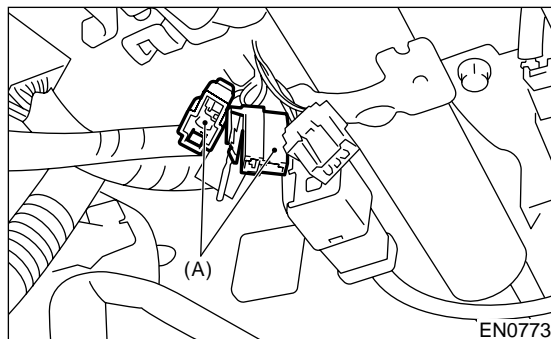

5) Connect Subaru Select Monitor to data link connector.

(1) Connect Subaru Select Monitor to data link connector located in the lower portion of the instrument panel (on the driver's side).

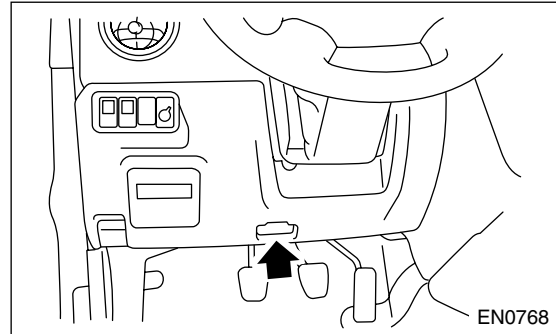


(2) Connect diagnosis cable to data link connector.

### CAUTION:

**Do not connect scan tools except for Subaru Select Monitor and OBD-II general scan tool.**

6) Turn ignition switch to ON (engine OFF) and Subaru Select Monitor switch to ON.

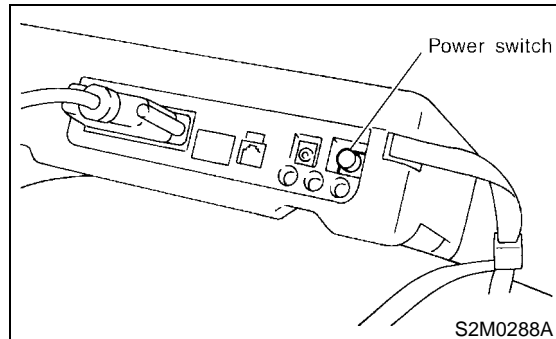

7) On the «Main Menu» display screen, select the {2. Each System Check} and press the [YES] key.

8) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.

9) Press the [YES] key after displayed the information of engine type.

10) On the «Engine Diagnosis» display screen, select the {System Operation Check Mode} and press the [YES] key.

11) On the «System Operation Check Mode» display screen, select the {Actuator ON/OFF Operation} and press the [YES] key.

12) Select the desired compulsory actuator on the «Actuator ON/OFF Operation» display screen and press the [YES] key.

13) Pressing the [NO] key completes the compulsory operation check mode. The display will then return to the «Actuator ON/OFF Operation» screen.



# COMPULSORY VALVE OPERATION CHECK MODE

## ENGINE (DIAGNOSTICS)

---

- A list of the support data is shown in the following table.

Contents	Display
Compulsory fuel pump relay operation check	Fuel Pump Relay
Compulsory radiator fan relay operation check	Radiator Fan Relay
Compulsory air conditioning relay operation check	A/C Compressor Relay
Compulsory purge control solenoid valve operation check	CPC Solenoid Valve

### NOTE:

- The following parts will be displayed but not functional because they are not installed on the vehicle.

Display
EGR Solenoid Valve
ASV Solenoid Valve
PCV Solenoid Valve
Vent Control Solenoid Valve
FICD Solenoid
Pressure Switching Sol. 1
Pressure Switching Sol. 2
AAI Solenoid Valve
Fuel Tank Sensor Control Valve

- For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

## 14. Engine Malfunction Indicator Lamp (MIL)

### A: PROCEDURE

1. Activation of check engine malfunction indicator lamp (MIL). <Ref. to EN(DOHC TURBO)-42, ACTIVATION OF CHECK ENGINE MALFUNCTION INDICATOR LAMP (MIL), Engine Malfunction Indicator Lamp (MIL).>
↓
2. Check engine malfunction indicator lamp (MIL) does not come on. <Ref. to EN(DOHC TURBO)-44, CHECK ENGINE MALFUNCTION INDICATOR LAMP (MIL) DOES NOT COME ON., Engine Malfunction Indicator Lamp (MIL).>
↓
3. Check engine malfunction indicator lamp (MIL) does not go off. <Ref. to EN(DOHC TURBO)-46, CHECK ENGINE MALFUNCTION INDICATOR LAMP (MIL) DOES NOT GO OFF., Engine Malfunction Indicator Lamp (MIL).>
↓
4. Check engine malfunction indicator lamp (MIL) does not blink at a cycle of 3 Hz. <Ref. to EN(DOHC TURBO)-47, CHECK ENGINE MALFUNCTION INDICATOR LAMP (MIL) DOES NOT BLINK AT A CYCLE OF 3 HZ., Engine Malfunction Indicator Lamp (MIL).>
↓
5. Check engine malfunction indicator lamp (MIL) remains blinking at a cycle of 3 Hz. <Ref. to EN(DOHC TURBO)-50, CHECK ENGINE MALFUNCTION INDICATOR LAMP (MIL) REMAINS BLINKING AT A CYCLE OF 3 HZ., Engine Malfunction Indicator Lamp (MIL).>

# ENGINE MALFUNCTION INDICATOR LAMP (MIL)


## ENGINE (DIAGNOSTICS)

### B: ACTIVATION OF CHECK ENGINE MALFUNCTION INDICATOR LAMP (MIL)


1) When ignition switch is turned to ON (engine off), the CHECK ENGINE malfunction indicator lamp (MIL) in the combination meter illuminates.

#### NOTE:


If the MIL does not illuminate, perform diagnostics of the CHECK ENGINE light circuit or the combination meter circuit. <Ref. to EN(DOHC TURBO)-44, CHECK ENGINE MALFUNCTION INDICATOR LAMP (MIL) DOES NOT COME ON., Engine Malfunction Indicator Lamp (MIL).>

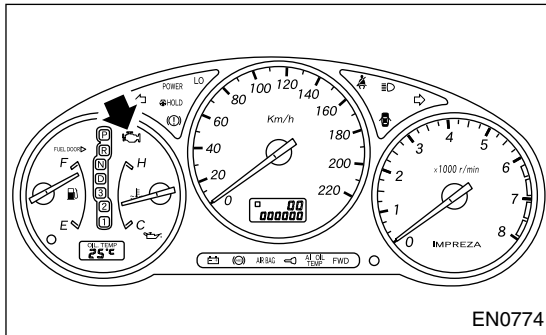


2) After starting the engine, the MIL goes out. If it does not, either the engine or the emission control system is malfunctioning.

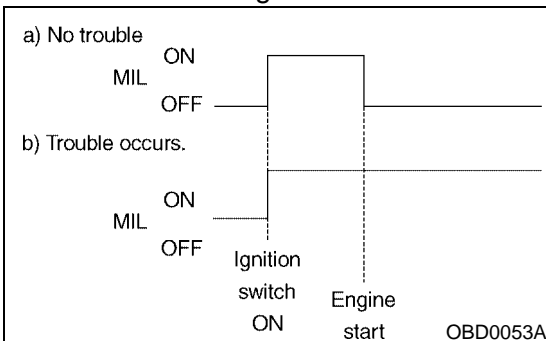

3) If the diagnosis system senses a misfire which could damage the catalyzer, the MIL will blink at a cycle of 1 Hz.

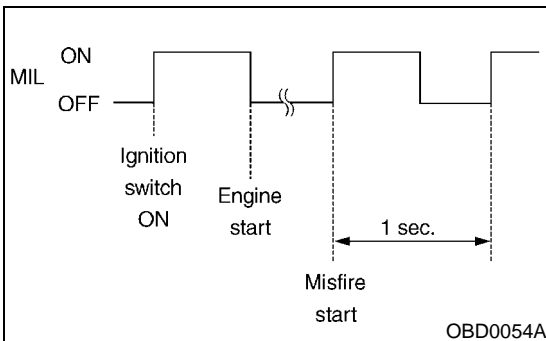

4) When ignition switch is turned to ON (engine off) or to "START" with the test mode connector connected, the MIL blinks at a cycle of 3 Hz.

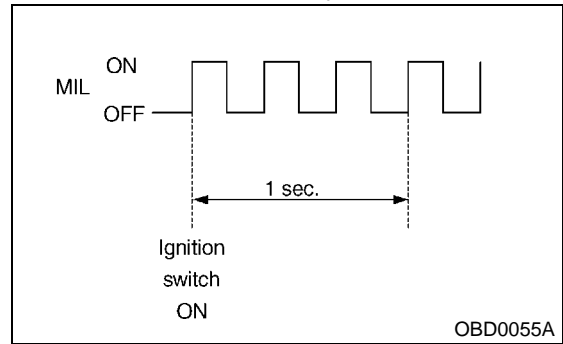

# ENGINE MALFUNCTION INDICATOR LAMP (MIL)

ENGINE (DIAGNOSTICS)


---

# ENGINE MALFUNCTION INDICATOR LAMP (MIL)

ENGINE (DIAGNOSTICS)

## C: CHECK ENGINE MALFUNCTION INDICATOR LAMP (MIL) DOES NOT COME ON.

- **DIAGNOSIS:**
  - The CHECK ENGINE malfunction indicator lamp (MIL) circuit is open or shorted.
- **TROUBLE SYMPTOM:**
  - When ignition switch is turned ON (engine OFF), MIL does not come on.
- **WIRING DIAGRAM:**

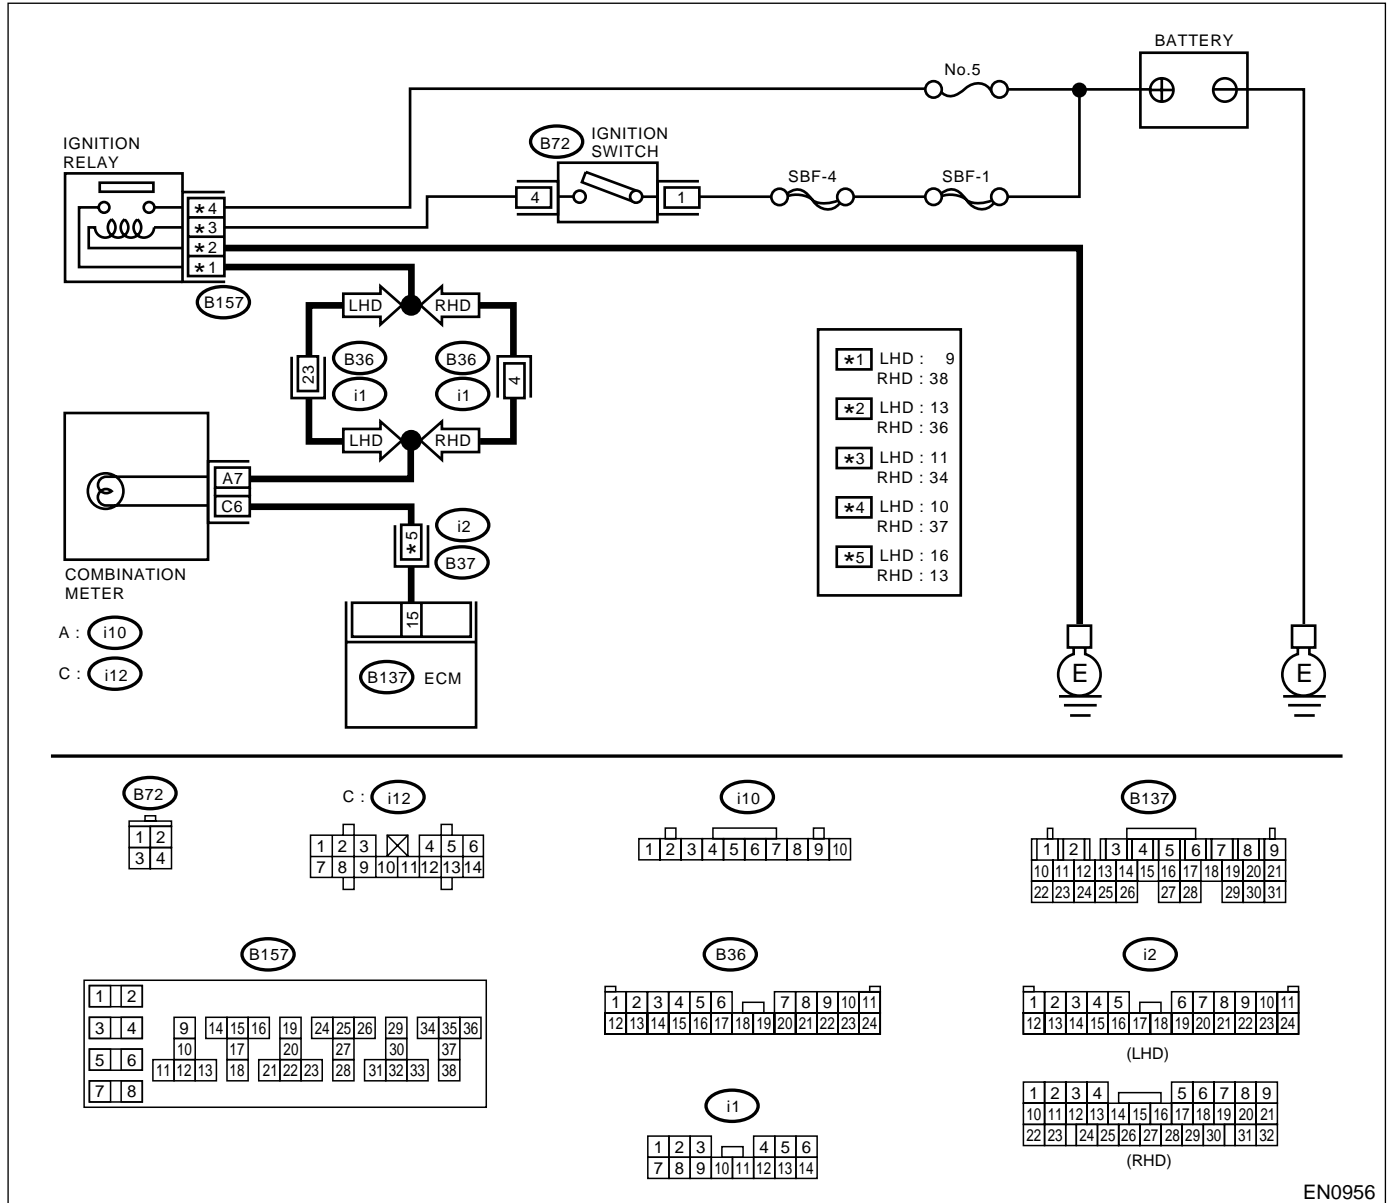

EN0956

Step	Check	Yes	No	
1	<p><b>CHECK OUTPUT SIGNAL FROM ECM.</b></p> <p>1) Turn ignition switch to ON.</p> <p>2) Measure voltage between ECM connector and chassis ground.</p> <p><b>Connector &amp; terminal</b> (B137) No. 15 (+) — Chassis ground (-):</p>	Is the voltage less than 1 V?	Go to step 4.	Go to step 2.

# ENGINE MALFUNCTION INDICATOR LAMP (MIL)

ENGINE (DIAGNOSTICS)

Step	Check	Yes	No
<b>2</b>	<b>CHECK POOR CONTACT.</b>	Does the MIL come on when shaking or pulling ECM connector and harness?	Repair poor contact in ECM connector. Go to step <b>3</b> .
<b>3</b>	<b>CHECK ECM CONNECTOR.</b>	Is ECM connector correctly connected?	Replace ECM. <Ref. to FU(DOHC TURBO)-45, Engine Control Module.> Repair connection of ECM connector.
<b>4</b>	<b>CHECK HARNESS BETWEEN COMBINATION METER AND ECM CONNECTOR.</b> 1) Turn ignition switch to OFF. 2) Remove combination meter. <Ref. to IDI-19, Combination Meter Assembly.> 3) Disconnect connector from ECM and combination meter. 4) Measure resistance of harness between ECM and combination meter connector. <b>Connector &amp; terminal</b> <b>(B137) No. 15 — (i12) No. 6:</b>	Is resistance less than 1 $\Omega$ ?	Go to step <b>5</b> . Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and combination meter connector • Poor contact in coupling connector
<b>5</b>	<b>CHECK POOR CONTACT.</b> Check poor contact in combination meter connector.	Is there poor contact in combination meter connector?	Repair poor contact in combination meter connector. Go to step <b>6</b> .
<b>6</b>	<b>CHECK HARNESS BETWEEN COMBINATION METER AND IGNITION SWITCH CONNECTOR.</b> 1) Turn ignition switch to ON. 2) Measure voltage between combination meter connector and chassis ground. <b>Connector &amp; terminal</b> <b>(i10) No. 7 (+) — Chassis ground (-):</b>	Is voltage more than 10 V?	Go to step <b>7</b> . Check the following and repair if necessary. NOTE: • Broken down ignition relay. • Blown out fuse (No. 5). • If replaced fuse (No. 5) blows easily, check the harness for short circuit of harness between fuse (No. 5) and ignition relay connector. • Open or short circuit in harness between fuse (No. 5) and battery terminal • Open circuit in harness between fuse (No. 5) and ignition relay connector • Poor contact in ignition relay connector • Poor contact in ignition switch connector
<b>7</b>	<b>CHECK LAMP BULB.</b> Remove engine malfunction indicator lamp bulb.	Is lamp bulb condition OK?	Repair combination meter connector. Replace lamp bulb.

# ENGINE MALFUNCTION INDICATOR LAMP (MIL)

ENGINE (DIAGNOSTICS)

## D: CHECK ENGINE MALFUNCTION INDICATOR LAMP (MIL) DOES NOT GO OFF.


• **DIAGNOSIS:**

- The CHECK ENGINE malfunction indicator lamp (MIL) circuit is shorted.

• **TROUBLE SYMPTOM:**

- Although MIL comes on when engine runs, trouble code is not shown on Subaru select monitor or OBD-II general scan tool display.

• **WIRING DIAGRAM:**

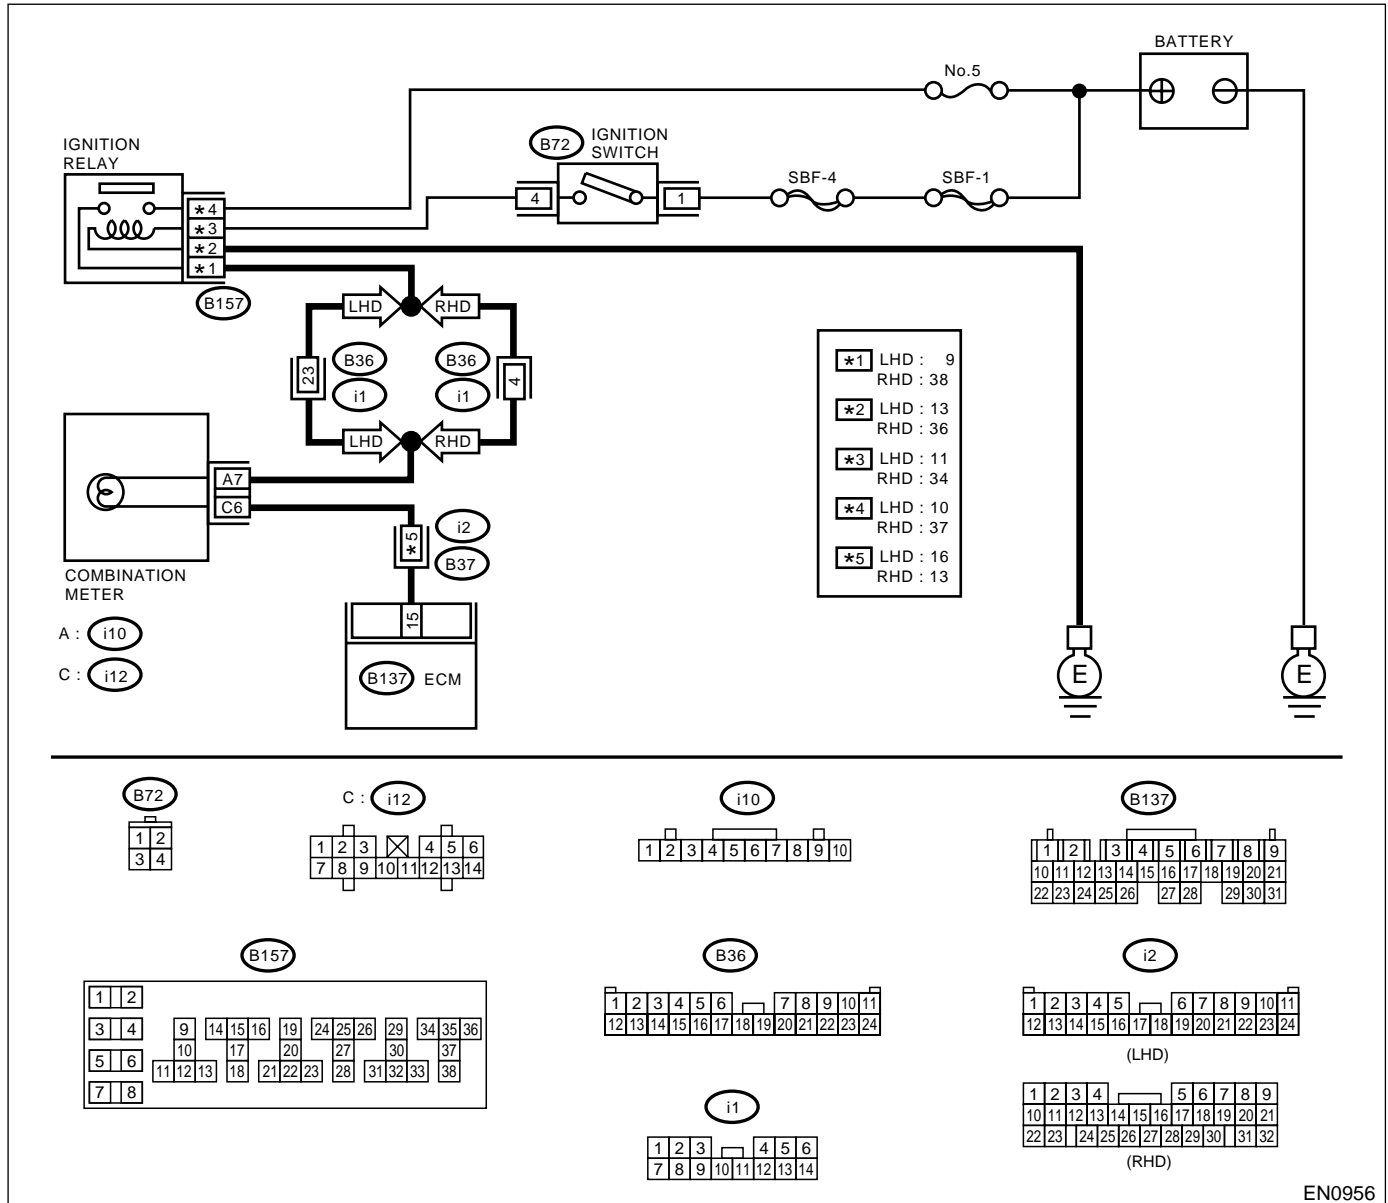

EN0956

Step	Check	Yes	No
1	<b>CHECK HARNESS BETWEEN COMBINATION METER AND ECM CONNECTOR.</b> 1) Turn ignition switch to OFF. 2) Disconnect connector from ECM. 3) Turn ignition switch to ON.	Does the MIL come on?  Repair short circuit in harness between combination meter and ECM connector.	Replace ECM. <Ref. to FU(DOHC TURBO)-45, Engine Control Module.>

## ENGINE MALFUNCTION INDICATOR LAMP (MIL)

ENGINE (DIAGNOSTICS)

---

### **E: CHECK ENGINE MALFUNCTION INDICATOR LAMP (MIL) DOES NOT BLINK AT A CYCLE OF 3 HZ.**

- **DIAGNOSIS:**

- The CHECK ENGINE malfunction indicator lamp (MIL) circuit is open or shorted.
- Test mode connector circuit is in open.

- **TROUBLE SYMPTOM:**



- When inspection mode, MIL does not blink at a cycle of 3 Hz.



# ENGINE MALFUNCTION INDICATOR LAMP (MIL)

ENGINE (DIAGNOSTICS)

## • WIRING DIAGRAM:

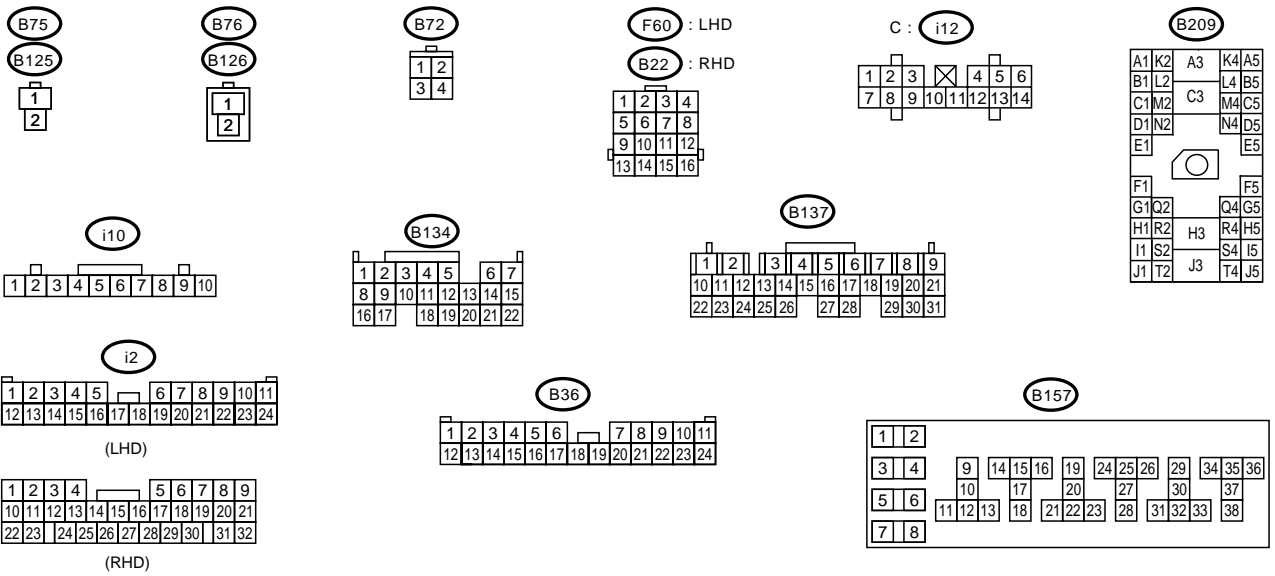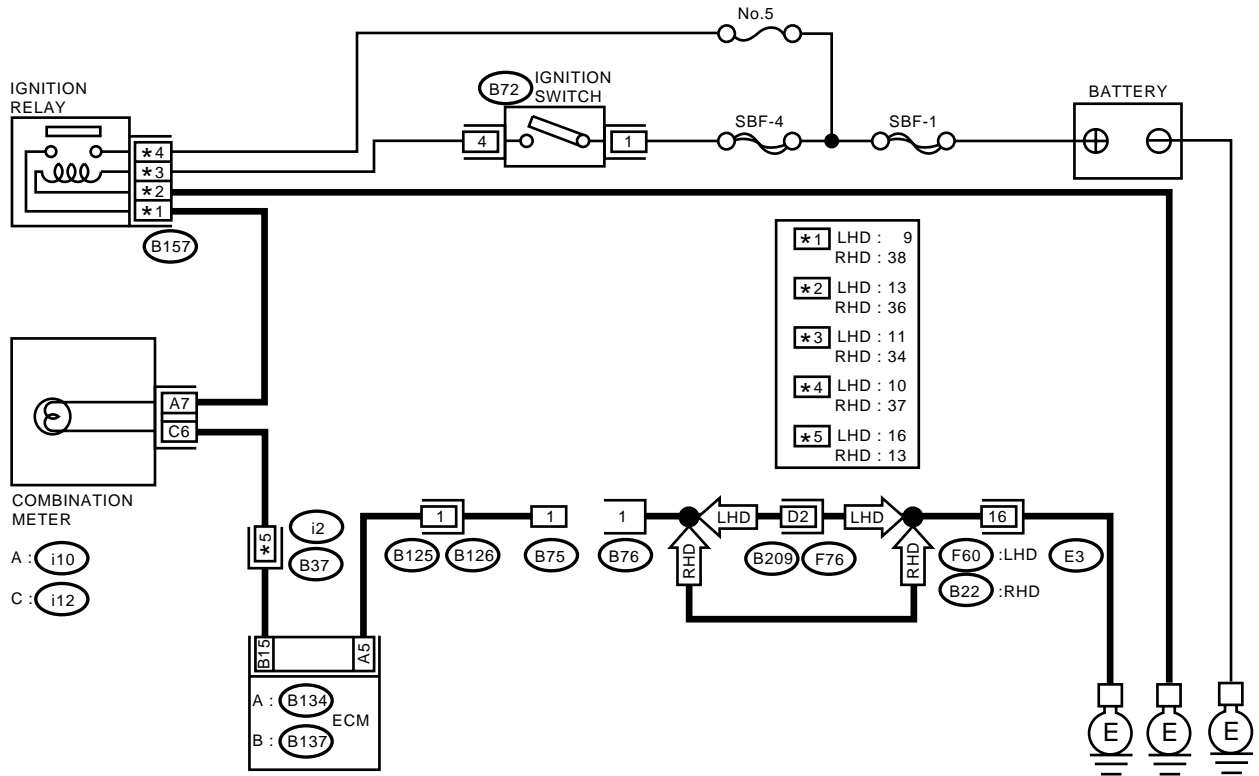

EN0957

# ENGINE MALFUNCTION INDICATOR LAMP (MIL)

ENGINE (DIAGNOSTICS)



Step	Check	Yes	No
<b>1 CHECK STATUS OF CHECK ENGINE MALFUNCTION INDICATOR LAMP (MIL).</b> 1) Turn ignition switch to OFF. 2) Disconnect test mode connector. 3) Turn ignition switch to ON. (engine OFF)	Does the MIL come on?	Go to step 2.	Repair the MIL circuit. <Ref. to EN(DOHC TURBO)-44, CHECK ENGINE MALFUNCTION INDICATOR LAMP (MIL) DOES NOT COME ON., Engine Malfunction Indicator Lamp (MIL).>
<b>2 CHECK HARNESS BETWEEN COMBINATION METER AND ECM CONNECTOR.</b> 1) Turn ignition switch to OFF. 2) Disconnect connector from ECM. 3) Turn ignition switch to ON.	Does the MIL come on?	Repair ground short circuit in harness between combination meter and ECM connector.	Go to step 3.
<b>3 CHECK HARNESS BETWEEN TEST MODE CONNECTOR AND CHASSIS GROUND.</b> 1) Turn ignition switch to OFF. 2) Disconnect connector from ECM. 3) Measure resistance of harness between test mode connector and chassis ground. <b>Connector &amp; terminal</b> <b>(B76) No. 1 — Chassis ground:</b>	Is resistance less than 1 Ω?	Go to step 4.	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between test mode connector and chassis ground
<b>4 CHECK POOR CONTACT.</b> Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair poor contact in ECM connector.	Go to step 5.
<b>5 CHECK HARNESS BETWEEN ECM AND TEST MODE CONNECTOR.</b> 1) Connect test mode connector. 2) Measure resistance of harness between ECM and chassis ground. <b>Connector &amp; terminal</b> <b>(B134) No. 5 — Chassis ground:</b>	Is resistance less than 1 Ω?	Go to step 6.	Repair open circuit in harness between ECM and test mode connector.
<b>6 CHECK POOR CONTACT.</b> Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair poor contact in ECM connector.	Replace ECM. <Ref. to FU(DOHC TURBO)-45, Engine Control Module.>

# ENGINE MALFUNCTION INDICATOR LAMP (MIL)

ENGINE (DIAGNOSTICS)

## F: CHECK ENGINE MALFUNCTION INDICATOR LAMP (MIL) REMAINS BLINKING AT A CYCLE OF 3 HZ.

- **DIAGNOSIS:**
  - Test mode connector circuit is shorted.
- **TROUBLE SYMPTOM:**
  - MIL blinks at a cycle of 3 Hz when ignition switch is turned to ON.
- **WIRING DIAGRAM:**

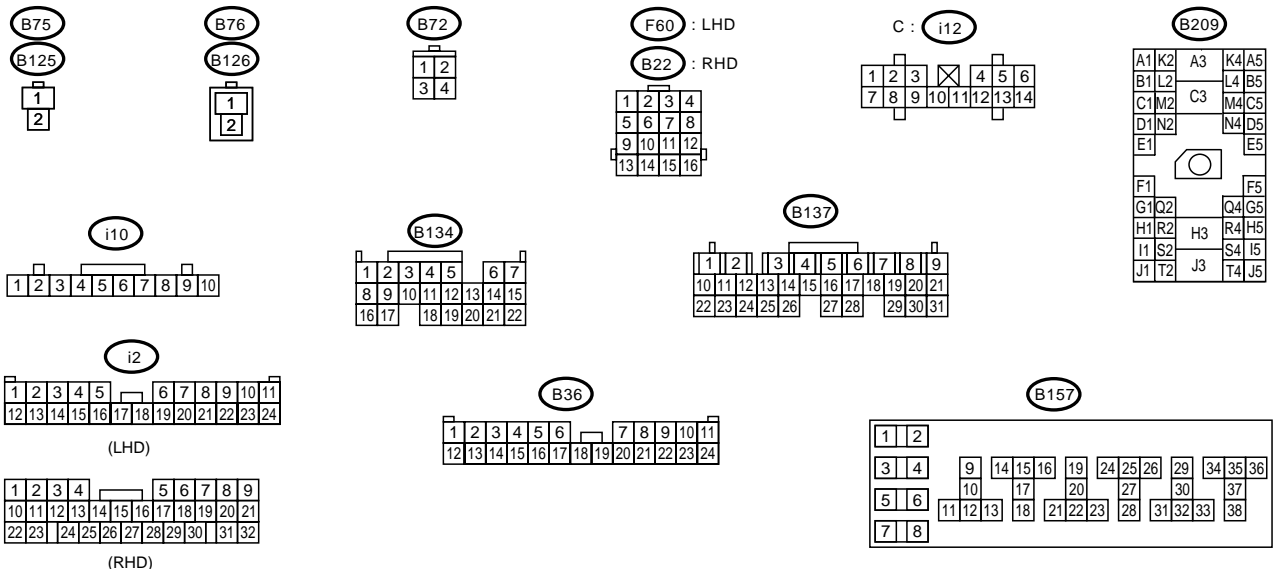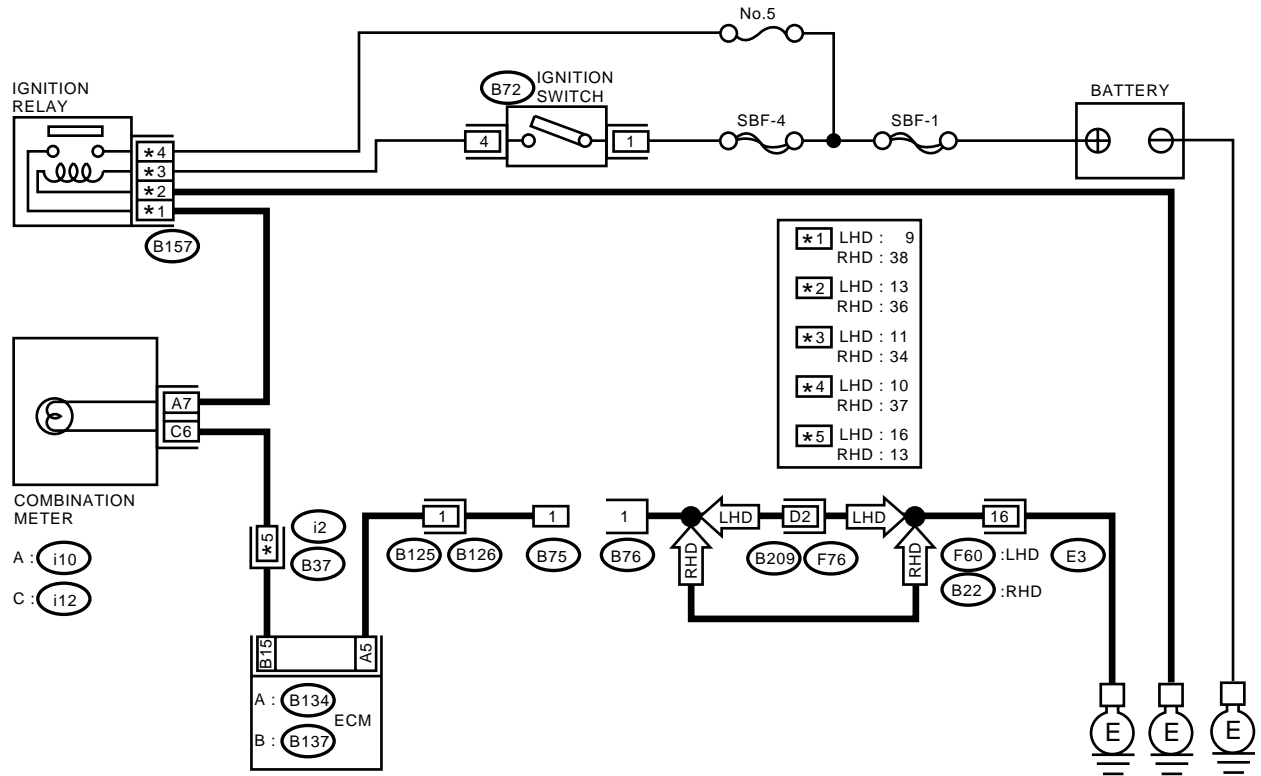

EN0957

# ENGINE MALFUNCTION INDICATOR LAMP (MIL)

ENGINE (DIAGNOSTICS)

	Step	Check	Yes	No
1	<b>CHECK TEST MODE CONNECTOR.</b> 1) Disconnect test mode connector. 2) Turn ignition switch to ON.	Does MIL flash on and off?	Go to step 2.	System is in good order. <b>NOTE:</b> MIL blinks at a cycle of 3 Hz when test mode connector is connected.
2	<b>CHECK HARNESS BETWEEN ECM CONNECTOR AND ENGINE GROUNDING TERMINAL.</b> 1) Turn ignition switch to OFF. 2) Disconnect connector from ECM. 3) Measure resistance of harness between ECM connector and chassis ground. <b>Connector &amp; terminal</b> <b>(B134) No. 5 — Chassis ground:</b>	Is resistance less than 5 $\Omega$ ?	Repair short circuit in harness between ECM and test mode connector.	Replace ECM. <Ref. to FU(DOHC TURBO)-45, Engine Control Module.>

# DIAGNOSTICS FOR ENGINE STARTING FAILURE

ENGINE (DIAGNOSTICS)

## 15. Diagnostics for Engine Starting Failure

### A: PROCEDURE

1. Inspection of starter motor circuit. <Ref. to EN(DOHC TURBO)-54, STARTER MOTOR CIRCUIT, Diagnostics for Engine Starting Failure.>
↓
2. Inspection of ECM power supply and ground line. <Ref. to EN(DOHC TURBO)-56, CONTROL MODULE POWER SUPPLY AND GROUND LINE, Diagnostics for Engine Starting Failure.>
↓
3. Inspection of ignition control system. <Ref. to EN(DOHC TURBO)-60, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>
↓
4. Inspection of fuel pump circuit. <Ref. to EN(DOHC TURBO)-64, FUEL PUMP CIRCUIT, Diagnostics for Engine Starting Failure.>
↓
5. Inspection of fuel injector circuit. <Ref. to EN(DOHC TURBO)-66, FUEL INJECTOR CIRCUIT, Diagnostics for Engine Starting Failure.>



# DIAGNOSTICS FOR ENGINE STARTING FAILURE


ENGINE (DIAGNOSTICS)

## B: STARTER MOTOR CIRCUIT

### CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to EN(DOHC TURBO)-38, Clear Memory Mode.> and INSPECTION MODE <Ref. to EN(DOHC TURBO)-35, Inspection Mode.> .

### • WIRING DIAGRAM:

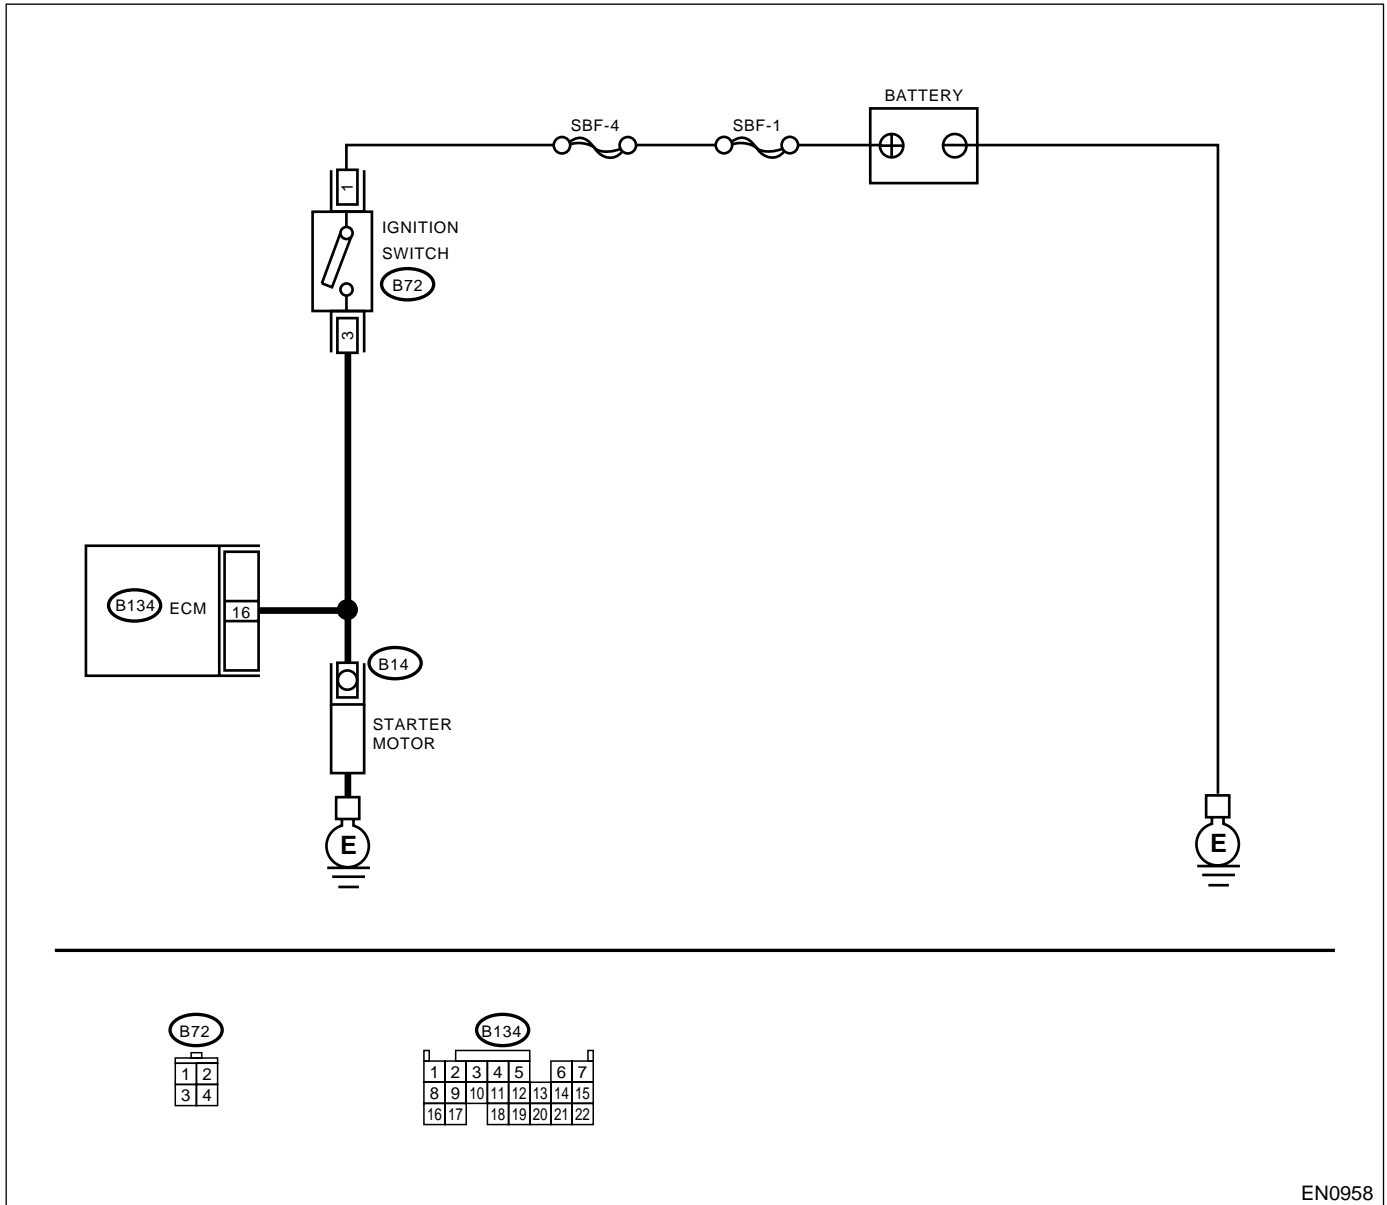

EN0958

Step	Check	Yes	No
1	<b>CHECK OPERATION OF STARTER MOTOR.</b> Does starter motor operate when the switch starts?	Go to step 2.	Go to step 3.

# DIAGNOSTICS FOR ENGINE STARTING FAILURE

ENGINE (DIAGNOSTICS)

Step	Check	Yes	No
<b>2</b> <b>CHECK DTC.</b> <Ref. to EN(DOHC TURBO)-34, OPERATION, Read Diagnostic Trouble Code.>	Is the trouble code stored in memory? <Ref. to EN(DOHC TURBO)-69, LIST, List of Diagnostic Trouble Code (DTC).>	Record DTC. Repair the trouble case. <Ref. to EN(DOHC TURBO)-74, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Go to step <b>3</b> .
<b>3</b> <b>CHECK INPUT SIGNAL FOR STARTER MOTOR.</b> 1) Turn ignition switch to OFF. 2) Disconnect connector from starter motor. 3) Turn ignition switch to ST. 4) Measure power supply voltage between starter motor connector terminal and engine ground. <b>Connector &amp; terminal</b> <b>(B14) No. 1 (+) — Engine ground (-):</b>	Is the voltage more than 10 V?	Go to step <b>4</b> .	Go to step <b>5</b> .
<b>4</b> <b>CHECK GROUND CIRCUIT OF STARTER MOTOR.</b> 1) Turn ignition switch to OFF. 2) Disconnect terminal from starter motor. 3) Measure resistance of ground cable between ground cable terminal and engine ground.	Is resistance less than 5 Ω?	Check starter motor. <Ref. to SC-5, Starter.>	Repair open circuit of ground cable.
<b>5</b> <b>CHECK HARNESS BETWEEN ECM AND STARTER MOTOR CIRCUIT.</b> 1) Turn ignition switch to OFF. 2) Measure resistance between starter motor and ECM. <b>Connector &amp; terminal</b> <b>(B14) No. 1 — Engine ground:</b>	Is resistance less than 1 Ω?	Repair ground short circuit.	Go to step <b>6</b> .
<b>6</b> <b>CHECK HARNESS BETWEEN ECM AND STARTER MOTOR CIRCUIT.</b> 1) Turn ignition switch to START. 2) Measure resistance of fuse. <b>Connector &amp; terminal</b> <b>(B14) No. 1 — Engine ground:</b>	Is resistance less than 1 Ω?	Go to step <b>7</b> .	Repair ground short circuit.
<b>7</b> <b>CHECK HARNESS BETWEEN BATTERY AND IGNITION SWITCH CONNECTOR.</b> 1) Ignition switch to OFF. 2) Disconnect connector from ignition switch. 3) Measure power supply voltage between ignition switch connector and chassis ground. <b>Connector &amp; terminal</b> <b>(B72) No. 1 (+) — Chassis ground (-):</b>	Is the voltage more than 10 V?	Go to step <b>8</b> .	Repair open circuit in harness between ignition switch and battery.
<b>8</b> <b>CHECK HARNESS BETWEEN BATTERY AND IGNITION SWITCH CONNECTOR.</b> 1) Connect connector to ignition switch. 2) Turn ignition switch to START. 3) Measure voltage between ignition switch and chassis ground. <b>Connector &amp; terminal</b> <b>(B72) No. 3 (+) — Chassis ground (-):</b>	Is the voltage more than 10 V?	Repair open circuit between ignition switch and starter motor circuit.	Go to step <b>9</b> .
<b>9</b> <b>CHECK POOR CONTACT.</b> Check poor contact in ignition switch connector.	Is there poor contact in ignition switch connector?	Repair poor contact in ignition switch connector.	Replace ignition switch.



# DIAGNOSTICS FOR ENGINE STARTING FAILURE



ENGINE (DIAGNOSTICS)

## C: CONTROL MODULE POWER SUPPLY AND GROUND LINE

### CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE<Ref. to EN(DOHC TURBO)-38, Clear Memory Mode.> and INSPECTION MODE. <Ref. to EN(DOHC TURBO)-35, Inspection Mode.>

- WIRING DIAGRAM:
- LHD MODEL

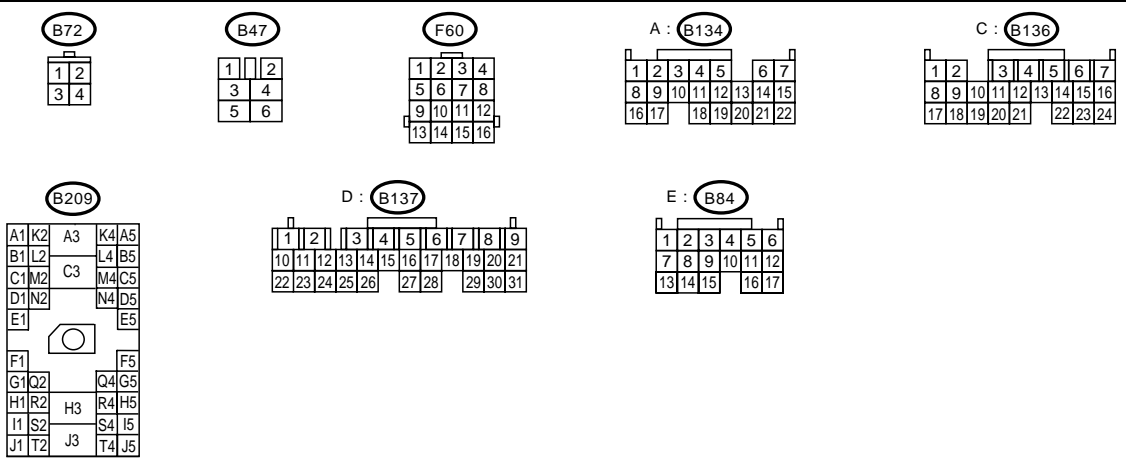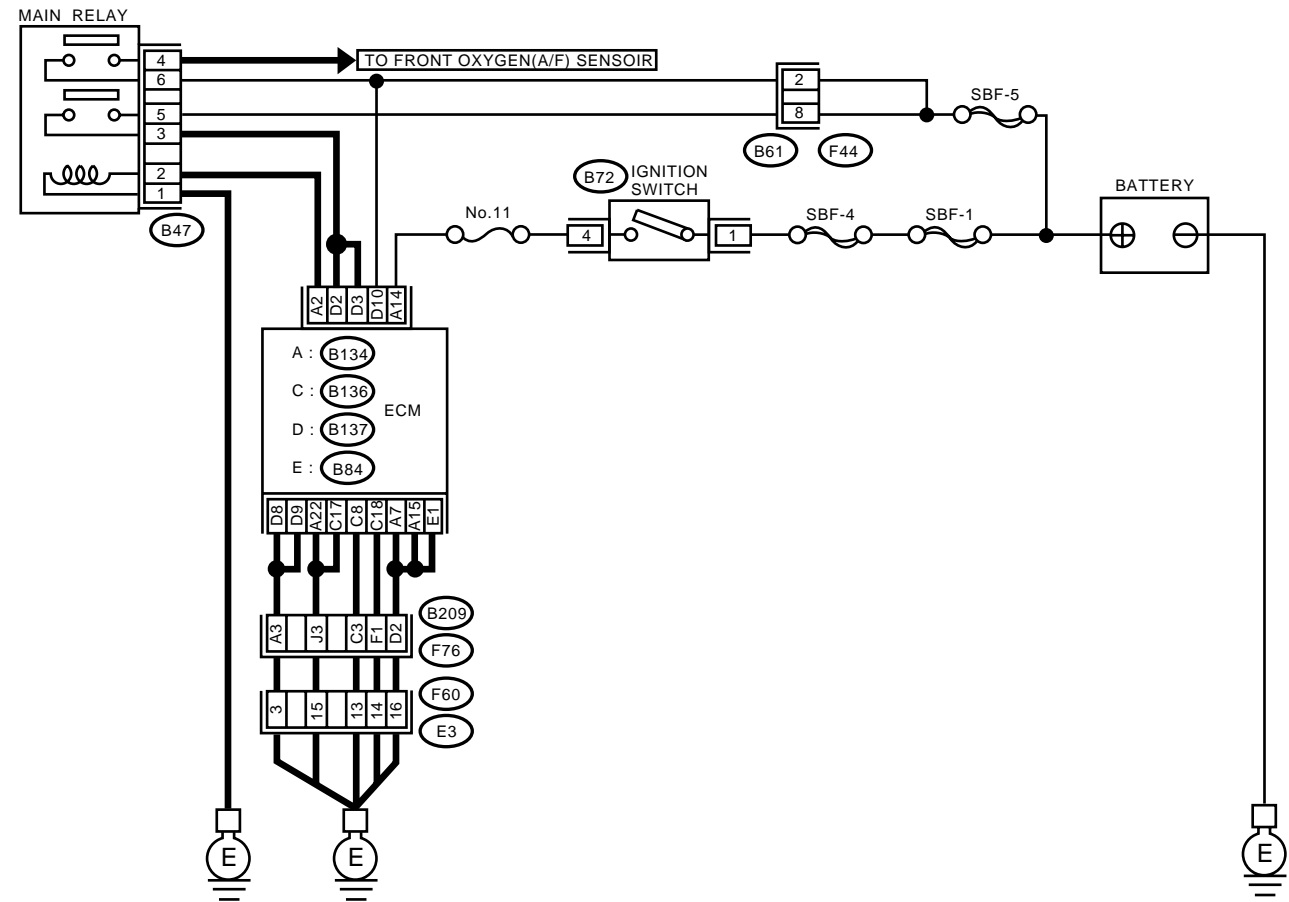


EN0959

# DIAGNOSTICS FOR ENGINE STARTING FAILURE

ENGINE (DIAGNOSTICS)

## • RHD MODEL

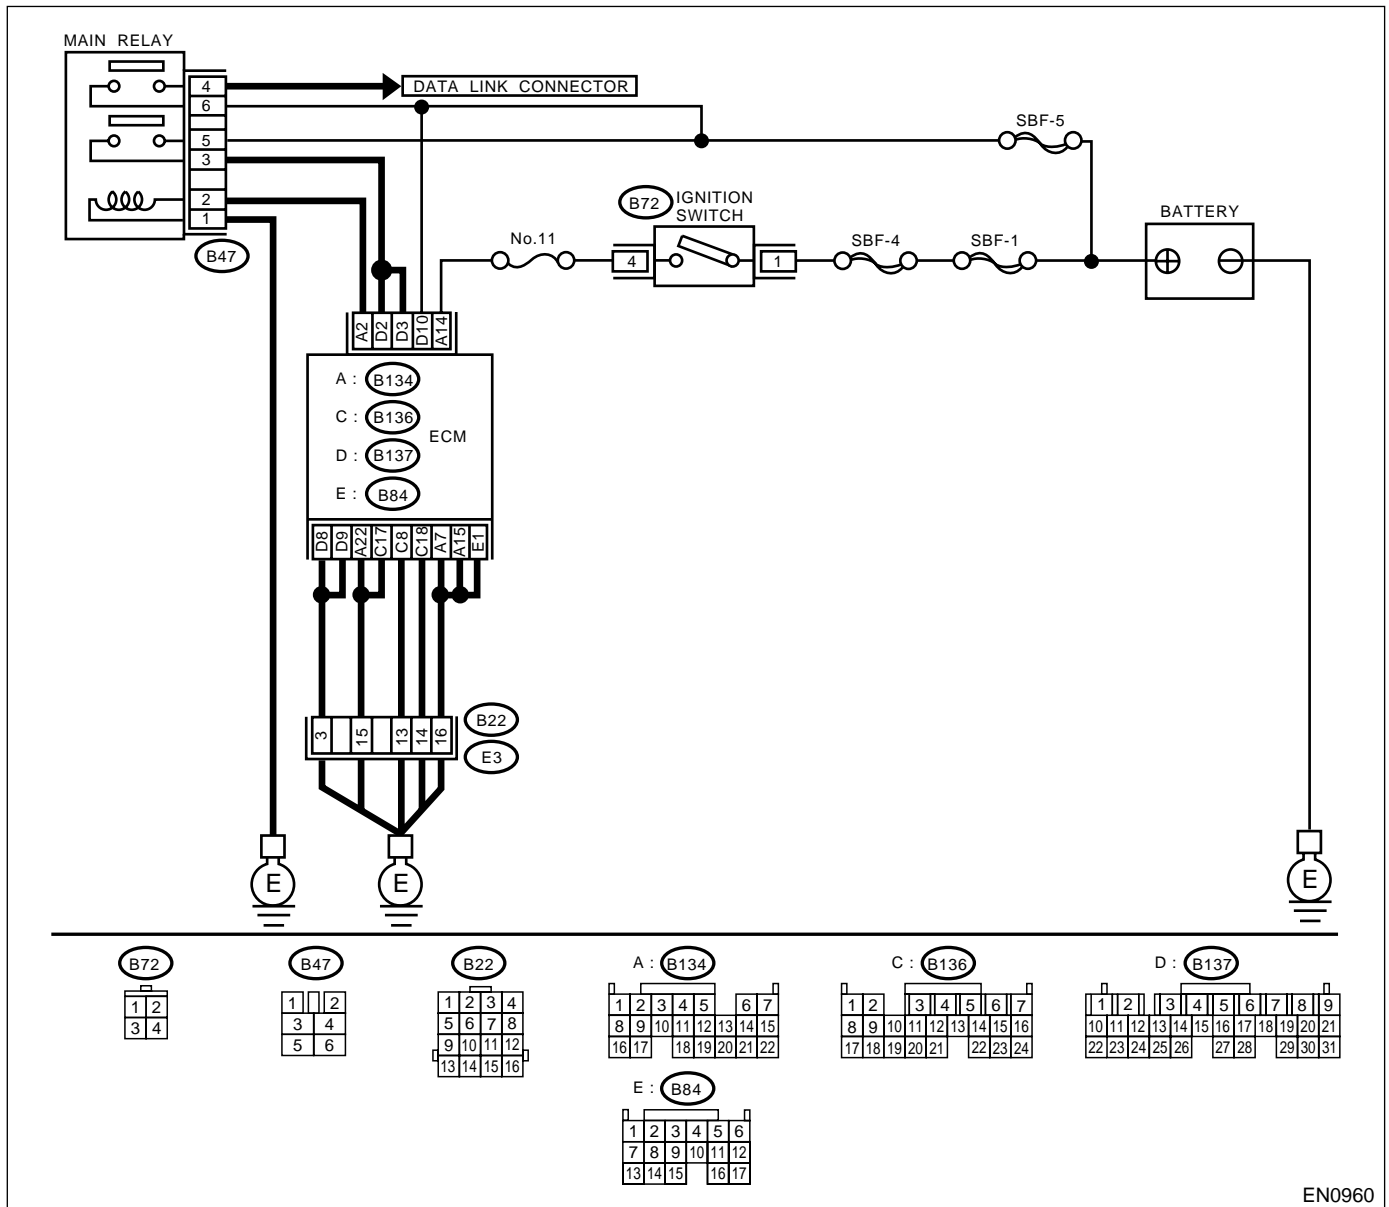

Step	Check	Yes	No
<p><b>1</b></p> <p><b>CHECK MAIN RELAY.</b></p> <p>1) Turn the ignition switch to OFF.</p> <p>2) Remove main relay.</p> <p>3) Connect battery to main relay terminals No. 1 and No. 2.</p> <p>4) Measure resistance between main relay terminals.</p> <p><b>Terminals</b></p> <p><b>No. 3 — No. 5:</b></p> <p><b>No. 4 — No. 6:</b></p>	<p>Is the resistance less than 10 <math>\Omega</math>?</p>	<p>Go to step 2.</p>	<p>Replace main relay.</p>

# DIAGNOSTICS FOR ENGINE STARTING FAILURE

## ENGINE (DIAGNOSTICS)

Step	Check	Yes	No
<b>2 CHECK GROUND CIRCUIT OF ECM.</b> 1)Disconnect connector from ECM. 2)Measure resistance of harness between ECM and chassis ground. <b>Connector &amp; terminal</b> <i>(B134) No. 7 — Chassis ground:</i> <i>(B134) No. 15 — Chassis ground:</i> <i>(B134) No. 22 — Chassis ground:</i> <i>(B136) No. 8 — Chassis ground:</i> <i>(B136) No. 17 — Chassis ground:</i> <i>(B136) No. 18 — Chassis ground:</i> <i>(B137) No. 8 — Chassis ground:</i> <i>(B137) No. 9 — Chassis ground:</i> <i>(B84) No. 1 — Chassis ground:</i>	Is the resistance less than 5 $\Omega$ ?	Go to step 3.	Repair open circuit in harness between ECM connector and engine grounding terminal.
<b>3 CHECK INPUT VOLTAGE OF ECM.</b> <b>Measure voltage between ECM connector and chassis ground.</b> <b>Connector &amp; terminal</b> <i>(B137) No. 10 (+) — Chassis ground (-):</i> <i>(B134) No. 14 (+) — Chassis ground (-):</i>	Is the voltage more than 10 V?	Go to step 4.	Repair open or ground short circuit of power supply circuit.
<b>4 CHECK HARNESS BETWEEN ECM AND MAIN RELAY CONNECTOR.</b> 1)Turn ignition switch to OFF. 2)Measure resistance between ECM and chassis ground. <b>Connector &amp; terminal</b> <i>(B134) No. 2 — Chassis ground:</i>	Is the resistance more than 1 M $\Omega$ ?	Go to step 5.	Repair ground short circuit in harness between ECM connector and main relay connector, then replace ECM.
<b>5 CHECK OUTPUT VOLTAGE FROM ECM.</b> 1)Connect connector to ECM. 2)Turn ignition switch to ON. 3)Measure voltage between ECM connector and chassis ground. <b>Connector &amp; terminal</b> <i>(B134) No. 2 (+) — Chassis ground (-):</i>	Is the voltage more than 10 V?	Go to step 6.	Replace ECM. <Ref. to FU(DOHC TURBO)-45, Engine Control Module.>
<b>6 CHECK INPUT VOLTAGE OF MAIN RELAY.</b> Check voltage between main relay connector and chassis ground. <b>Connector &amp; terminal</b> <i>(B47) No. 2 (+) — Chassis ground (-):</i>	Is the voltage more than 10 V?	Go to step 7.	Repair open circuit in harness between ECM connector and main relay connector.
<b>7 CHECK GROUND CIRCUIT OF MAIN RELAY.</b> 1)Turn ignition switch to OFF. 2)Measure resistance between main relay connector and chassis ground. <b>Connector &amp; terminal</b> <i>(B47) No. 1 — Chassis ground:</i>	Is the resistance less than 5 $\Omega$ ?	Go to step 8.	Repair open circuit between main relay and chassis ground.
<b>8 CHECK INPUT VOLTAGE OF MAIN RELAY.</b> Measure voltage between main relay connector and chassis ground. <b>Connector &amp; terminal</b> <i>(B47) No. 5 (+) — Chassis ground (-):</i> <i>(B47) No. 6 (+) — Chassis ground (-):</i>	Is the voltage more than 10 V?	Go to step 9.	Repair open or ground short circuit in harness of power supply circuit.

# DIAGNOSTICS FOR ENGINE STARTING FAILURE

ENGINE (DIAGNOSTICS)

	Step	Check	Yes	No
9	<b>CHECK INPUT VOLTAGE OF ECM.</b> 1)Connect main relay connector. 2)Turn ignition switch to ON. 3)Measure voltage between ECM connector and chassis ground. <b>Connector &amp; terminal</b> <b>(B137) No. 2 (+) — Chassis ground (-):</b> <b>(B137) No. 3 (+) — Chassis ground (-):</b>	Is the voltage more than 10 V?	Check ignition control system. <Ref. to EN(DOHC TURBO)-60, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>	Repair open or ground short circuit in harness between ECM connector and main relay connector.

# DIAGNOSTICS FOR ENGINE STARTING FAILURE


ENGINE (DIAGNOSTICS)

## D: IGNITION CONTROL SYSTEM

### CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to EN(DOHC TURBO)-38, Clear Memory Mode.> and INSPECTION MODE <Ref. to EN(DOHC TURBO)-35, Inspection Mode.> .

- WIRING DIAGRAM:
- LHD MODEL

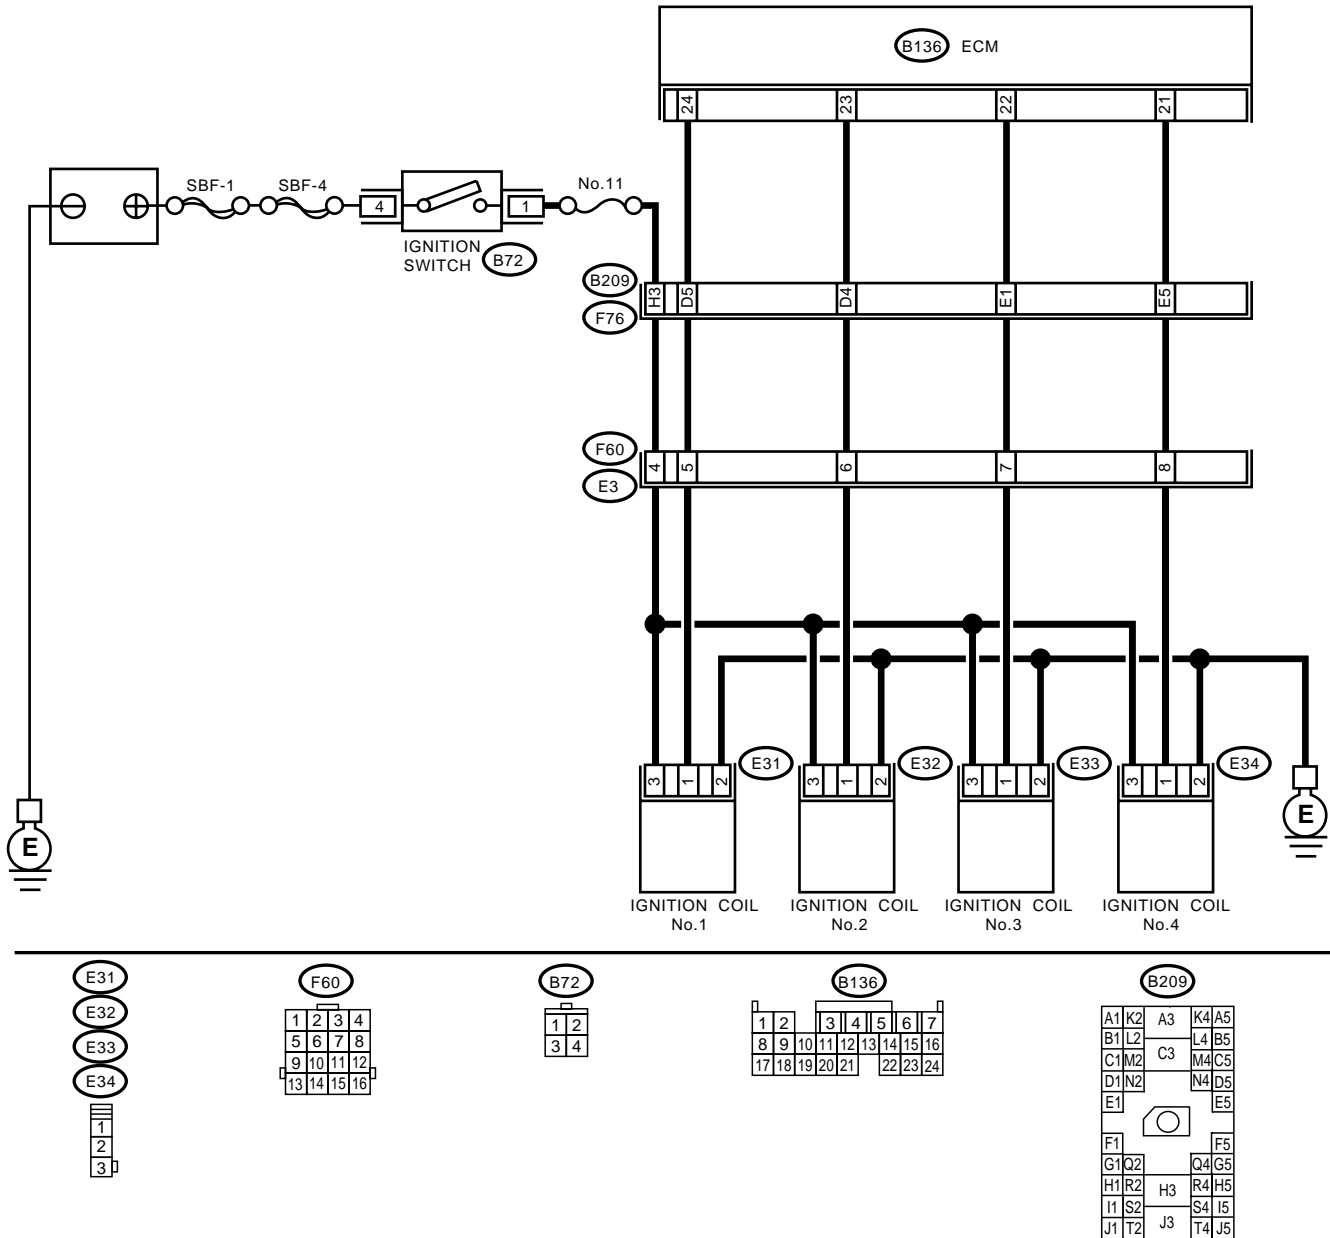


EN0961

# DIAGNOSTICS FOR ENGINE STARTING FAILURE

ENGINE (DIAGNOSTICS)

## • RHD MODEL

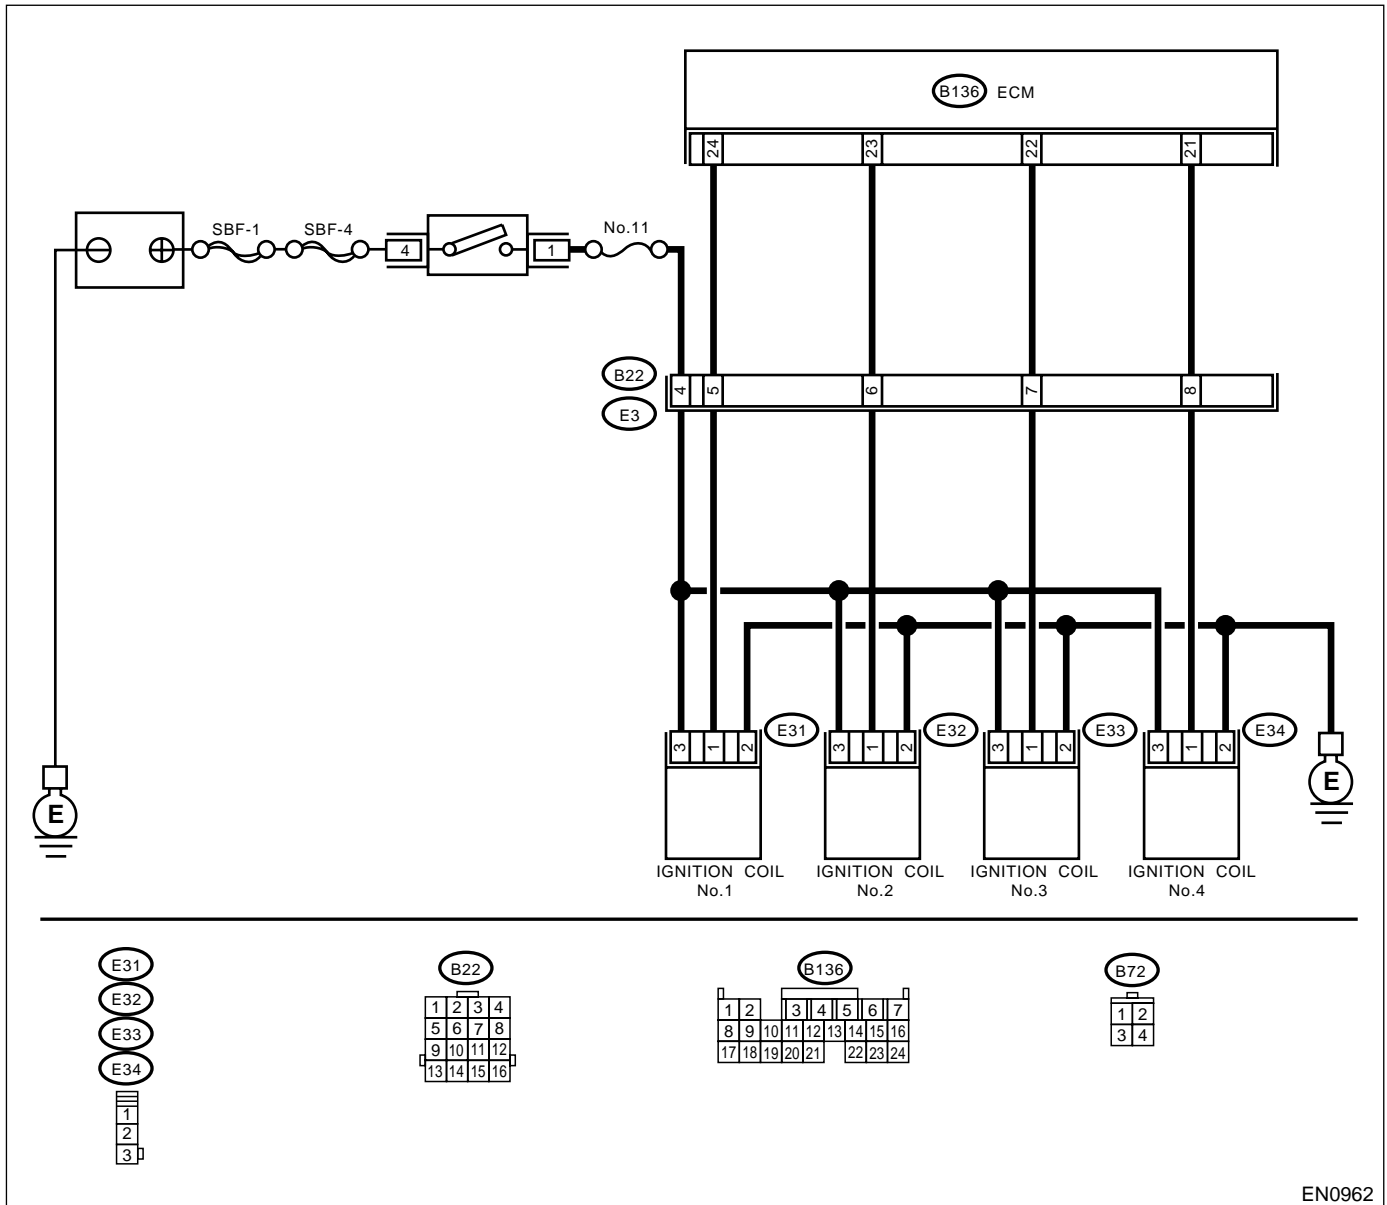

EN0962

Step	Check	Yes	No	
1	<b>CHECK SPARK PLUG CONDITION.</b> 1)Remove spark plug. <Ref. to IG(DOHC TURBO)-5, INSTALLATION, Spark Plug.> 2)Check spark plug condition. <Ref. to IG(DOHC TURBO)-6, INSPECTION, Spark Plug.>	Is spark plug's status OK?	Go to step 2.	Replace spark plug
2	<b>CHECK IGNITION SYSTEM FOR SPARKS.</b> 1)Connect spark plug to ignition coil. 2)Release fuel pressure. <Ref. to FU(DOHC TURBO)-49, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.> 3>Contact spark plug's thread portion on engine. 4)While opening throttle valve fully, crank engine to check that spark occurs at each cylinder.	Does spark occur at each cylinder?	Check fuel pump system. <Ref. to EN(DOHC TURBO)-64, FUEL PUMP CIRCUIT, Diagnostics for Engine Starting Failure.>	Go to step 3.

# DIAGNOSTICS FOR ENGINE STARTING FAILURE

## ENGINE (DIAGNOSTICS)

Step	Check	Yes	No
<b>3 CHECK POWER SUPPLY CIRCUIT FOR IGNITION COIL &amp; IGNITOR ASSEMBLY.</b> 1) Turn ignition switch to OFF. 2) Disconnect connector from ignition coil & ignitor assembly. 3) Turn ignition switch to ON. 4) Measure power supply voltage between ignition coil & ignitor assembly connector and engine ground. <b>Connector &amp; terminal</b> <i>(E31) No. 3 (+) — Engine ground (-):</i> <i>(E32) No. 3 (+) — Engine ground (-):</i> <i>(E33) No. 3 (+) — Engine ground (-):</i> <i>(E34) No. 3 (+) — Engine ground (-):</i>	Is the voltage more than 10 V?	Go to step 4.	Repair harness and connector. NOTE: In this case, repair the following: <ul style="list-style-type: none"> <li>• Open circuit in harness between ignition coil &amp; ignitor assembly, and ignition switch connector</li> <li>• Poor contact in coupling connectors</li> </ul>
<b>4 CHECK HARNESS OF IGNITION COIL &amp; IGNITOR ASSEMBLY GROUND CIRCUIT.</b> 1) Turn ignition switch to OFF. 2) Measure resistance between ignition coil & ignitor assembly connector and engine ground. <b>Connector &amp; terminal</b> <i>(E31) No. 2 — Engine ground:</i> <i>(E32) No. 2 — Engine ground:</i> <i>(E33) No. 2 — Engine ground:</i> <i>(E34) No. 2 — Engine ground:</i>	Is the resistance between less than 5 Ω?	Go to step 5.	Repair harness and connector. NOTE: In this case, repair the following: <ul style="list-style-type: none"> <li>• Open circuit in harness between ignition coil &amp; ignitor assembly connector and engine grounding terminal</li> </ul>
<b>5 CHECK HARNESS BETWEEN ECM AND IGNITION COIL &amp; IGNITOR ASSEMBLY CONNECTOR.</b> 1) Turn ignition switch to OFF. 2) Disconnect connector from ECM. 3) Disconnect connector from ignition coil & ignitor assembly. 4) Measure resistance of harness between ECM and ignition coil & ignitor assembly connector. <b>Connector &amp; terminal</b> <i>(B136) No. 21 — (E34) No. 1:</i> <i>(B136) No. 22 — (E33) No. 1:</i> <i>(B136) No. 23 — (E32) No. 1:</i> <i>(B136) No. 24 — (E31) No. 1:</i>	Is the resistance less than 1 Ω?	Go to step 6.	Repair harness and connector. NOTE: In this case, repair the following: <ul style="list-style-type: none"> <li>• Open circuit in harness between ECM and ignition coil &amp; ignitor assembly connector</li> <li>• Poor contact in coupling connector</li> </ul>
<b>6 CHECK HARNESS BETWEEN ECM AND IGNITION COIL &amp; IGNITOR ASSEMBLY CONNECTOR.</b> Measure resistance of harness between ECM and engine ground. <b>Connector &amp; terminal:</b> <i>(B136) No. 21 — Engine ground:</i> <i>(B136) No. 22 — Engine ground:</i> <i>(B136) No. 23 — Engine ground:</i> <i>(B136) No. 24 — Engine ground:</i>	Is the resistance more than 1 MΩ?	Go to step 7.	Repair ground short circuit in harness between ECM and ignition coil & ignitor assembly connector.
<b>7 CHECK POOR CONTACT.</b> Check poor contact in ECM connector.	Is there poor contact in ECM connector?	Repair poor contact in ECM connector.	Replace ignition coil and ignitor assembly.

# DIAGNOSTICS FOR ENGINE STARTING FAILURE

ENGINE (DIAGNOSTICS)

---



# DIAGNOSTICS FOR ENGINE STARTING FAILURE


ENGINE (DIAGNOSTICS)

## E: FUEL PUMP CIRCUIT

### CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to EN(DOHC TURBO)-38, Clear Memory Mode.> and INSPECTION MODE <Ref. to EN(DOHC TURBO)-35, Inspection Mode.> .

### • WIRING DIAGRAM:

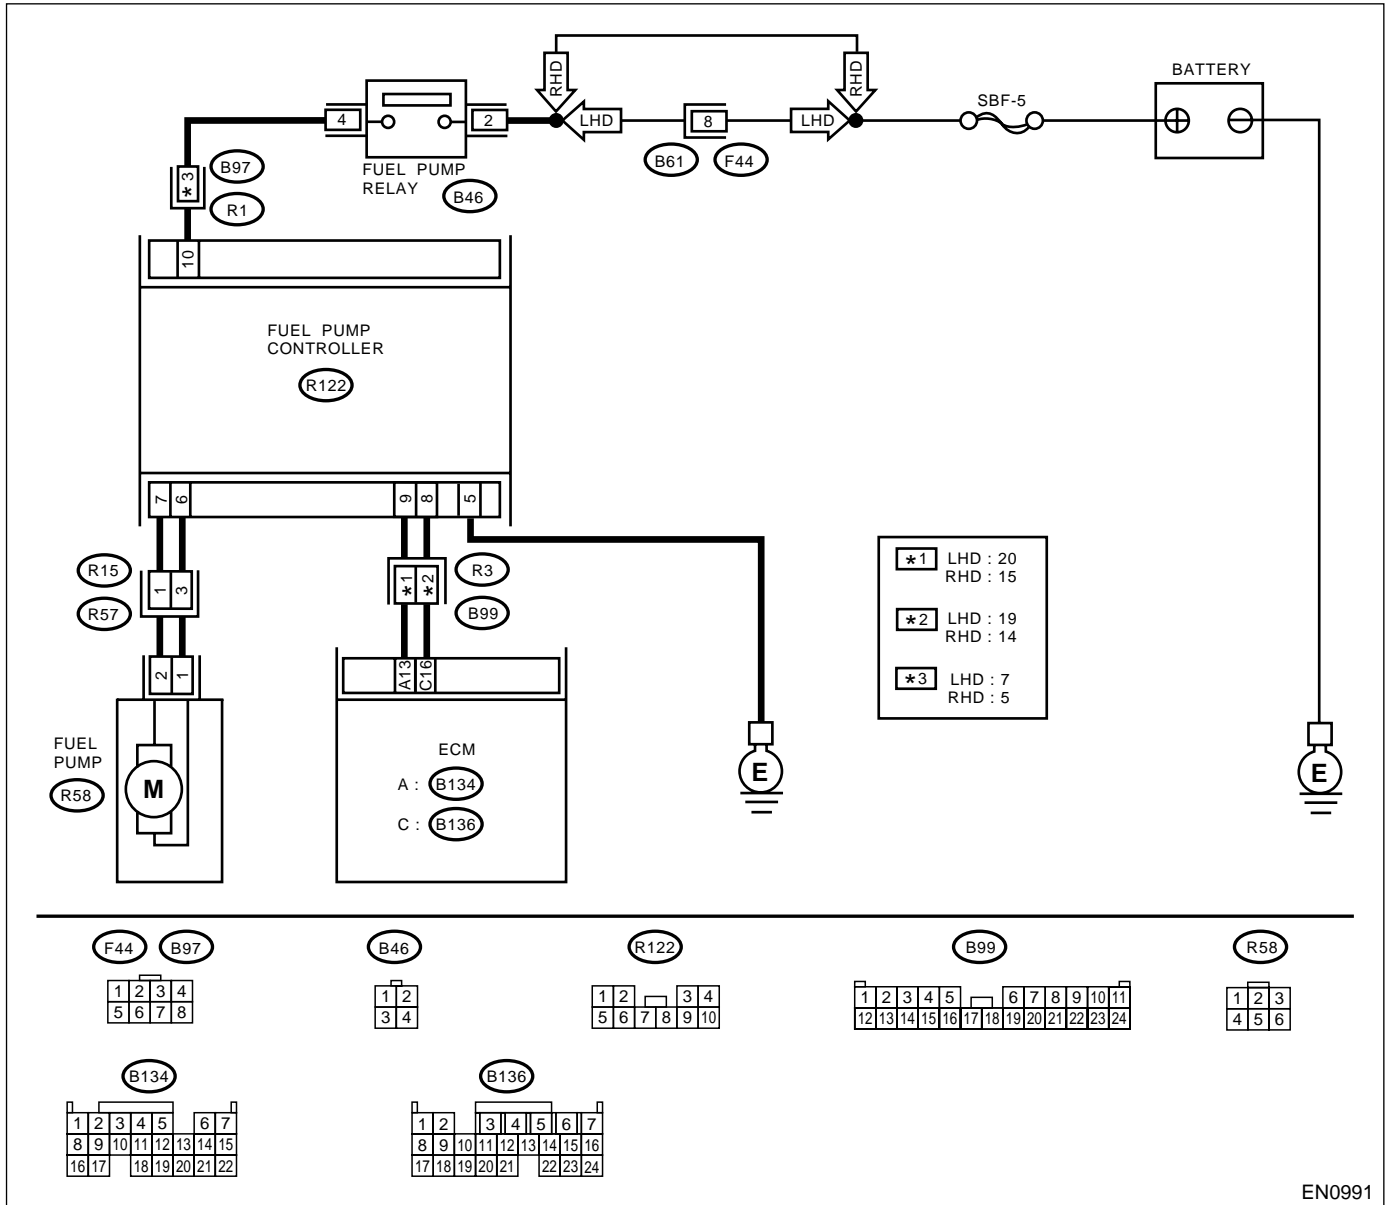

EN0991

# DIAGNOSTICS FOR ENGINE STARTING FAILURE

ENGINE (DIAGNOSTICS)

Step	Check	Yes	No
<p>1</p> <p><b>CHECK OPERATING SOUND OF FUEL PUMP.</b></p> <p>Make sure that fuel pump is in operation for two seconds when turning ignition switch to ON.</p> <p>NOTE: Fuel pump operation can also be executed using Subaru Select Monitor (Function mode: FD01). For the procedure, refer to "Compulsory Valve Operation Check Mode". &lt;Ref. to EN(DOHC TURBO)-39, Compulsory Valve Operation Check Mode.&gt;</p>	<p>Does fuel pump produce operating sound?</p>	<p>Check fuel injector circuit. &lt;Ref. to EN(DOHC TURBO)-66, FUEL INJECTOR CIRCUIT, Diagnostics for Engine Starting Failure.&gt;</p>	<p>Record DTC. Repair the trouble case. &lt;Ref. to EN(DOHC TURBO)-74, Diagnostic Procedure with Diagnostic Trouble Code (DTC).&gt;</p>








# DIAGNOSTICS FOR ENGINE STARTING FAILURE

ENGINE (DIAGNOSTICS)

## F: FUEL INJECTOR CIRCUIT

### CAUTION:

- Check or repair only faulty parts.
- After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to EN(DOHC TURBO)-38, Clear Memory Mode.> and INSPECTION MODE. <Ref. to EN(DOHC TURBO)-35, Inspection Mode.>
- WIRING DIAGRAM:
- LHD MODEL

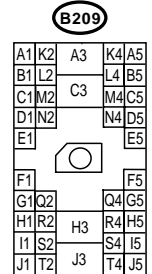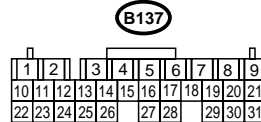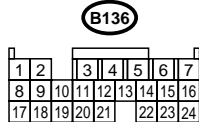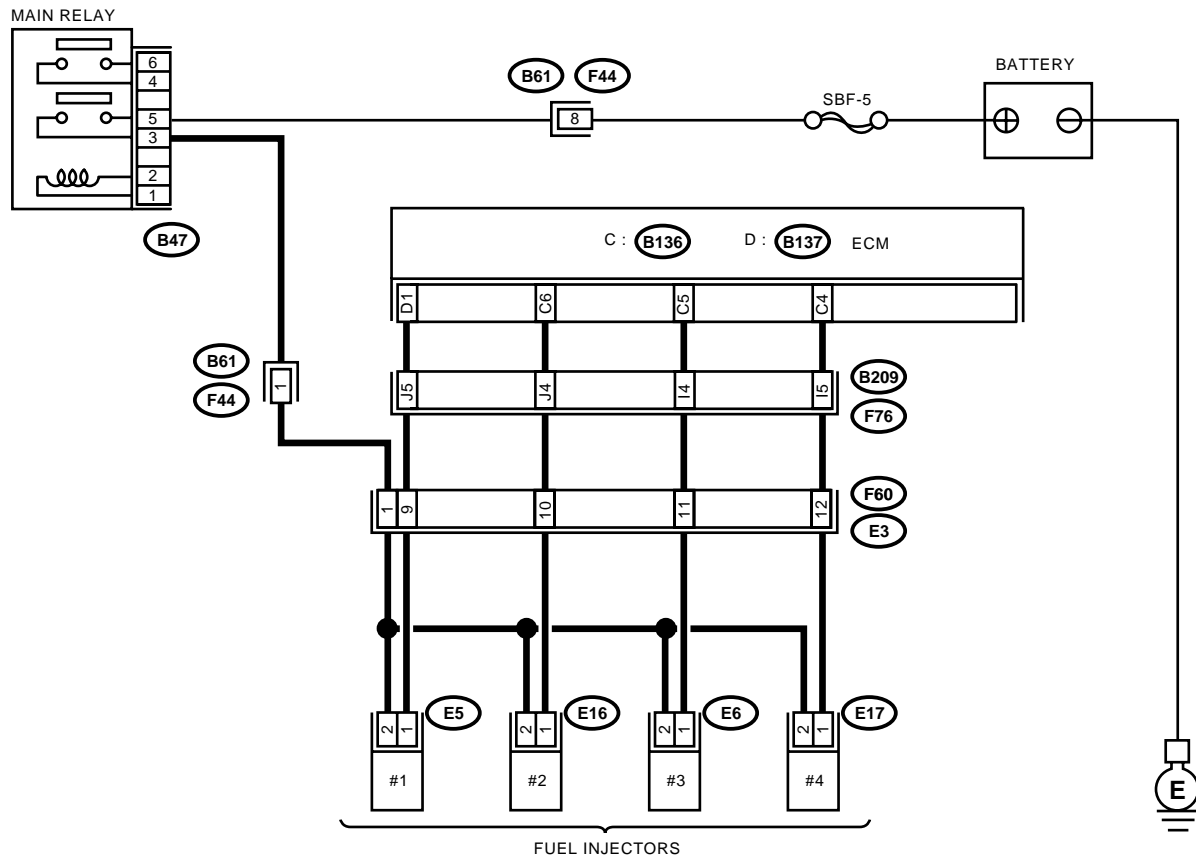


EN0964

# DIAGNOSTICS FOR ENGINE STARTING FAILURE

ENGINE (DIAGNOSTICS)

## • RHD MODEL

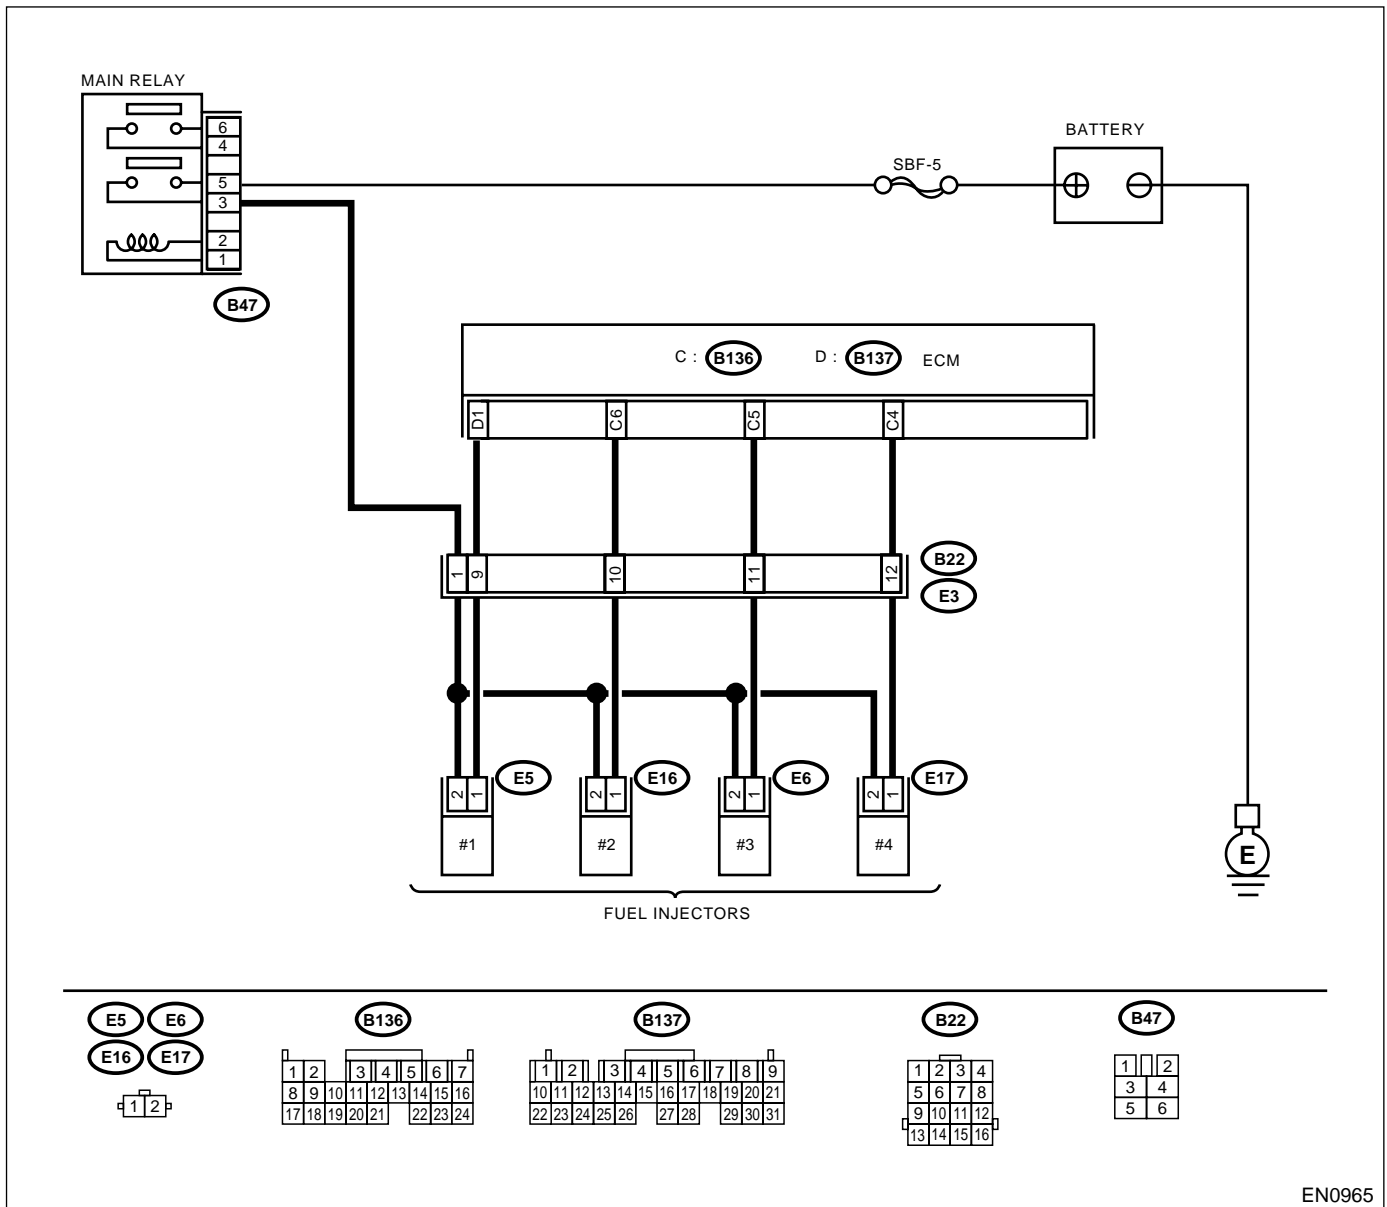

EN0965

Step	Check	Yes	No	
1	<p><b>CHECK OPERATION OF EACH FUEL INJECTOR.</b></p> <p>While cranking the engine, check that each fuel injector emits "operating" sound. Use a sound scope or attach a screwdriver to injector for this check.</p>	<p>Is the fuel injector emits "operating" sound?</p>	<p>Check fuel pressure. &lt;Ref. to ME(DOHC TURBO)-27, INSPECTION, Fuel Pressure.&gt;</p>	<p>Go to step 2.</p>

# DIAGNOSTICS FOR ENGINE STARTING FAILURE

## ENGINE (DIAGNOSTICS)

Step	Check	Yes	No
<p><b>2 CHECK POWER SUPPLY TO EACH FUEL INJECTOR.</b>                      1) Turn ignition switch to OFF.                      2) Disconnect connector from #1 cylinder fuel injector.                      3) Turn ignition switch to ON.                      4) Measure power supply voltage between the fuel injector terminal and engine ground.</p> <p><b>Connector &amp; terminal</b>  <b>#1 (E5) No. 2 (+) — Engine ground (-):</b>  <b>#2 (E16) No. 2 (+) — Engine ground (-):</b>  <b>#3 (E6) No. 2 (+) — Engine ground (-):</b>  <b>#4 (E17) No. 2 (+) — Engine ground (-):</b></p>	Is the voltage more than 10 V?	Go to step 3.	Repair harness and connector. NOTE: In this case, repair the following: <ul style="list-style-type: none"> <li>• Open circuit in harness between main relay and fuel injector connector</li> <li>• Poor contact in main relay connector</li> <li>• Poor contact in coupling connector</li> <li>• Poor contact in fuel injector connector</li> </ul>
<p><b>3 CHECK HARNESS BETWEEN ECM AND FUEL INJECTOR CONNECTOR.</b>                      1) Disconnect connector from ECM.                      2) Measure resistance of harness between ECM and fuel injector connector.</p> <p><b>Connector &amp; terminal</b>  <b>(B137) No. 1 — (E5) No. 1:</b>  <b>(B136) No. 6 — (E16) No. 1:</b>  <b>(B136) No. 5 — (E6) No. 1:</b>  <b>(B136) No. 4 — (E6) No. 1:</b></p>	Is the resistance less than 1 $\Omega$ ?	Go to step 4.	Repair harness and connector. NOTE: In this case, repair the following: <ul style="list-style-type: none"> <li>• Open circuit in harness between ECM and fuel injector connector</li> <li>• Poor contact in coupling connector</li> </ul>
<p><b>4 CHECK HARNESS BETWEEN ECM AND FUEL INJECTOR CONNECTOR.</b>                      Measure resistance of harness between ECM and fuel injector connector.</p> <p><b>Connector &amp; terminal</b>  <b>(B137) No. 1 — Chassis ground:</b>  <b>(B136) No. 6 — Chassis ground:</b>  <b>(B136) No. 5 — Chassis ground:</b>  <b>(B136) No. 4 — Chassis ground:</b></p>	Is the resistance less than 1 $\Omega$ ?	Repair ground short circuit in harness between ECM and fuel injector connector.	Go to step 5.
<p><b>5 CHECK EACH FUEL INJECTOR.</b>                      1) Turn ignition switch to OFF.                      2) Measure resistance between each fuel injector terminals.</p> <p><b>Terminals</b>  <b>No. 1 — No. 2:</b></p>	Is the resistance between 5 and 20 $\Omega$ ?	Go to step 6.	Replace faulty fuel injector.
<p><b>6 CHECK POOR CONTACT.</b>                      Check poor contact in ECM connector.</p>	Is there poor contact in ECM connector?	Repair poor contact in ECM connector.	Inspection using "General Diagnostic Table". <Ref. to EN(DOHC TURBO)-301, INSPECTION, General Diagnostic Table.>

# LIST OF DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

## 16. List of Diagnostic Trouble Code (DTC)

### A: LIST

DTC No.	Item	Index
P0031	Front oxygen (A/F) sensor heater circuit low input	<Ref. to EN(DOHC TURBO)-74, DTC P0031 — FRONT OXYGEN (A/F) SENSOR HEATER CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0032	Front oxygen (A/F) sensor heater circuit high input	<Ref. to EN(DOHC TURBO)-78, DTC P0032 — FRONT OXYGEN (A/F) SENSOR HEATER CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0037	Rear oxygen sensor heater circuit malfunction	<Ref. to EN(DOHC TURBO)-80, DTC P0037 — REAR OXYGEN SENSOR HEATER CIRCUIT MALFUNCTION —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0038	Rear oxygen sensor heater circuit high input	<Ref. to EN(DOHC TURBO)-84, DTC P0038 — REAR OXYGEN SENSOR HEATER CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0101	Mass air flow sensor circuit range/performance problem (high input)	<Ref. to EN(DOHC TURBO)-86, DTC P0101 — MASS AIR FLOW SENSOR CIRCUIT RANGE/PERFORMANCE PROBLEM (HIGH INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0102	Mass air flow sensor circuit low input	<Ref. to EN(DOHC TURBO)-88, DTC P0102 — MASS AIR FLOW SENSOR CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0103	Mass air flow sensor circuit high input	<Ref. to EN(DOHC TURBO)-92, DTC P0103 — MASS AIR FLOW SENSOR CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0106	Pressure sensor circuit range/performance problem (low input)	<Ref. to EN(DOHC TURBO)-94, DTC P0106 — PRESSURE SENSOR CIRCUIT RANGE/PERFORMANCE PROBLEM (LOW INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0107	Pressure sensor circuit low input	<Ref. to EN(DOHC TURBO)-98, DTC P0107 — PRESSURE SENSOR CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0108	Pressure sensor circuit high input	<Ref. to EN(DOHC TURBO)-102, DTC P0108 — PRESSURE SENSOR CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0111	Intake air temperature sensor circuit range/performance problem	<Ref. to EN(DOHC TURBO)-106, DTC P0111 — INTAKE AIR TEMPERATURE SENSOR CIRCUIT RANGE/PERFORMANCE PROBLEM —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0112	Intake air temperature sensor circuit low input	<Ref. to EN(DOHC TURBO)-108, DTC P0112 — INTAKE AIR TEMPERATURE SENSOR CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0113	Intake air temperature sensor circuit high input	<Ref. to EN(DOHC TURBO)-110, DTC P0113 — INTAKE AIR TEMPERATURE SENSOR CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0117	Engine coolant temperature sensor circuit low input	<Ref. to EN(DOHC TURBO)-114, DTC P0117 — ENGINE COOLANT TEMPERATURE SENSOR CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0118	Engine coolant temperature sensor circuit high input	<Ref. to EN(DOHC TURBO)-116, DTC P0118 — ENGINE COOLANT TEMPERATURE SENSOR CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0121	Throttle position sensor circuit range/performance problem (high input)	<Ref. to EN(DOHC TURBO)-120, DTC P0121 — THROTTLE POSITION SENSOR CIRCUIT RANGE/PERFORMANCE PROBLEM (HIGH INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0122	Throttle position sensor circuit low input	<Ref. to EN(DOHC TURBO)-122, DTC P0122 — THROTTLE POSITION SENSOR CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

# LIST OF DIAGNOSTIC TROUBLE CODE (DTC)

## ENGINE (DIAGNOSTICS)

DTC No.	Item	Index
P0123	Throttle position sensor circuit high input	<Ref. to EN(DOHC TURBO)-126, DTC P0123 — THROTTLE POSITION SENSOR CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0125	Insufficient coolant temperature for closed loop fuel control	<Ref. to EN(DOHC TURBO)-130, DTC P0125 — INSUFFICIENT COOLANT TEMPERATURE FOR CLOSED LOOP FUEL CONTROL —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0131	Front oxygen (A/F) sensor circuit range/performance problem (low input)	<Ref. to EN(DOHC TURBO)-132, DTC P0131 — FRONT OXYGEN (A/F) SENSOR CIRCUIT RANGE/PERFORMANCE PROBLEM (LOW INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0132	Front oxygen (A/F) sensor circuit range/performance problem (high input)	<Ref. to EN(DOHC TURBO)-134, DTC P0132 — FRONT OXYGEN (A/F) SENSOR CIRCUIT RANGE/PERFORMANCE PROBLEM (HIGH INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0133	Front oxygen (A/F) sensor circuit slow response	<Ref. to EN(DOHC TURBO)-136, DTC P0133 — FRONT OXYGEN (A/F) SENSOR CIRCUIT SLOW RESPONSE —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0136	Rear oxygen sensor circuit malfunction	<Ref. to EN(DOHC TURBO)-138, DTC P0136 — REAR OXYGEN SENSOR CIRCUIT MALFUNCTION —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0139	Rear oxygen sensor circuit slow response	<Ref. to EN(DOHC TURBO)-140, DTC P0139 — REAR OXYGEN SENSOR CIRCUIT SLOW RESPONSE —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0171	Fuel trim malfunction (A/F too lean)	<Ref. to EN(DOHC TURBO)-142, DTC P0171 — FUEL TRIM MALFUNCTION (A/F TOO LEAN) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0172	Fuel trim malfunction (A/F too rich)	<Ref. to EN(DOHC TURBO)-143, DTC P0172 — FUEL TRIM MALFUNCTION (A/F TOO RICH) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0244	Wastegate control solenoid valve malfunction (high input)	<Ref. to EN(DOHC TURBO)-146, DTC P0244 — WASTEGATE CONTROL SOLENOID VALVE MALFUNCTION (HIGH INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0245	Wastegate control solenoid valve circuit low input	<Ref. to EN(DOHC TURBO)-148, DTC P0245 — WASTEGATE CONTROL SOLENOID VALVE CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0246	Wastegate control solenoid valve circuit high input	<Ref. to EN(DOHC TURBO)-152, DTC P0246 — WASTEGATE CONTROL SOLENOID VALVE CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0301	Cylinder 1 misfire detected	<Ref. to EN(DOHC TURBO)-154, DTC P0301 — CYLINDER 1 MISFIRE DETECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0302	Cylinder 2 misfire detected	<Ref. to EN(DOHC TURBO)-154, DTC P0302 — CYLINDER 2 MISFIRE DETECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0303	Cylinder 3 misfire detected	<Ref. to EN(DOHC TURBO)-154, DTC P0303 — CYLINDER 3 MISFIRE DETECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0304	Cylinder 4 misfire detected	<Ref. to EN(DOHC TURBO)-156, DTC P0304 — CYLINDER 4 MISFIRE DETECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0327	Knock sensor circuit low input	<Ref. to EN(DOHC TURBO)-164, DTC P0327 — KNOCK SENSOR CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0328	Knock sensor circuit high input	<Ref. to EN(DOHC TURBO)-166, DTC P0328 — KNOCK SENSOR CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0335	Crankshaft position sensor circuit malfunction	<Ref. to EN(DOHC TURBO)-168, DTC P0335 — CRANKSHAFT POSITION SENSOR CIRCUIT MALFUNCTION —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0336	Crankshaft position sensor circuit range/performance problem	<Ref. to EN(DOHC TURBO)-170, DTC P0336 — Crankshaft Position Sensor Circuit Range/Performance Problem —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

# LIST OF DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

DTC No.	Item	Index
P0340	Camshaft position sensor circuit malfunction	<Ref. to EN(DOHC TURBO)-172, DTC P0340 — CAMSHAFT POSITION SENSOR CIRCUIT MALFUNCTION —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0341	Camshaft position sensor circuit range/performance problem	<Ref. to EN(DOHC TURBO)-174, DTC P0341 — CAMSHAFT POSITION SENSOR CIRCUIT RANGE/PERFORMANCE PROBLEM —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0420	Catalyst system efficiency below threshold	<Ref. to EN(DOHC TURBO)-178, DTC P0420 — CATALYST SYSTEM EFFICIENCY BELOW THRESHOLD —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0444	Evaporative emission control system purge control valve circuit low input	<Ref. to EN(DOHC TURBO)-180, DTC P0444 — EVAPORATIVE EMISSION CONTROL SYSTEM PURGE CONTROL VALVE CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0445	Evaporative emission control system purge control valve circuit high input	<Ref. to EN(DOHC TURBO)-184, DTC P0445 — EVAPORATIVE EMISSION CONTROL SYSTEM PURGE CONTROL VALVE CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0461	Fuel level sensor circuit range/performance problem	<Ref. to EN(DOHC TURBO)-187, DTC P0461 — FUEL LEVEL SENSOR CIRCUIT RANGE/PERFORMANCE PROBLEM —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0462	Fuel level sensor circuit low input	<Ref. to EN(DOHC TURBO)-190, DTC P0462 — FUEL LEVEL SENSOR CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0463	Fuel level sensor circuit high input	<Ref. to EN(DOHC TURBO)-194, DTC P0463 — FUEL LEVEL SENSOR CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0464	Fuel level sensor intermittent input	<Ref. to EN(DOHC TURBO)-198, DTC P0464 — FUEL LEVEL SENSOR INTERMITTENT INPUT—, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0480	Cooling fan relay 1 circuit low input	<Ref. to EN(DOHC TURBO)-201, DTC P0480 — COOLING FAN RELAY 1 CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0483	Cooling fan function problem	<Ref. to EN(DOHC TURBO)-205, DTC P0483 — COOLING FAN FUNCTION PROBLEM —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0500	Vehicle speed sensor malfunction	<Ref. to EN(DOHC TURBO)-208, DTC P0500 — VEHICLE SPEED SENSOR MALFUNCTION —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0506	Idle control system RPM lower than expected	<Ref. to EN(DOHC TURBO)-210, DTC P0506 — IDLE CONTROL SYSTEM RPM LOWER THAN EXPECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0507	Idle control system RPM higher than expected	<Ref. to EN(DOHC TURBO)-212, DTC P0507 — IDLE CONTROL SYSTEM RPM HIGHER THAN EXPECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0508	Idle control system circuit low input	<Ref. to EN(DOHC TURBO)-214, DTC P0508 — IDLE CONTROL SYSTEM CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0509	Idle control system circuit high input	<Ref. to EN(DOHC TURBO)-216, DTC P0509 — IDLE CONTROL SYSTEM CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0512	Starter switch circuit high input	<Ref. to EN(DOHC TURBO)-218, DTC P0512 — STARTER SWITCH CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0513	Incorrect immobilizer key	<Ref. to IM-27, DTC P0153 — INCORRECT IMMOBILIZER KEY (USE OF UNREGISTERED KEY) —, Diagnostics Chart with Trouble Code.>
P0545	Exhaust gas temperature sensor circuit low input	<Ref. to EN(DOHC TURBO)-220, DTC P0545 — EXHAUST GAS TEMPERATURE SENSOR CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>



## LIST OF DIAGNOSTIC TROUBLE CODE (DTC)

### ENGINE (DIAGNOSTICS)

DTC No.	Item	Index
P0546	Exhaust gas temperature sensor circuit high input	<Ref. to EN(DOHC TURBO)-222, DTC P0546 — EXHAUST GAS TEMPERATURE SENSOR CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P0604	Internal control module memory check sum error	<Ref. to EN(DOHC TURBO)-226, DTC P0604 — INTERNAL CONTROL MODULE MEMORY CHECK SUM ERROR —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1086	Tumble generator valve #2 (LH) position sensor circuit low input	<Ref. to EN(DOHC TURBO)-230, DTC P1086 — TUMBLE GENERATOR VALVE #2 (LH) POSITION SENSOR CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1087	Tumble generator valve #2 (LH) position sensor circuit high input	<Ref. to EN(DOHC TURBO)-234, DTC P1087 — TUMBLE GENERATOR VALVE #2 (LH) POSITION SENSOR CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1088	Tumble generator valve #1 (RH) position sensor circuit low input	<Ref. to EN(DOHC TURBO)-238, DTC P1088 — TUMBLE GENERATOR VALVE #1 (RH) POSITION SENSOR CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1089	Tumble generator valve #1 (RH) position sensor circuit high input	<Ref. to EN(DOHC TURBO)-242, DTC P1089 — TUMBLE GENERATOR VALVE #1 (RH) POSITION SENSOR CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1090	Tumble generator valve #1(RH) malfunction (stuck open)	<Ref. to EN(DOHC TURBO)-245, DTC P1090 — TUMBLE GENERATOR VALVE SYSTEM #1 (RH) MALFUNCTION (STUCK OPEN) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1091	Tumble generator valve #1(RH) malfunction (stuck close)	<Ref. to EN(DOHC TURBO)-246, DTC P1091 — TUMBLE GENERATOR VALVE SYSTEM #1 (RH) MALFUNCTION (STUCK CLOSE) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1092	Tumble generator valve #2(LH) malfunction (stuck open)	<Ref. to EN(DOHC TURBO)-247, DTC P1092 — TUMBLE GENERATOR VALVE SYSTEM #2 (LH) MALFUNCTION (STUCK OPEN) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1093	Tumble generator valve #2(LH) malfunction (stuck close)	<Ref. to EN(DOHC TURBO)-248, DTC P1093 — TUMBLE GENERATOR VALVE SYSTEM #2 (LH) MALFUNCTION (STUCK CLOSE) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1094	Tumble generator valve circuit #1 (opencircuit)	<Ref. to EN(DOHC TURBO)-250, DTC P1094 — TUMBLE GENERATOR VALVE CIRCUIT #1 (OPEN CIRCUIT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1095	Tumble generator valve circuit #1 (overcurrent)	<Ref. to EN(DOHC TURBO)-252, DTC P1095 — TUMBLE GENERATOR VALVE CIRCUIT #1 (OVERCURRENT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1096	Tumble generator valve circuit #2 (opencircuit)	<Ref. to EN(DOHC TURBO)-254, DTC P1096 — TUMBLE GENERATOR VALVE CIRCUIT #2 (OPEN CIRCUIT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1097	Tumble generator valve circuit #2 (overcurrent)	<Ref. to EN(DOHC TURBO)-256, DTC P1097 — TUMBLE GENERATOR VALVE CIRCUIT #2 (OVERCURRENT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1110	Atmospheric pressure sensor low input	<Ref. to EN(DOHC TURBO)-257, DTC P1110 — ATMOSPHERIC PRESSURE SENSOR CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1111	Atmospheric pressure sensor high input	<Ref. to EN(DOHC TURBO)-257, DTC P1111 — ATMOSPHERIC PRESSURE SENSOR CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1112	Atmospheric pressure sensor range/performance problem	<Ref. to EN(DOHC TURBO)-258, DTC P1112 — ATMOSPHERIC PRESSURE SENSOR CIRCUIT RANGE/PERFORMANCE PROBLEM —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1130	Front oxygen sensor circuit malfunction (open circuit)	<Ref. to EN(DOHC TURBO)-260, DTC P1130 — FRONT OXYGEN (A/F) SENSOR CIRCUIT MALFUNCTION (OPEN CIRCUIT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1131	Front oxygen sensor circuit malfunction (short circuit)	<Ref. to EN(DOHC TURBO)-262, DTC P1131 — FRONT OXYGEN (A/F) SENSOR CIRCUIT MALFUNCTION (SHORT CIRCUIT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

# LIST OF DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

DTC No.	Item	Index
P1134	Front oxygen (A/F) sensor micro-computer problem	<Ref. to EN(DOHC TURBO)-264, DTC P1134 — FRONT OXYGEN (A/F) SENSOR MICRO-COMPUTER PROBLEM —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1139	Front oxygen (A/F) sensor #1 heater circuit performance/range problem	<Ref. to EN(DOHC TURBO)-266, DTC P1139 — FRONT OXYGEN (A/F) SENSOR #1 HEATER CIRCUIT RANGE/PERFORMANCE PROBLEM —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1141	Mass air flow sensor circuit range/performance problem (low input)	<Ref. to EN(DOHC TURBO)-268, DTC P1141 — MASS AIR FLOW SENSOR CIRCUIT RANGE/PERFORMANCE PROBLEM (LOW INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1142	Throttle position sensor circuit range/performance problem (low input)	<Ref. to EN(DOHC TURBO)-270, DTC P1142 — THROTTLE POSITION SENSOR CIRCUIT RANGE/PERFORMANCE PROBLEM (LOW INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1146	Pressure sensor circuit range/performance problem (high input)	<Ref. to EN(DOHC TURBO)-272, DTC P1146 — PRESSURE SENSOR CIRCUIT RANGE/PERFORMANCE PROBLEM (HIGH INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1230	Fuel pump control unit malfunction	<Ref. to EN(DOHC TURBO)-276, DTC P1230 — FUEL PUMP CONTROLLER MALFUNCTION —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1244	Wastegate control solenoid valve malfunction (low input)	<Ref. to EN(DOHC TURBO)-280, DTC P1244 — WASTEGATE CONTROL SOLENOID VALVE RANGE/PERFORMANCE PROBLEM (LOW INPUT) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1245	Wastegate control solenoid valve malfunction (fail-safe)	<Ref. to EN(DOHC TURBO)-282, DTC P1245 — WASTEGATE CONTROL SOLENOID VALVE MALFUNCTION (FAIL-SAFE) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1301	Fire due to increased exhaust temperature	<Ref. to EN(DOHC TURBO)-284, DTC P1301 — FIRE DUE TO INCREASED EXHAUST TEMPERATURE —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1312	Exhaust temperature sensor malfunction	<Ref. to EN(DOHC TURBO)-286, DTC P1312 — EXHAUST GAS TEMPERATURE CIRCUIT MALFUNCTION —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1480	Cooling fan relay 1 circuit high input	<Ref. to EN(DOHC TURBO)-289, DTC P1480 — COOLING FAN RELAY 1 CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1507	Idle control system malfunction (fail-safe)	<Ref. to EN(DOHC TURBO)-292, DTC P1507 — IDLE CONTROL SYSTEM MALFUNCTION (FAIL-SAFE) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1518	Starter switch circuit low input	<Ref. to EN(DOHC TURBO)-294, DTC P1518 — STARTER SWITCH CIRCUIT LOW INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1544	High exhaust temperature detected	<Ref. to EN(DOHC TURBO)-296, DTC P1544 — HIGH EXHAUST TEMPERATURE DETECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
P1560	Back-up voltage circuit malfunction	<Ref. to EN(DOHC TURBO)-298, DTC P1560 — Back-up Voltage Circuit Malfunction —.>
P1570	Antenna	<Ref. to IM-28, DTC P1570 — ANTENNA —, Diagnostics Chart with Trouble Code.>
P1571	Reference code incompatibility	<Ref. to IM-21, DTC P1571 — REFERENCE CODE INCOMPATIBILITY —, Diagnostics Chart with Trouble Code.>
P1572	IMM circuit failure except antenna circuit	<Ref. to IM-22, DTC P1572 — IMM CIRCUIT FAILURE (EXCEPT ANTENNA CIRCUIT) —, Diagnostics Chart with Trouble Code.>
P1574	Key communication failure	<Ref. to IM-26, DTC P1574 — KEY COMMUNICATION FAILURE —, Diagnostics Chart with Trouble Code.>
P1576	EGI control module EEPROM	<Ref. to IM-27, DTC P1576 — EGI CONTROL MODULE EEPROM —, Diagnostics Chart with Trouble Code.>
P1577	IMM control module EEPROM	<Ref. to IM-27, DTC P1577 — IMM CONTROL MODULE EEPROM —, Diagnostics Chart with Trouble Code.>