



8. Diagnostics for Engine Starting Failure

A: BASIC DIAGNOSTICS CHART

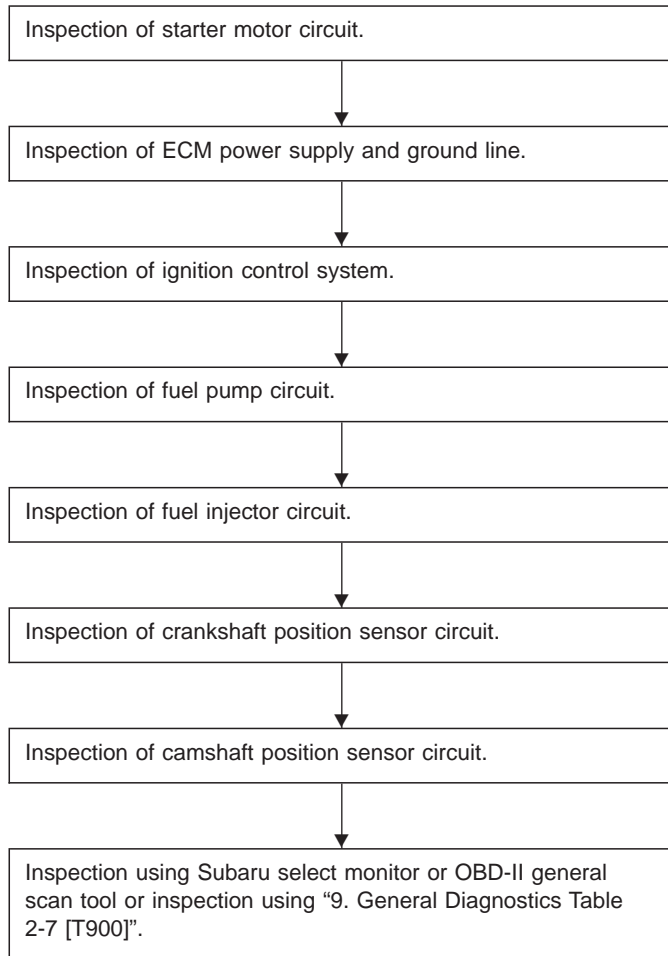

B: STARTER MOTOR CIRCUIT

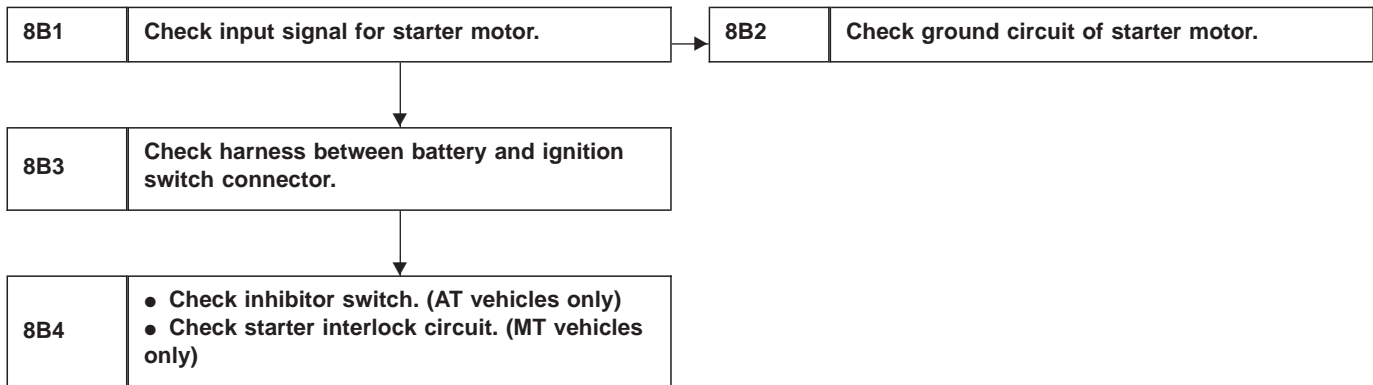


CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY and INSPECTION MODES.
<Ref. to 2-7 [T3D0] and [T3E0].>

WIRING DIAGRAM:


- LHD Model

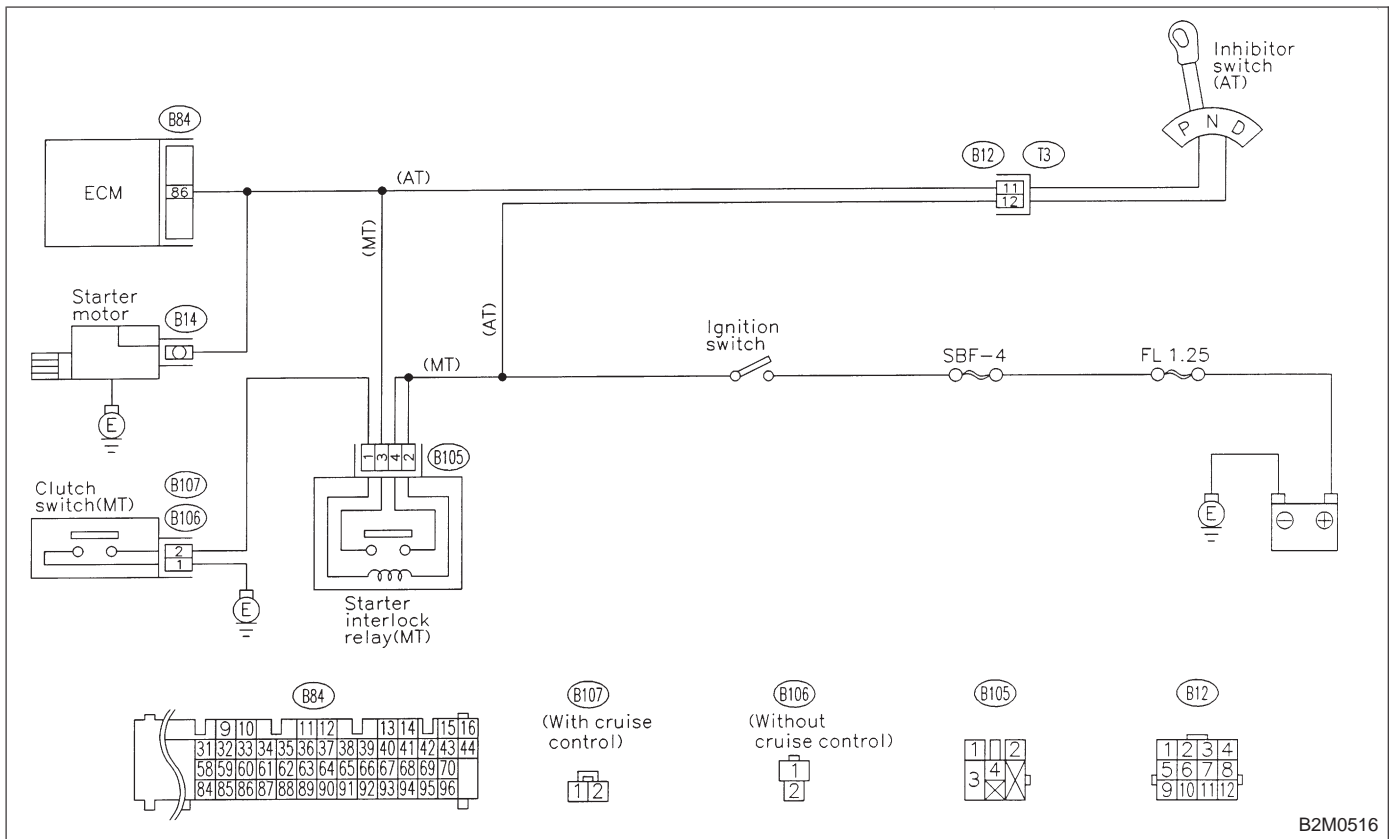


B2M0516

WIRING DIAGRAM:


- RHD Model

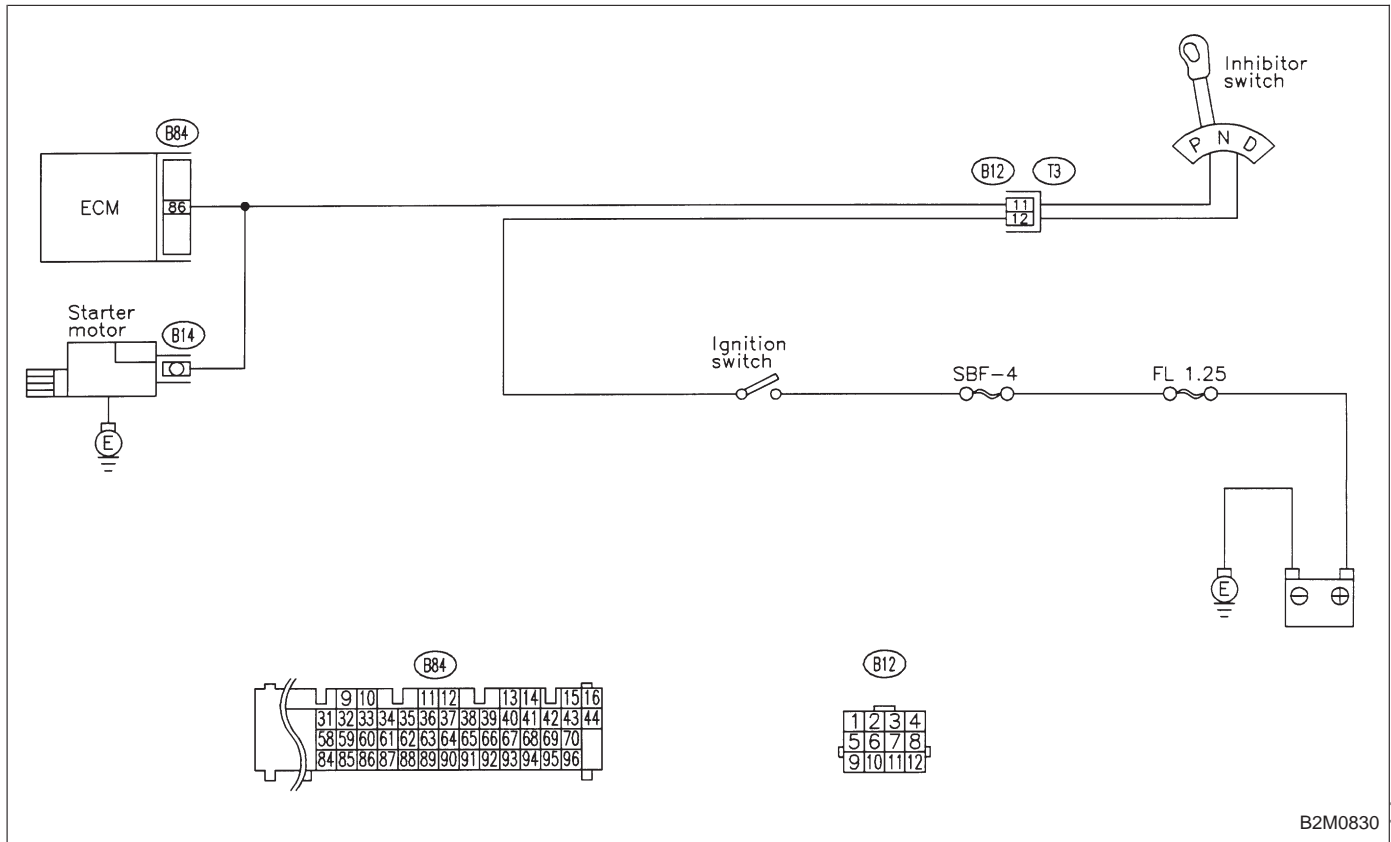

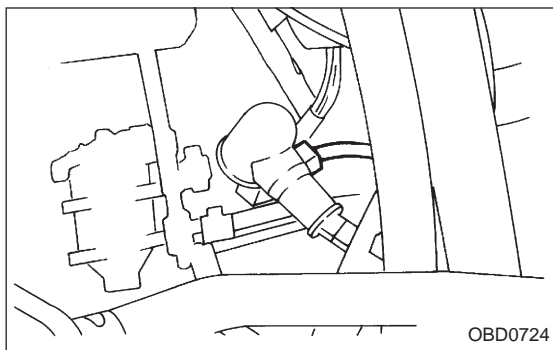

8B1 CHECK INPUT SIGNAL FOR STARTER MOTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from starter motor.
- 3) Turn ignition switch to ST.

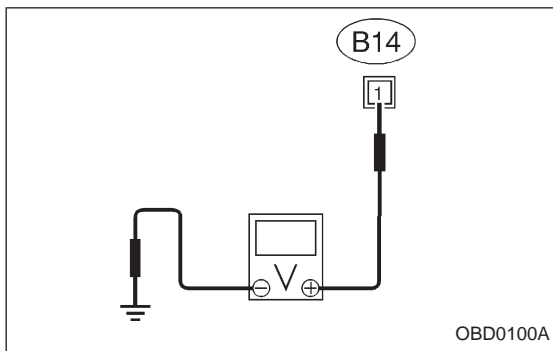

- 4) Measure power supply voltage between starter motor connector terminal and engine ground.


CHECK : **Connector & terminal (B14) No. 1 (+) — Engine ground (-): Is the voltage more than 10 V?**

NOTE:

- On AT vehicles, place the selector lever in the “P” or “N” position.
- On MT vehicles, depress the clutch pedal.

YES : Go to step **8B2**.

NO : Go to step **8B3**.

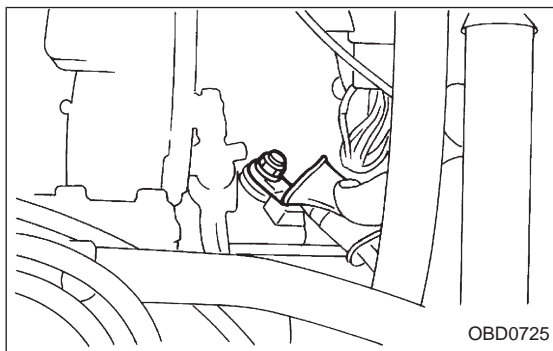

8B2 CHECK GROUND CIRCUIT OF STARTER MOTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect terminal from starter motor.
- 3) Measure resistance of ground cable between ground cable terminal and engine ground.

CHECK : **Is resistance less than 5 Ω?**

YES : Check starter motor. <Ref. to 6-1 [K100].>

NO : Repair open circuit of ground cable.

8B3 CHECK HARNESS BETWEEN BATTERY AND IGNITION SWITCH CONNECTOR.


- 1) Turn ignition switch to OFF.
- 2) Remove SBF No. 4 from main fuse box.
- 3) Measure resistance of fuse.

CHECK : **Is resistance less than 1 Ω?**

NO : Replace SBF No. 4.

YES : Go to next step 4).

- 4) Install SBF No. 4 to main fuse box.
- 5) Turn ignition switch to ON.

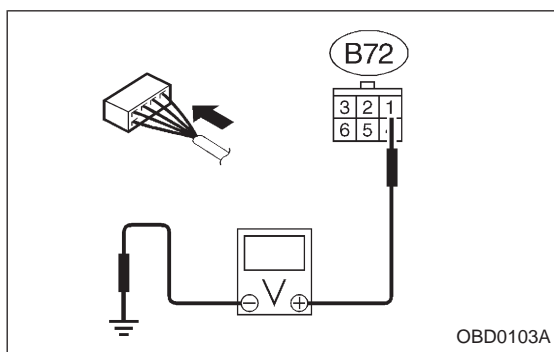


- 6) Measure power supply voltage between ignition switch connector and chassis ground.

CHECK : **Connector & terminal (B72) No. 1 (+) — Chassis ground (-): Is the voltage more than 10 V?**

YES : Go to step 8B4.

NO : Repair harness between ignition switch and SBF No. 4 connector.

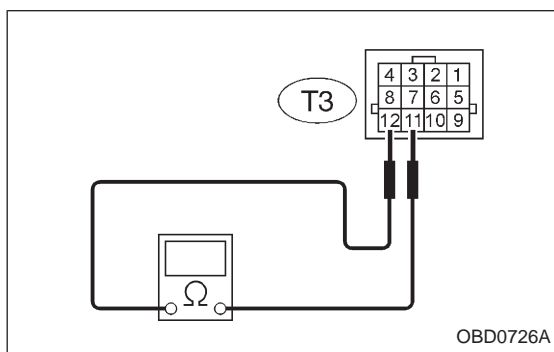


8B4 ● **CHECK INHIBITOR SWITCH. (AT VEHICLES ONLY)**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from transmission.
- 3) Measure resistance between transmission harness connector receptacle's terminals.

CHECK : **Connector & terminal (T3) No. 11 — No. 12: Is the resistance less than 10 Ω?**

YES : Repair harness between starter motor and ignition switch connector.

NO : Repair or replace inhibitor switch.

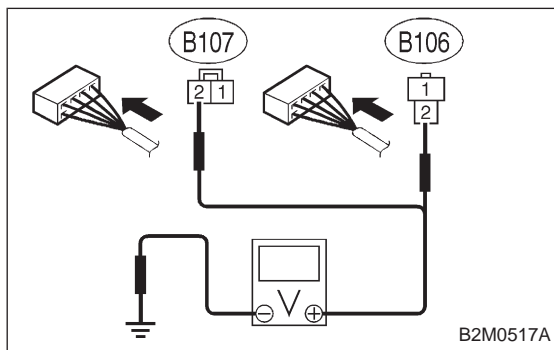


8B4 ● **CHECK STARTER INTERLOCK CIRCUIT. (MT VEHICLES ONLY)**

- 1) Turn ignition switch to "ST".
- 2) Measure voltage between clutch switch connector and chassis ground.

- CHECK** : **Connector & terminal**
- **With cruise control**
(B107) No. 2 (+) — Chassis ground (-):
 - **Without cruise control**
(B106) No. 2 (+) — Chassis ground (-):
- Is the voltage more than 10 V?**

NO : Replace starter interlock relay.

YES : Go to next step 3).

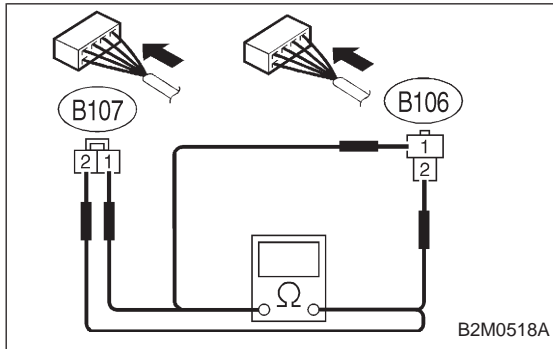


- 3) Turn ignition switch to OFF.
- 4) Measure resistance between clutch switch connector terminals while depressing the clutch pedal.

- CHECK** : **Connector & terminal**
- **With cruise control**
(B107) No. 1 — No. 2:
 - **Without cruise control**
(B106) No. 1 — No. 2:
- Is the resistance less than 10 Ω?**

YES : Repair harness between starter motor and ignition switch connector.

NO : Replace clutch switch.


C: CONTROL MODULE POWER SUPPLY AND GROUND LINE

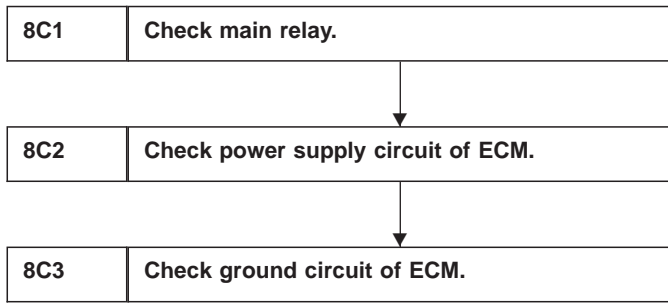

CAUTION:
 After repair or replacement of faulty parts, conduct **CLEAR MEMORY** and **INSPECTION MODES**.
 <Ref. to 2-7 [T3D0] and [T3E0].>


WIRING DIAGRAM:


- LHD Model

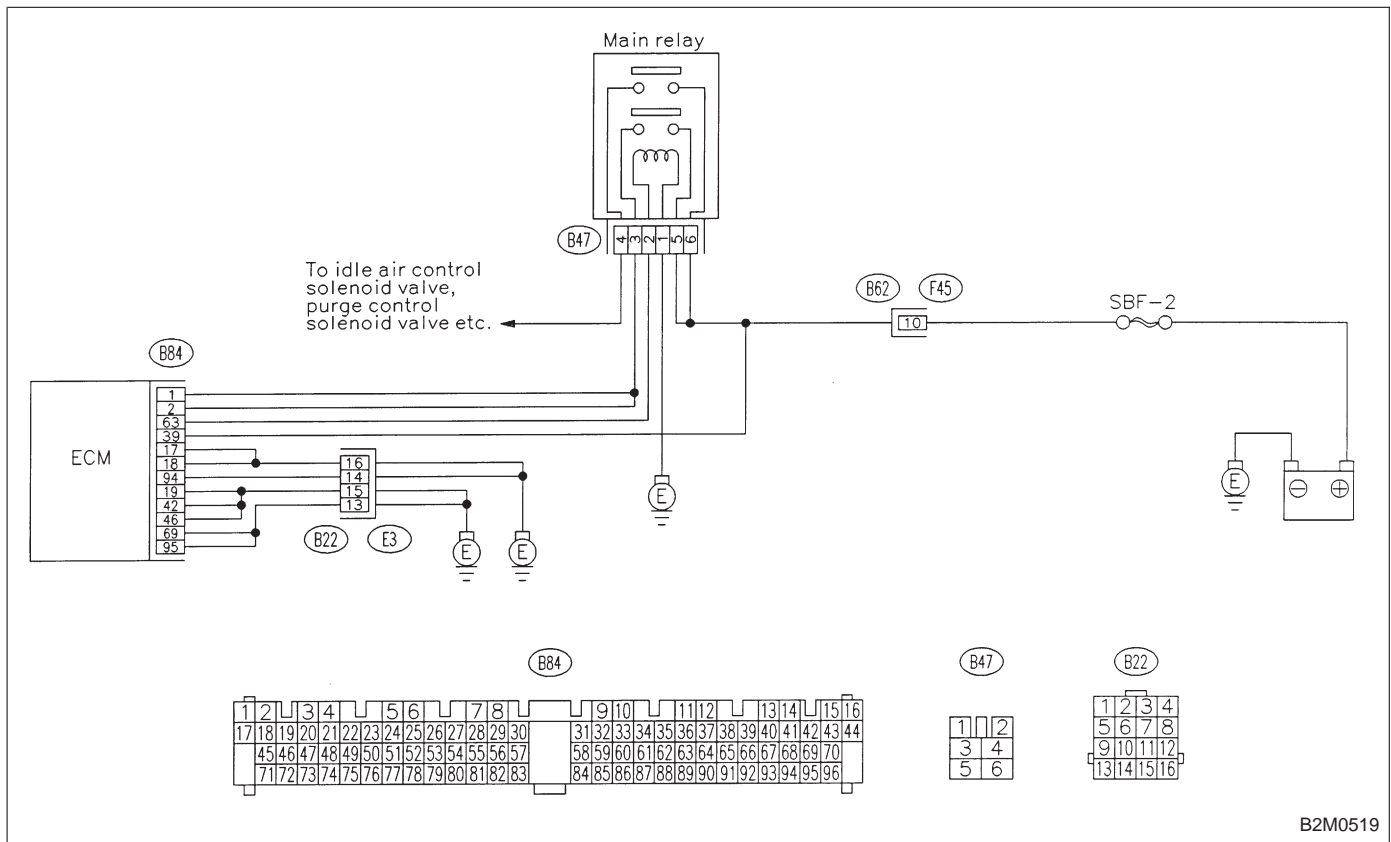

WIRING DIAGRAM:

- RHD Model

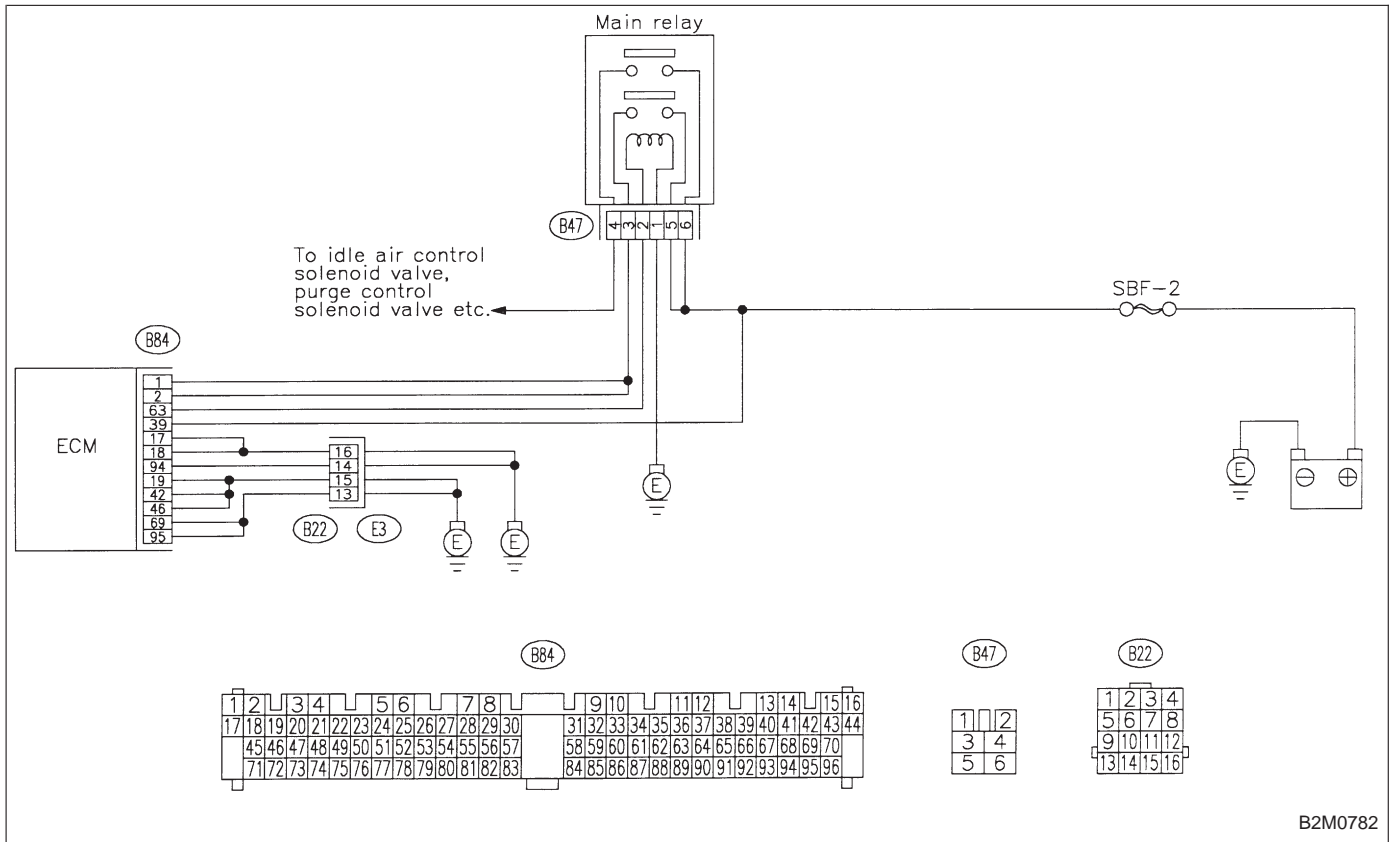

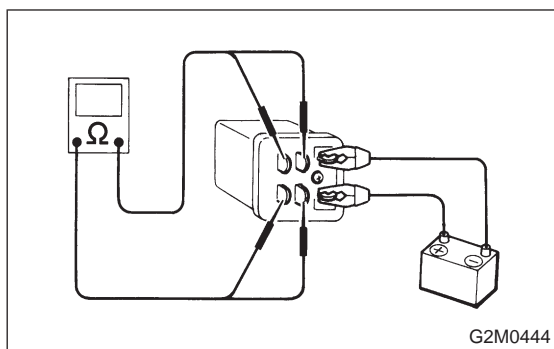**8C1 CHECK MAIN RELAY.**

- 1) Turn the ignition switch to OFF.
- 2) Remove main relay.
- 3) Connect battery to main relay terminals No. 1 and No. 2.
- 4) Measure resistance between main relay terminals.

CHECK : **Terminals No. 3 — No. 5:**
Is the resistance less than 10 Ω?


YES : Go to next **CHECK** .

YES : Replace main relay.

CHECK : **Terminals No. 4 — No. 6:**
Is the resistance less than 10 Ω?

YES : Go to step **8C2**.

NO : Replace main relay.

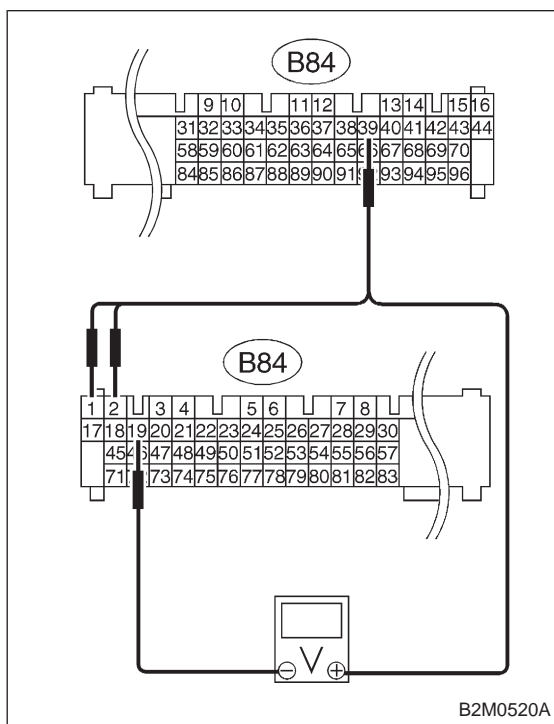**8C2 CHECK POWER SUPPLY CIRCUIT OF ECM.**

- 1) Install main relay.
- 2) Disconnect connectors from ECM.
- 3) Turn ignition switch to ON.
- 4) Measure power supply voltage between ECM connector terminals.

CHECK : **Connector & terminal (B84) No. 1 (+) — No. 19 (-):**
Is the voltage more than 10 V?

YES : Go to next **CHECK** .

NO : Repair harness of power supply circuit.

CHECK : **Connector & terminal (B84) No. 2 (+) — No. 19 (-):**
Is the voltage more than 10 V?


YES : Go to next **CHECK** .

NO : Repair harness of power supply circuit.

CHECK : **Connector & terminal (B84) No. 39 (+) — No. 19 (-):**
Is the voltage more than 10 V?

YES : Go to step **8C3**.

NO : Repair harness of power supply circuit.

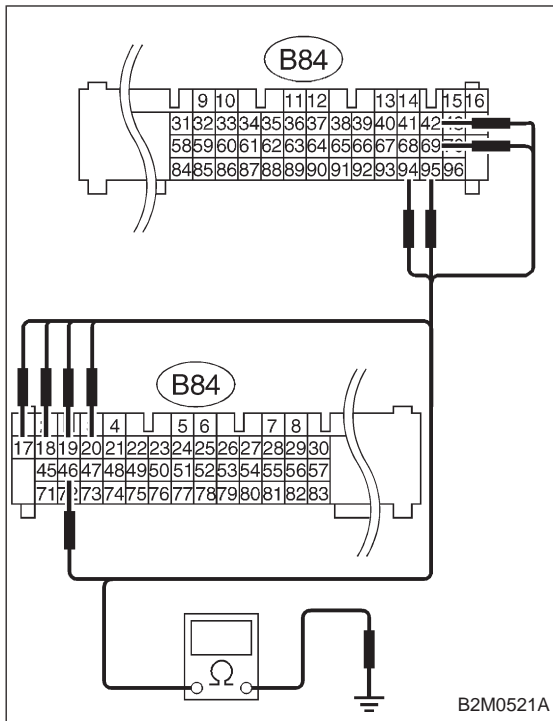

8C3 CHECK GROUND CIRCUIT OF ECM.

- 1) Turn ignition switch to OFF.
- 2) Measure resistance of harness connector between ECM and chassis ground.

CHECK : **Connector & terminal (B84) No. 17 — Chassis ground: Is the resistance less than 5 Ω?**

YES : Go to next **CHECK** .

NO : Repair harness between ECM connector and engine grounding terminal.

CHECK : **Connector & terminal (B84) No. 18 — Chassis ground: Is the resistance less than 5 Ω?**

YES : Go to next **CHECK** .

NO : Repair harness between ECM connector and engine grounding terminal.

CHECK : **Connector & terminal (B84) No. 19 — Chassis ground: Is the resistance less than 5 Ω?**

YES : Go to next **CHECK** .

NO : Repair harness between ECM connector and engine grounding terminal.

CHECK : **Connector & terminal (B84) No. 20 — Chassis ground: Is the resistance less than 5 Ω?**

YES : Go to next **CHECK** .

NO : Repair harness between ECM connector and engine grounding terminal.

CHECK : **Connector & terminal (B84) No. 42 — Chassis ground: Is the resistance less than 5 Ω?**

YES : Go to next **CHECK** .

NO : Repair harness between ECM connector and engine grounding terminal.

CHECK : **Connector & terminal (B84) No. 46 — Chassis ground: Is the resistance less than 5 Ω?**

YES : Go to next **CHECK** .




NO : Repair harness between ECM connector and engine grounding terminal.

CHECK : **Connector & terminal (B84) No. 69 — Chassis ground: Is the resistance less than 5 Ω?**

YES : Go to next **CHECK** .

NO : Repair harness between ECM connector and engine grounding terminal.

- CHECK** : **Connector & terminal**
(B84) No. 94 — Chassis ground:
Is the resistance less than 5 Ω?
- YES** : Go to next **CHECK** .
- NO** : Repair harness between ECM connector and engine grounding terminal.
- CHECK** : **Connector & terminal**
(B84) No. 95 — Chassis ground:
Is the resistance less than 5 Ω?
- YES** : Check ignition control system. <Ref. to 2-7 [T8D0].>
- NO** : Repair harness between ECM connector and engine grounding terminal.

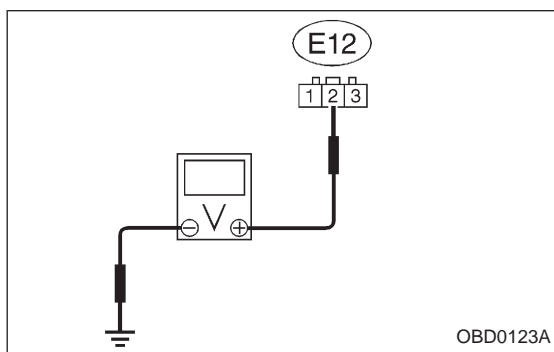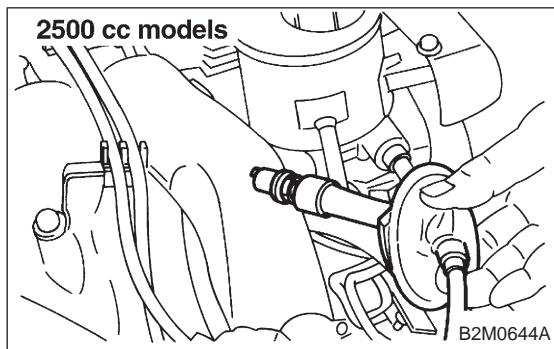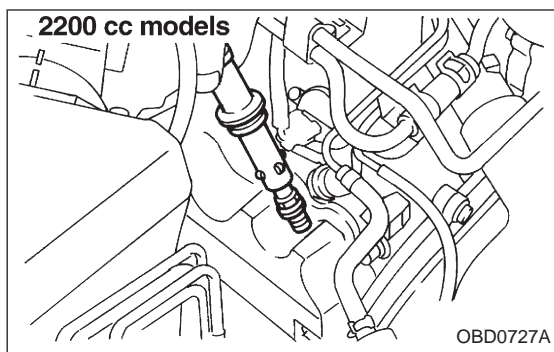

8D1 CHECK IGNITION SYSTEM FOR SPARKS.

- 1) Remove plug cord cap from each spark plug.
- 2) Install new spark plug on plug cord cap.

CAUTION:

Do not remove spark plug from engine.

- 3) Contact spark plug's thread portion on engine.
- 4) While opening throttle valve fully, crank engine to check that spark occurs at each cylinder.

CHECK : **Does spark occur at each cylinder?**

YES : Check fuel pump system. <Ref. to 2-7 [T8E0].>

NO : Go to step 8D2.


8D2 CHECK POWER SUPPLY CIRCUIT FOR IGNITION COIL.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ignition coil.
- 3) Turn ignition switch to ON.
- 4) Measure power supply voltage between ignition coil connector and engine ground.

CHECK : **Connector & terminal (E12) No. 2 (+) — Engine ground (-): Is the voltage more than 10 V?**

YES : Go to step 8D3.

NO : Repair harness between ignition coil and ignition switch connector.

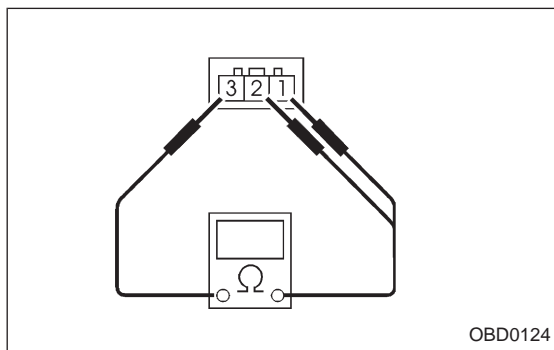

8D3 CHECK IGNITION COIL.


- 1) Measure resistance between ignition coil terminals to check primary coil.

CHECK : **Terminals No. 2 — No. 1: Is the resistance between 0.4 and 1.0 Ω?**

YES : Go to next **CHECK** .

NO : Replace ignition coil.

- CHECK** : **Terminals**
No. 2 — No. 3:
Is the resistance between 0.4 and 1.0 Ω?
- NO** : Replace ignition coil.
- YES** : Go to next step 2).

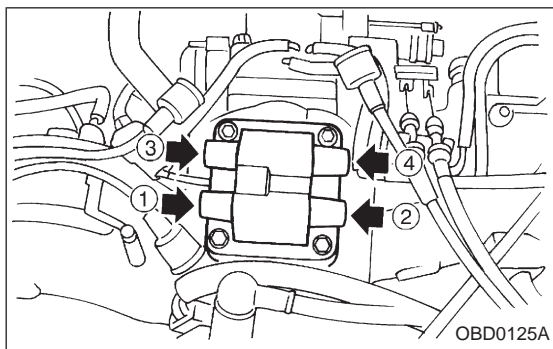


2) Measure resistance between spark plug cord contact portions to check secondary coil.

- CHECK** : **Terminals**
#1 — #2:
Is the resistance between 18 and 24 Ω?

- YES** : Go to next **CHECK** .
- NO** : Replace ignition coil.

- CHECK** : **Terminals**
#3 — #4:
Is the resistance between 18 and 24 Ω?

- YES** : Go to step 8D4.
- NO** : Replace ignition coil.

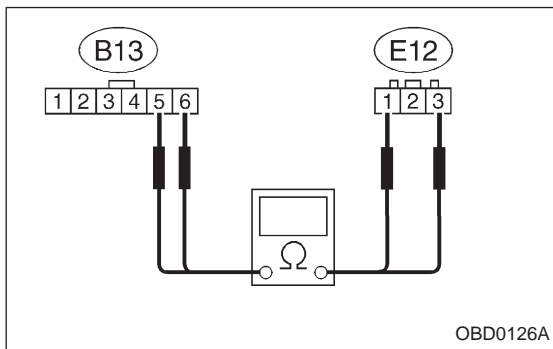

8D4 CHECK HARNESS BETWEEN IGNITOR AND IGNITION COIL CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ignitor.
- 3) Measure resistance of harness connector between ignition coil and ignitor.

- CHECK** : **Connector & terminal**
(B13) No. 5 — (E12) No. 1:
Is the resistance less than 1 Ω?

- YES** : Go to next **CHECK1** .
- YES** : Go to next **CHECK2** .


- CHECK1** : **Connector & terminal**
(B13) No. 6 — (E12) No. 3:
Is the resistance less than 1 Ω?

- YES** : Go to step 8D5.
- NO** : Go to next **CHECK2** .

CHECK2 : *Is there poor contact in coupling connector (B22)?*

YES : Repair poor contact in coupling connector.

NO : Repair harness between ignition coil and ignitor connector.

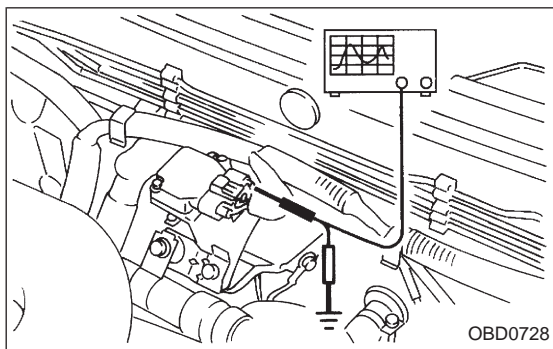

8D5 CHECK INPUT SIGNAL FOR IGNITOR.

Check if voltage varies synchronously with engine speed when cranking, while monitoring voltage between ignitor connector and engine ground.

CHECK : **Connector & terminal:**
(B13) No. 1 (+) — Engine ground (-):
Is the voltage more than 10 V?


YES : Go to next **CHECK** .

NO : Replace ignitor.

CHECK : **Connector & terminal:**
(B13) No. 2 (+) — Engine ground (-):
Is the voltage more than 10 V?

YES : Go to step 8D6.

NO : Replace ignitor.

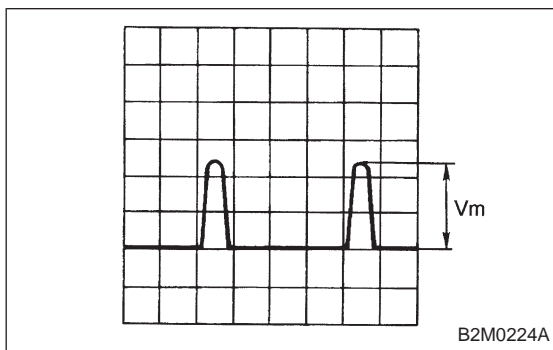


8D6 CHECK HARNESS OF IGNITOR GROUND CIRCUIT.


- 1) Turn ignition switch to OFF.
- 2) Measure resistance between ignitor and engine ground.

CHECK : **Connector & terminal**
(B13) No. 3 — Engine ground:
Is the resistance less than 5 Ω?

YES : Go to step 8D7.

NO : Repair harness between ignitor connector and engine grounding terminal.

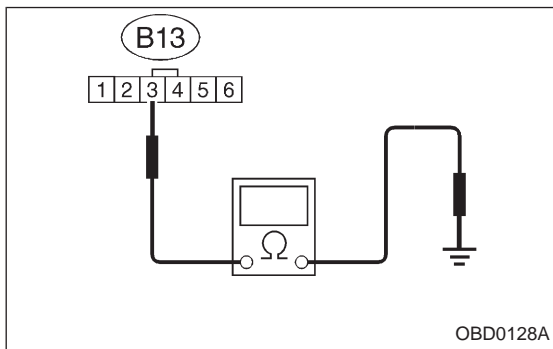

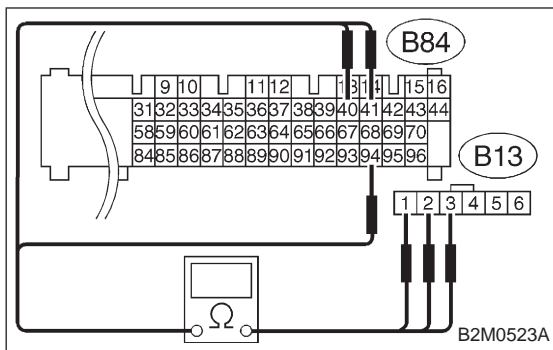

8D7 CHECK HARNESS BETWEEN ECM AND IGNITOR CONNECTOR.

- 1) Disconnect connector from ECM.
- 2) Measure resistance of harness connector between ECM and ignitor.

CHECK : **Connector & terminal (B84) No. 41 — (B13) No. 1: Is the resistance less than 1 Ω?**

YES : Go to next **CHECK** .

NO : Repair open circuit in harness between ECM and ignitor connector.

CHECK : **Connector & terminal (B84) No. 40 — (B13) No. 2: Is the resistance less than 1 Ω?**


YES : Go to next **CHECK** .

NO : Repair open circuit in harness between ECM and ignitor connector.

CHECK : **Connector & terminal (B84) No. 94 — (B13) No. 3: Is the resistance less than 1 Ω?**

NO : Repair open circuit in harness between ECM and ignitor connector.

YES : Go to next step 3).

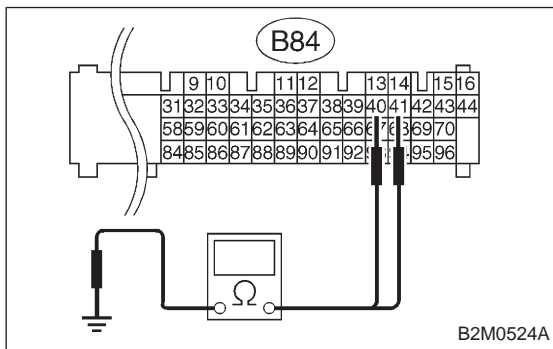

- 3) Measure resistance of harness connector between ECM and chassis ground.

CHECK : **Connector & terminal (B84) No. 41 — Chassis ground: Is the resistance more than 1 MΩ?**

YES : Go to next **CHECK** .

NO : Repair short circuit in harness between ECM and ignitor connector.

CHECK : **Connector & terminal (B84) No. 40 — Chassis ground: Is the resistance more than 1 MΩ?**


YES : Go to next **CHECK** .

NO : Repair short circuit in harness between ECM and ignitor connector.

CHECK : **Is there poor contact in ECM connector?**

YES : Repair poor contact in ECM connector.

NO : Check fuel pump circuit. <Ref. to 2-7 [T8E0].>

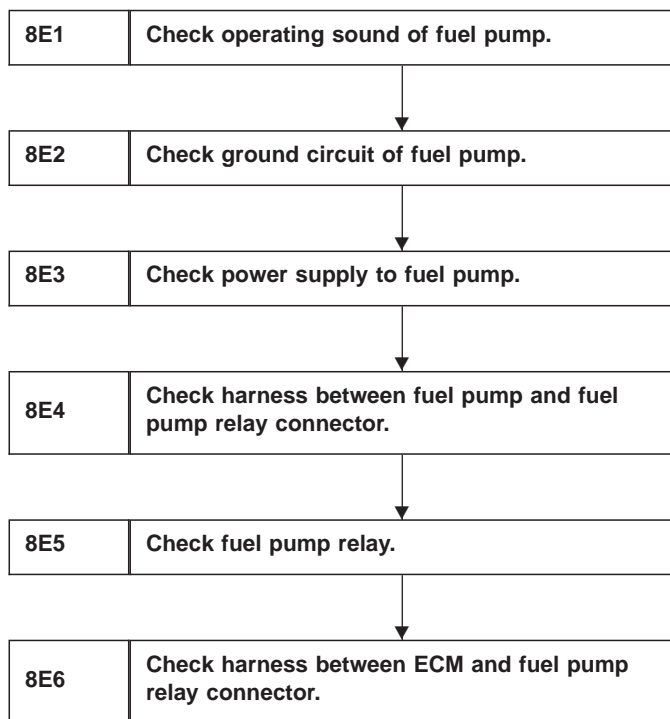
**E: FUEL PUMP CIRCUIT (2200CC FWD,
2500CC AWD TAIWAN MODEL)****CAUTION:**

After repair or replacement of faulty parts, conduct
CLEAR MEMORY and **INSPECTION MODES**.

<Ref. to 2-7 [T3D0] and [T3E0].>

WIRING DIAGRAM:

- RHD Model

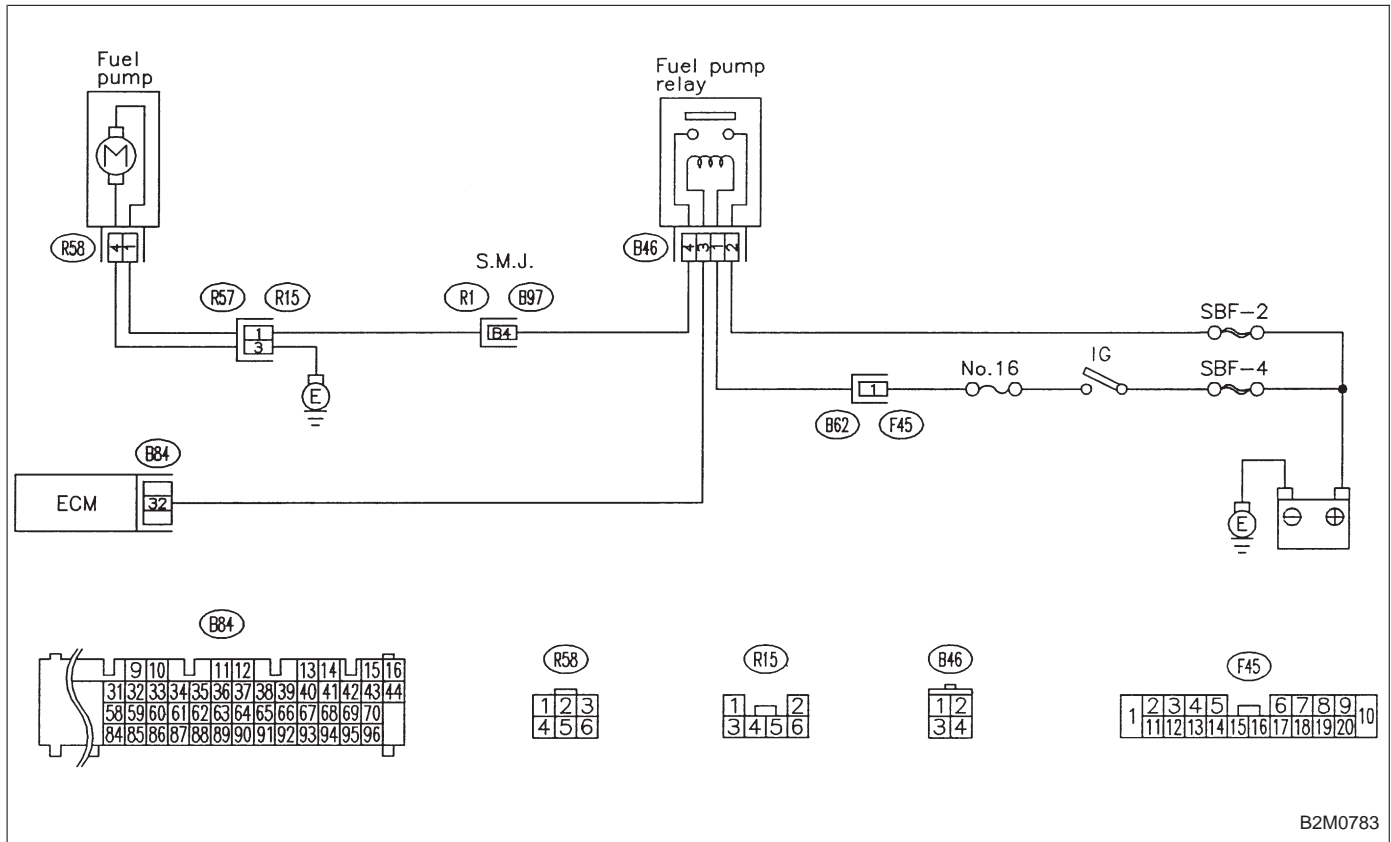

B2M0783

8E1	CHECK OPERATING SOUND OF FUEL PUMP.
------------	--

Make sure that fuel pump is in operation for two seconds when turning ignition switch to ON.

CHECK : **Does fuel pump produce operating sound?**


NOTE:

Fuel pump operation check can also be executed using Subaru Select Monitor (Function mode: FD01).

For the procedure, refer to "COMPULSORY VALVE OPERATION CHECK MODE" 2-7 [T3F0].

YES : Check fuel injector circuit. <Ref. to 2-7 [T10V0].>

NO : Go to step **8E2**.

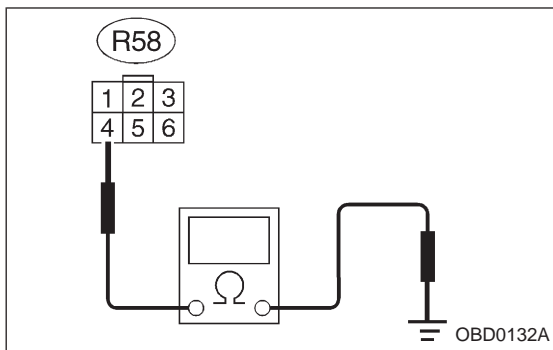


8E2 CHECK GROUND CIRCUIT OF FUEL PUMP.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from fuel pump.
- 3) Measure resistance of harness connector between fuel pump and chassis ground.

CHECK : *Connector & terminal (R58) No. 4 — Chassis ground: Is the resistance less than 5 Ω?*

YES : Go to step 8E3.

NO : Repair open circuit in fuel pump ground circuit.

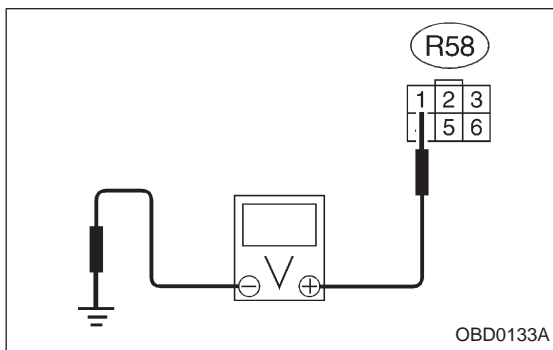


8E3 CHECK POWER SUPPLY TO FUEL PUMP.

- 1) Turn ignition switch to ON.
- 2) Measure voltage of power supply circuit between fuel pump connector and chassis ground.

CHECK : *Connector & terminal (R58) No. 1 (+) — Chassis ground (-): Is the voltage more than 10 V?*

YES : Replace fuel pump.

NO : Go to step 8E4.

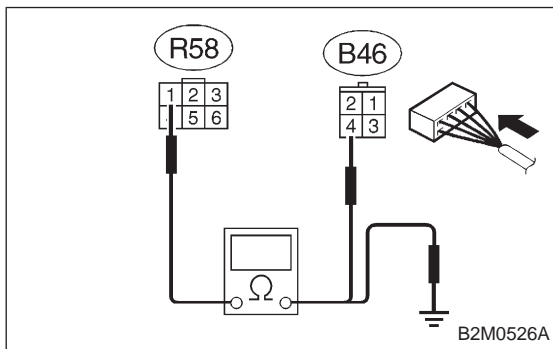

8E4 CHECK HARNESS BETWEEN FUEL PUMP AND FUEL PUMP RELAY CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Measure resistance of harness connector between fuel pump and fuel pump relay.

CHECK : *Connector & terminal (R58) No. 1 — (B46) No. 4: Is the resistance less than 1 Ω?*


YES : Go to next **CHECK** .

NO : Repair open circuit in harness between fuel pump and fuel pump relay connector.

CHECK : *Connector & terminal (R58) No. 1 — Chassis ground: Is the resistance more than 1 MΩ?*

YES : Go to step 8E5.

NO : Repair short circuit in harness between fuel pump and fuel pump relay connector.

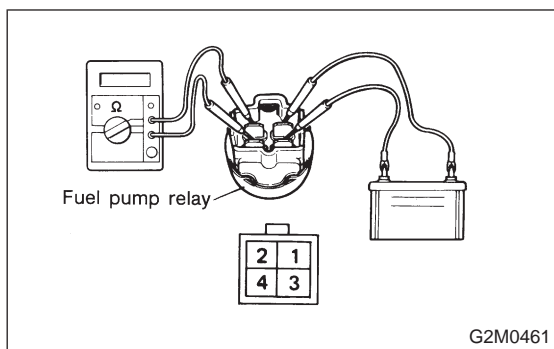
**8E5 CHECK FUEL PUMP RELAY.**

- 1) Disconnect connectors from fuel pump relay and main relay.
- 2) Remove fuel pump relay and main relay with bracket.
- 3) Connect battery to fuel pump relay connector terminals No. 1 and No. 3.
- 4) Measure resistance between connector terminals of fuel pump relay.

CHECK : **Terminals**
No. 2 — No. 4:
Is the resistance less than 10 Ω?

YES : Go to step **8E6**.

NO : Replace fuel pump relay.

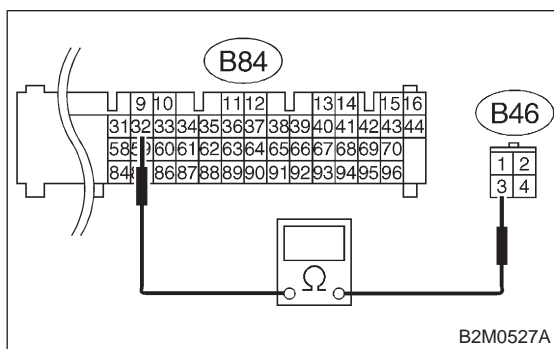**8E6 CHECK HARNESS BETWEEN ECM AND FUEL PUMP RELAY CONNECTOR.**

- 1) Disconnect connectors from ECM.
- 2) Measure resistance of harness between ECM and fuel pump relay connector.

CHECK : **Connector & terminal**
(B84) No. 32 — (B46) No. 3:
Is the resistance less than 1 Ω?

YES : Go to next **CHECK** .


NO : Repair harness between ECM and fuel pump relay connector.

CHECK : **Is there poor contact in ECM connector?**

YES : Repair poor contact in ECM connector.

NO : Check fuel injector circuit. <Ref. to 2-7 [T8F0].>

F: FUEL INJECTOR CIRCUIT

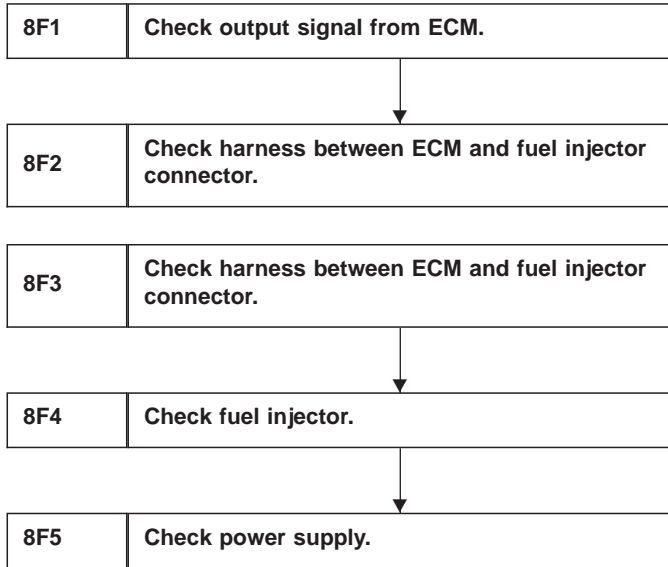


CAUTION:

- Check or repair only faulty parts.
- After repair or replacement of faulty parts, conduct CLEAR MEMORY and INSPECTION MODES. <Ref. to 2-7 [T3D0] and [T3E0].>

WIRING DIAGRAM:


- LHD Model

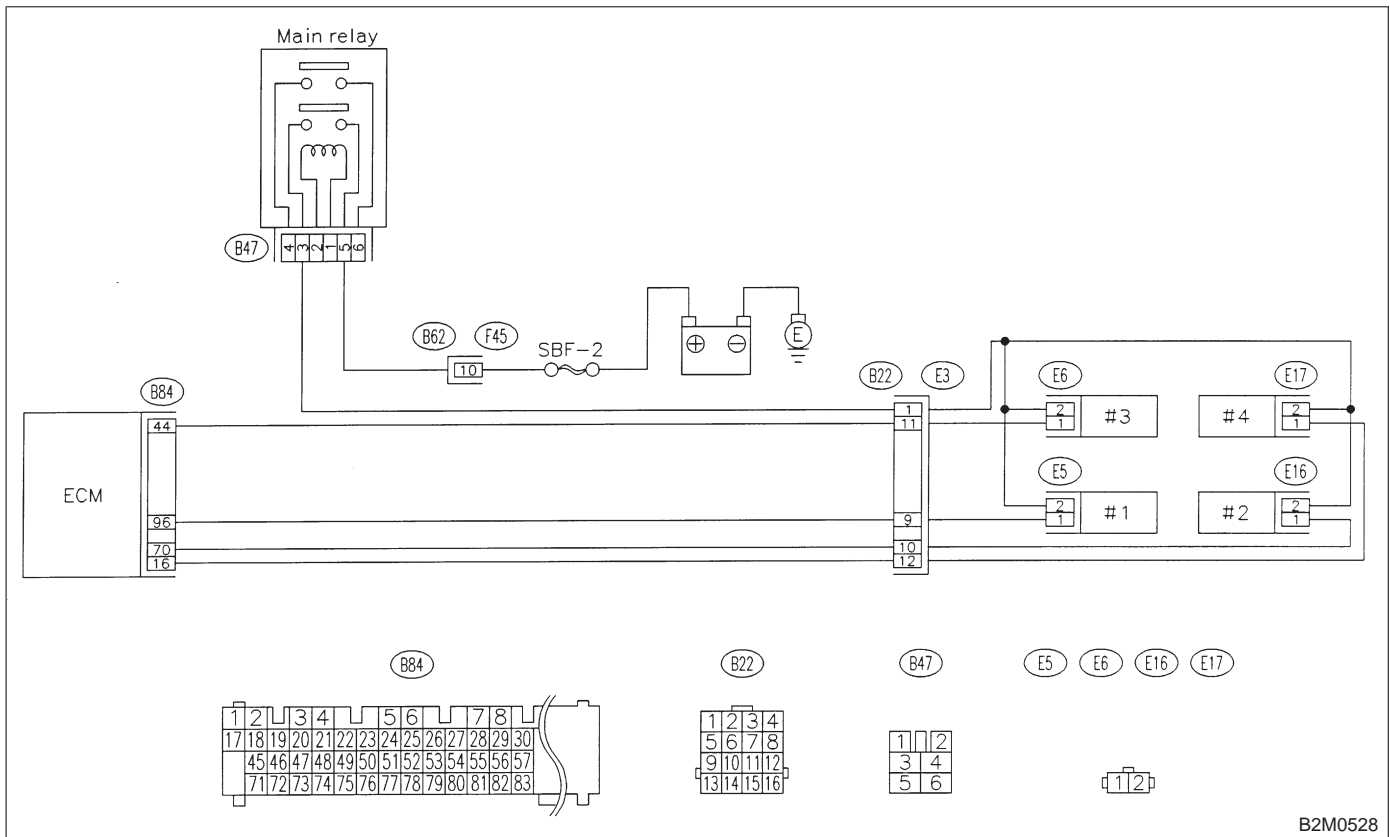

B2M0528

WIRING DIAGRAM:

- RHD Model

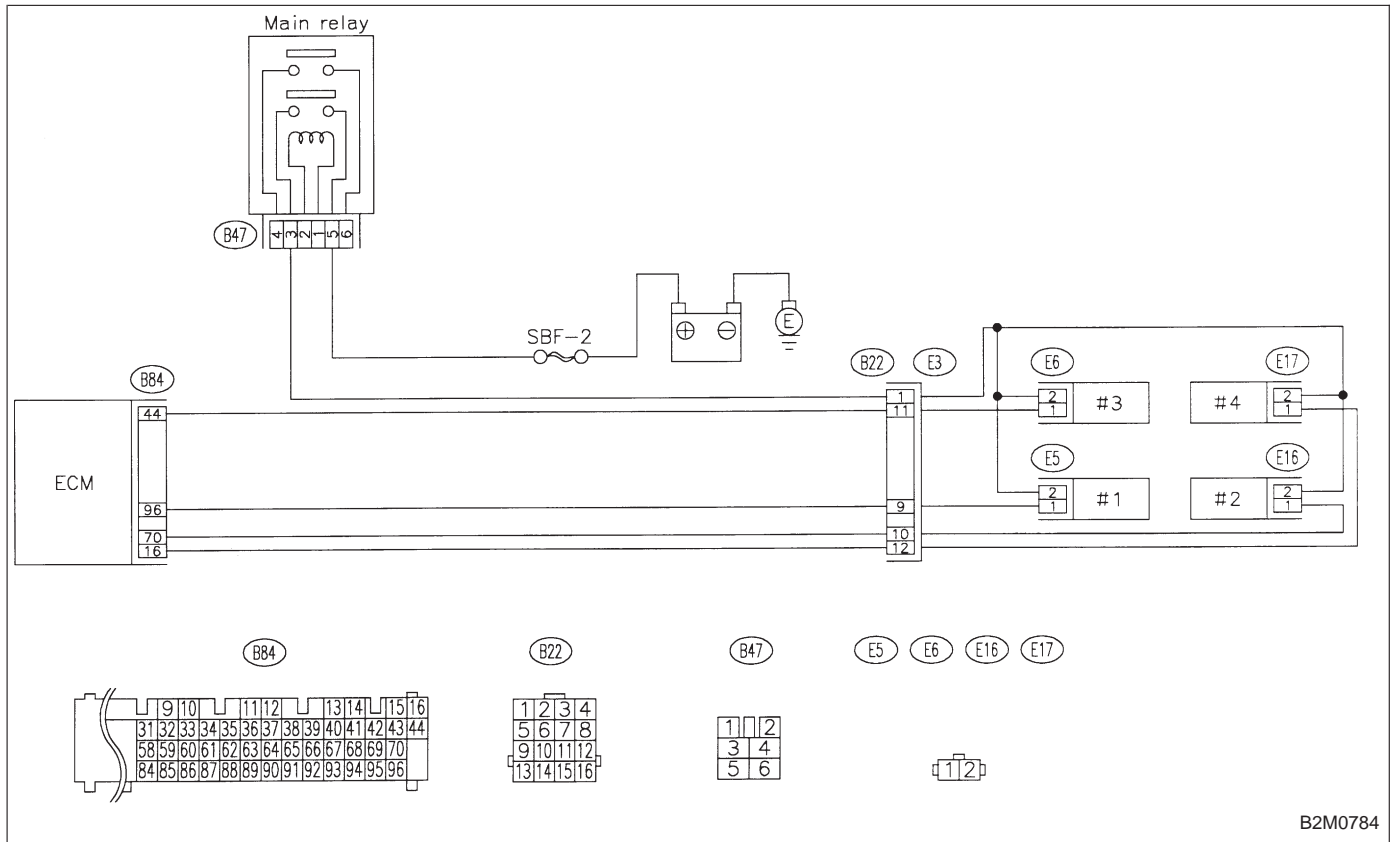

B2M0784

NOTE:


For the diagnostic procedure on fuel injector circuit, refer to 2-7 [T10V0].

G: CRANKSHAFT POSITION SENSOR CIRCUIT

8G1	Check harness between ECM and crankshaft position sensor connector.
↓	
8G2	Check crankshaft position sensor.

CAUTION:
 After repair or replacement of faulty parts, conduct **CLEAR MEMORY** and **INSPECTION MODES**.
 <Ref. to 2-7 [T3D0] and [T3E0].>


WIRING DIAGRAM:

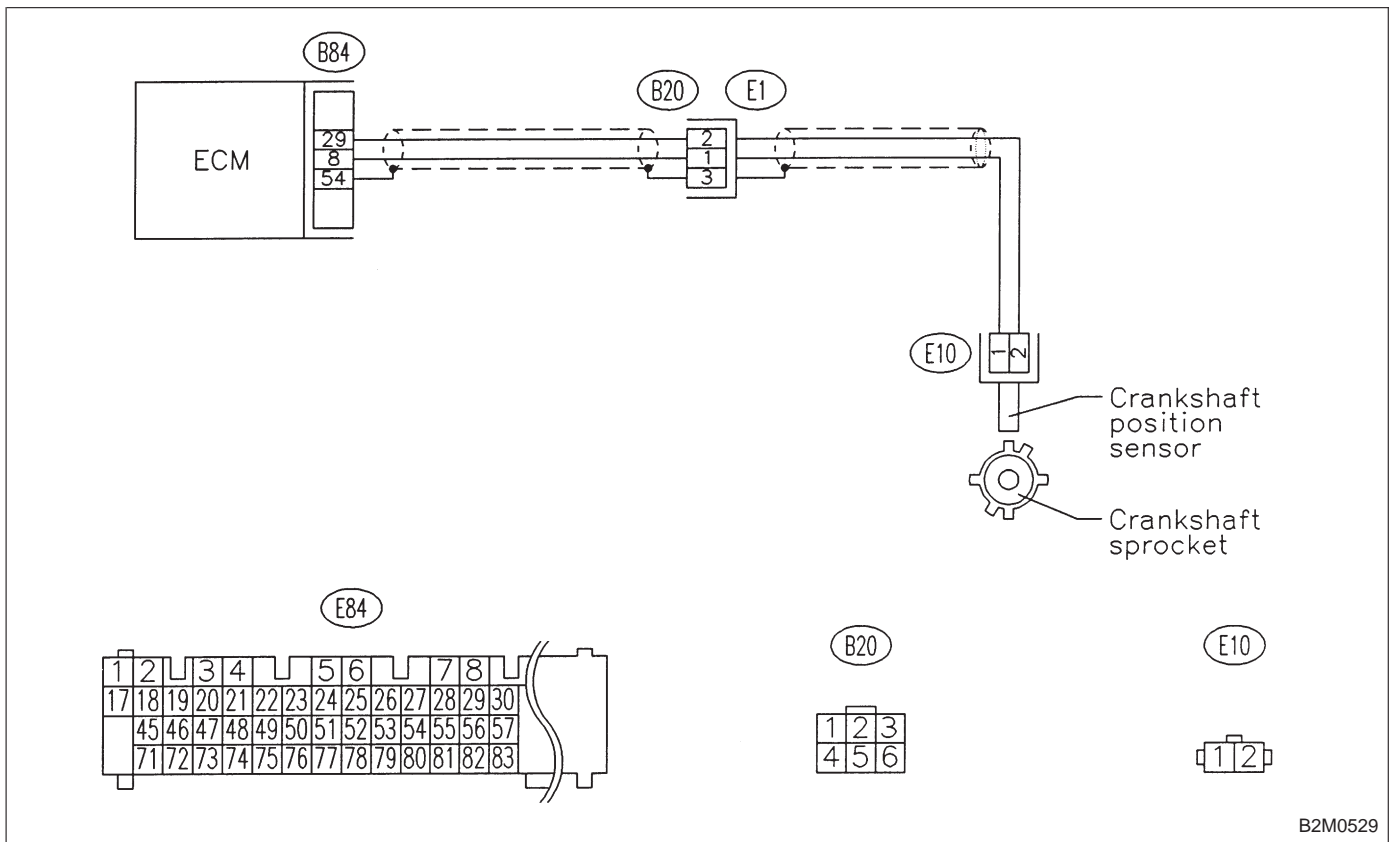

B2M0529


NOTE:
 For the diagnostic procedure on crankshaft position sensor circuit, refer to 2-7 [T10AB0].

H: CAMSHAFT POSITION SENSOR CIRCUIT

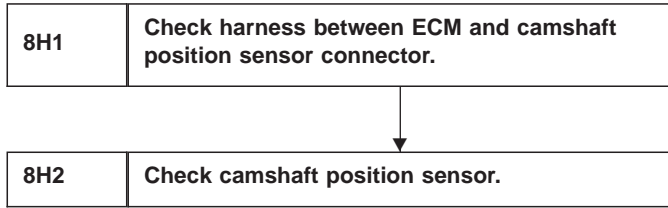


CAUTION:
 After repair or replacement of faulty parts, conduct **CLEAR MEMORY** and **INSPECTION MODES**.
 <Ref. to 2-7 [T3D0] and [T3E0].>

WIRING DIAGRAM:

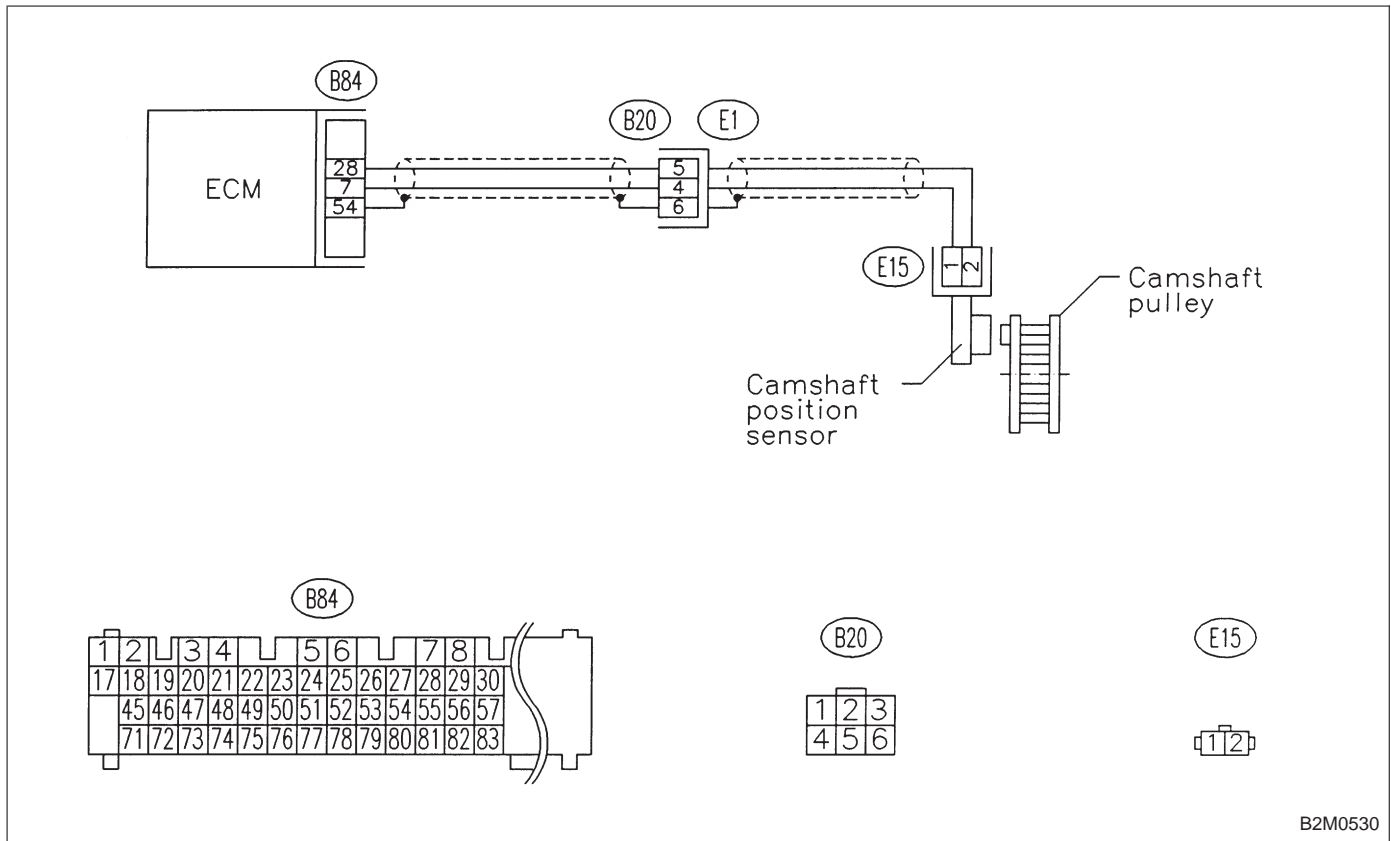

NOTE:
 For the diagnostic procedure on camshaft position sensor circuit, refer to 2-7 [T10AC0].

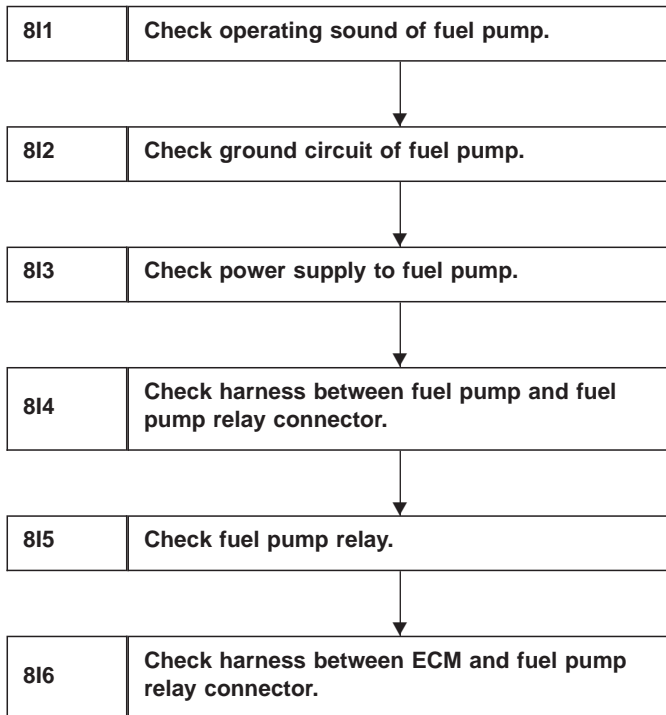
**I: FUEL PUMP CIRCUIT (2200 cc AWD
EXCEPT TAIWAN MODEL)****CAUTION:**

After repair or replacement of faulty parts, conduct
CLEAR MEMORY and **INSPECTION MODES**.

<Ref. to 2-7 [T3D0] and [T3E0].>

WIRING DIAGRAM:


- LHD Model

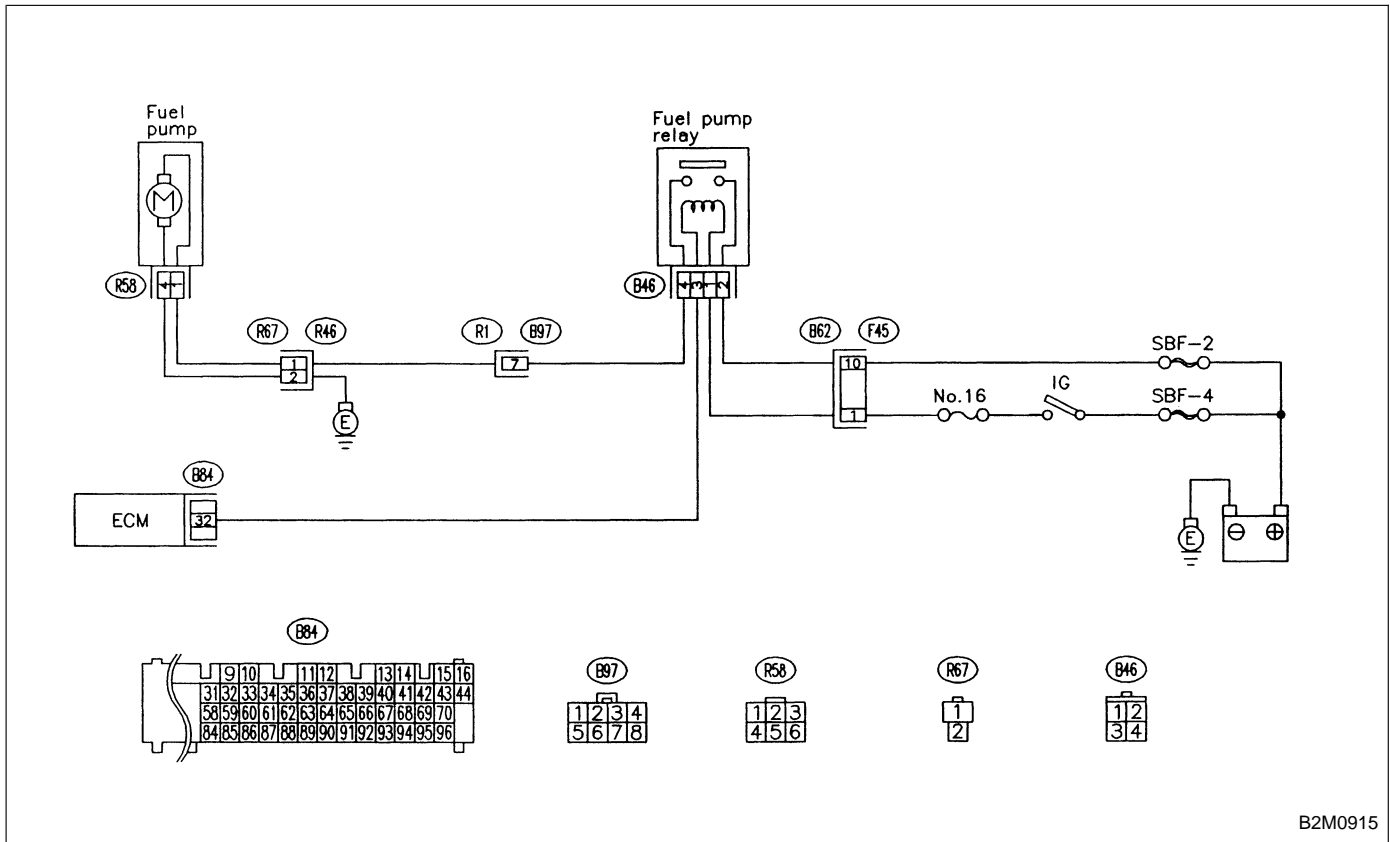

B2M0915

WIRING DIAGRAM:

- RHD Model

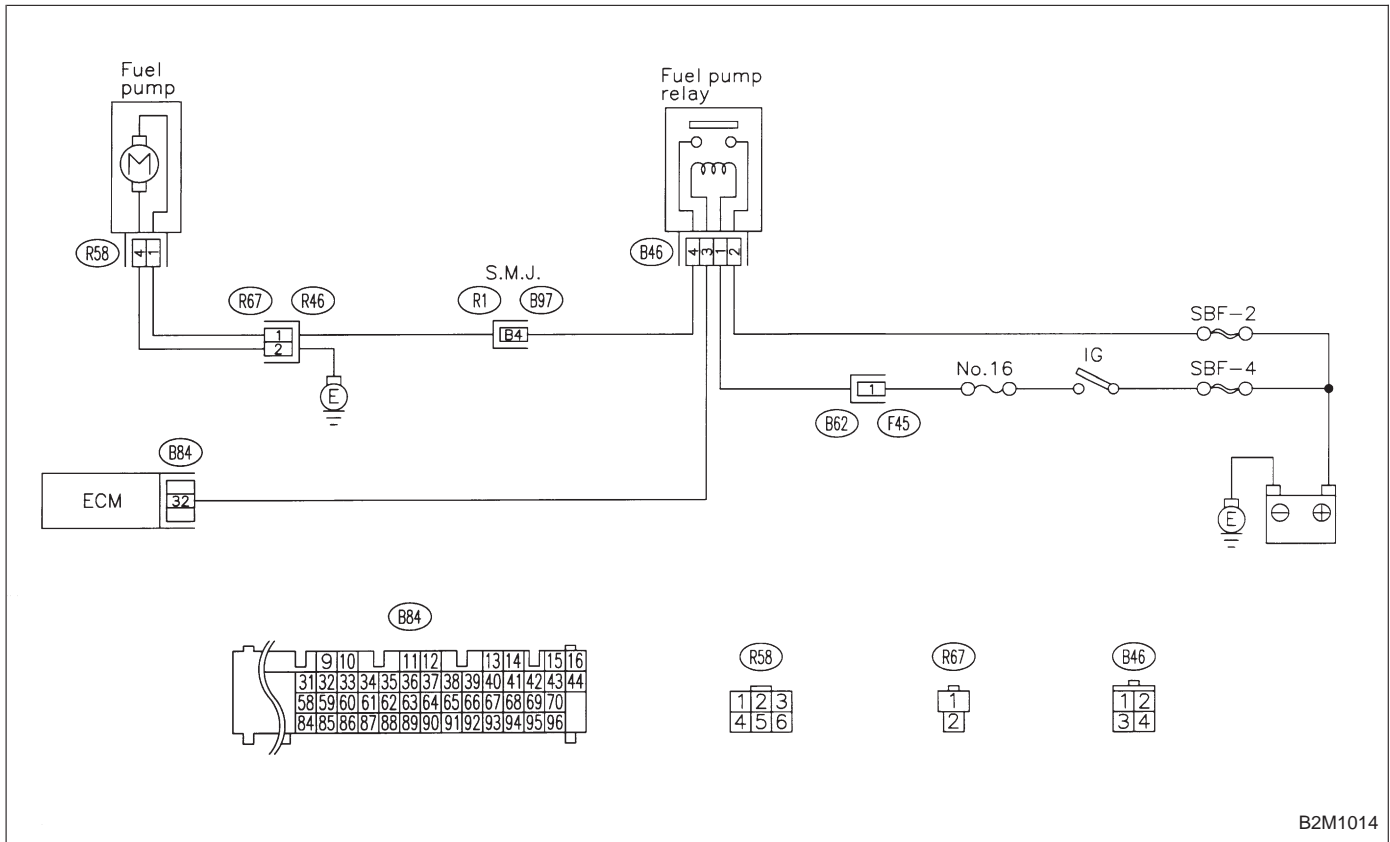

811	CHECK OPERATING SOUND OF FUEL PUMP.
------------	--

Make sure that fuel pump is in operation for two seconds when turning ignition switch to ON.

CHECK : **Does fuel pump produce operating sound?**


NOTE:

Fuel pump operation check can also be executed using Subaru Select Monitor (Function mode: FD01).

For the procedure, refer to "COMPULSORY VALVE OPERATION CHECK MODE" 2-7 [T3F0].

YES : Check fuel injector circuit. <Ref. to 2-7 [T10V0].>

NO : Go to step **812**.

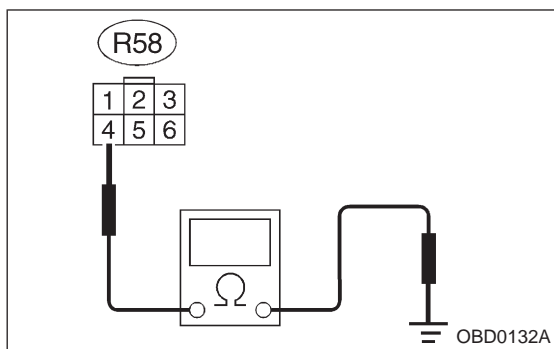
**812****CHECK GROUND CIRCUIT OF FUEL PUMP.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from fuel pump.
- 3) Measure resistance of harness connector between fuel pump and chassis ground.

CHECK : **Connector & terminal (R58) No. 4 — Chassis ground:**
Is the resistance less than 5 Ω?

YES : Go to step **813**.

NO : Repair open circuit in fuel pump ground circuit.

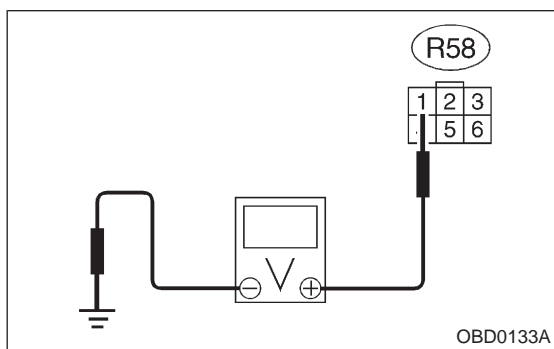
**813****CHECK POWER SUPPLY TO FUEL PUMP.**

- 1) Turn ignition switch to ON.
- 2) Measure voltage of power supply circuit between fuel pump connector and chassis ground.

CHECK : **Connector & terminal (R58) No. 1 (+) — Chassis ground (-):**
Is the voltage more than 10 V?

YES : Replace fuel pump.

NO : Go to step **814**.

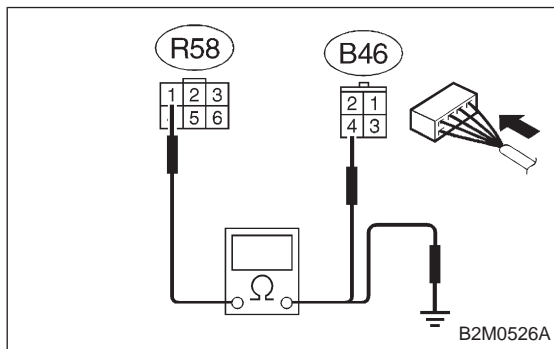**814****CHECK HARNESS BETWEEN FUEL PUMP AND FUEL PUMP RELAY CONNECTOR.**

- 1) Turn ignition switch to OFF.
- 2) Measure resistance of harness connector between fuel pump and fuel pump relay.

CHECK : **Connector & terminal (R58) No. 1 — (B46) No. 4:**
Is the resistance less than 1 Ω?


YES : Go to next **CHECK** .

NO : Repair open circuit in harness between fuel pump and fuel pump relay connector.

CHECK : **Connector & terminal (R58) No. 1 — Chassis ground:**
Is the resistance more than 1 MΩ?

YES : Go to step **815**.

NO : Repair short circuit in harness between fuel pump and fuel pump relay connector.

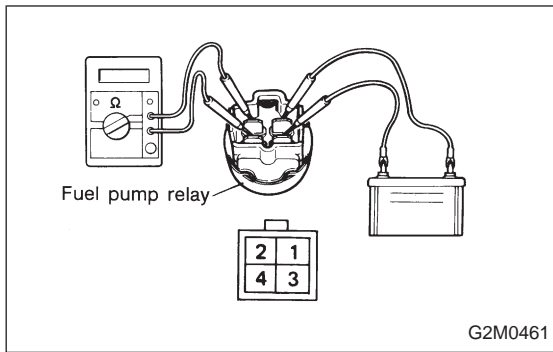


815 CHECK FUEL PUMP RELAY.

- 1) Disconnect connectors from fuel pump relay and main relay.
- 2) Remove fuel pump relay and main relay with bracket.
- 3) Connect battery to fuel pump relay connector terminals No. 1 and No. 3.
- 4) Measure resistance between connector terminals of fuel pump relay.

CHECK : **Terminals No. 2 — No. 4:**
Is the resistance less than 10 Ω?

- YES** : Go to step 816.
NO : Replace fuel pump relay.

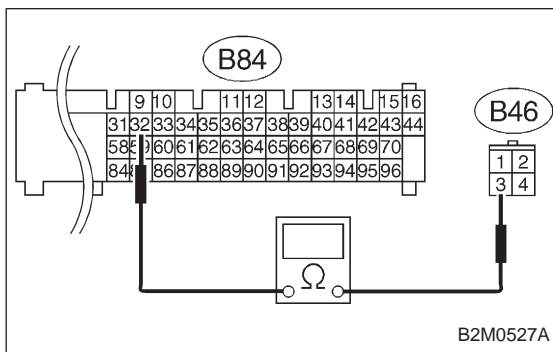

816 CHECK HARNESS BETWEEN ECM AND FUEL PUMP RELAY CONNECTOR.

- 1) Disconnect connectors from ECM.
- 2) Measure resistance of harness between ECM and fuel pump relay connector.

CHECK : **Connector & terminal (B84) No. 32 — (B46) No. 3:**
Is the resistance less than 1 Ω?

- YES** : Go to next **CHECK** .
NO : Repair harness between ECM and fuel pump relay connector.
- CHECK** : **Is there poor contact in ECM connector?**
YES : Repair poor contact in ECM connector.
NO : Check fuel injector circuit. <Ref. to 2-7 [T8F0].>