


7. Diagnostics for CHECK ENGINE Malfunction Indicator Lamp (MIL)

A: CHECK ENGINE MALFUNCTION INDICATOR LAMP (MIL) DOES NOT COME ON.

- **DIAGNOSIS:**
 - The CHECK ENGINE malfunction indicator lamp (MIL) circuit is open or shorted.
- **TROUBLE SYMPTOM:**
 - When ignition switch is turned ON (engine OFF), MIL does not come on.
- **WIRING DIAGRAM:**

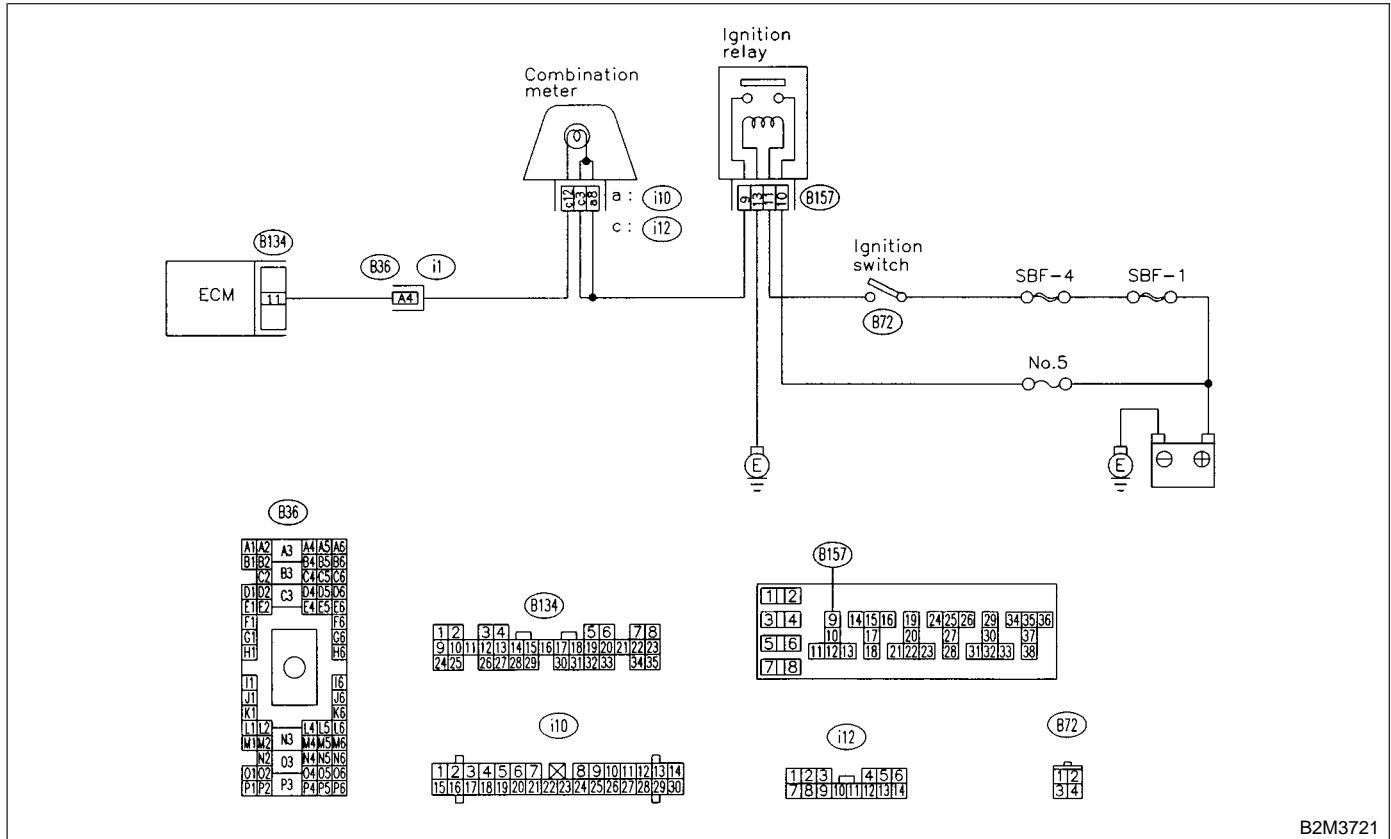


B2M3721

7A1 : CHECK OUTPUT SIGNAL FROM ECM.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between ECM connector and chassis ground.

Connector & terminal

(B134) No. 11 (+) — Chassis ground (-):

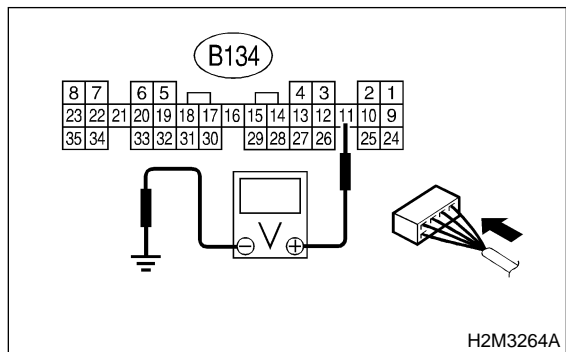

- CHECK** : *Is the voltage less than 1 V?*
- YES** : Go to step **7A4**.
- NO** : Go to step **7A2**.

7A2 : CHECK POOR CONTACT.

- CHECK** : *Does the MIL come on when shaking or pulling ECM connector and harness?*
- YES** : Repair poor contact in ECM connector.
- NO** : Go to step **7A3**.

7A3 : CHECK ECM CONNECTOR.


- CHECK** : *Is ECM connector correctly connected?*
- YES** : Replace ECM. <Ref. to 2-7 [W19A0].>
- NO** : Repair connection of ECM connector.

7A4 : CHECK HARNESS BETWEEN COMBINATION METER AND ECM CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Remove combination meter. <Ref. to 6-2 [W8A0].>
- 3) Disconnect connector from ECM and combination meter.
- 4) Measure resistance of harness between ECM and combination meter connector.

Connector & terminal

(B134) No. 11 — (i12) No. 12:

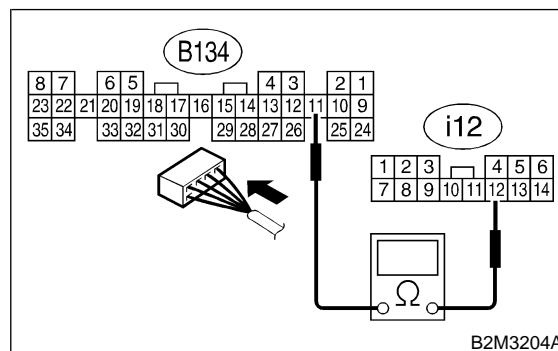

- CHECK** : *Is resistance less than 1 Ω?*
- YES** : Go to step **7A5**.
- NO** : Repair harness and connector.

NOTE:

In this case, repair the following:

- Open circuit in harness between ECM and combination meter connector
- Poor contact in coupling connector (B36)

7A5 : CHECK POOR CONTACT.

Check poor contact in combination meter connector. <Ref. to FOREWORD [W3C1].>


- CHECK** : *Is there poor contact in combination meter connector?*
- YES** : Repair poor contact in combination meter connector.
- NO** : Go to step **7A6**.

7A6 : CHECK HARNESS BETWEEN COMBINATION METER AND IGNITION SWITCH CONNECTOR.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between combination meter connector and chassis ground.

Connector & terminal

(i10) No. 8 (+) — Chassis ground (-):

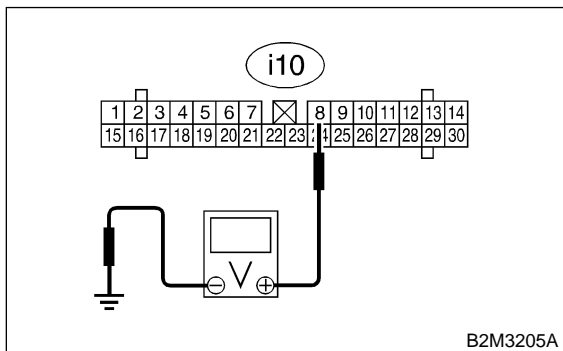

- CHECK** : **Is voltage more than 10 V?**
- YES** : Go to step **7A7**.
- NO** : Check the following and repair if necessary.

NOTE:


- Broken down ignition relay.
- Blown out fuse (No. 5).
- If replaced fuse (No. 5) blows easily, check the harness for short circuit of harness between fuse (No. 5) and ignition relay connector.
- Open or short circuit in harness between fuse (No. 5) and battery terminal
- Open circuit in harness between fuse (No. 5) and ignition relay connector
- Poor contact in ignition relay connector
- Poor contact in ignition switch connector

7A7 : CHECK HARNESS BETWEEN COMBINATION METER AND IGNITION SWITCH CONNECTOR.

Measure voltage between combination meter connector and chassis ground.

Connector & terminal

(i12) No. 3 (+) — Chassis ground (-):

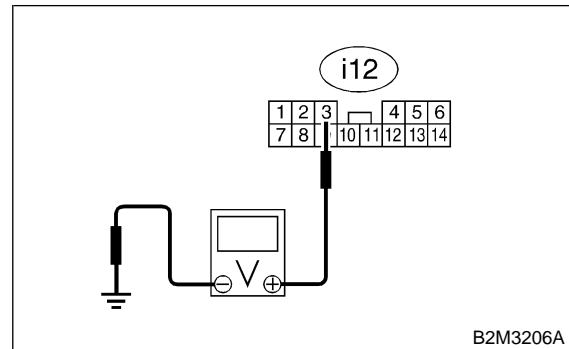

- CHECK** : **Is voltage more than 10 V?**
- YES** : Go to step **7A8**.
- NO** : Check the following and repair if necessary.

NOTE:

- Broken down ignition relay.
- Blown out fuse (No. 5).
- If replaced fuse (No. 5) blows easily, check the harness for short circuit of harness between fuse (No. 5) and ignition relay connector.
- Open or short circuit in harness between fuse (No. 5) and battery terminal
- Open circuit in harness between fuse (No. 5) and ignition relay connector
- Poor contact in ignition relay connector
- Poor contact in ignition switch connector

7A8 : CHECK LAMP BULB.


Remove engine malfunction indicator lamp bulb.

- CHECK** : **Is lamp bulb condition OK?**
- YES** : Repair combination meter connector.
- NO** : Replace lamp bulb.

MEMO:

B: CHECK ENGINE MALFUNCTION INDICATOR LAMP (MIL) DOES NOT GO OFF.


- **DIAGNOSIS:**
 - The CHECK ENGINE malfunction indicator lamp (MIL) circuit is shorted.
- **TROUBLE SYMPTOM:**
 - Although MIL comes on when engine runs, trouble code is not shown on Subaru select monitor or OBD-II general scan tool display.
- **WIRING DIAGRAM:**

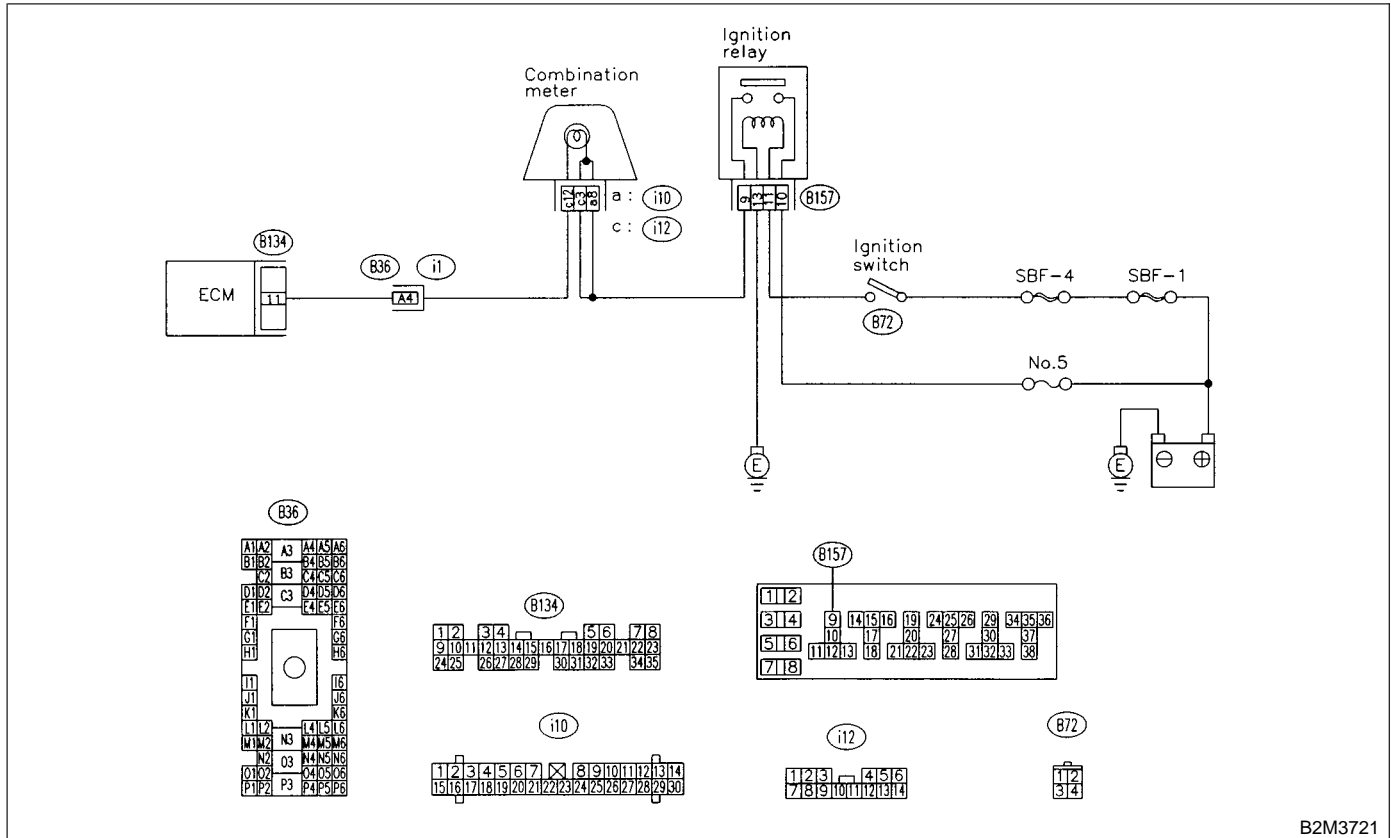

B2M3721

7B1 : CHECK HARNESS BETWEEN COMBINATION METER AND ECM CONNECTOR.


- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ECM.
- 3) Turn ignition switch to ON.

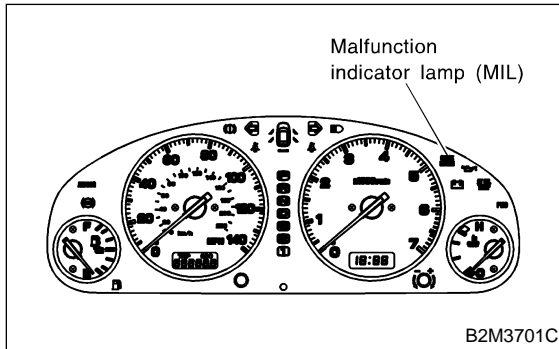

- CHECK** : ***Does the MIL come on?***
- YES** : Repair short circuit in harness between combination meter and ECM connector.
- NO** : Replace ECM. <Ref. to 2-7 [W19A0].>

C: CHECK ENGINE MALFUNCTION INDICATOR LAMP (MIL) DOES NOT BLINK AT A CYCLE OF 3 Hz.


- **DIAGNOSIS:**
 - The CHECK ENGINE malfunction indicator lamp (MIL) circuit is open or shorted.
 - Test mode connector circuit is in open.
- **TROUBLE SYMPTOM:**
 - When inspection mode, MIL does not blink at a cycle of 3 Hz.
- **WIRING DIAGRAM:**

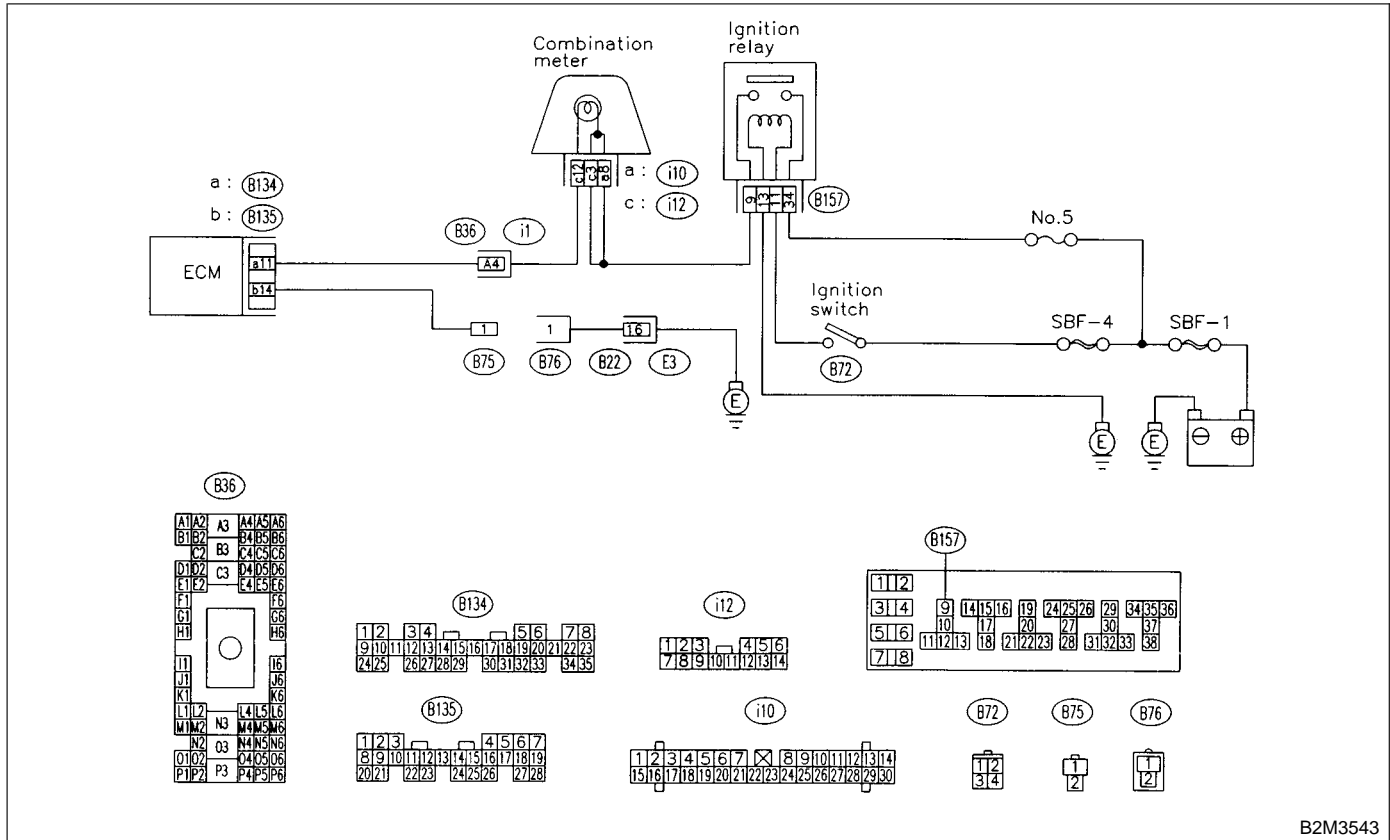

B2M3543

7C1 : CHECK STATUS OF CHECK ENGINE MALFUNCTION INDICATOR LAMP (MIL).


- 1) Turn ignition switch to OFF.
- 2) Disconnect test mode connector.
- 3) Turn ignition switch to ON. (engine OFF)

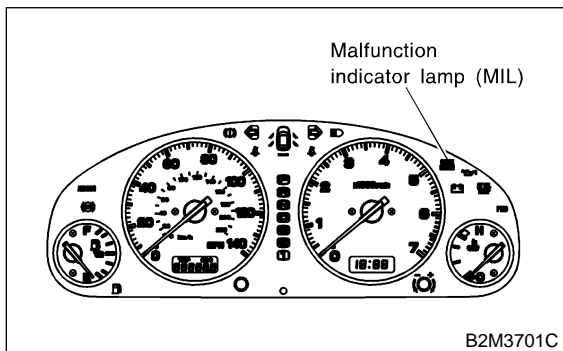

- CHECK** : Does the MIL come on?
YES : Go to step 7C2.
NO : Repair the MIL circuit. <Ref. to 2-7 [T7A0].>

7C2 : CHECK HARNESS BETWEEN COMBINATION METER AND ECM CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ECM.
- 3) Turn ignition switch to ON.

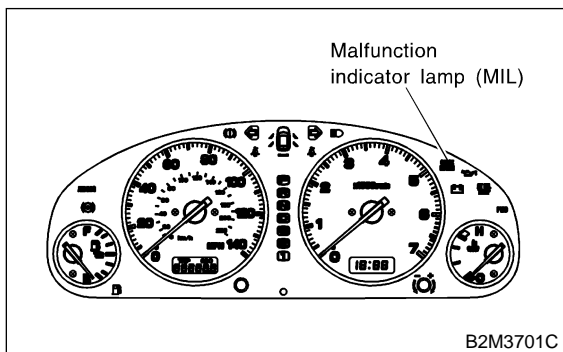


- CHECK** : Does the MIL come on?
YES : Repair ground short circuit in harness between combination meter and ECM connector.
NO : Go to step 7C3.

7C3 : CHECK HARNESS BETWEEN TEST MODE CONNECTOR AND CHASSIS GROUND.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ECM.
- 3) Measure resistance of harness between test mode connector and chassis ground.

Connector & terminal
(B76) No. 1 — Chassis ground:

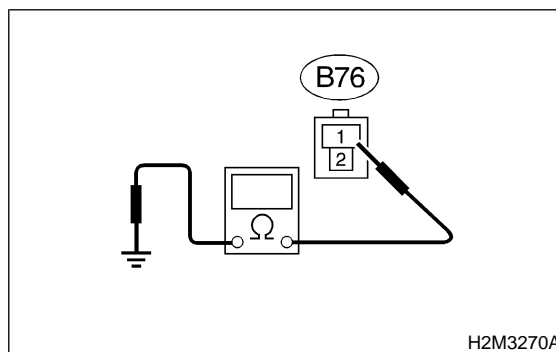

- CHECK** : Is resistance less than 1 Ω?
YES : Go to step 7C4.
NO : Repair harness and connector.

NOTE:

In this case, repair the following:

- Open circuit in harness between test mode connector and chassis ground

7C4 : CHECK POOR CONTACT.

Check poor contact in ECM connector. <Ref. to FOREWORD [W3C1].>


- CHECK** : Is there poor contact in ECM connector?
YES : Repair poor contact in ECM connector.
NO : Go to step 7C5.

7C5 : CHECK HARNESS BETWEEN ECM AND TEST MODE CONNECTOR.

- 1) Connect test mode connector.
- 2) Measure resistance of harness between ECM and chassis ground.

Connector & terminal

(B135) No. 14 — Chassis ground:

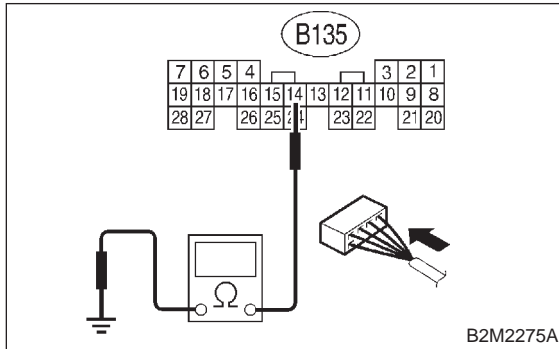

- CHECK** : **Is resistance less than 1 Ω ?**
- YES** : Go to step **7C6**.
- NO** : Repair open circuit in harness between ECM and test mode connector.

7C6 : CHECK POOR CONTACT.


Check poor contact in ECM connector.
<Ref. to FOREWORD [T3C1].>

- CHECK** : **Is there poor contact in ECM connector?**
- YES** : Repair poor contact in ECM connector.
- NO** : Replace ECM. <Ref. to 2-7 [W19A0].>

MEMO:

D: CHECK ENGINE MALFUNCTION INDICATOR LAMP (MIL) REMAINS BLINKING AT A CYCLE OF 3 Hz.

- **DIAGNOSIS:**
 - Test mode connector circuit is shorted.
- **TROUBLE SYMPTOM:**
 - MIL blinks at a cycle of 3 Hz when ignition switch is turned to ON.
- **WIRING DIAGRAM:**

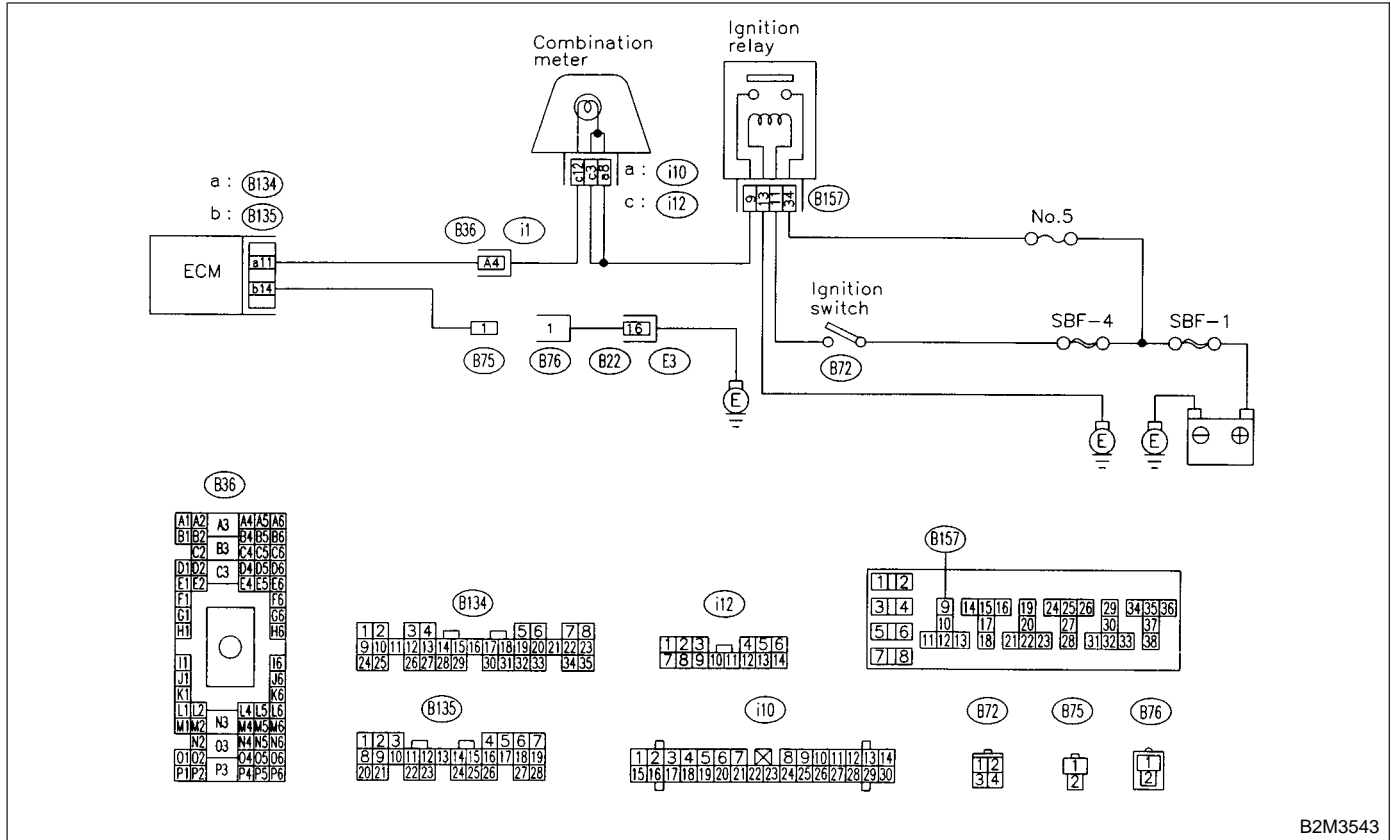

B2M3543

7D1 : CHECK TEST MODE CONNECTOR.

- 1) Disconnect test mode connector.
- 2) Turn ignition switch to ON.

- CHECK** : Does MIL flash on and off?
- YES** : Go to step 7D2.
- NO** : System is in good order.


NOTE:
MIL blinks at a cycle of 3 Hz when test mode connector is connected.

7D2 : CHECK HARNESS BETWEEN ECM CONNECTOR AND ENGINE GROUNDING TERMINAL.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ECM.
- 3) Measure resistance of harness between ECM connector and chassis ground.

Connector & terminal

(B135) No. 14 — Chassis ground:

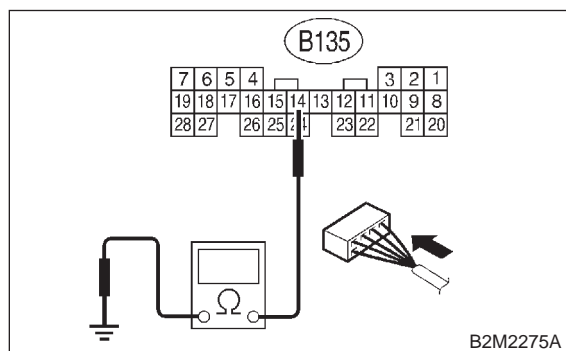

- CHECK** : **Is resistance less than 5 Ω?**
- YES** : Repair short circuit in harness between ECM and test mode connector.
- NO** : Replace ECM. <Ref. to 2-7 [W19A0].>

MEMO: