

7. Diagnostics Chart for ABS Warning Light Circuit and Diagnosis Circuit Failure

A: ABS WARNING LIGHT DOES NOT COME ON.


DIAGNOSIS:

- ABS warning light circuit is open or shorted.

TROUBLE SYMPTOM:

- When ignition switch is turned ON (engine OFF), ABS warning light does not come on

WIRING DIAGRAM:

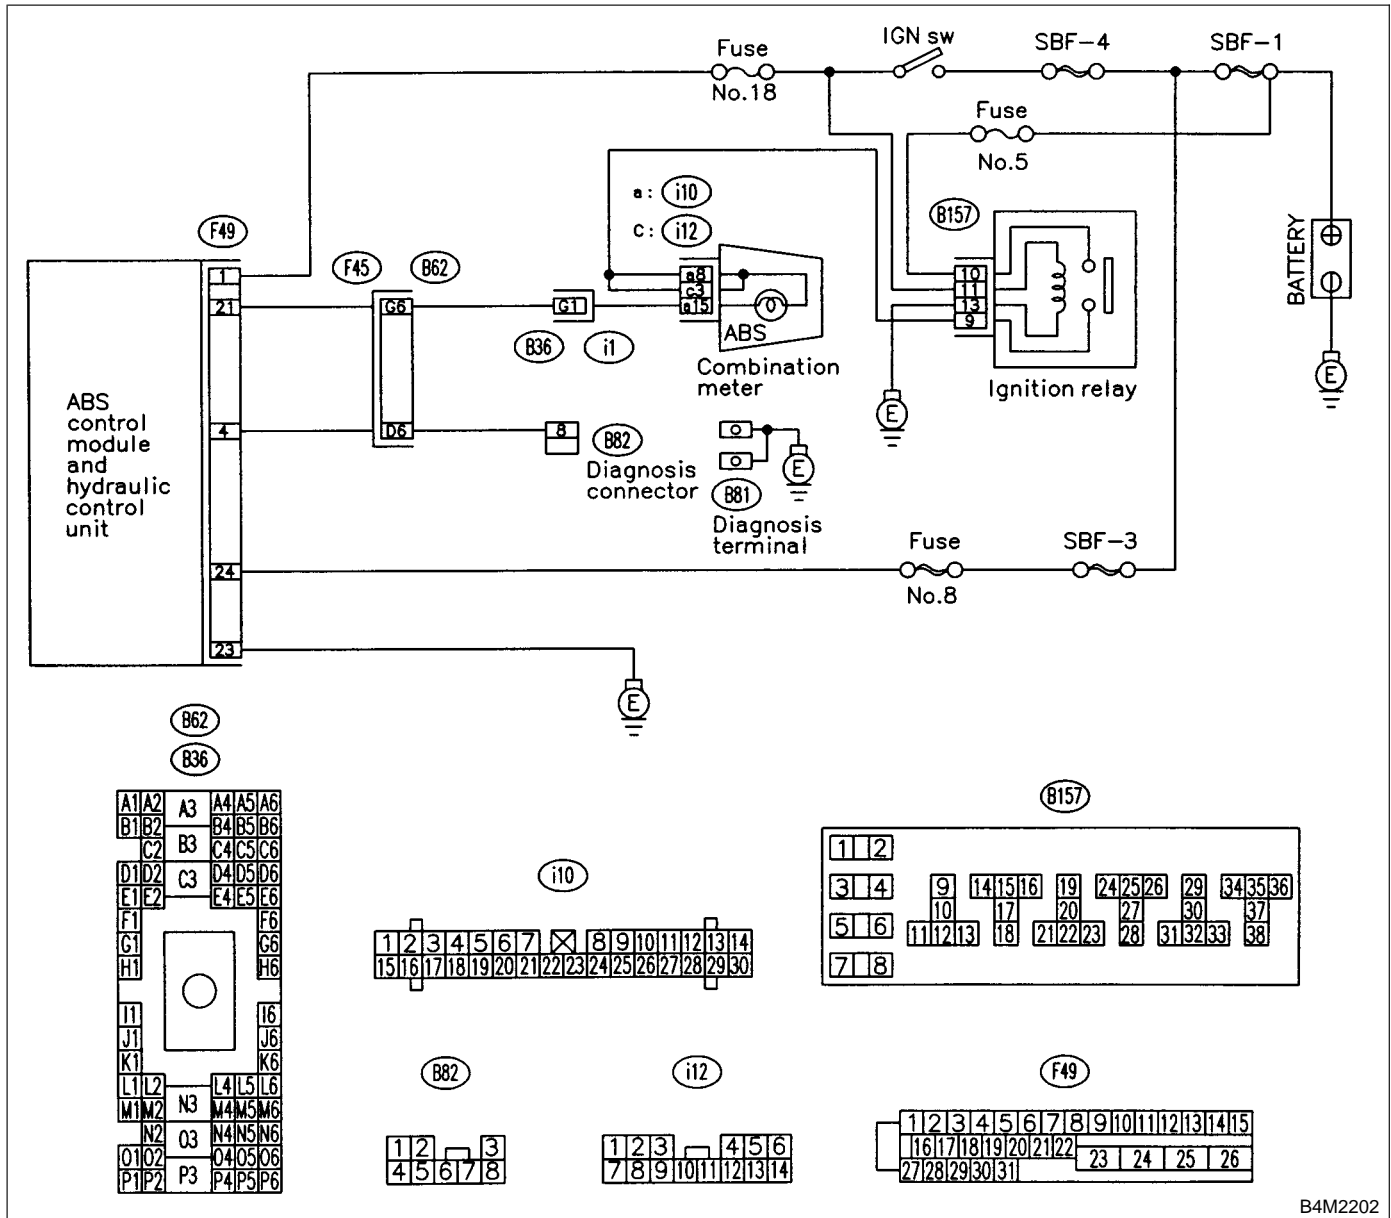

B4M2202

7A1 : CHECK IF OTHER WARNING LIGHTS TURN ON.

Turn ignition switch to ON (engine OFF).

- CHECK** : *Do other warning lights turn on?*
- YES** : Go to step **7A2**.
- NO** : Repair combination meter. <Ref. to 6-2 [W8B0].>

7A2 : CHECK ABS WARNING LIGHT BULB.


- 1) Turn ignition switch to OFF.
- 2) Remove combination meter.
- 3) Remove ABS warning light bulb from combination meter.

- CHECK** : *Is ABS warning light bulb OK?*
- YES** : Go to step **7A3**.
- NO** : Replace ABS warning light bulb. <Ref. to 6-2 [W8B0].>

7A3 : CHECK BATTERY SHORT OF ABS WARNING LIGHT HARNESS.

- 1) Disconnect connector (B62) from connector (F45).
- 2) Measure voltage between connector (B62) and chassis ground.

Connector & terminal
(B62) No. G6 (+) — Chassis ground (-):

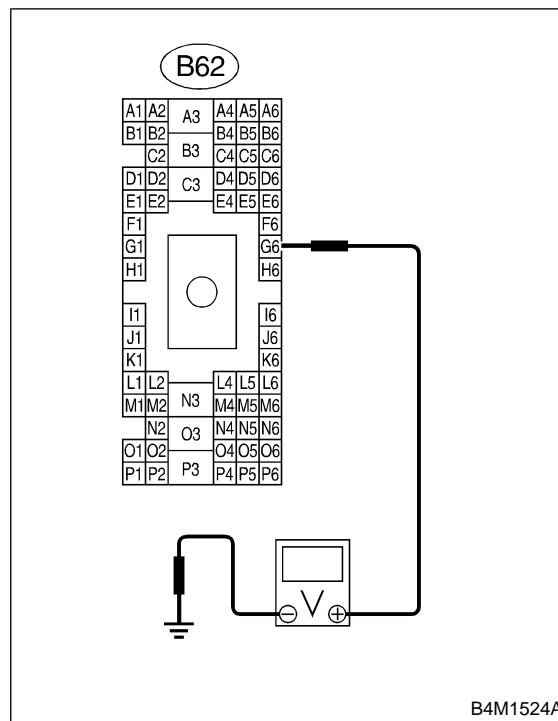

B4M1524A


- CHECK** : *Is the voltage less than 3 V?*
- YES** : Go to step **7A4**.
- NO** : Repair warning light harness.

7A4 : CHECK BATTERY SHORT OF ABS WARNING LIGHT HARNESS.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between connector (B62) and chassis ground.

Connector & terminal

(B62) No. G6 (+) — Chassis ground (-):

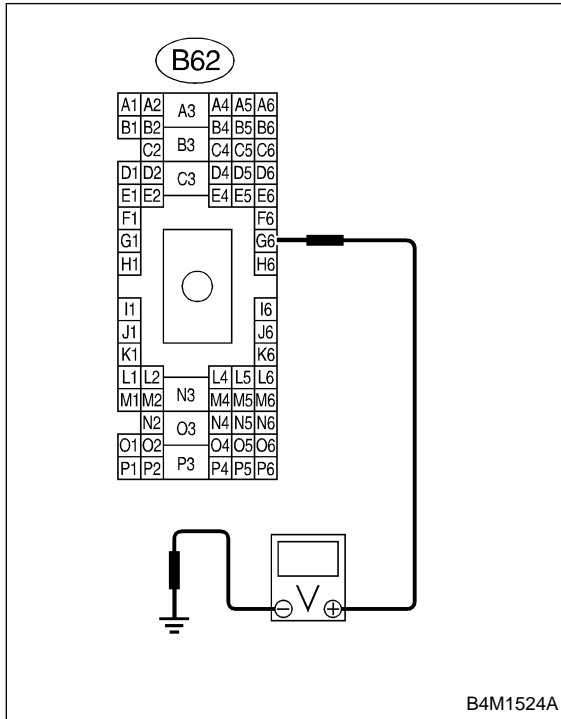


- CHECK** : *Is voltage less than 3 V?*
- YES** : Go to step **7A5**.
- NO** : Repair warning light harness.

7A5 : CHECK WIRING HARNESS.

- 1) Turn ignition switch to OFF.
- 2) Install ABS warning light bulb from combination meter.
- 3) Install combination meter.
- 4) Turn ignition switch to ON.
- 5) Measure voltage between connector (B62) and chassis ground.

Connector & terminal

(B62) No. G6 (+) — Chassis ground (-):

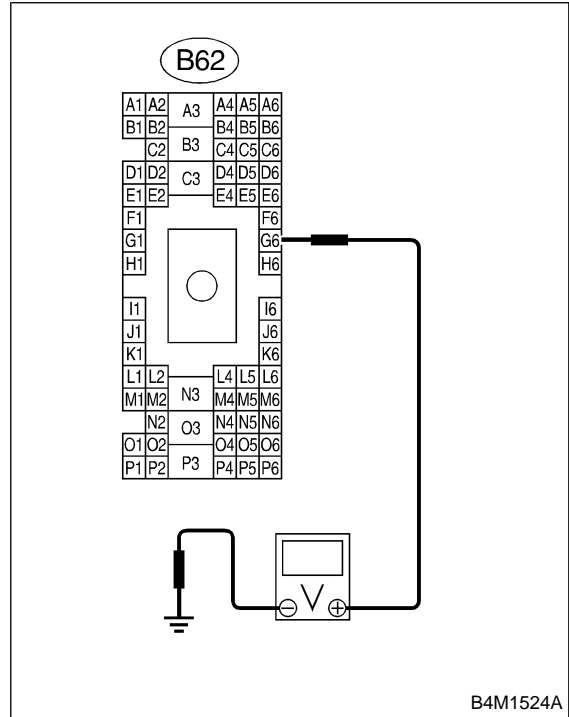


- CHECK** : *Is voltage between 10 and 15 V?*
- YES** : Go to step **7A6**.
- NO** : Repair wiring harness.

7A6 : CHECK BATTERY SHORT OF ABS WARNING LIGHT HARNESS.

- 1) Turn ignition switch to OFF.
- 2) Measure voltage between connector (F45) and chassis ground.

Connector & terminal

(F45) No. G6 (+) — Chassis ground (-):

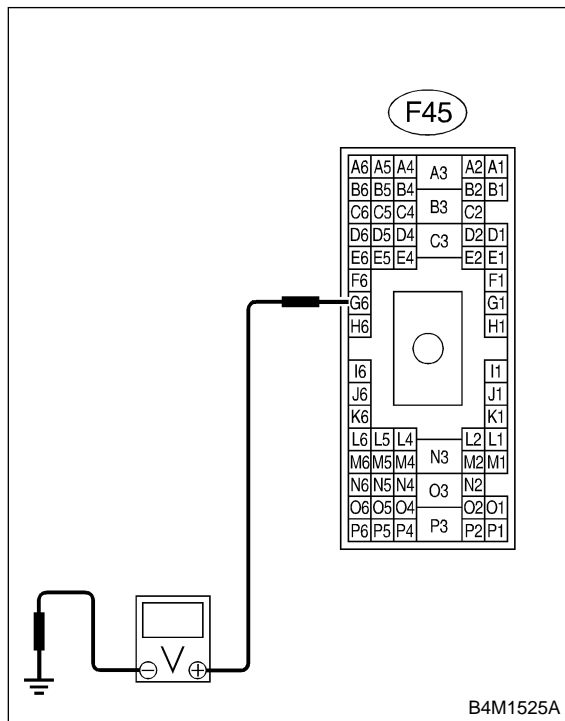


- CHECK** : *Is the voltage less than 3 V?*
- YES** : Go to step **7A7**.
- NO** : Repair wiring harness.

7A7 : CHECK BATTERY SHORT OF ABS WARNING LIGHT HARNESS.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between connector (F45) and chassis ground.

Connector & terminal

(F45) No. G6 (+) — Chassis ground (-):

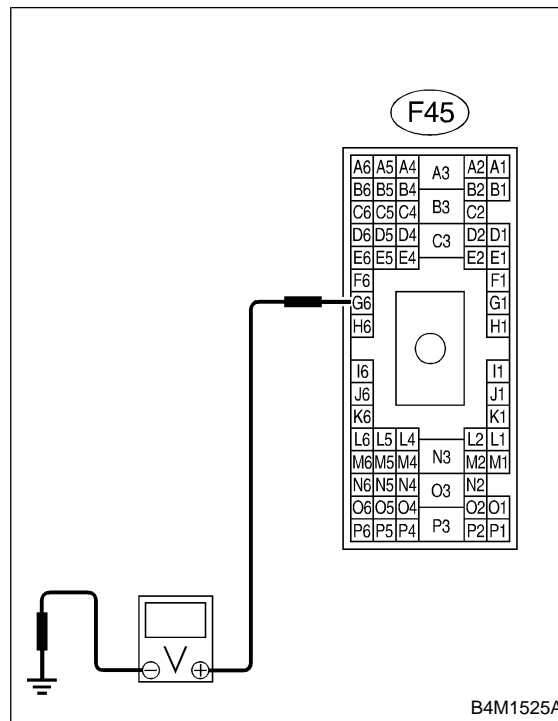


- CHECK** : *Is voltage less than 3 V?*
- YES** : Go to step **7A8**.
- NO** : Repair wiring harness.

7A8 : CHECK GROUND CIRCUIT OF ABSCM&H/U.

Measure resistance between ABSCM&H/U and chassis ground.

Connector & terminal (F49) No. 23 — GND:

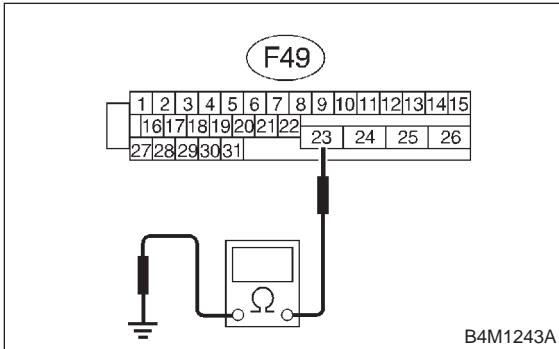


- CHECK** : *Is the resistance less than 0.5 Ω?*
- YES** : Go to step 7A9.
- NO** : Repair ABSCM&H/U ground harness.

7A9 : CHECK WIRING HARNESS.

Measure resistance between connector (F45) and chassis ground.

Connector & terminal (F45) No. G6 — Chassis ground:

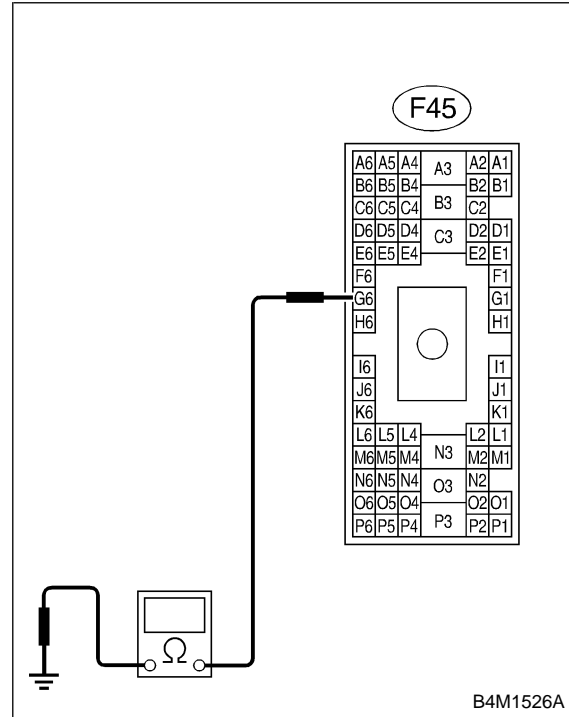

- CHECK** : *Is the resistance less than 0.5 Ω?*
- YES** : Go to step 7A10.
- NO** : Repair harness/connector.

7A10 : CHECK POOR CONTACT IN CONNECTORS.

Turn ignition switch to OFF.

- CHECK** : *Is there poor contact in connectors between combination meter and ABSCM&H/U? <Ref. to FOREWORD [W3C1].>*
- YES** : Repair connector.
- NO** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>

MEMO:

B: ABS WARNING LIGHT DOES NOT GO OFF.


DIAGNOSIS:

- ABS warning light circuit is open or shorted.

TROUBLE SYMPTOM:

- When starting the engine and while ABS warning light is kept ON.

WIRING DIAGRAM:

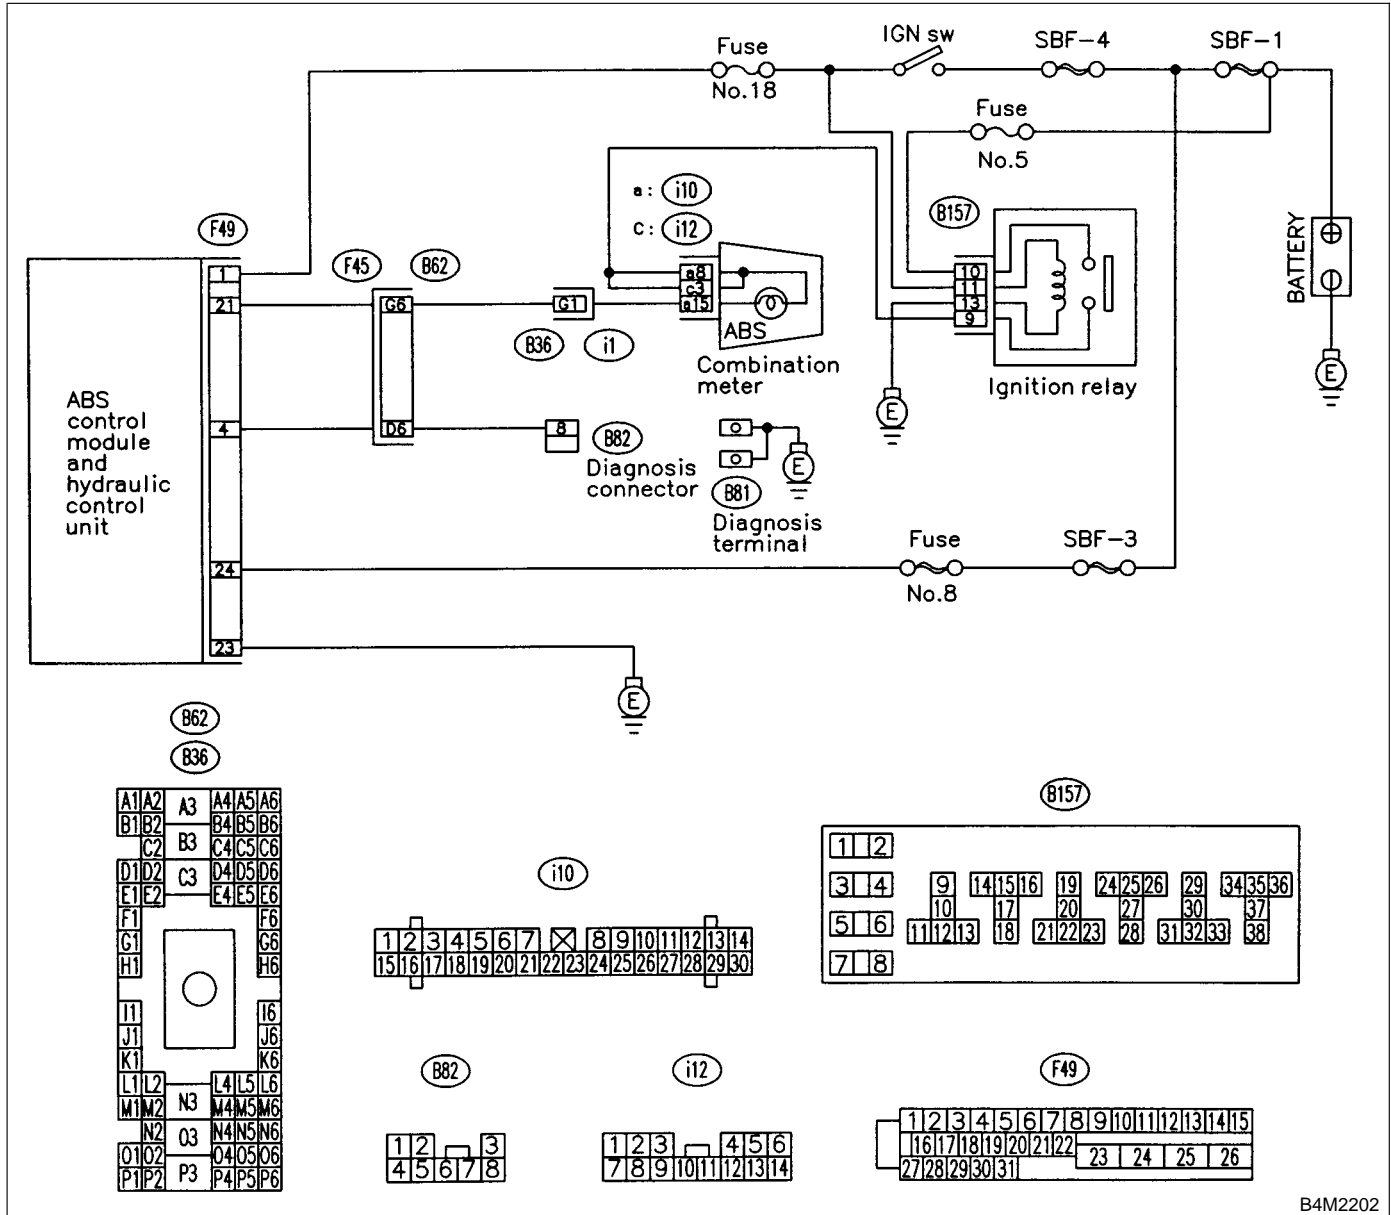

B4M2202

7B1 : CHECK INSTALLATION OF ABSCM&H/U CONNECTOR.

Turn ignition switch to OFF.


CHECK : *Is ABSCM&H/U connector inserted into ABSCM until the clamp locks onto it?*

YES : Go to step **7B2**.

NO : Insert ABSCM&H/U connector into ABSCM&H/U until the clamp locks onto it.

7B2 : CHECK DIAGNOSIS TERMINAL.

Measure resistance between diagnosis terminals (B81) and chassis ground.

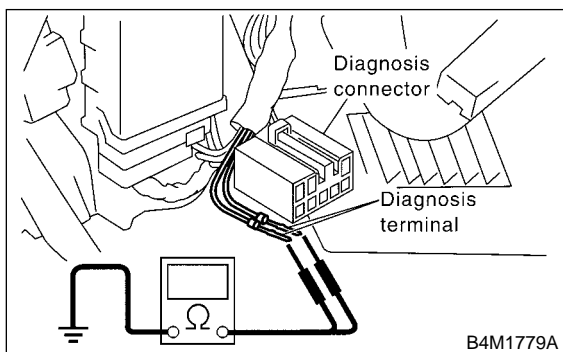

Terminals

Diagnosis terminal (A) — Chassis ground:

Diagnosis terminal (B) — Chassis ground:


CHECK : *Is the resistance less than 0.5 Ω?*

YES : Go to step **7B3**.

NO : Repair diagnosis terminal harness.

7B3 : CHECK DIAGNOSIS LINE.

- 1) Turn ignition switch to OFF.
- 2) Connect diagnosis terminal (B81) to diagnosis connector (B82) No. 8.
- 3) Disconnect connector from ABSCM&H/U.
- 4) Measure resistance between ABSCM&H/U connector and chassis ground.

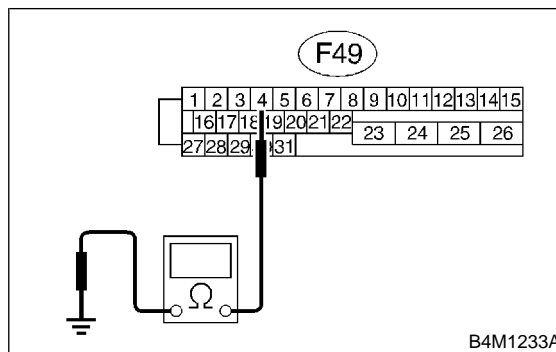

Connector & terminal

(F49) No. 4 — Chassis ground:

CHECK : *Is the resistance less than 0.5 Ω?*

YES : Go to step **7B4**.


NO : Repair harness connector between ABSCM&H/U and diagnosis connector.

7B4 : CHECK GENERATOR.

- 1) Start the engine.
- 2) Idle the engine.
- 3) Measure voltage between generator and chassis ground.

Terminal

Generator B terminal (+) — Chassis ground (-):

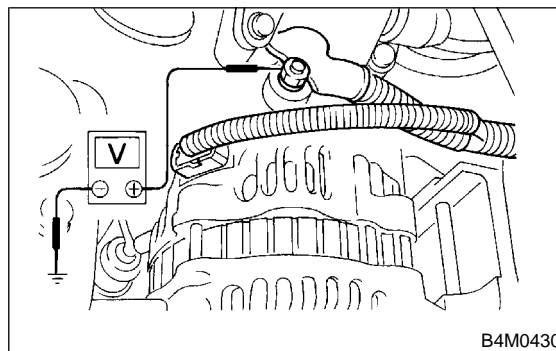

CHECK : *Is the voltage between 10 and 15 V?*

YES : Go to step **7B5**.

NO : Repair generator. <Ref. to 6-1 [W2A0].>

7B5 : CHECK BATTERY TERMINAL.

Turn ignition switch to OFF.

CHECK : *Is there poor contact at battery terminal?*

YES : Repair battery terminal.


NO : Go to step **7B6**.

7B6 : CHECK POWER SUPPLY OF ABSCM.

- 1) Disconnect connector from ABSCM&H/U.
- 2) Start engine.
- 3) Idle the engine.
- 4) Measure voltage between ABSCM&H/U connector and chassis ground.

Connector & terminal

(F49) No. 1 (+) — Chassis ground (-):

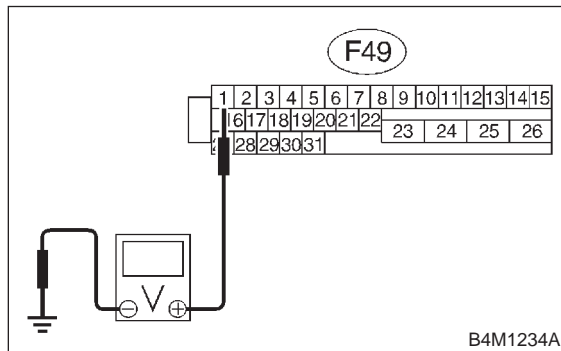

CHECK : *Is the voltage between 10 and 15 V?*

YES : Go to step **7B7**.

NO : Repair ABSCM&H/U power supply circuit.

7B7 : CHECK WIRING HARNESS.

- 1) Disconnect connector (F45) from connector (B62).
- 2) Turn ignition switch to ON.


CHECK : *Does the ABS warning light remain off?*

YES : Go to step **7B8**.

NO : Repair front wiring harness.

7B8 : CHECK PROJECTION AT ABSCM&H/U.

- 1) Turn ignition switch to OFF.
- 2) Check for broken projection at the ABSCM&H/U terminal.

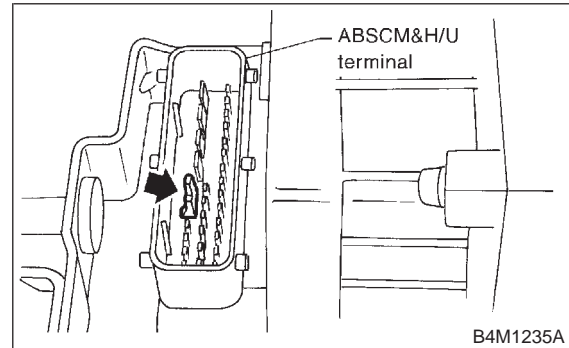

CHECK : *Are the projection broken?*

YES : Go to step **7B9**.


NO : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>

7B9 : CHECK ABSCM&H/U.

Measure resistance between ABSCM&H/U terminals.

Terminal

No. 21 — No. 23:

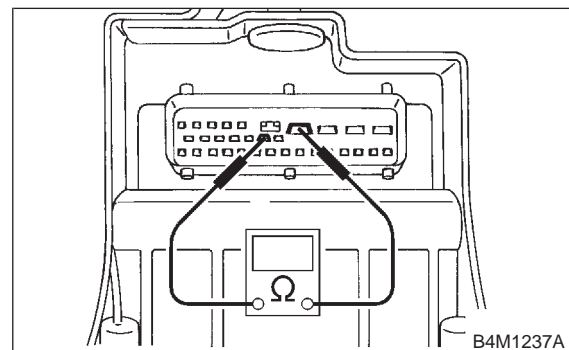

CHECK : *Is the resistance more than 1 MΩ?*

YES : Go to step **7B10**.


NO : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>

7B10 : CHECK WIRING HARNESS.

Measure resistance between connector (F45) and chassis ground.

Connector & terminal

(F45) No. G6 — Chassis ground:

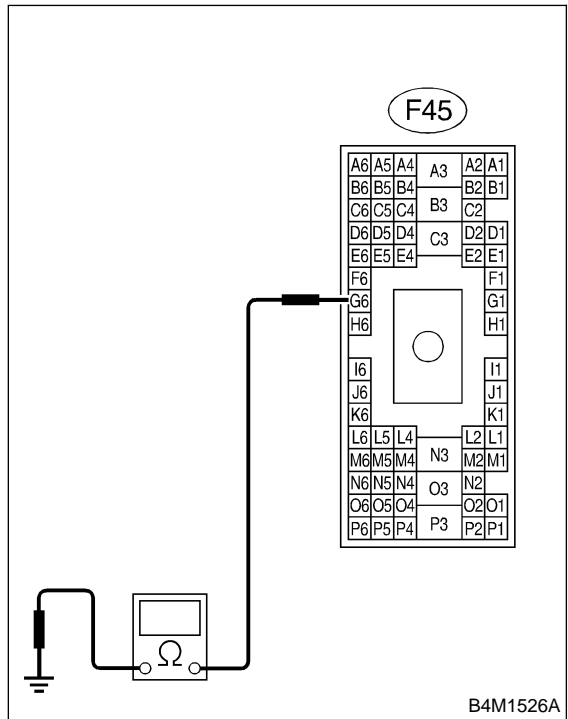


- CHECK** : *Is the resistance less than 0.5 Ω?*
- YES** : Go to step 7B11.
- NO** : Repair harness.

7B11 : CHECK WIRING HARNESS.

- 1) Connect connector to ABSCM&H/U.
- 2) Measure resistance between connector (F45) and chassis ground.

Connector & terminal

(F45) No. G6 — Chassis ground:

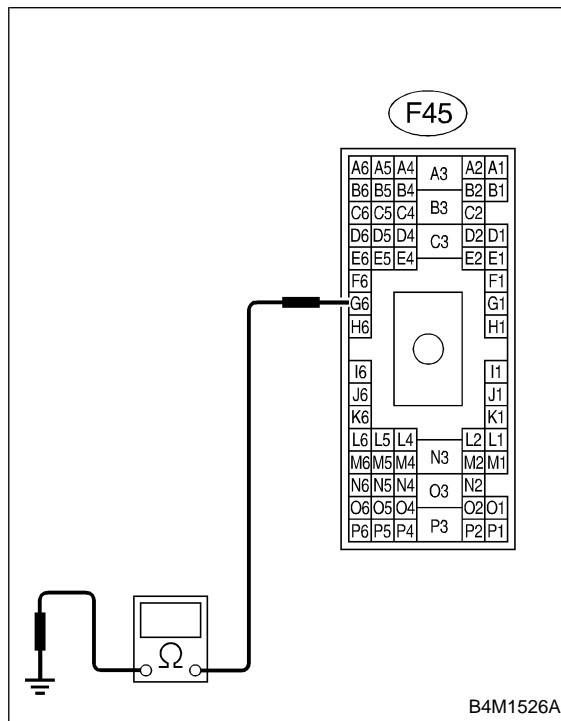

- CHECK** : *Is the resistance more than 1 MΩ?*
- YES** : Go to step 7B12.
- NO** : Repair harness.

7B12 : CHECK POOR CONTACT IN ABSCM&H/U CONNECTOR.

- CHECK** : *Is there poor contact in ABSCM&H/U connector? <Ref. to FOREWORD [W3C1].>*
- YES** : Repair connector.
- NO** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>

C: TROUBLE CODE DOES NOT APPEAR.


DIAGNOSIS:

- Diagnosis circuit is open.

TROUBLE SYMPTOM:

- The ABS warning light turns on or off normally but the start code cannot be read out in the diagnostic mode.

WIRING DIAGRAM:

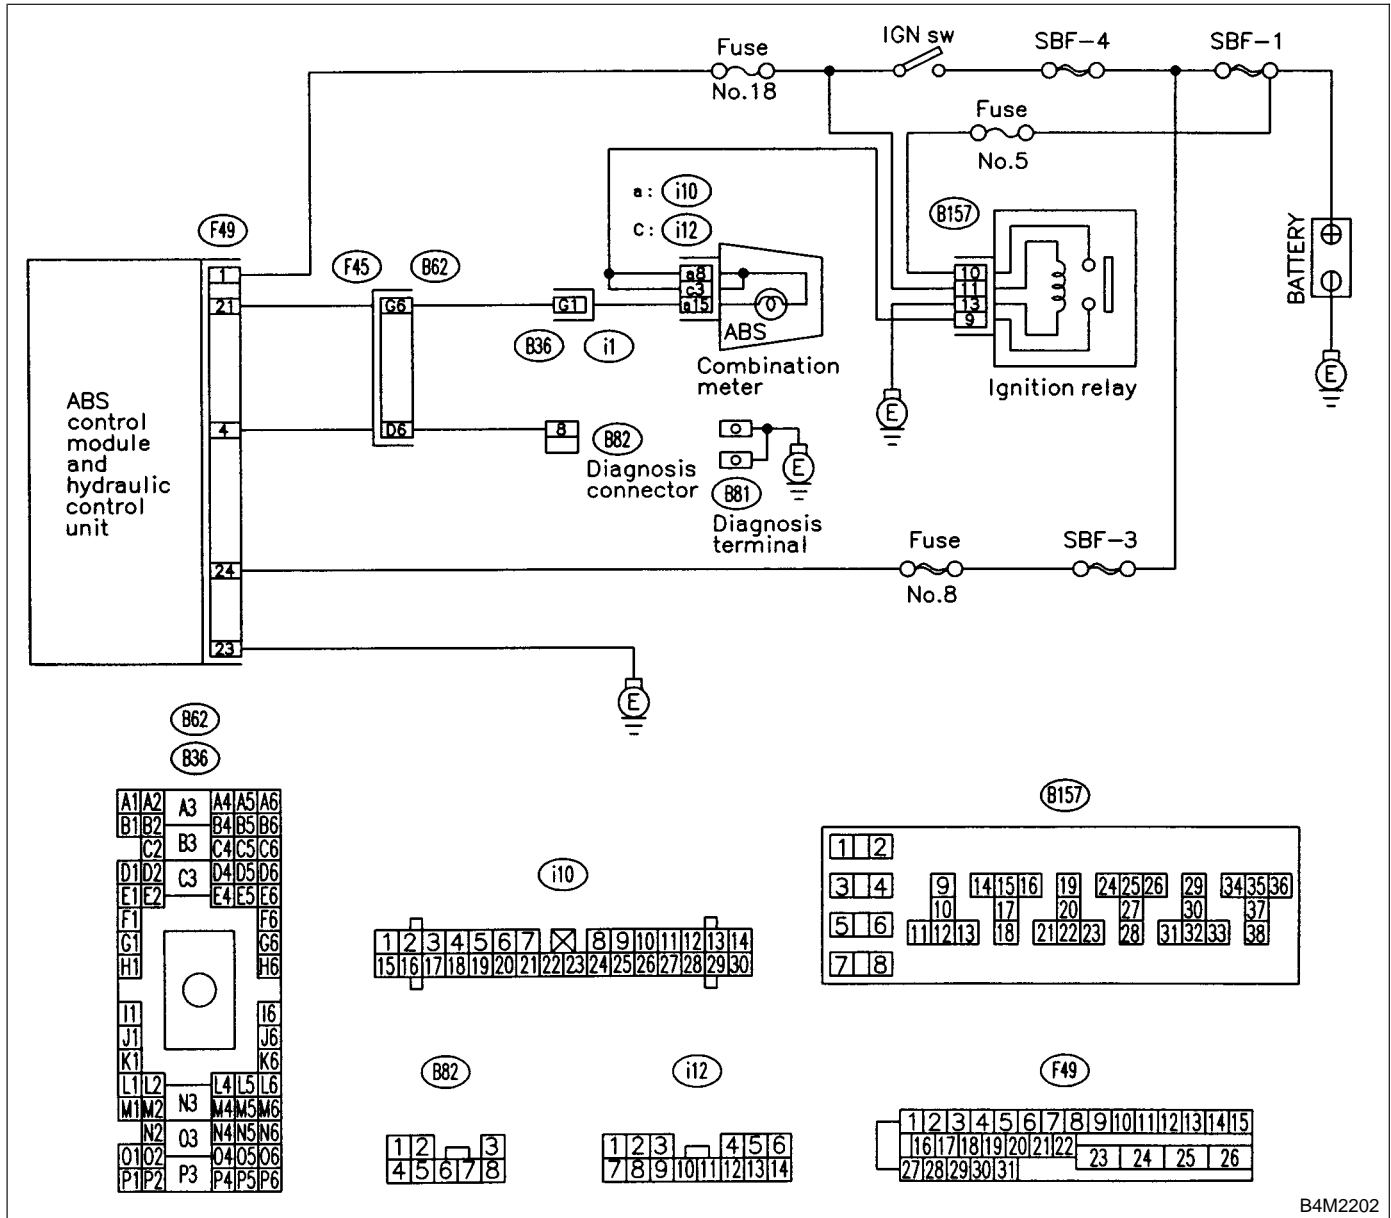

B4M2202


7C1 : CHECK DIAGNOSIS TERMINAL.

Measure resistance between diagnosis terminals (B81) and chassis ground.

Terminals

Diagnosis terminal (A) — Chassis ground:

Diagnosis terminal (B) — Chassis ground:

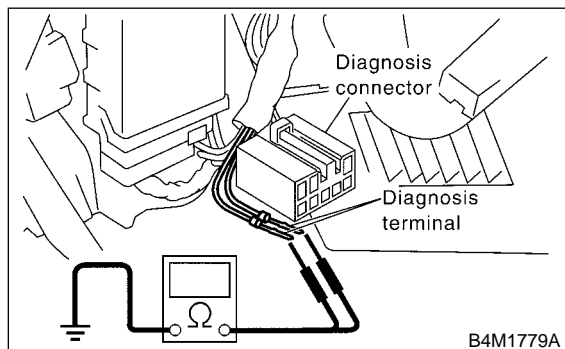


- CHECK** : *Is the resistance less than 0.5 Ω?*
- YES** : Go to step **7C2**.
- NO** : Repair diagnosis terminal harness.

7C2 : CHECK DIAGNOSIS LINE.

- 1) Turn ignition switch to OFF.
- 2) Connect diagnosis terminal (B81) to diagnosis connector (B82) No. 8.
- 3) Disconnect connector from ABSCM&H/U.
- 4) Measure resistance between ABSCM&H/U connector and chassis ground.

Connector & terminal

(F49) No. 4 — Chassis ground:

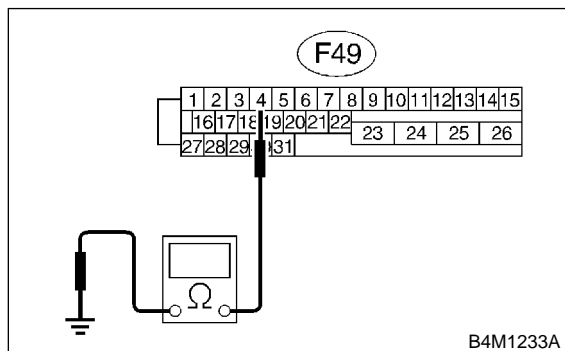

- CHECK** : *Is the resistance less than 0.5 Ω?*
- YES** : Go to step **7C3**.
- NO** : Repair harness connector between ABSCM&H/U and diagnosis connector.

7C3 : CHECK POOR CONTACT IN ABSCM&H/U CONNECTOR.

- CHECK** : *Is there poor contact in ABSCM&H/U connector? <Ref. to FOREWORD [W3C1].>*
- YES** : Repair connector.
- NO** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>

MEMO: