


## 10. Diagnostics Chart with Select Monitor

### A: BASIC DIAGNOSTIC CHART

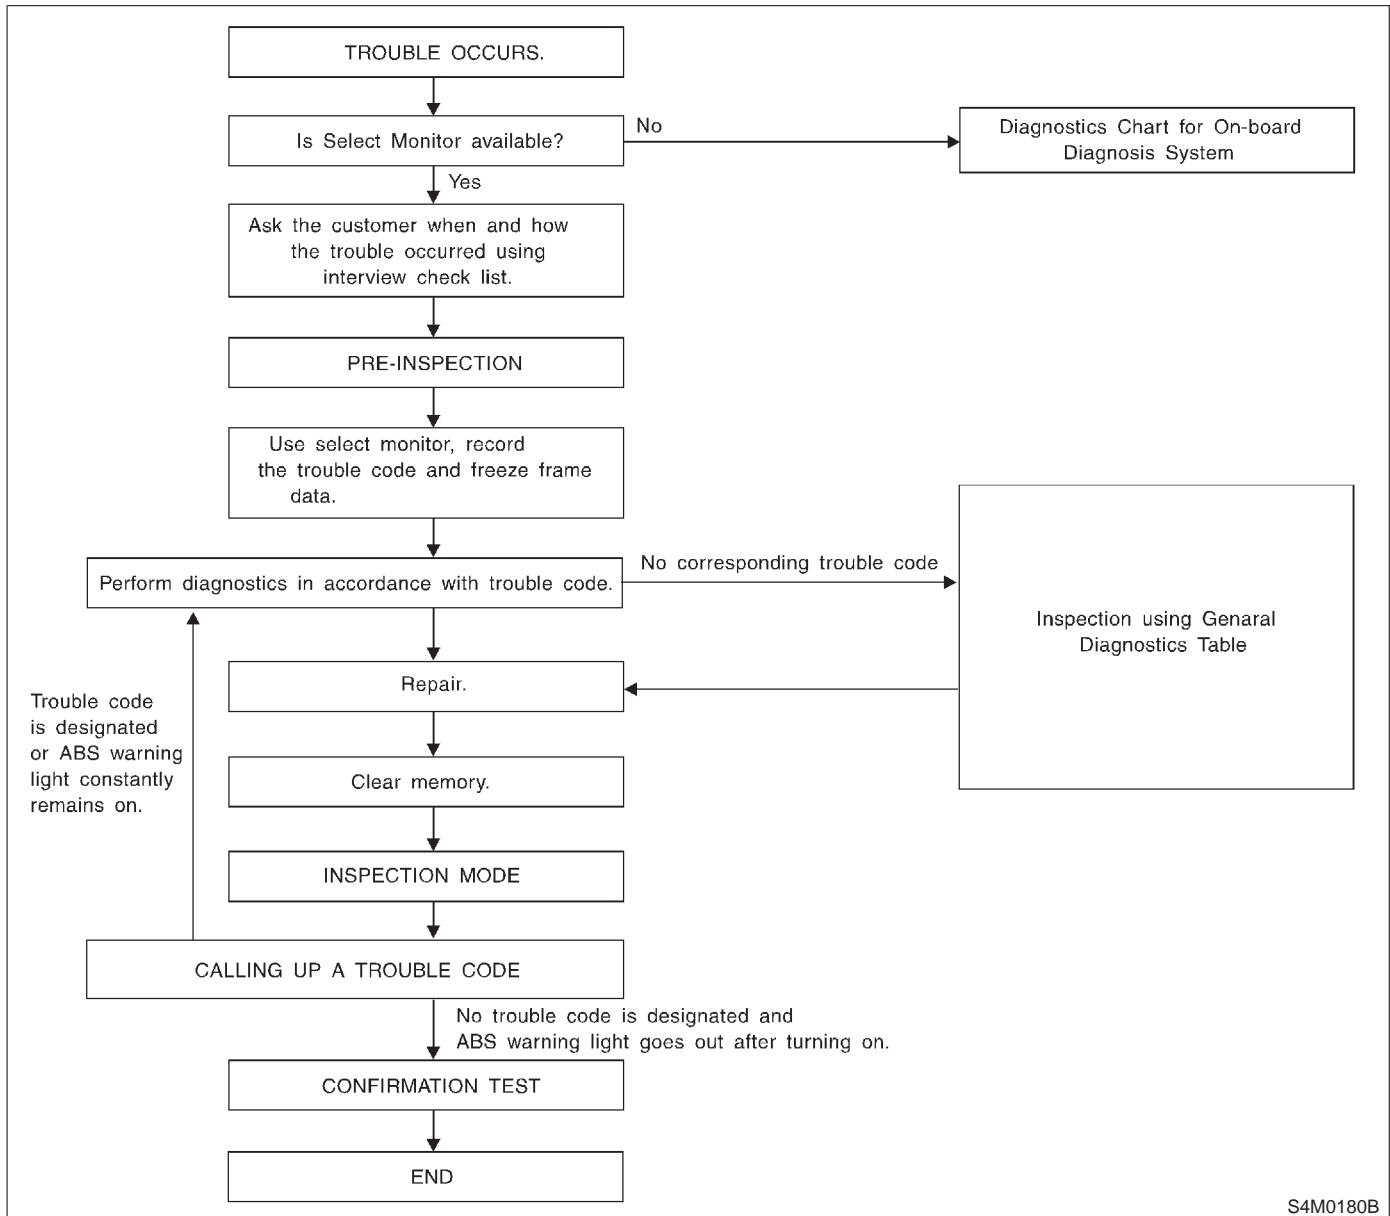

#### CAUTION:

Remove foreign matter (dust, water, etc.) from the ABSCM&H/U connector during removal and installation.

#### NOTE:

- To check harness for broken wires or short circuits, shake it while holding it or the connector.
- Check list for interview. <Ref. to 4-4 [T6B0].>

**B: LIST OF DIAGNOSTIC TROUBLE CODE**

| Code | Display screen  | Contents of diagnosis   | Index No.               |
|------|---|---|-------------------------|
| —    | Communication for initializing impossible               | Select monitor communication failure  | <Ref. to 4-4 [T10C0].>  |
| —    | No trouble code   | Although no trouble code appears on the select monitor display, the ABS warning light remains on. | <Ref. to 4-4 [T10D0].>  |
| 21   | Open or short circuit in front right ABS sensor circuit | Open or short circuit in front right ABS sensor circuit   | <Ref. to 4-4 [T10E0].>  |
| 22   | Front right ABS sensor abnormal signal                  | Front right ABS sensor abnormal signal  | <Ref. to 4-4 [T10I0].>  |
| 23   | Open or short circuit in front left ABS sensor circuit  | Open or short circuit in front left ABS sensor circuit  | <Ref. to 4-4 [T10F0].>  |
| 24   | Front left ABS sensor abnormal signal                   | Front left ABS sensor abnormal signal   | <Ref. to 4-4 [T10J0].>  |
| 25   | Open or short circuit in rear right ABS sensor circuit  | Open or short circuit in rear right ABS sensor circuit  | <Ref. to 4-4 [T10K0].>  |
| 26   | Rear right ABS sensor abnormal signal                   | Rear right ABS sensor abnormal signal   | <Ref. to 4-4 [T10C0].>  |
| 27   | Open or short circuit in rear left ABS sensor circuit   | Open or short circuit in rear left ABS sensor circuit   | <Ref. to 4-4 [T10H0].>  |
| 28   | Rear left ABS sensor abnormal signal                    | Rear left ABS sensor abnormal signal  | <Ref. to 4-4 [T10L0].>  |
| 29   | Abnormal ABS sensor signal on any one of four sensor    | Abnormal ABS sensor signal on any one of four   | <Ref. to 4-4 [T10M0].>  |
| 31   | Front right inlet valve malfunction                     | Front right inlet valve malfunction   | <Ref. to 4-4 [T10N0].>  |
| 32   | Front right outlet valve malfunction                    | Front right outlet valve malfunction  | <Ref. to 4-4 [T10R0].>  |
| 33   | Front left inlet valve malfunction                      | Front left inlet valve malfunction  | <Ref. to 4-4 [T10O0].>  |
| 34   | Front left outlet valve malfunction                     | Front left outlet valve malfunction   | <Ref. to 4-4 [T10S0].>  |
| 35   | Rear right inlet valve malfunction                      | Rear right inlet valve malfunction  | <Ref. to 4-4 [T10P0].>  |
| 36   | Rear right outlet valve malfunction                     | Rear right outlet valve malfunction   | <Ref. to 4-4 [T10T0].>  |
| 37   | Rear left inlet valve malfunction                       | Rear left inlet valve malfunction   | <Ref. to 4-4 [T10Q0].>  |
| 38   | Rear left outlet valve malfunction                      | Rear left outlet valve malfunction  | <Ref. to 4-4 [T10U0].>  |
| 41   | ABS control module malfunction                          | ABS control module and hydraulic control unit malfunction   | <Ref. to 4-4 [T10V0].>  |
| 42   | Power supply voltage too low                            | Power supply voltage too low  | <Ref. to 4-4 [T10W0].>  |
| 42   | Power supply voltage too high                           | Power supply voltage too high   | <Ref. to 4-4 [T10X0].>  |
| 44   | ABS-AT control (Non Controlled)                         | ABS-AT control (Non Controlled)   | <Ref. to 4-4 [T10Y0].>  |
| 44   | ABS-AT control (Controlled)                             | ABS-AT control (Controlled)   | <Ref. to 4-4 [T10Z0].>  |
| 51   | Valve relay malfunction                                 | Valve relay malfunction   | <Ref. to 4-4 [T10AA0].> |
| 51   | Valve relay ON failure                                  | Valve relay ON failure  | <Ref. to 4-4 [T10AB0].> |
| 52   | Open circuit in motor relay circuit                     | Open circuit in motor relay circuit   | <Ref. to 4-4 [T10AC0].> |
| 52   | Motor relay ON failure                                  | Motor relay ON failure  | <Ref. to 4-4 [T10AD0].> |
| 52   | Motor malfunction                                       | Motor malfunction   | <Ref. to 4-4 [T10AE0].> |
| 54   | Stop light switch signal circuit malfunction            | Stop light switch signal circuit malfunction  | <Ref. to 4-4 [T10AF0].> |
| 56   | Open or short circuit in G sensor circuit               | Open or short circuit in G sensor circuit   | <Ref. to 4-4 [T10AG0].> |
| 56   | Battery short in G sensor circuit                       | Battery short in G sensor circuit   | <Ref. to 4-4 [T10AH0].> |
| 56   | Abnormal G sensor high $\mu$ output                     | Abnormal G sensor high $\mu$ output   | <Ref. to 4-4 [T10AI0].> |
| 56   | Detection of G sensor stick                             | Detection of G sensor stick   | <Ref. to 4-4 [T10AJ0].> |

**NOTE:**

High  $\mu$  means high friction coefficient against road surface.

**C: COMMUNICATION FOR INITIALIZING IMPOSSIBLE  
— SELECT MONITOR COMMUNICATION FAILURE —**


**DIAGNOSIS:**

- Faulty harness connector

**TROUBLE SYMPTOM:**

- ABS warning light remains on.

**WIRING DIAGRAM:**

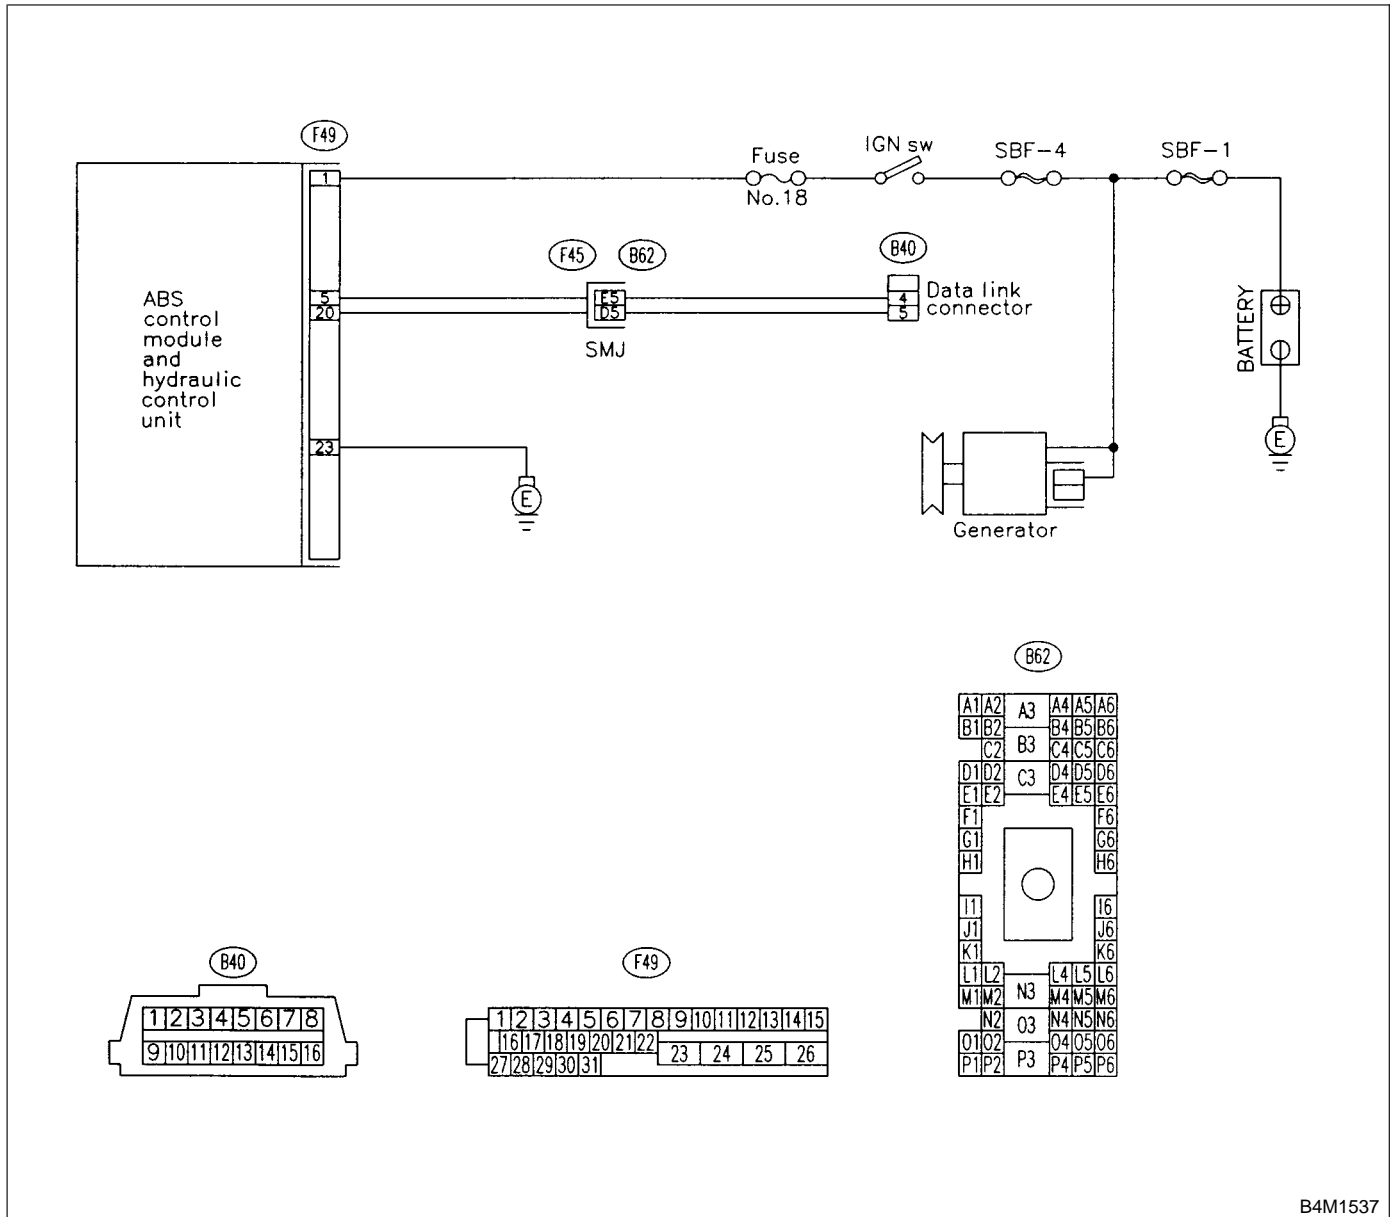

B4M1537

**10C1 : CHECK IGNITION SWITCH.**


- CHECK** : *Is ignition switch ON?*
- YES** : Go to step **10C2**.
- NO** : Turn ignition switch ON, and select ABS/TCS mode using the select monitor.

**10C2 : CHECK GENERATOR.**

- 1) Start the engine.
- 2) Idle the engine.
- 3) Measure voltage between generator and chassis ground.

**Terminal**

**Generator B terminal (+) — Chassis ground (-):**

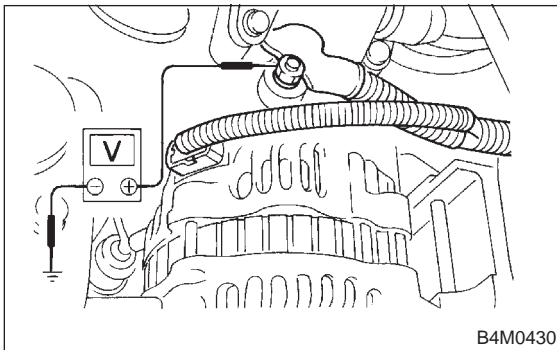

- CHECK** : *Is the voltage between 10 and 15 V?*
- YES** : Go to step **10C3**.
- NO** : Repair generator. <Ref. to 6-1 [W2A0].>

**10C3 : CHECK BATTERY TERMINAL.**

Turn ignition switch to OFF.

- CHECK** : *Is there poor contact at battery terminal?*
- YES** : Repair battery terminal.
- NO** : Go to step **10C4**.

**10C4 : CHECK COMMUNICATION OF SELECT MONITOR.**

Using the select monitor, check whether communication to other system (such as engine, AT, etc.) can be executed normally.

- CHECK** : *Are the name and year of the system displayed on the select monitor?*
- YES** : Go to step **10C5**.
- NO** : Repair select monitor communication cable and connector.

**10C5 : CHECK INSTALLATION OF ABSCM&H/U CONNECTOR.**

Turn ignition switch to OFF.


- CHECK** : *Is ABSCM&H/U connector inserted into ABSCM&H/U until the clamp locks onto it?*
- YES** : Go to step **10C6**.
- NO** : Insert ABSCM&H/U connector into ABSCM&H/U until the clamp locks onto it.

**10C6 : CHECK POWER SUPPLY OF ABSCM&H/U.**

- 1) Disconnect connector from ABSCM&H/U.
- 2) Start engine.
- 3) Idle the engine.
- 4) Measure voltage between ABSCM&H/U connector and chassis ground.

**Connector & terminal**

**(F49) No. 1 (+) — Chassis ground (-):**

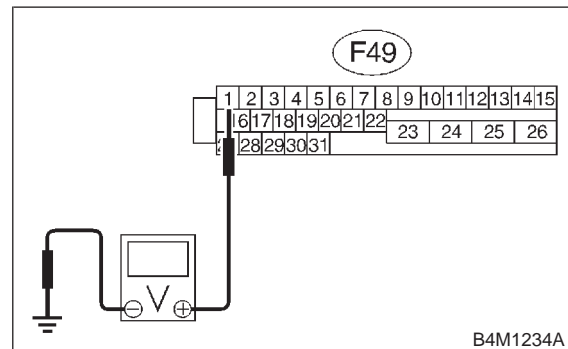


- CHECK** : *Is the voltage between 10 and 15 V?*
- YES** : Go to step **10C7**.
- NO** : Repair ABSCM&H/U power supply circuit.

**10C7 : CHECK GROUND CIRCUIT OF ABSCM&H/U.**

- 1) Turn ignition switch to OFF.
- 2) Measure resistance between ABSCM&H/U connector and chassis ground.

**Connector & terminal**

**(F49) No. 23 — Chassis ground:**

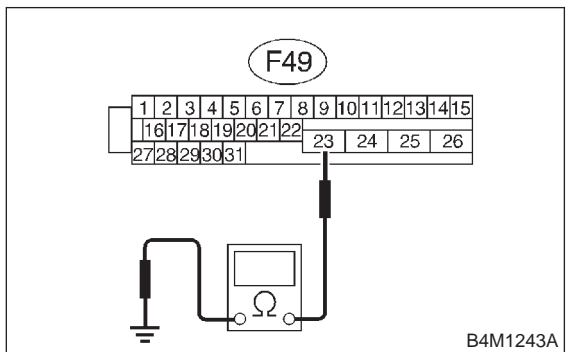

- CHECK** : *Is the resistance less than 0.5 Ω?*
- YES** : Repair harness/connector between ABSCM&H/U and select monitor.
- NO** : Go to step **10C8**.


**10C8 : CHECK HARNESS/CONNECTOR BETWEEN ABSCM&H/U AND DATA LINK CONNECTOR.**

- 1) Turn ignition switch OFF.
- 2) Measure resistance between ABSCM&H/U connector and data link connector.

**Connector & terminal**

**(F49) No. 20 — (B40) No. 5:**

**(F49) No. 5 — (B40) No. 4:**

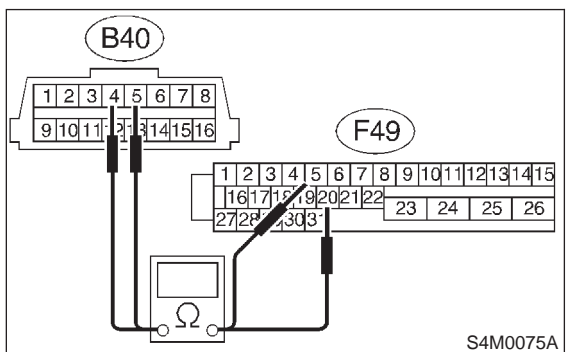

- CHECK** : *Is the resistance less than 0.5 Ω?*
- YES** : Repair harness and connector between ABSCM&H/U and data link connector.
- NO** : Go to step **10C9**.

**10C9 : CHECK POOR CONTACT IN CONNECTORS.**

- CHECK** : *Is there poor contact in connectors between ABSCM&H/U and data link connector? <Ref. to FOREWORD [W3C1].>*
- YES** : Repair connector.
- NO** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>

**MEMO:**

**D: NO TROUBLE CODE**

**— ALTHOUGH NO TROUBLE CODE APPEARS ON THE SELECT MONITOR DISPLAY, THE ABS WARNING LIGHT REMAINS ON. —**

**DIAGNOSIS:**

- ABS warning light circuit is shorted.


**TROUBLE SYMPTOM:**

- ABS warning light remains on.
- NO TROUBLE CODE displayed on the select monitor.

**NOTE:**

When the ABS warning light is OFF and "NO TROUBLE CODE" is displayed on the select monitor, the system is in normal condition.

**WIRING DIAGRAM:**

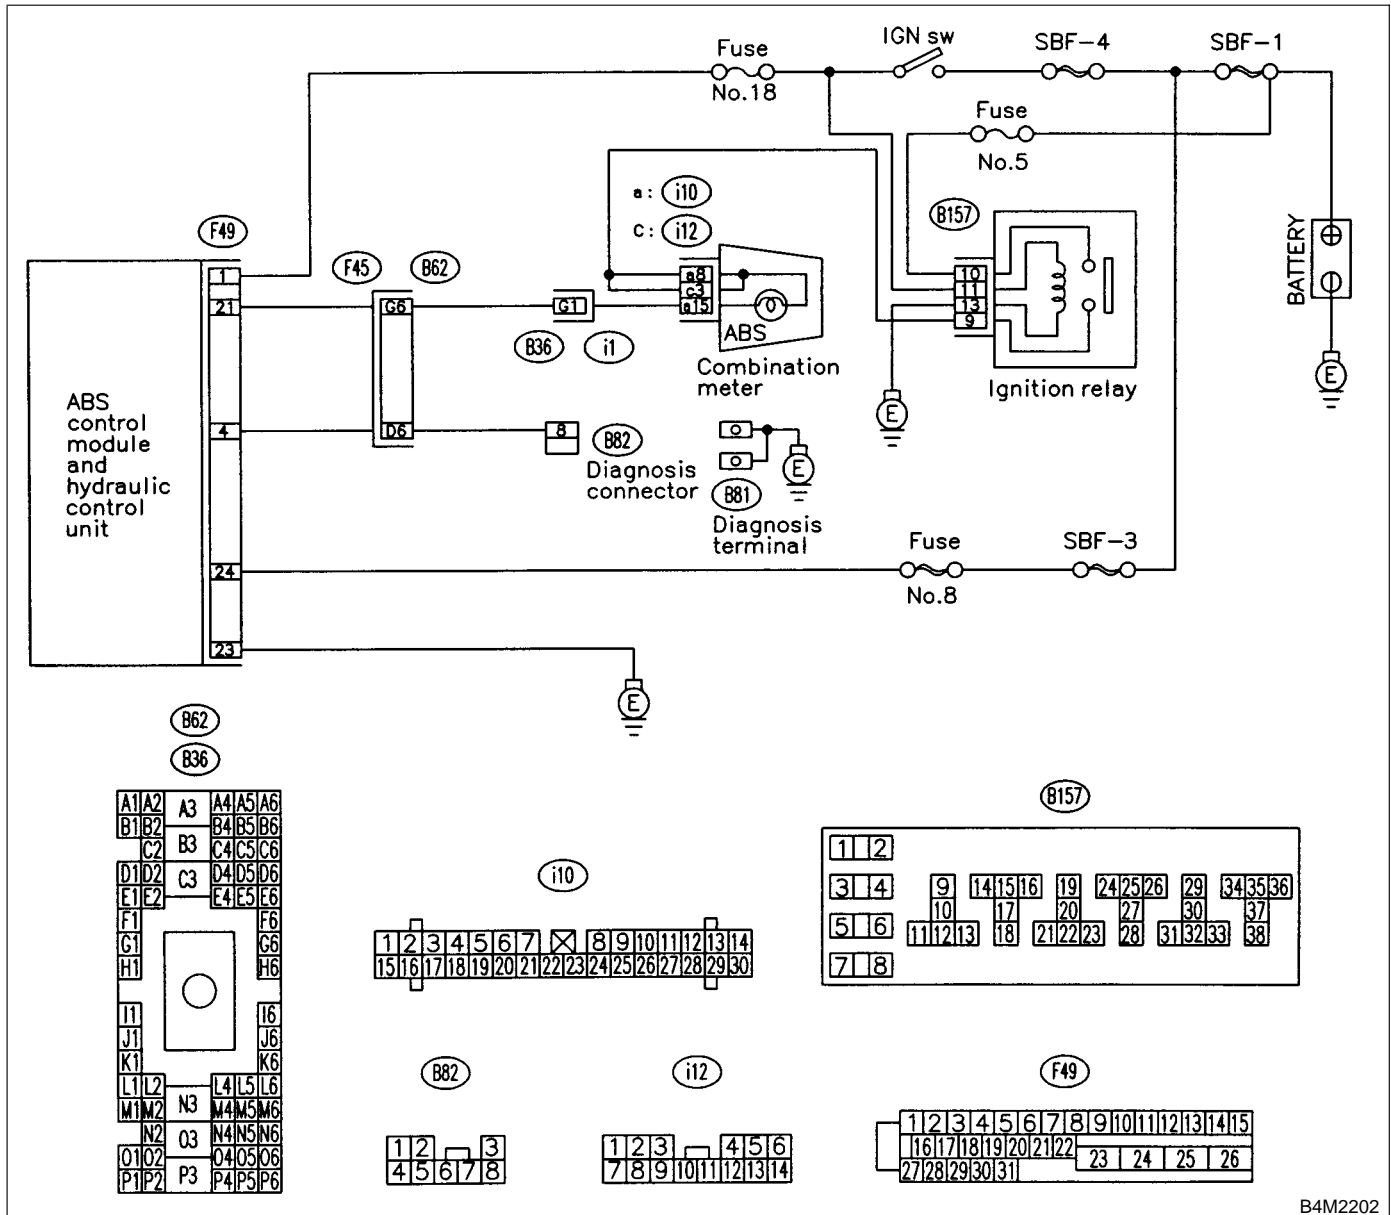

B4M2202


**10D1 : CHECK WIRING HARNESS.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector (F45) from connector (B62).
- 3) Turn ignition switch to ON.

- CHECK** : *Does the ABS warning light remain off?*
- YES** : Go to step **10D2**.
- NO** : Repair front wiring harness.

**10D2 : CHECK PROJECTION AT ABSCM&H/U.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ABSCM&H/U.
- 3) Check for broken projection at the ABSCM&H/U terminal.

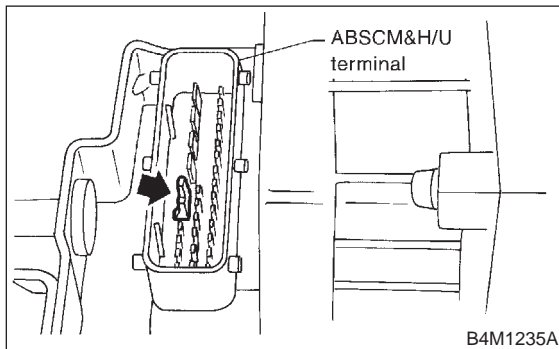


- CHECK** : *Are the projection broken?*
- YES** : Go to step **10D3**.
- NO** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>

**10D3 : CHECK ABSCM&H/U.**

Measure resistance between ABSCM&H/U terminals.

**Terminals**

**No. 21 — No. 23:**

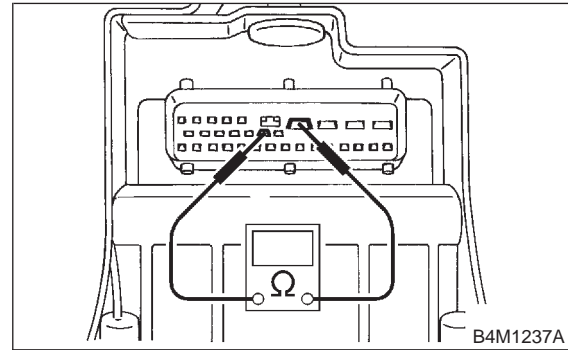

- CHECK** : *Is the resistance more than 1 MΩ?*
- YES** : Go to step **10D4**.
- NO** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>




**10D4 : CHECK WIRING HARNESS.**

Measure resistance between connector (F45) and chassis ground.

**Connector & terminal**

**(F45) No. G6 — Chassis ground:**

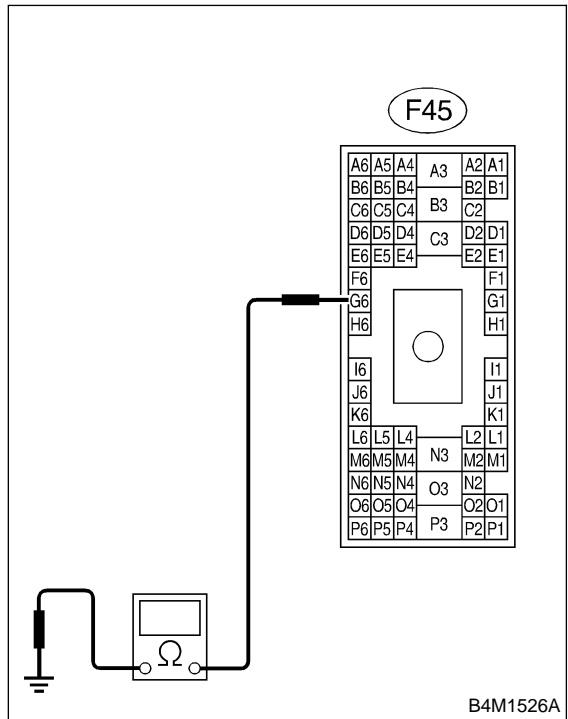


- CHECK** : *Is the resistance less than 0.5 Ω?*
- YES** : Go to step 10D5.
- NO** : Repair harness.

**10D5 : CHECK WIRING HARNESS.**

- 1) Connect connector to ABSCM&H/U.
- 2) Measure resistance between connector (F45) and chassis ground.

**Connector & terminal**

**(F45) No. G6 — Chassis ground:**

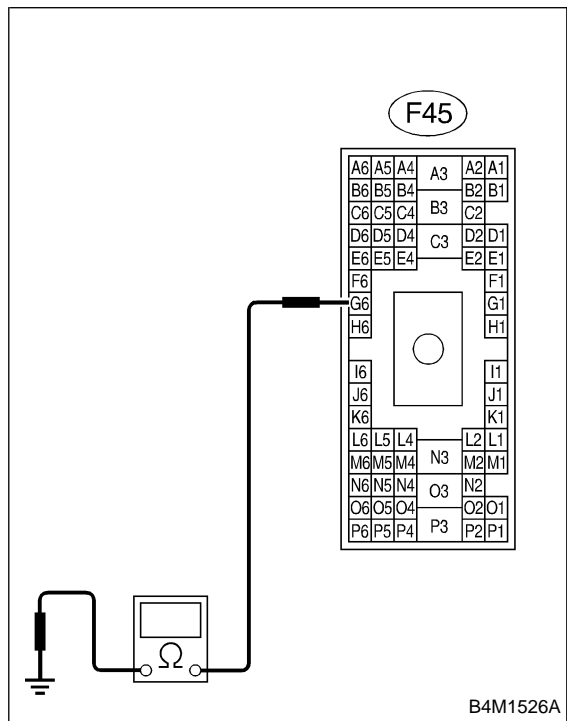

- CHECK** : *Is the resistance more than 1 MΩ?*
- YES** : Go to step 10D6.
- NO** : Repair harness.

**10D6 : CHECK POOR CONTACT IN ABSCM&H/U CONNECTOR.**

- CHECK** : *Is there poor contact in ABSCM&H/U connector? <Ref. to FOREWORD [W3C1].>*
- YES** : Repair connector.
- NO** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>

**MEMO:**

**E: TROUBLE CODE 21 OPEN OR SHORT CIRCUIT IN FRONT RIGHT ABS SENSOR CIRCUIT**

**F: TROUBLE CODE 23 OPEN OR SHORT CIRCUIT IN FRONT LEFT ABS SENSOR CIRCUIT**

**G: TROUBLE CODE 25 OPEN OR SHORT CIRCUIT IN REAR RIGHT ABS SENSOR CIRCUIT**

**H: TROUBLE CODE 27 OPEN OR SHORT CIRCUIT IN REAR LEFT ABS SENSOR CIRCUIT**

**— ABNORMAL ABS SENSOR (OPEN OR SHORT CIRCUIT IN ABS SENSOR CIRCUIT) —**


**DIAGNOSIS:**

- Faulty ABS sensor (Broken wire, input voltage too high)
- Faulty harness connector

**TROUBLE SYMPTOM:**

- ABS does not operate.

WIRING DIAGRAM:

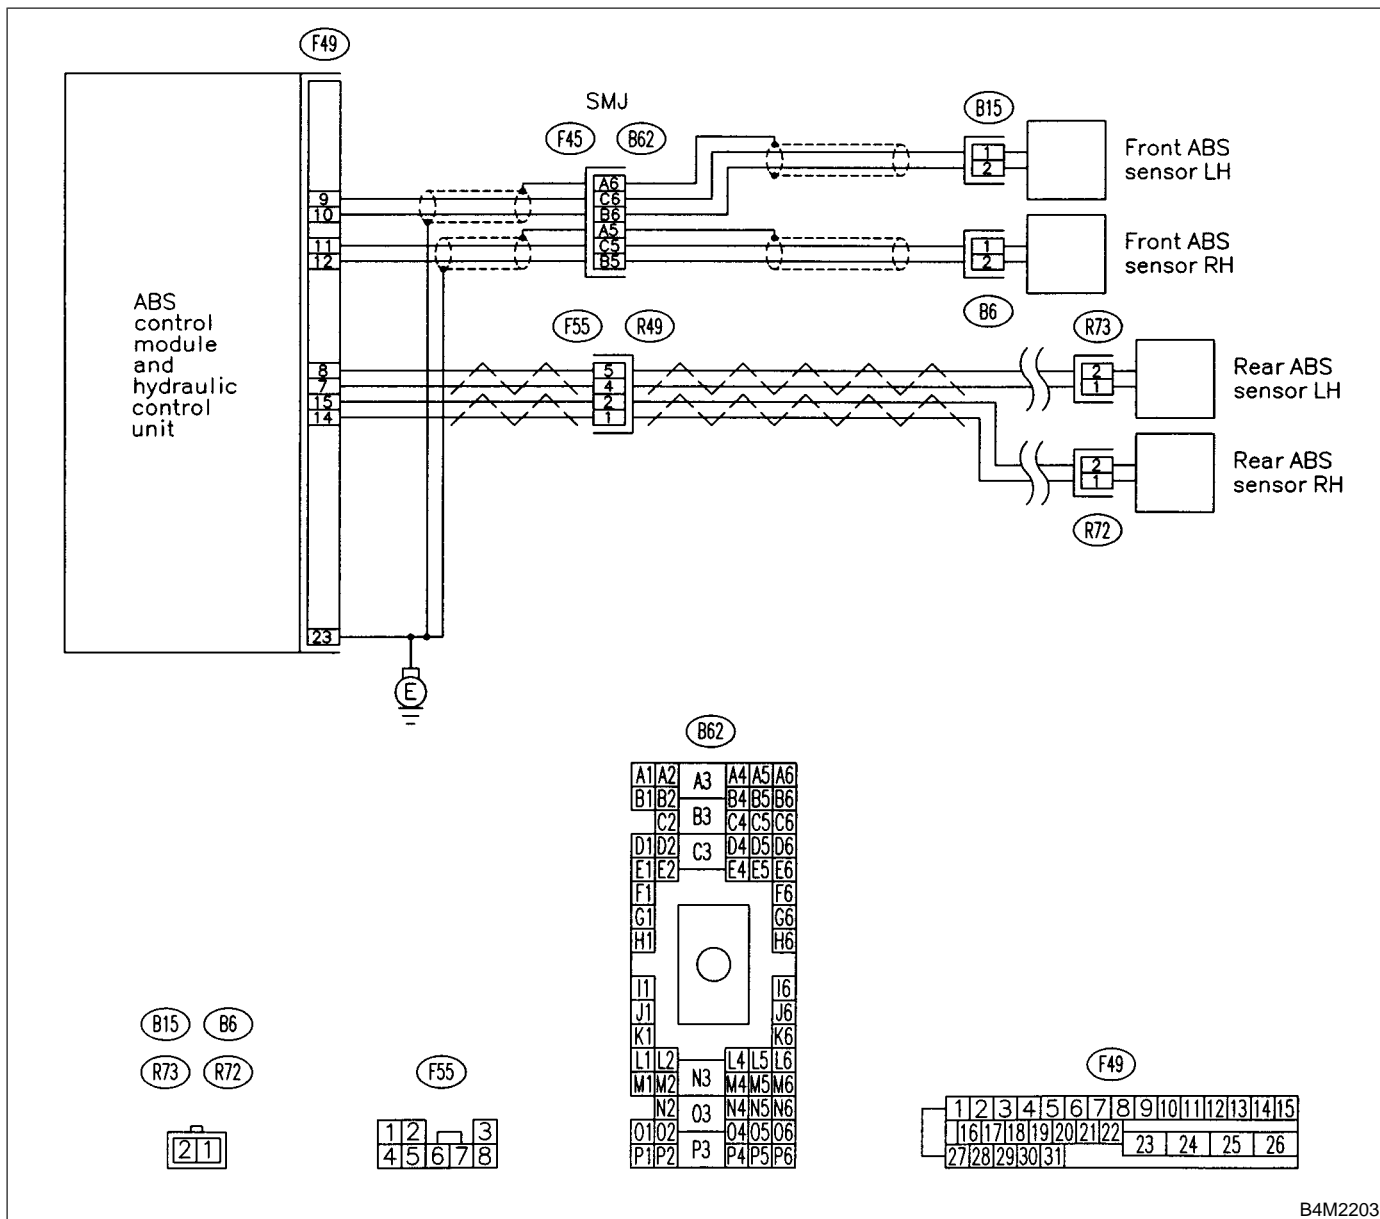

B4M2203

### 10H1 : CHECK OUTPUT OF ABS SENSOR USING SELECT MONITOR.

1) Select "Current data display & Save" on the select monitor.

2) Read the ABS sensor output corresponding to the faulty system in the select monitor data display mode.

**CHECK** : *Does the speed indicated on the display change in response to the speedometer reading during acceleration/deceleration when the steering wheel is in the straight-ahead position?*

**YES** : Go to step 10H2.

**NO** : Go to step 10H8.

### 10H2 : CHECK INSTALLATION OF ABS SENSOR.

**Tightening torque:**

**$32 \pm 10$  N·m ( $3.3 \pm 1.0$  kg·m,  $24 \pm 7$  ft·lb)**


**CHECK** : *Are the ABS sensor installation bolts tightened securely?*

**YES** : Go to step 10H3.

**NO** : Tighten ABS sensor installation bolts securely.

### 10H3 : CHECK ABS SENSOR GAP.

Measure tone wheel to ABS sensor piece gap over entire perimeter of the wheel.

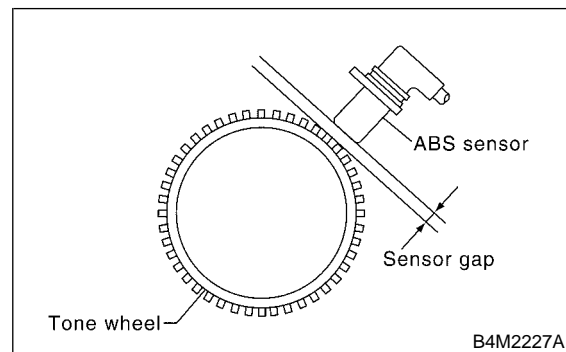

|                | Front wheel                        | Rear wheel                             |
|----------------|------------------------------------|--|
| Specifications | 0.3 — 0.8 mm<br>(0.012 — 0.031 in) | 0.44 — 0.94 mm<br>(0.0173 — 0.0370 in) |

**CHECK** : *Is the gap within the specifications?*

**YES** : Go to step 10H4.

**NO** : Adjust the gap.

**NOTE:**

Adjust the gap using spacers (Part No. 26755AA000). If spacers cannot correct the gap, replace worn sensor or worn tone wheel.

### 10H4 : CHECK TONE WHEEL RUNOUT.

Measure tone wheel runout.

**CHECK** : *Is the runout less than 0.05 mm (0.0020 in)?*

**YES** : Go to step 10H5.

**NO** : Replace tone wheel. <Ref. to 4-2 [W3A0].>

### 10H5 : CHECK POOR CONTACT IN CONNECTORS.

Turn ignition switch to OFF.

**CHECK** : *Is there poor contact in connectors between ABSCM&H/U and ABS sensor? <Ref. to FOREWORD [W3C1].>*

**YES** : Repair connector.

**NO** : Go to step 10H6.

**10H6 : CHECK ABSCM&H/U.**

- 1) Connect all connectors.
- 2) Erase the memory.
- 3) Perform inspection mode.
- 4) Read out the trouble code.

- CHECK** : *Is the same trouble code as in the current diagnosis still being output?*
- YES** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>
- NO** : Go to step 10H7.

**10H7 : CHECK ANY OTHER TROUBLE CODES APPEARANCE.**

- CHECK** : *Are other trouble codes being output?*
- YES** : Proceed with the diagnosis corresponding to the trouble code.
- NO** : A temporary poor contact.

**NOTE:**


Check harness and connectors between ABSCM&H/U and ABS sensor.

**10H8 : CHECK ABS SENSOR.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ABS sensor.
- 3) Measure resistance of ABS sensor connector terminals.

**Terminal**

- Front RH No. 1 — No. 2:**
- Front LH No. 1 — No. 2:**
- Rear RH No. 1 — No. 2:**
- Rear LH No. 1 — No. 2:**

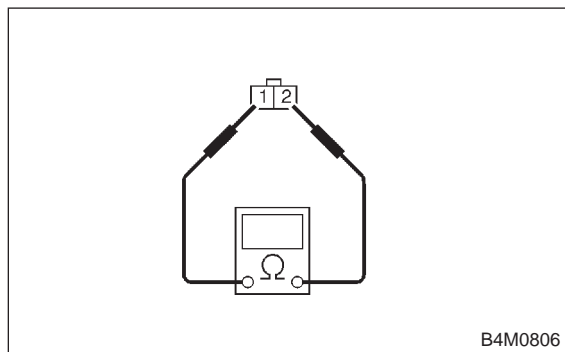


- CHECK** : *Is the resistance between 1 and 1.5 kΩ?*
- YES** : Go to step 10H9.
- NO** : Replace ABS sensor. <Ref. to 4-4 [W14A0].>

**10H9 : CHECK BATTERY SHORT OF ABS SENSOR.**

- 1) Disconnect connector from ABSCM&H/U.
- 2) Measure voltage between ABS sensor and chassis ground.

**Terminal**

- Front RH No. 1 (+) — Chassis ground (-):**
- Front LH No. 1 (+) — Chassis ground (-):**
- Rear RH No. 1 (+) — Chassis ground (-):**
- Rear LH No. 1 (+) — Chassis ground (-):**

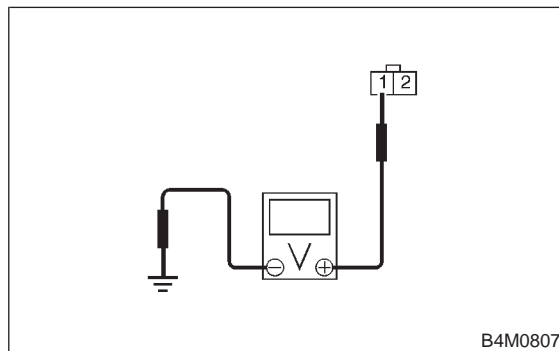


- CHECK** : *Is the voltage less than 1 V?*
- YES** : Go to step 10H10.
- NO** : Replace ABS sensor. <Ref. to 4-4 [W14A0].>

**10H10 : CHECK BATTERY SHORT OF ABS SENSOR.**

- 1) Turn ignition switch to ON.
- 2) Measure voltage between ABS sensor and chassis ground.

**Terminal**

- Front RH No. 1 (+) — Chassis ground (-):
- Front LH No. 1 (+) — Chassis ground (-):
- Rear RH No. 1 (+) — Chassis ground (-):
- Rear LH No. 1 (+) — Chassis ground (-):

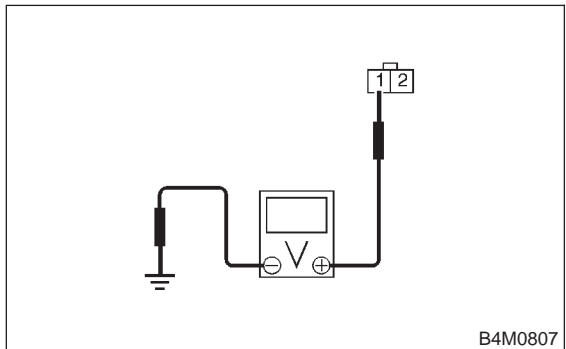


- CHECK** : Is the voltage less than 1 V?
- YES** : Go to step 10H11.
- NO** : Replace ABS sensor. <Ref. to 4-4 [W14A0].>

**10H11 : CHECK HARNESS/CONNECTOR BETWEEN ABSCM&H/U AND ABS SENSOR.**

- 1) Turn ignition switch to OFF.
- 2) Connect connector to ABS sensor.
- 3) Measure resistance between ABSCM&H/U connector terminals.

**Connector & terminal**

- Trouble code 21 / (F49) No. 11 — No. 12:
- Trouble code 23 / (F49) No. 9 — No. 10:
- Trouble code 25 / (F49) No. 14 — No. 15:
- Trouble code 27 / (F49) No. 7 — No. 8:

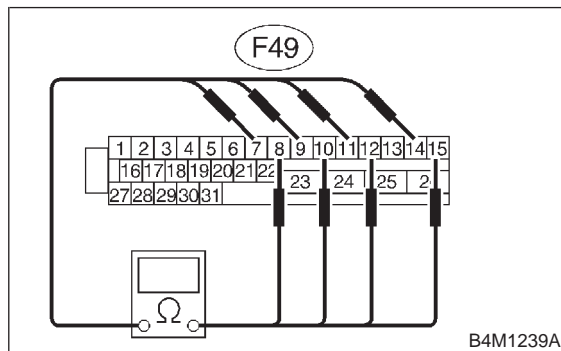


- CHECK** : Is the resistance between 1 and 1.5 kΩ?
- YES** : Go to step 10H12.
- NO** : Repair harness/connector between ABSCM&H/U and ABS sensor.

**10H12 : CHECK BATTERY SHORT OF HARNESS.**

Measure voltage between ABSCM&H/U connector and chassis ground.

**Connector & terminal**

- Trouble code 21 / (F49) No. 11 (+) — Chassis ground (-):**
- Trouble code 23 / (F49) No. 9 (+) — Chassis ground (-):**
- Trouble code 25 / (F49) No. 14 (+) — Chassis ground (-):**
- Trouble code 27 / (F49) No. 7 (+) — Chassis ground (-):**

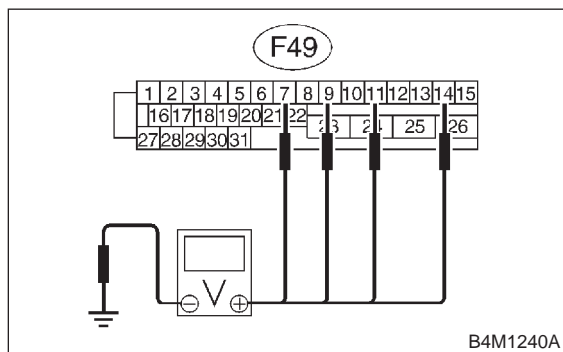


- CHECK** : *Is the voltage less than 1 V?*
- YES** : Go to step 10H13.
- NO** : Repair harness between ABSCM&H/U and ABS sensor.

**10H13 : CHECK BATTERY SHORT OF HARNESS.**

- 1) Turn ignition switch to ON.
- 2) Measure voltage between ABSCM&H/U connector and chassis ground.

**Connector & terminal**

- Trouble code 21 / (F49) No. 11 (+) — Chassis ground (-):**
- Trouble code 23 / (F49) No. 9 (+) — Chassis ground (-):**
- Trouble code 25 / (F49) No. 14 (+) — Chassis ground (-):**
- Trouble code 27 / (F49) No. 7 (+) — Chassis ground (-):**

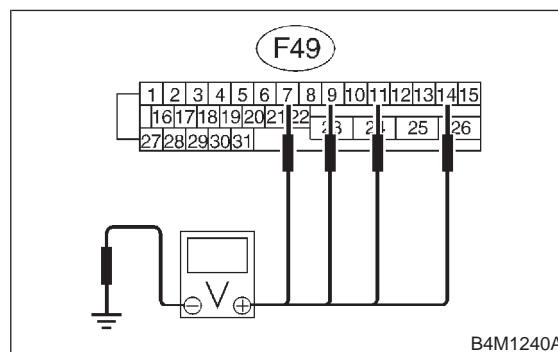

- CHECK** : *Is the voltage less than 1 V?*
- YES** : Go to step 10H14.
- NO** : Repair harness between ABSCM&H/U and ABS sensor.

**10H14 : CHECK INSTALLATION OF ABS SENSOR.**

**Tightening torque:**


**32±10 N·m (3.3±1.0 kg·m, 24±7 ft·lb)**

- CHECK** : *Are the ABS sensor installation bolts tightened securely?*
- YES** : Go to step 10H15.
- NO** : Tighten ABS sensor installation bolts securely.



**10H15 : CHECK ABS SENSOR GAP.**

Measure tone wheel to ABS sensor piece gap over entire perimeter of the wheel.

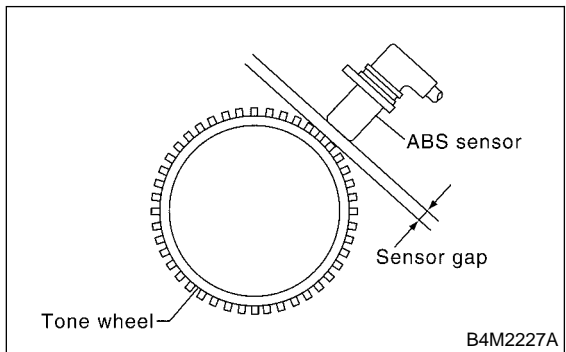

|                | Front wheel                        | Rear wheel                             |
|----------------|------------------------------------|--|
| Specifications | 0.3 — 0.8 mm<br>(0.012 — 0.031 in) | 0.44 — 0.94 mm<br>(0.0173 — 0.0370 in) |

- CHECK** : *Is the gap within the specifications?*
- YES** : Go to step **10H16**.
- NO** : Adjust the gap.

**NOTE:**

Adjust the gap using spacers (Part No. 26755AA000). If spacers cannot correct the gap, replace worn sensor or worn tone wheel.

**10H16 : CHECK TONE WHEEL RUNOUT.**

Measure tone wheel runout.


- CHECK** : *Is the runout less than 0.05 mm (0.0020 in)?*
- YES** : Go to step **10H17**.
- NO** : Replace tone wheel. <Ref. to 4-2 [W3A0].>

**10H17 : CHECK GROUND SHORT OF ABS SENSOR.**

- 1) Turn ignition switch to ON.
- 2) Measure resistance between ABS sensor and chassis ground.

**Terminal**

- Front RH No. 1 — Chassis ground:**
- Front LH No. 1 — Chassis ground:**
- Rear RH No. 1 — Chassis ground:**
- Rear LH No. 1 — Chassis ground:**

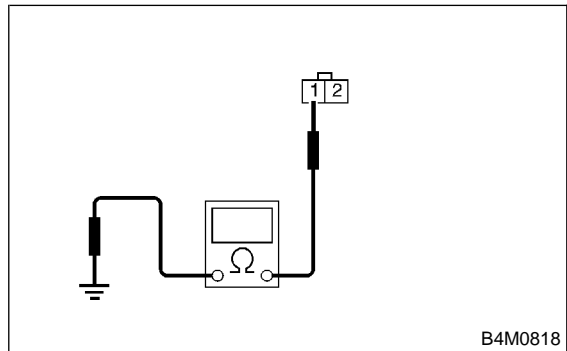

- CHECK** : *Is the resistance more than 1 MΩ?*
- YES** : Go to step **10H18**.
- NO** : Replace ABS sensor and ABSCM&H/U. <Ref. to 4-4 [W14A0].> and <Ref. to 4-4 [W15A0].>

**10H18 : CHECK GROUND SHORT OF HARNESS.**

- 1) Turn ignition switch to OFF.
- 2) Connect connector to ABS sensor.
- 3) Measure resistance between ABSCM&H/U connector terminal and chassis ground.


**Connector & terminal**

**Trouble code 21 / (F49) No. 11 — Chassis ground:**

**Trouble code 23 / (F49) No. 9 — Chassis ground:**

**Trouble code 25 / (F49) No. 14 — Chassis ground:**

**Trouble code 27 / (F49) No. 7 — Chassis ground:**

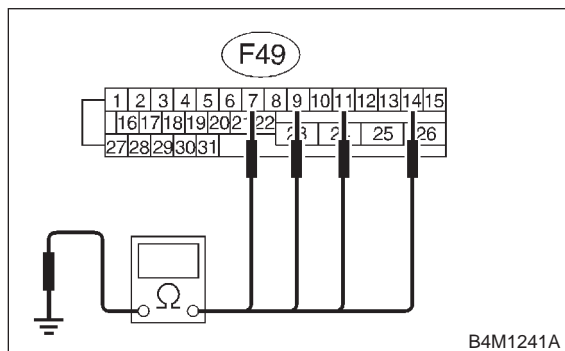

- CHECK** : **Is the resistance more than 1 MΩ?**
- YES** : Go to step **10H19**.
- NO** : Repair harness between ABSCM&H/U and ABS sensor.  
And replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>

**10H19 : CHECK POOR CONTACT IN CONNECTORS.**

- CHECK** : **Is there poor contact in connectors between ABSCM&H/U and ABS sensor? <Ref. to FOREWORD [W3C1].>**
- YES** : Repair connector.
- NO** : Go to step **10H20**.

**10H20 : CHECK ABSCM&H/U.**

- 1) Connect all connectors.
- 2) Erase the memory.
- 3) Perform inspection mode.
- 4) Read out the trouble code.

- CHECK** : **Is the same trouble code as in the current diagnosis still being output?**
- YES** : Replace ABSCM&H/U.
- NO** : Go to step **10H21**.

**10H21 : CHECK ANY OTHER TROUBLE CODES APPEARANCE.**

- CHECK** : **Are other trouble codes being output?**
- YES** : Proceed with the diagnosis corresponding to the trouble code.
- NO** : A temporary poor contact.

**NOTE:**

Check harness and connectors between ABSCM&H/U and ABS sensor.

I: TROUBLE CODE 22 FRONT RIGHT ABS SENSOR ABNORMAL SIGNAL

J: TROUBLE CODE 24 FRONT LEFT ABS SENSOR ABNORMAL SIGNAL

K: TROUBLE CODE 26 REAR RIGHT ABS SENSOR ABNORMAL SIGNAL

L: TROUBLE CODE 28 REAR LEFT ABS SENSOR ABNORMAL SIGNAL  
 — ABNORMAL ABS SENSOR (ABS SENSOR ABNORMAL SIGNAL) —


**DIAGNOSIS:**

- Faulty ABS sensor signal (noise, irregular signal, etc.)
- Faulty harness/connector

**TROUBLE SYMPTOM:**

- ABS does not operate.

**WIRING DIAGRAM:**

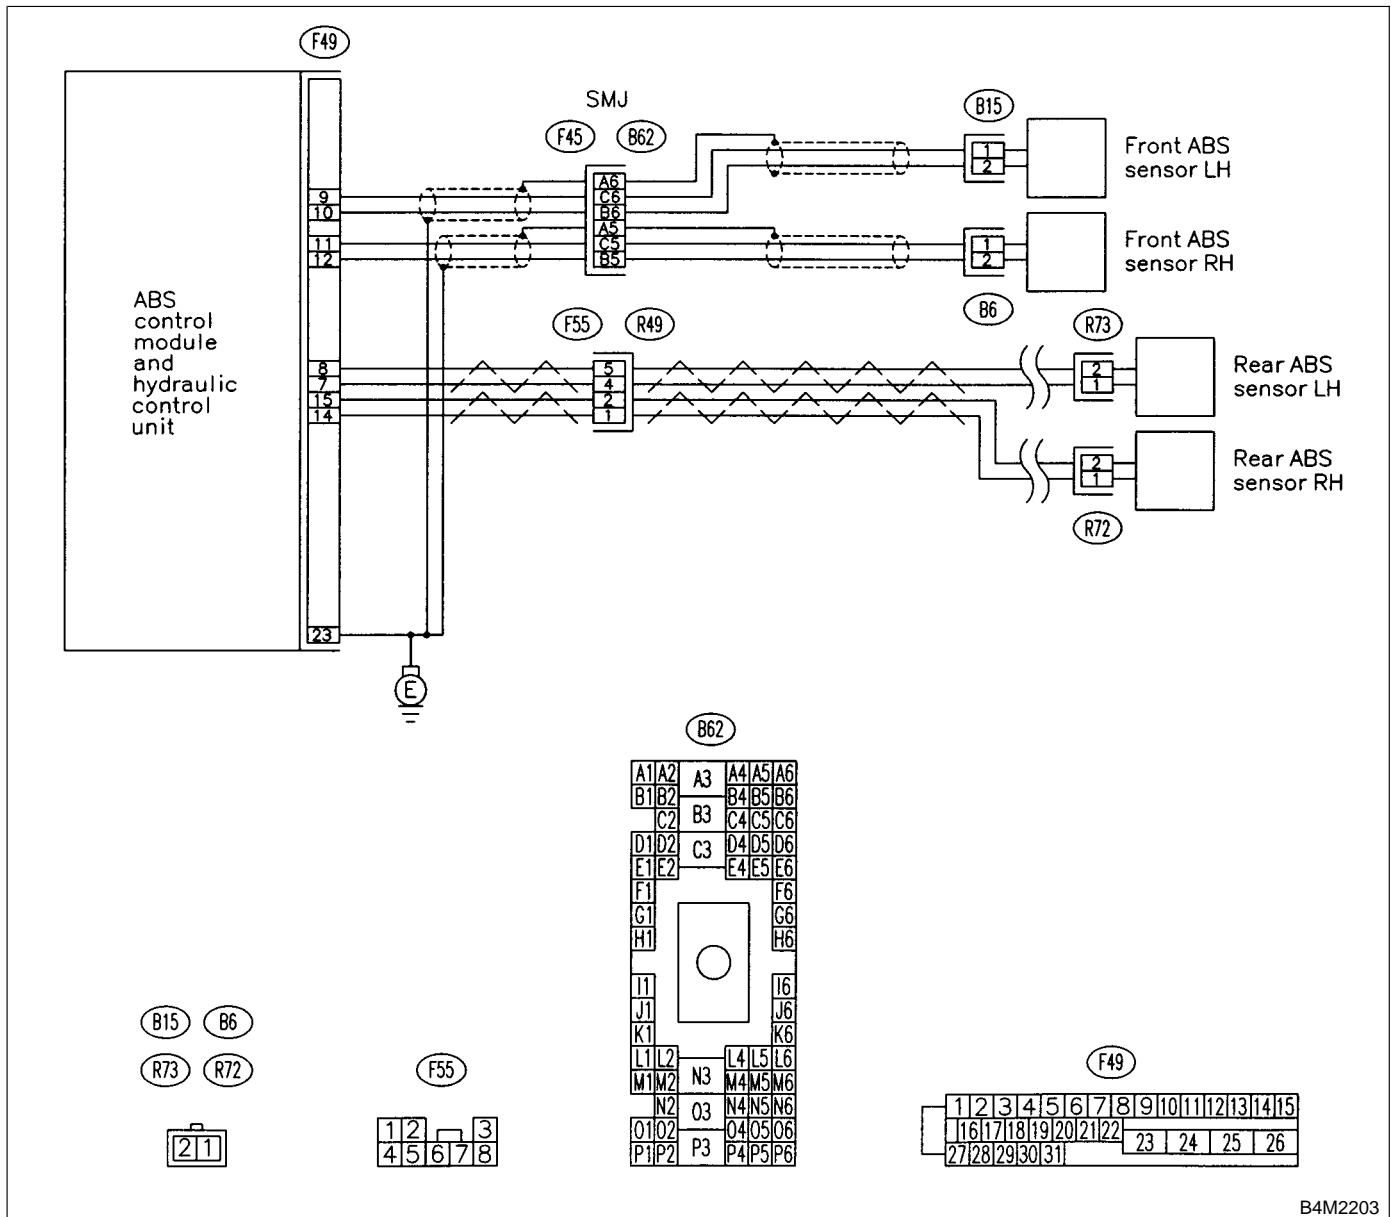

**10L1 : CHECK OUTPUT OF ABS SENSOR USING SELECT MONITOR.**

- 1) Select "Current data display & Save" on the select monitor.
- 2) Read the ABS sensor output corresponding to the faulty system in the select monitor data display mode.

**CHECK** : Does the speed indicated on the display change in response to the speedometer reading during acceleration/deceleration when the steering wheel is in the straight-ahead position?

**YES** : Go to step 10L2.

**NO** : Go to step 10L8.

**10L2 : CHECK POOR CONTACT IN CONNECTORS.**

Turn ignition switch to OFF.

**CHECK** : Is there poor contact in connectors between ABSCM&H/U and ABS sensor?

**YES** : Repair connector.

**NO** : Go to step 10L3.

**10L3 : CHECK SOURCES OF SIGNAL NOISE.**

**CHECK** : Is the car telephone or the wireless transmitter properly installed?

**YES** : Go to step 10L4.

**NO** : Properly install the car telephone or the wireless transmitter.

**10L4 : CHECK SOURCES OF SIGNAL NOISE.**

**CHECK** : Are noise sources (such as an antenna) installed near the sensor harness?

**YES** : Install the noise sources apart from the sensor harness.

**NO** : Go to step 10L5.

**10L5 : CHECK SHIELD CIRCUIT.**

- 1) Turn ignition switch to OFF.
- 2) Connect all connectors.
- 3) Measure resistance between shield connector and chassis ground.


**Connector & terminal**

**Trouble code 22 / (B62) No. A5 — Chassis ground:**

**Trouble code 24 / (B62) No. A6 — Chassis ground:**

**NOTE:**

For the **Trouble code 26** and **28**:  
Go to step 10L6.

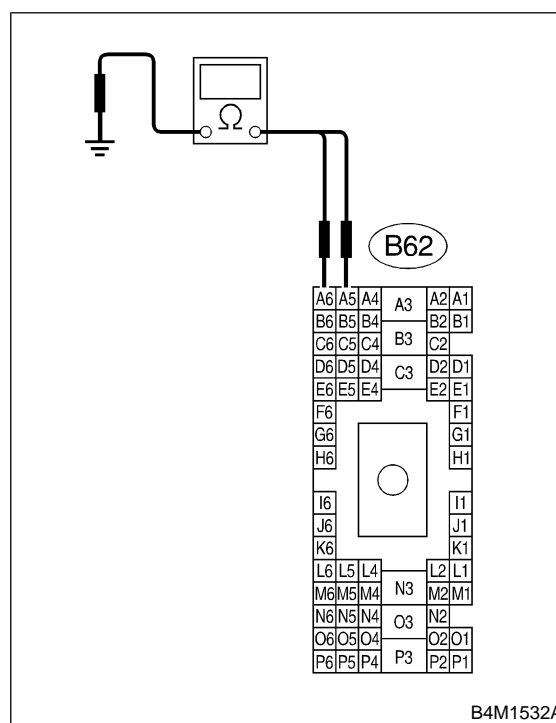

**CHECK** : Is the resistance less than 0.5 Ω?

**YES** : Go to step 10L6.

**NO** : Repair shield harness.

**10L6 : CHECK ABSCM&H/U.**

- 1) Connect all connectors.
- 2) Erase the memory.
- 3) Perform inspection mode.
- 4) Read out the trouble code.

**CHECK** : Is the same trouble code as in the current diagnosis still being output?

**YES** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>

**NO** : Go to step 10L7.

**10L7 : CHECK ANY OTHER TROUBLE CODES APPEARANCE.**

- CHECK** : Are other trouble codes being output?
- YES** : Proceed with the diagnosis corresponding to the trouble code.
- NO** : A temporary noise interference.

**10L8 : CHECK INSTALLATION OF ABS SENSOR.**


**Tightening torque:**

**32±10 N·m (3.3±1.0 kg·m, 24±7 ft·lb)**

- CHECK** : Are the ABS sensor installation bolts tightened securely?
- YES** : Go to step 10L9.
- NO** : Tighten ABS sensor installation bolts securely.

**10L9 : CHECK ABS SENSOR GAP.**

Measure tone wheel to ABS sensor piece gap over entire perimeter of the wheel.

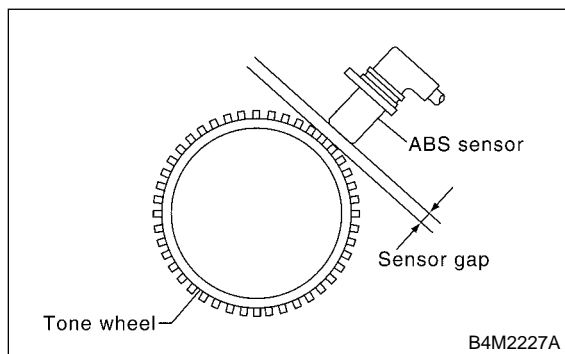

|                | Front wheel                        | Rear wheel                             |
|----------------|------------------------------------|--|
| Specifications | 0.3 — 0.8 mm<br>(0.012 — 0.031 in) | 0.44 — 0.94 mm<br>(0.0173 — 0.0370 in) |

- CHECK** : Is the gap within the specifications?
- YES** : Go to step 10L10.
- NO** : Adjust the gap.

**NOTE:**

Adjust the gap using spacer (Part No. 26755AA000). If spacers cannot correct the gap, replace worn sensor or worn tone wheel.

**10L10 : PREPARE OSCILLOSCOPE.**

- CHECK** : Is an oscilloscope available?
- YES** : Go to step 10L11.
- NO** : Go to step 10L12.

**10L11 : CHECK ABS SENSOR SIGNAL.**

- 1) Raise all four wheels of ground.
- 2) Turn ignition switch OFF.
- 3) Connect the oscilloscope to the connector.
- 4) Turn ignition switch ON.
- 5) Rotate wheels and measure voltage at specified frequency.

**NOTE:**

When this inspection is completed, the ABSCM&H/U sometimes stores the trouble code 29.


**Connector & terminal**

Trouble code 22 / (B62) No. C5 (+) — No. B5 (-):

Trouble code 24 / (B62) No. C6 (+) — No. B6 (-):

Trouble code 26 / (F55) No. 1 (+) — No. 2 (-):

Trouble code 28 / (F55) No. 4 (+) — No. 5 (-):

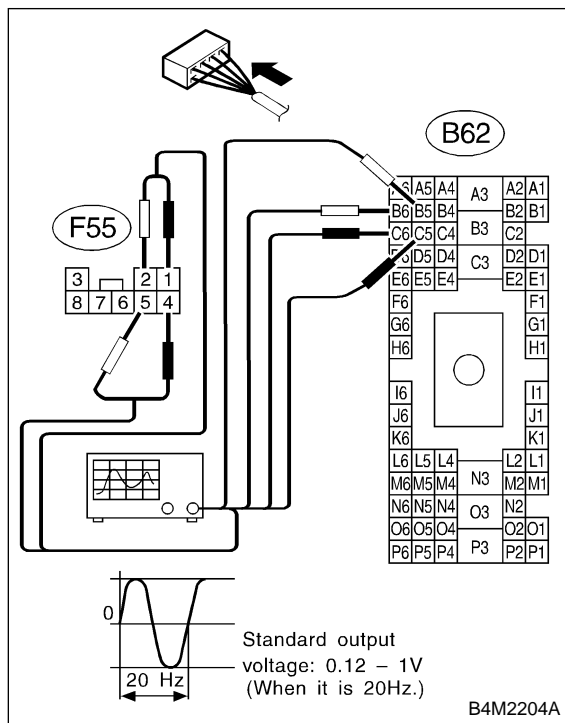

**CHECK** : *Is oscilloscope pattern smooth, as shown in figure?*

**YES** : Go to step 10L15.

**NO** : Go to step 10L12.

**10L12 : CHECK CONTAMINATION OF ABS SENSOR OR TONE WHEEL.**

Remove disc rotor or drum from hub in accordance with trouble code.

**CHECK** : *Is the ABS sensor piece or the tone wheel contaminated by dirt or other foreign matter?*

**YES** : Thoroughly remove dirt or other foreign matter.

**NO** : Go to step 10L13.

**10L13 : CHECK DAMAGE OF ABS SENSOR OR TONE WHEEL.**

**CHECK** : *Are there broken or damaged in the ABS sensor piece or the tone wheel?*

**YES** : Replace ABS sensor or tone wheel. <Ref. to 4-4 [W14A0].> and <Ref. to 4-2 [W3A0].>

**NO** : Go to step 10L14.

**10L14 : CHECK TONE WHEEL RUNOUT.**

Measure tone wheel runout.


**CHECK** : *Is the runout less than 0.05 mm (0.0020 in)?*

**YES** : Go to step 10L15.

**NO** : Replace tone wheel. <Ref. to 4-2 [W3A0].>

**10L15 : CHECK RESISTANCE OF ABS SENSOR.**


- 1) Turn ignition switch OFF.
- 2) Disconnect connector from ABS sensor.
- 3) Measure resistance between ABS sensor connector terminals.

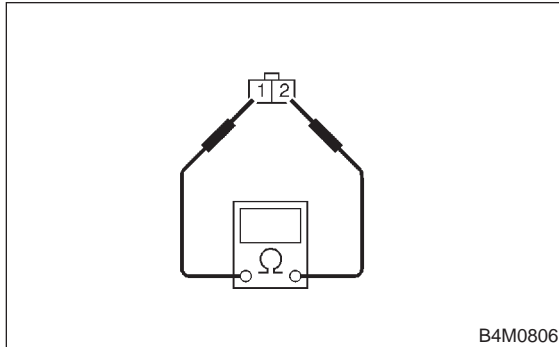**Terminal****Front RH No. 1 — No. 2:****Front LH No. 1 — No. 2:****Rear RH No. 1 — No. 2:****Rear LH No. 1 — No. 2:**

- CHECK** : **Is the resistance between 1 and 1.5 kΩ?**
- YES** : Go to step **10L16**.
- NO** : Replace ABS sensor. <Ref. to 4-4 [W14A0].>

**10L16 : CHECK GROUND SHORT OF ABS SENSOR.**

Measure resistance between ABS sensor and chassis ground.

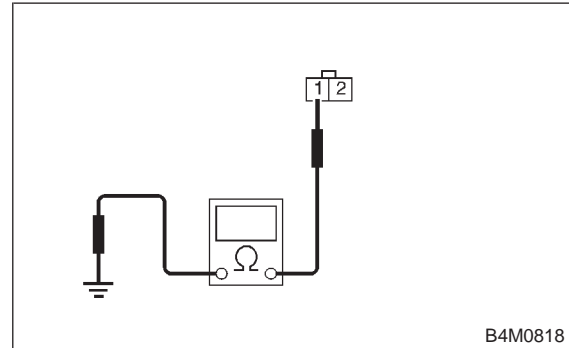**Terminal****Front RH No. 1 — Chassis ground:****Front LH No. 1 — Chassis ground:****Rear RH No. 1 — Chassis ground:****Rear LH No. 1 — Chassis ground:**


- CHECK** : **Is the resistance more than 1 MΩ?**
- YES** : Go to step **10L17**.
- NO** : Replace ABS sensor. <Ref. to 4-4 [W14A0].>

**10L17 : CHECK HARNESS/CONNECTOR BETWEEN ABSCM&H/U AND ABS SENSOR.**

- 1) Connect connector to ABS sensor.
- 2) Disconnect connector from ABSCM&H/U.
- 3) Measure resistance at ABSCM&H/U connector terminals.

**Connector & terminal**

- Trouble code 22 / (F49) No. 11 — No. 12:**
- Trouble code 24 / (F49) No. 9 — No. 10:**
- Trouble code 26 / (F49) No. 14 — No. 15:**
- Trouble code 28 / (F49) No. 7 — No. 8:**

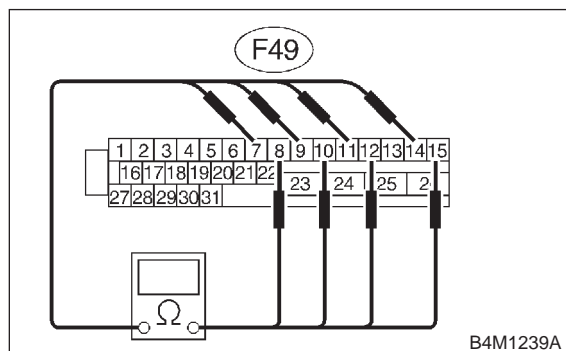


- CHECK** : Is the resistance between 1 and 1.5 kΩ?
- YES** : Go to step 10L18.
- NO** : Repair harness/connector between ABSCM&H/U and ABS sensor.

**10L18 : CHECK GROUND SHORT OF HARNESS.**

Measure resistance between ABSCM&H/U connector and chassis ground.

**Connector & terminal**

- Trouble code 22 / (F49) No. 11 — Chassis ground:**
- Trouble code 24 / (F49) No. 9 — Chassis ground:**
- Trouble code 26 / (F49) No. 14 — Chassis ground:**
- Trouble code 28 / (F49) No. 7 — Chassis ground:**

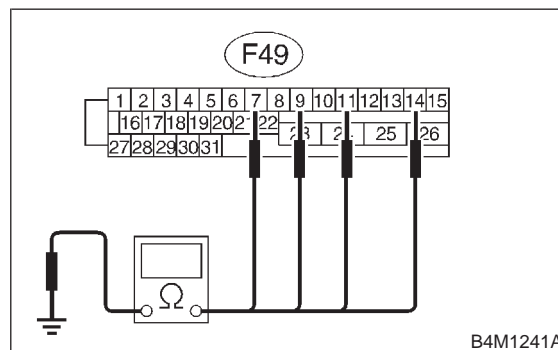


- CHECK** : Is the resistance more than 1 MΩ?
- YES** : Go to step 10L19.
- NO** : Repair harness/connector between ABSCM&H/U and ABS sensor.

**10L19 : CHECK GROUND CIRCUIT OF ABSCM&H/U.**

Measure resistance between ABSCM&H/U and chassis ground.

**Connector & terminal**

**(F49) No. 23 — GND:**

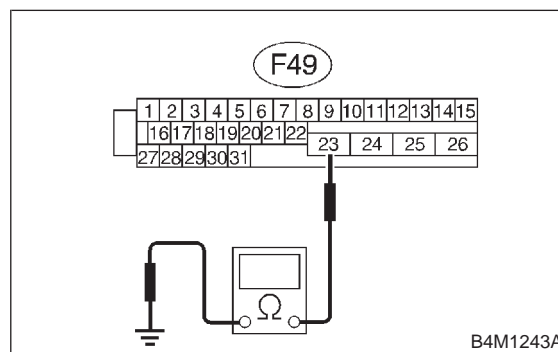

- CHECK** : Is the resistance less than 0.5 Ω?
- YES** : Go to step 10L20.
- NO** : Repair ABSCM&H/U ground harness.



**10L20 : CHECK POOR CONTACT IN CONNECTORS.**

- CHECK** : *Is there poor contact in connectors between ABSCM&H/U and ABS sensor? <Ref. to FOREWORD [W3C1].>*
- YES** : Repair connector.
- NO** : Go to step 10L21.

**10L21 : CHECK SOURCES OF SIGNAL NOISE.**

- CHECK** : *Is the car telephone or the wireless transmitter properly installed?*
- YES** : Go to step 10L22.
- NO** : Properly install the car telephone or the wireless transmitter.

**10L22 : CHECK SOURCES OF SIGNAL NOISE.**

- CHECK** : *Are noise sources (such as an antenna) installed near the sensor harness?*
- YES** : Install the noise sources apart from the sensor harness.
- NO** : Go to step 10L23.

**10L23 : CHECK SHIELD CIRCUIT.**


- 1) Connect all connectors.
- 2) Measure resistance between shield connector and chassis ground.

**Connector & terminal**

**Trouble code 22 / (B62) No. A5 — Chassis ground:**

**Trouble code 24 / (B62) No. A6 — Chassis ground:**

NOTE:  
For the **Trouble code 26** and **28**:  
Go to step 10L24.

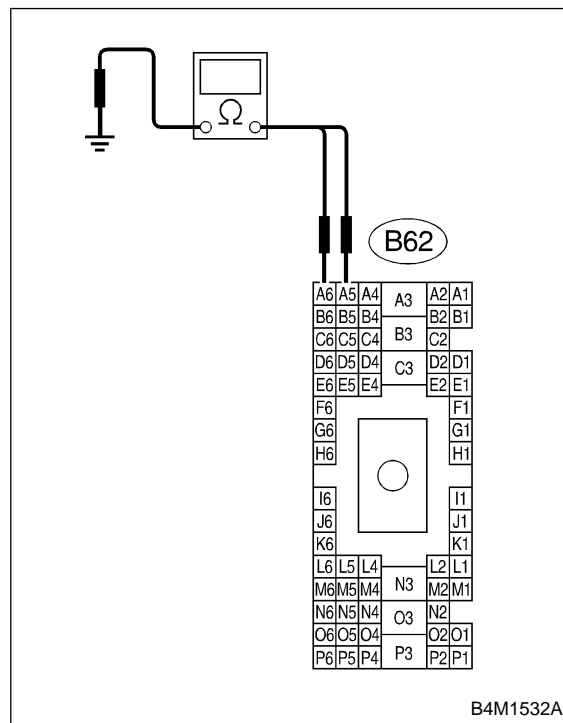

- CHECK** : *Is the resistance less than 0.5 Ω?*
- YES** : Go to step 10L24.
- NO** : Repair shield harness.

**10L24 : CHECK ABSCM&H/U.**

- 1) Connect all connectors.
  - 2) Erase the memory.
  - 3) Perform inspection mode.
  - 4) Read out the trouble code.
- CHECK** : *Is the same trouble code as in the current diagnosis still being output?*
  - YES** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>
  - NO** : Go to step 10L25.

**10L25 : CHECK ANY OTHER TROUBLE CODES APPEARANCE.**

- CHECK** : *Are other trouble codes being output?*
- YES** : Proceed with the diagnosis corresponding to the trouble code.
- NO** : A temporary noise interference.

**M: TROUBLE CODE 29 ABNORMAL ABS SENSOR SIGNAL ON ANY ONE OF FOUR SENSOR**

**— ABNORMAL ABS SENSOR SIGNAL ON ANY ONE OF FOUR —**


**DIAGNOSIS:**

- Faulty ABS sensor signal (noise, irregular signal, etc.)
- Faulty tone wheel
- Wheels turning freely for a long time

**TROUBLE SYMPTOM:**

- ABS does not operate.

**WIRING DIAGRAM:**

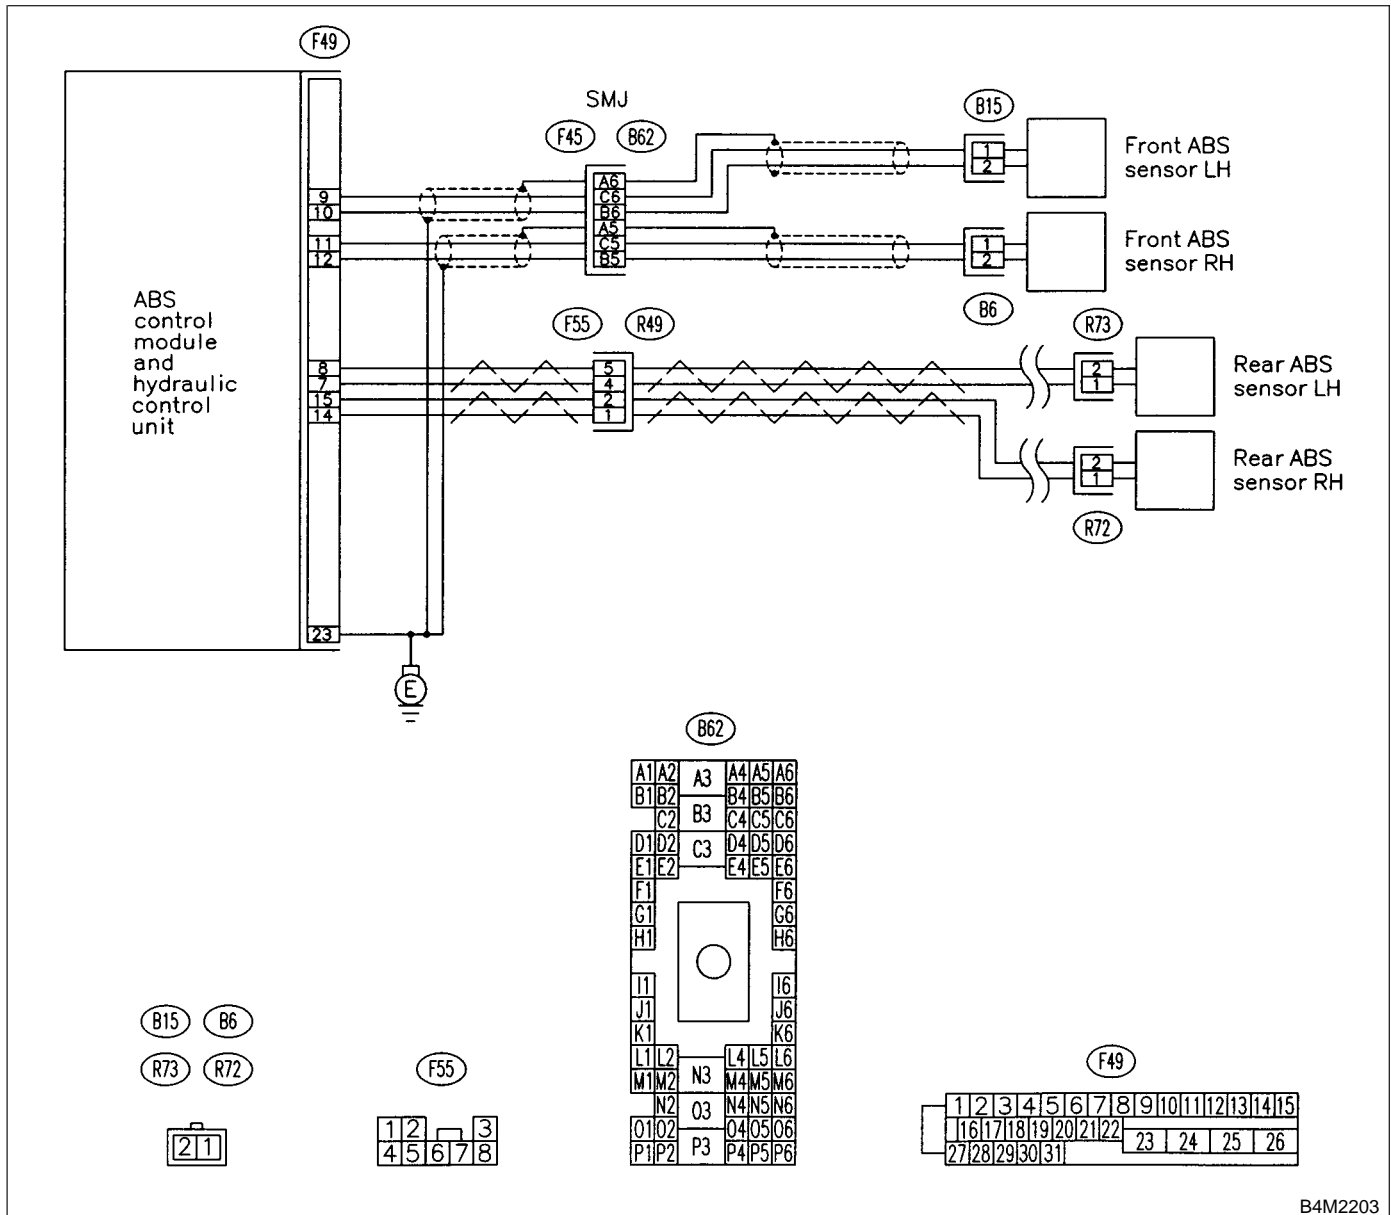

**10M1 : CHECK IF THE WHEELS HAVE TURNED FREELY FOR A LONG TIME.**

**CHECK** : *Check if the wheels have been turned freely for more than one minute, such as when the vehicle is jacked-up, under full-lock cornering or when tire is not in contact with road surface.*

**YES** : The ABS is normal. Erase the trouble code.

**NOTE:**

When the wheels turn freely for a long time, such as when the vehicle is towed or jacked-up, or when steering wheel is continuously turned all the way, this trouble code may sometimes occur.

**NO** : Go to step **10M2**.

**10M2 : CHECK TIRE SPECIFICATIONS.**

Turn ignition switch to OFF.

**CHECK** : *Are the tire specifications correct?*

**YES** : Go to step **10M3**.

**NO** : Replace tire.

**10M3 : CHECK WEAR OF TIRE.**

**CHECK** : *Is the tire worn excessively?*

**YES** : Replace tire.

**NO** : Go to step **10M4**.

**10M4 : CHECK TIRE PRESSURE.**

**CHECK** : *Is the tire pressure correct?*

**YES** : Go to step **10M5**.

**NO** : Adjust tire pressure.

**10M5 : CHECK INSTALLATION OF ABS SENSOR.**

**Tightening torque:**

**$32 \pm 10$  N-m ( $3.3 \pm 1.0$  kg-m,  $24 \pm 7$  ft-lb)**


**CHECK** : *Are the ABS sensor installation bolts tightened securely?*

**YES** : Go to step **10M6**.

**NO** : Tighten ABS sensor installation bolts securely.

**10M6 : CHECK ABS SENSOR GAP.**

Measure tone wheel to ABS sensor piece gap over entire perimeter of the wheel.

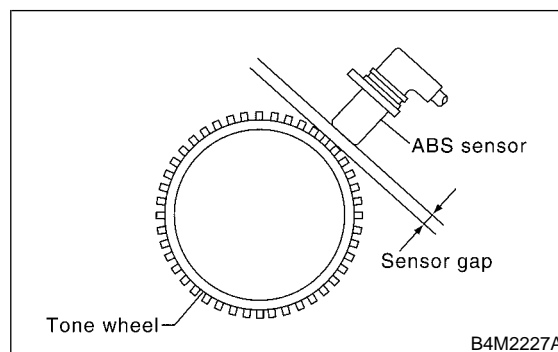

|                | Front wheel                        | Rear wheel                             |
|----------------|------------------------------------|--|
| Specifications | 0.3 — 0.8 mm<br>(0.012 — 0.031 in) | 0.44 — 0.94 mm<br>(0.0173 — 0.0370 in) |

**CHECK** : *Is the gap within the specifications?*

**YES** : Go to step **10M7**.

**NO** : Adjust the gap.

**NOTE:**

Adjust the gap using spacer (Part No. 26755AA000). If spacers cannot correct the gap, replace worn sensor or worn tone wheel.

**10M7 : PREPARE OSCILLOSCOPE.**

**CHECK** : *Is an oscilloscope available?*

**YES** : Go to step **10M8**.

**NO** : Go to step **10M9**.

**10M8 : CHECK ABS SENSOR SIGNAL.**


- 1) Raise all four wheels of ground.
- 2) Turn ignition switch OFF.
- 3) Connect the oscilloscope to the connector (B62) in accordance with trouble code.
- 4) Turn ignition switch ON.
- 5) Rotate wheels and measure voltage at specified frequency.

**NOTE:**

When this inspection is completed, the ABSCM&H/U sometimes stores the trouble code 29.

**Connector & terminal**

- (B62) No. C5 (+) — No. B5 (-) (Front RH):
- (B62) No. C6 (+) — No. B6 (-) (Front LH):
- (F55) No. 1 (+) — No. 2 (-) (Rear RH):
- (F55) No. 4 (+) — No. 5 (-) (Rear LH):

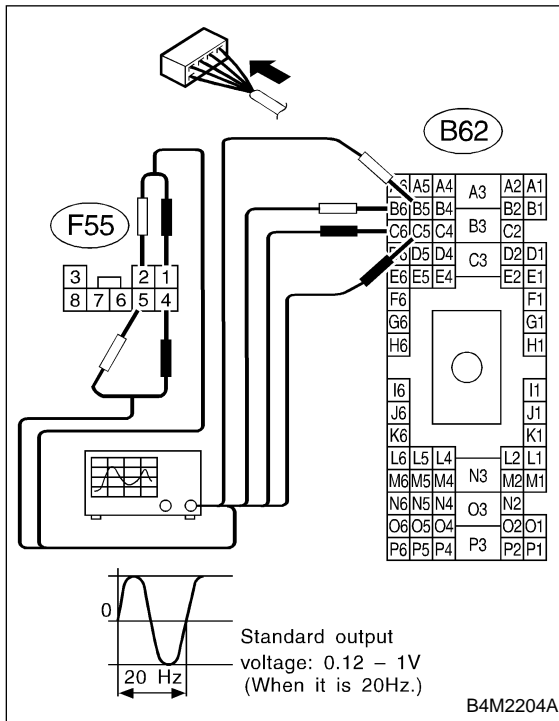

- CHECK** : *Is oscilloscope pattern smooth, as shown in figure?*
- YES** : Go to step **10M12**.
- NO** : Go to step **10M9**.

**10M9 : CHECK CONTAMINATION OF ABS SENSOR OR TONE WHEEL.**

Remove disc rotor from hub.

- CHECK** : *Is the ABS sensor piece or the tone wheel contaminated by dirt or other foreign matter?*
- YES** : Thoroughly remove dirt or other foreign matter.
- NO** : Go to step **10M10**.

**10M10 : CHECK DAMAGE OF ABS SENSOR OR TONE WHEEL.**

- CHECK** : *Are there broken or damaged teeth in the ABS sensor piece or the tone wheel?*
- YES** : Replace ABS sensor or tone wheel. <Ref. to 4-4 [W14A0].> and <Ref. to 4-2 [W3A0].>
- NO** : Go to step **10M11**.

**10M11 : CHECK TONE WHEEL RUNOUT.**

Measure tone wheel runout.

- CHECK** : *Is the runout less than 0.05 mm (0.0020 in)?*
- YES** : Go to step **10M12**.
- NO** : Replace tone wheel. <Ref. to 4-2 [W3A0].>

**10M12 : CHECK ABSCM&H/U.**

- 1) Turn ignition switch to OFF.
  - 2) Connect all connectors.
  - 3) Erase the memory.
  - 4) Perform inspection mode.
  - 5) Read out the trouble code.
- CHECK** : *Is the same trouble code as in the current diagnosis still being output?*
  - YES** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>
  - NO** : Go to step **10M13**.

**10M13 : CHECK ANY OTHER TROUBLE CODES APPEARANCE.**

- CHECK** : *Are other trouble codes being output?*
- YES** : Proceed with the diagnosis corresponding to the trouble code.
- NO** : A temporary poor contact.

**N: TROUBLE CODE 31 FRONT RIGHT INLET VALVE MALFUNCTION**

**O: TROUBLE CODE 33 FRONT LEFT INLET VALVE MALFUNCTION**

**P: TROUBLE CODE 35 REAR RIGHT INLET VALVE MALFUNCTION**

**Q: TROUBLE CODE 37 REAR LEFT INLET VALVE MALFUNCTION**

**— INLET SOLENOID VALVE MALFUNCTION —**


**DIAGNOSIS:**

- Faulty harness/connector
- Faulty inlet solenoid valve

**TROUBLE SYMPTOM:**

- ABS does not operate.


**WIRING DIAGRAM:**

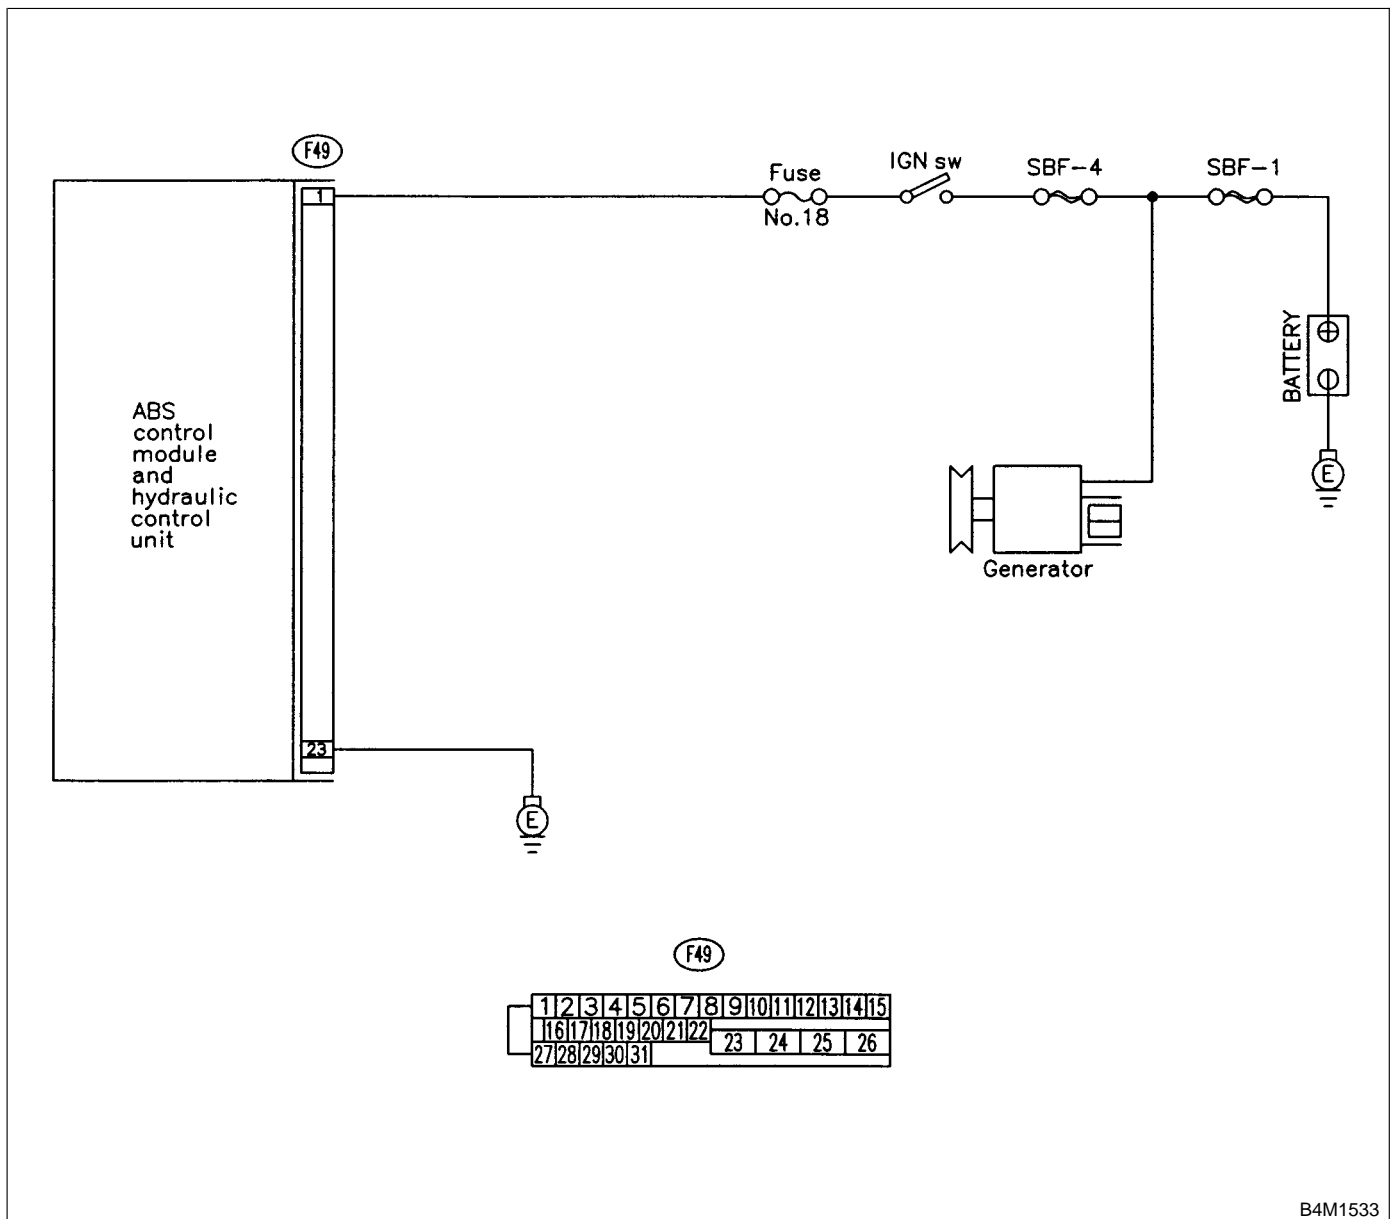

**10Q1 : CHECK INPUT VOLTAGE OF ABSCM&H/U.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ABSCM&H/U.
- 3) Run the engine at idle.
- 4) Measure voltage between ABSCM&H/U connector and chassis ground.

**Connector & terminal**  
**(F49) No. 1 (+) — Chassis ground (-):**

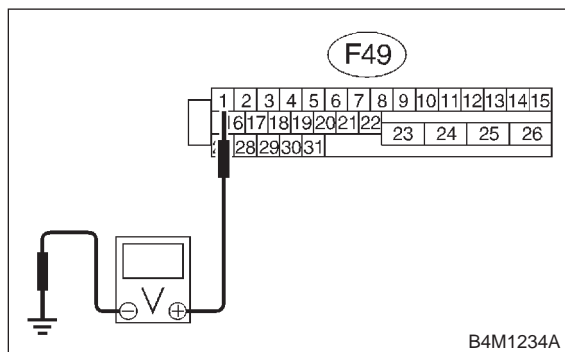


- CHECK** : *Is the voltage between 10 and 15 V?*
- YES** : Go to step 10Q2.
- NO** : Repair harness connector between battery, ignition switch and ABSCM&H/U.

**10Q2 : CHECK GROUND CIRCUIT OF ABSCM&H/U.**

- 1) Turn ignition switch to OFF.
- 2) Measure resistance between ABSCM&H/U connector and chassis ground.

**Connector & terminal**  
**(F49) No. 23 — Chassis ground:**

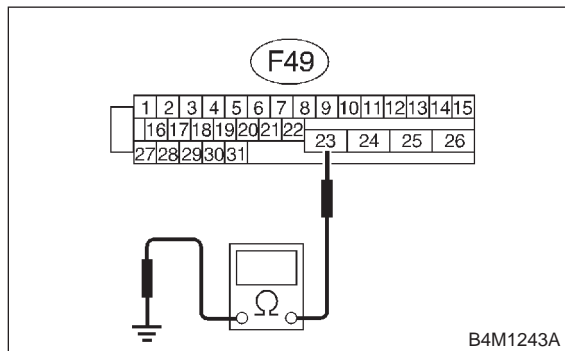

- CHECK** : *Is the resistance less than 0.5 Ω?*
- YES** : Go to step 10Q3.
- NO** : Repair ABSCM&H/U ground harness.

**10Q3 : CHECK POOR CONTACT IN CONNECTORS.**

- CHECK** : *Is there poor contact in connectors between generator, battery and ABSCM&H/U? <Ref. to FOREWORD [W3C1].>*
- YES** : Repair connector.
- NO** : Go to step 10Q4.

**10Q4 : CHECK ABSCM&H/U.**

- 1) Connect all connectors.
  - 2) Erase the memory.
  - 3) Perform inspection mode.
  - 4) Read out the trouble code.
- CHECK** : *Is the same trouble code as in the current diagnosis still being output?*
- YES** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>
- NO** : Go to step 10Q5.

**10Q5 : CHECK ANY OTHER TROUBLE CODES APPEARANCE.**

- CHECK** : *Are other trouble codes being output?*
- YES** : Proceed with the diagnosis corresponding to the trouble code.
- NO** : A temporary poor contact.



R: TROUBLE CODE 32 FRONT RIGHT OUTLET VALVE MALFUNCTION

S: TROUBLE CODE 34 FRONT LEFT OUTLET VALVE MALFUNCTION

T: TROUBLE CODE 36 REAR RIGHT OUTLET VALVE MALFUNCTION

U: TROUBLE CODE 38 REAR LEFT OUTLET VALVE MALFUNCTION

— OUTLET SOLENOID VALVE MALFUNCTION —


**DIAGNOSIS:**

- Faulty harness/connector
- Faulty outlet solenoid valve

**TROUBLE SYMPTOM:**

- ABS does not operate.


**WIRING DIAGRAM:**

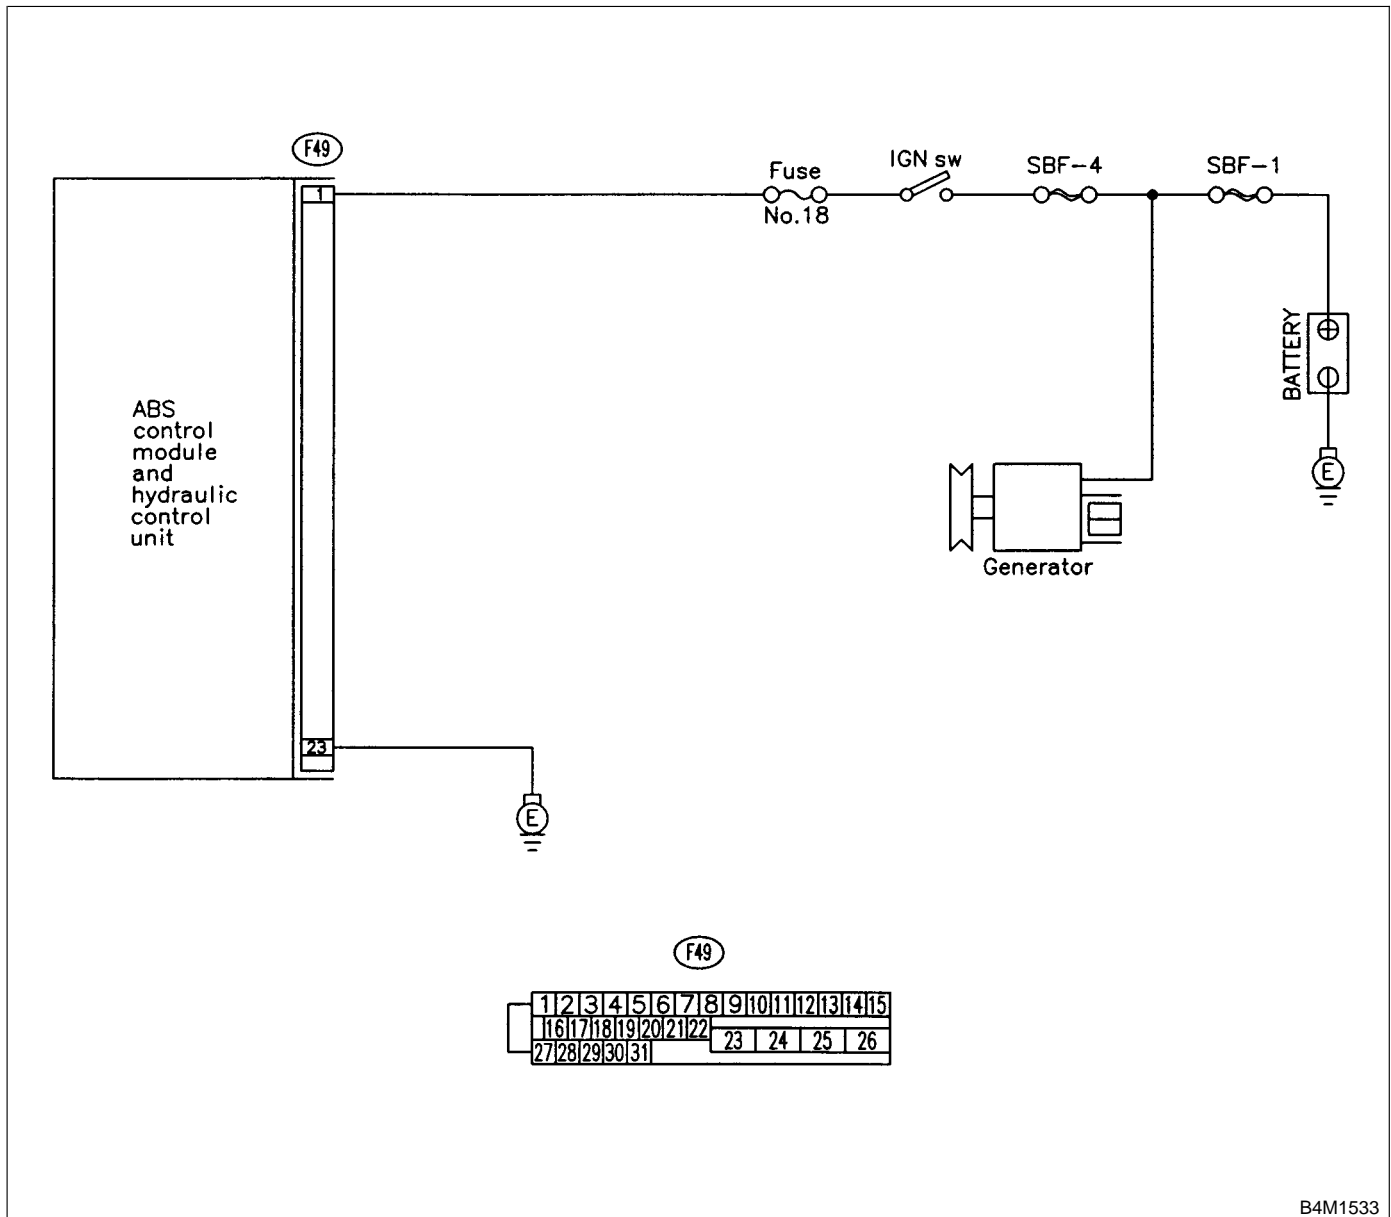

**10U1 : CHECK INPUT VOLTAGE OF ABSCM&H/U.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ABSCM&H/U.
- 3) Run the engine at idle.
- 4) Measure voltage between ABSCM&H/U connector and chassis ground.

**Connector & terminal**  
**(F49) No. 1 (+) — Chassis ground (-):**

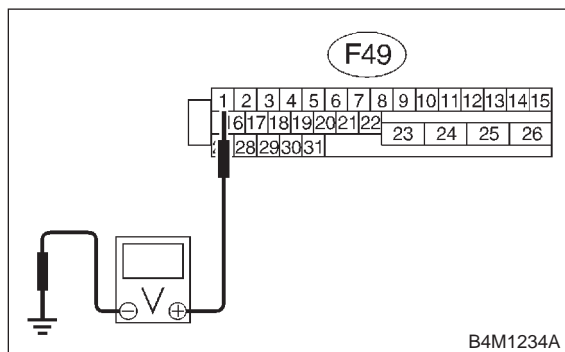


- CHECK** : *Is the voltage between 10 and 15 V?*
- YES** : Go to step 10U2.
- NO** : Repair harness connector between battery, ignition switch and ABSCM&H/U.

**10U2 : CHECK GROUND CIRCUIT OF ABSCM&H/U.**

- 1) Turn ignition switch to OFF.
- 2) Measure resistance between ABSCM&H/U connector and chassis ground.

**Connector & terminal**  
**(F49) No. 23 — Chassis ground:**

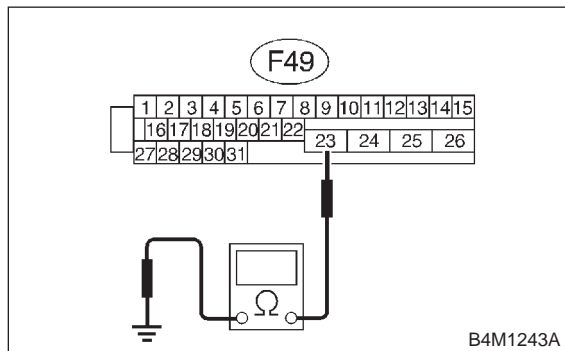

- CHECK** : *Is the resistance less than 0.5 Ω?*
- YES** : Go to step 10U3.
- NO** : Repair ABSCM&H/U ground harness.

**10U3 : CHECK POOR CONTACT IN CONNECTORS.**

- CHECK** : *Is there poor contact in connectors between generator, battery and ABSCM&H/U? <Ref. to FOREWORD [W3C1].>*
- YES** : Repair connector.
- NO** : Go to step 10U4.

**10U4 : CHECK ABSCM&H/U.**

- 1) Connect all connectors.
  - 2) Erase the memory.
  - 3) Perform inspection mode.
  - 4) Read out the trouble code.
- CHECK** : *Is the same trouble code as in the current diagnosis still being output?*
- YES** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>
- NO** : Go to step 10U5.

**10U5 : CHECK ANY OTHER TROUBLE CODES APPEARANCE.**

- CHECK** : *Are other trouble codes being output?*
- YES** : Proceed with the diagnosis corresponding to the trouble code.
- NO** : A temporary poor contact.

**V: TROUBLE CODE 41 ABS CONTROL MODULE MALFUNCTION  
 — ABS CONTROL MODULE AND HYDRAULIC CONTROL UNIT  
 MALFUNCTION —**


**DIAGNOSIS:**

- Faulty ABSCM&H/U

**TROUBLE SYMPTOM:**

- ABS does not operate.


**WIRING DIAGRAM:**

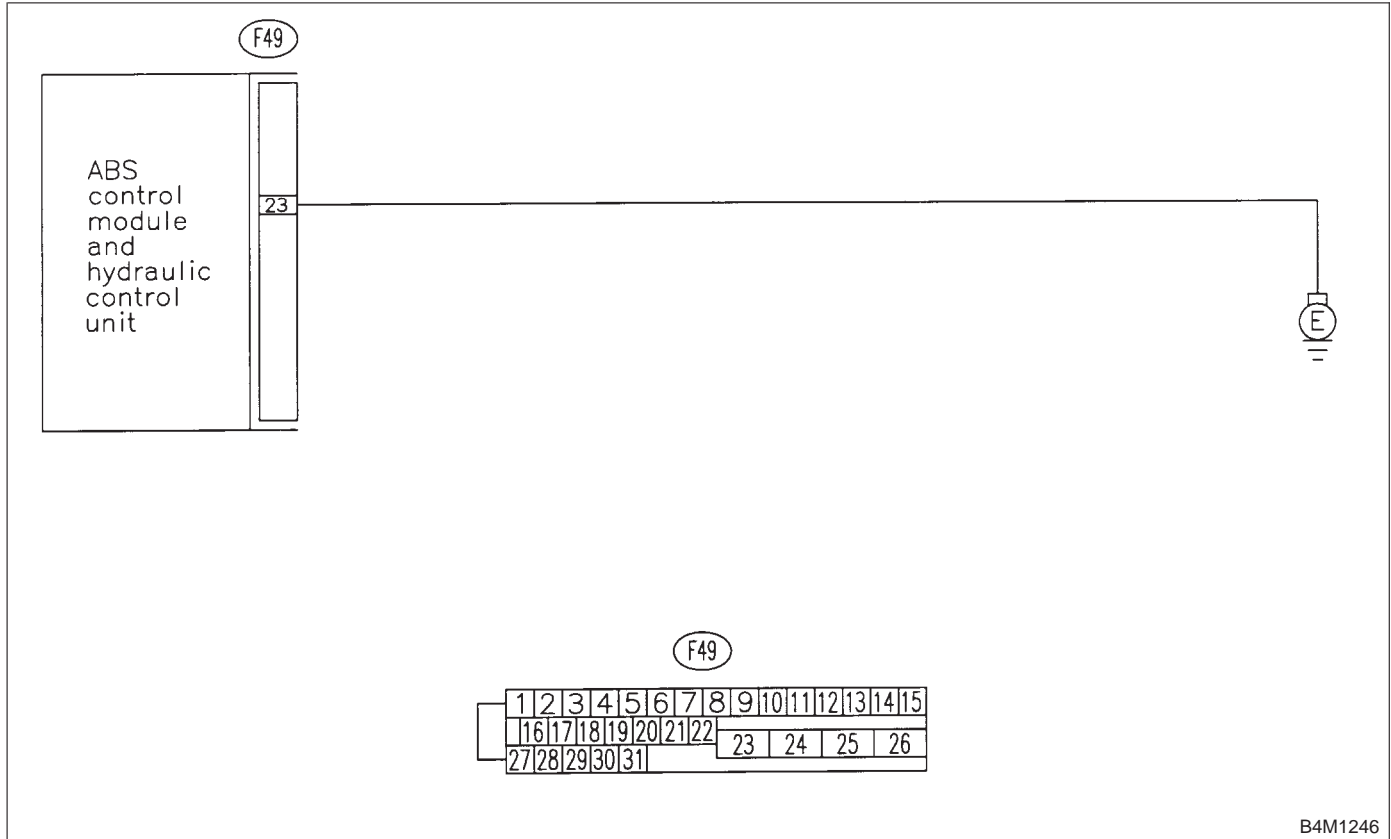

B4M1246

**10V1 : CHECK GROUND CIRCUIT OF ABSCM&H/U.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ABSCM&H/U.
- 3) Measure resistance between ABSCM&H/U and chassis ground.

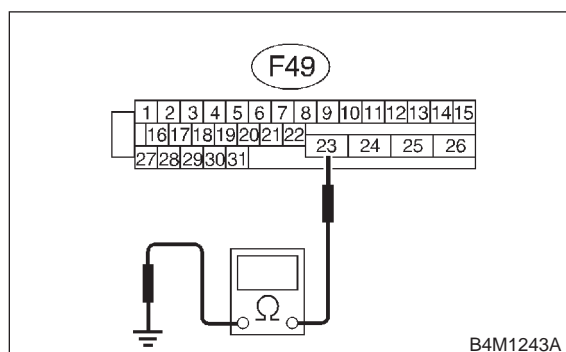**Connector & terminal****(F49) No. 23 — Chassis ground:**

- CHECK** : *Is the resistance less than 0.5 Ω?*
- YES** : Go to step 10V2.
- NO** : Repair ABSCM&H/U ground harness.

**10V2 : CHECK POOR CONTACT IN CONNECTORS.**

- CHECK** : *Is there poor contact in connectors between battery, ignition switch and ABSCM&H/U? <Ref. to FOREWORD [W3C1].>*
- YES** : Repair connector.
- NO** : Go to step 10V3.

**10V3 : CHECK SOURCES OF SIGNAL NOISE.**

- CHECK** : *Is the car telephone or the wireless transmitter properly installed?*
- YES** : Go to step 10V4.
- NO** : Properly install the car telephone or the wireless transmitter.

**10V4 : CHECK SOURCES OF SIGNAL NOISE.**

- CHECK** : *Are noise sources (such as an antenna) installed near the sensor harness?*
- YES** : Install the noise sources apart from the sensor harness.
- NO** : Go to step 10V5.

**10V5 : CHECK ABSCM&H/U.**

- 1) Turn ignition switch to OFF.
  - 2) Connect all connectors.
  - 3) Erase the memory.
  - 4) Perform inspection mode.
  - 5) Read out the trouble code.
- CHECK** : *Is the same trouble code as in the current diagnosis still being output?*
- YES** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>
- NO** : Go to step 10V6.

**10V6 : CHECK ANY OTHER TROUBLE CODES APPEARANCE.**

- CHECK** : *Are other trouble codes being output?*
- YES** : Proceed with the diagnosis corresponding to the trouble code.
- NO** : A temporary poor contact.

**W: TROUBLE CODE 42 POWER SUPPLY VOLTAGE TOO LOW**  
**— POWER SUPPLY VOLTAGE TOO LOW —**


**DIAGNOSIS:**

- Power source voltage of the ABSCM&H/U is low.

**TROUBLE SYMPTOM:**

- ABS does not operate.

**WIRING DIAGRAM:**

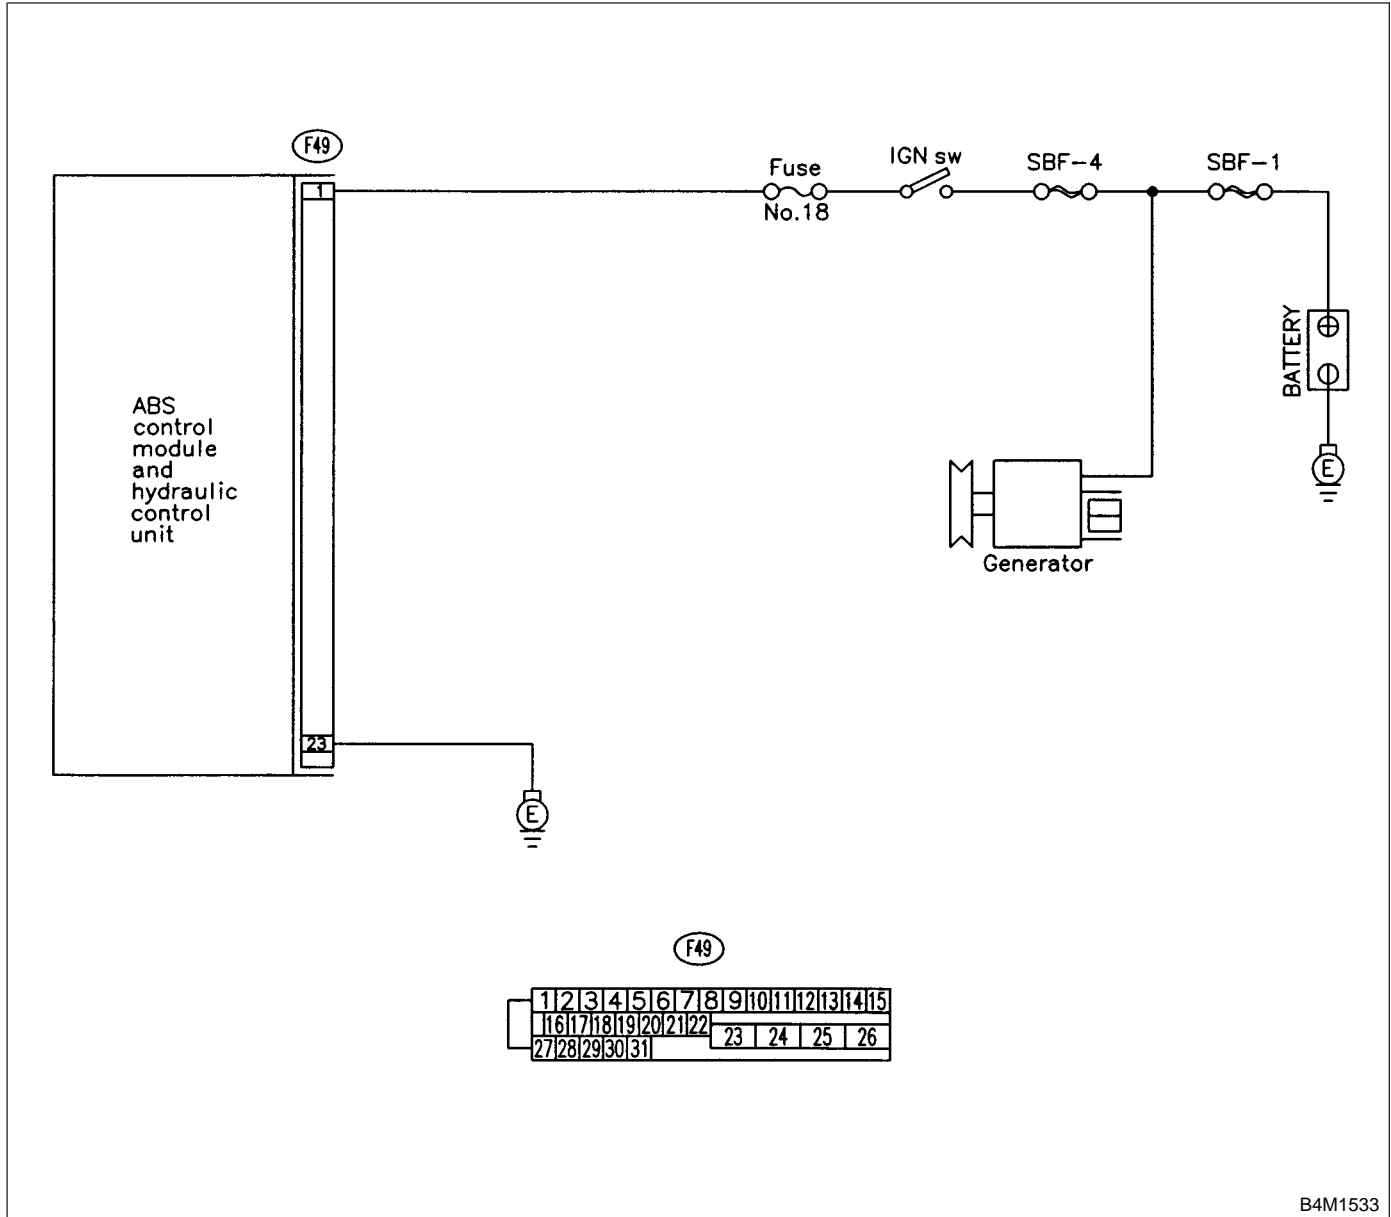


B4M1533

**10W1 : CHECK GENERATOR.**

- 1) Start engine.
- 2) Idling after warm-up.
- 3) Measure voltage between generator B terminal and chassis ground.

**Terminal**

**Generator B terminal — Chassis ground:**

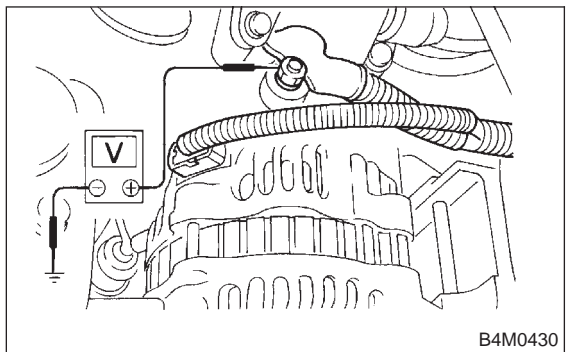

- CHECK** : *Is the voltage between 10 and 15 V?*
- YES** : Go to step 10W2.
- NO** : Repair generator. <Ref. to 6-1 [W2A0].>

**10W2 : CHECK BATTERY TERMINAL.**

Turn ignition switch to OFF.


- CHECK** : *Are the positive and negative battery terminals tightly clamped?*
- YES** : Go to step 10W3.
- NO** : Tighten the clamp of terminal.

**10W3 : CHECK INPUT VOLTAGE OF ABSCM&H/U.**

- 1) Disconnect connector from ABSCM&H/U.
- 2) Run the engine at idle.
- 3) Measure voltage between ABSCM&H/U connector and chassis ground.

**Connector & terminal**

**(F49) No. 1 (+) — Chassis ground (-):**

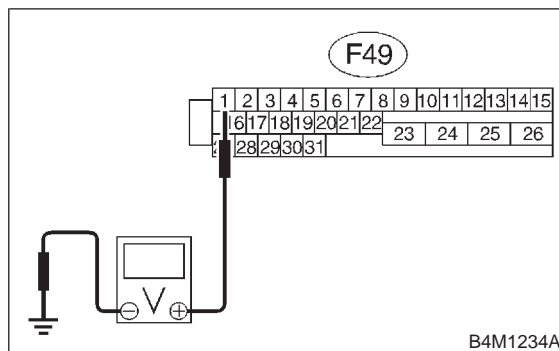


- CHECK** : *Is the voltage between 10 and 15 V?*
- YES** : Go to step 10W4.
- NO** : Repair harness connector between battery, ignition switch and ABSCM&H/U.

**10W4 : CHECK GROUND CIRCUIT OF ABSCM&H/U.**

- 1) Turn ignition switch to OFF.
- 2) Measure resistance between ABSCM&H/U connector and chassis ground.

**Connector & terminal**

**(F49) No. 23 — Chassis ground:**

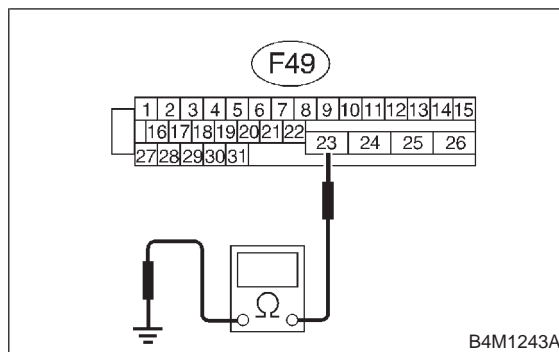

- CHECK** : *Is the resistance less than 0.5 Ω?*
- YES** : Go to step 10W5.
- NO** : Repair ABSCM&H/U ground harness.

**10W5 : CHECK POOR CONTACT IN CONNECTORS.**

**CHECK** : *Is there poor contact in connectors between generator, battery and ABSCM&H/U? <Ref. to FOREWORD [W3C1].>*

**YES** : Repair connector.

**NO** : Go to step **10W6**.

**10W6 : CHECK ABSCM&H/U.**

- 1) Connect all connectors.
- 2) Erase the memory.
- 3) Perform inspection mode.
- 4) Read out the trouble code.

**CHECK** : *Is the same trouble code as in the current diagnosis still being output?*

**YES** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>

**NO** : Go to step **10W7**.

**10W7 : CHECK ANY OTHER TROUBLE CODES APPEARANCE.**

**CHECK** : *Are other trouble codes being output?*

**YES** : Proceed with the diagnosis corresponding to the trouble code.

**NO** : A temporary poor contact.

**MEMO:**



**X: TROUBLE CODE 42 POWER SUPPLY VOLTAGE TOO HIGH**  
**— POWER SUPPLY VOLTAGE TOO HIGH —**


**DIAGNOSIS:**

- Power source voltage of the ABSCM&H/U is high.

**TROUBLE SYMPTOM:**

- ABS does not operate.

**WIRING DIAGRAM:**

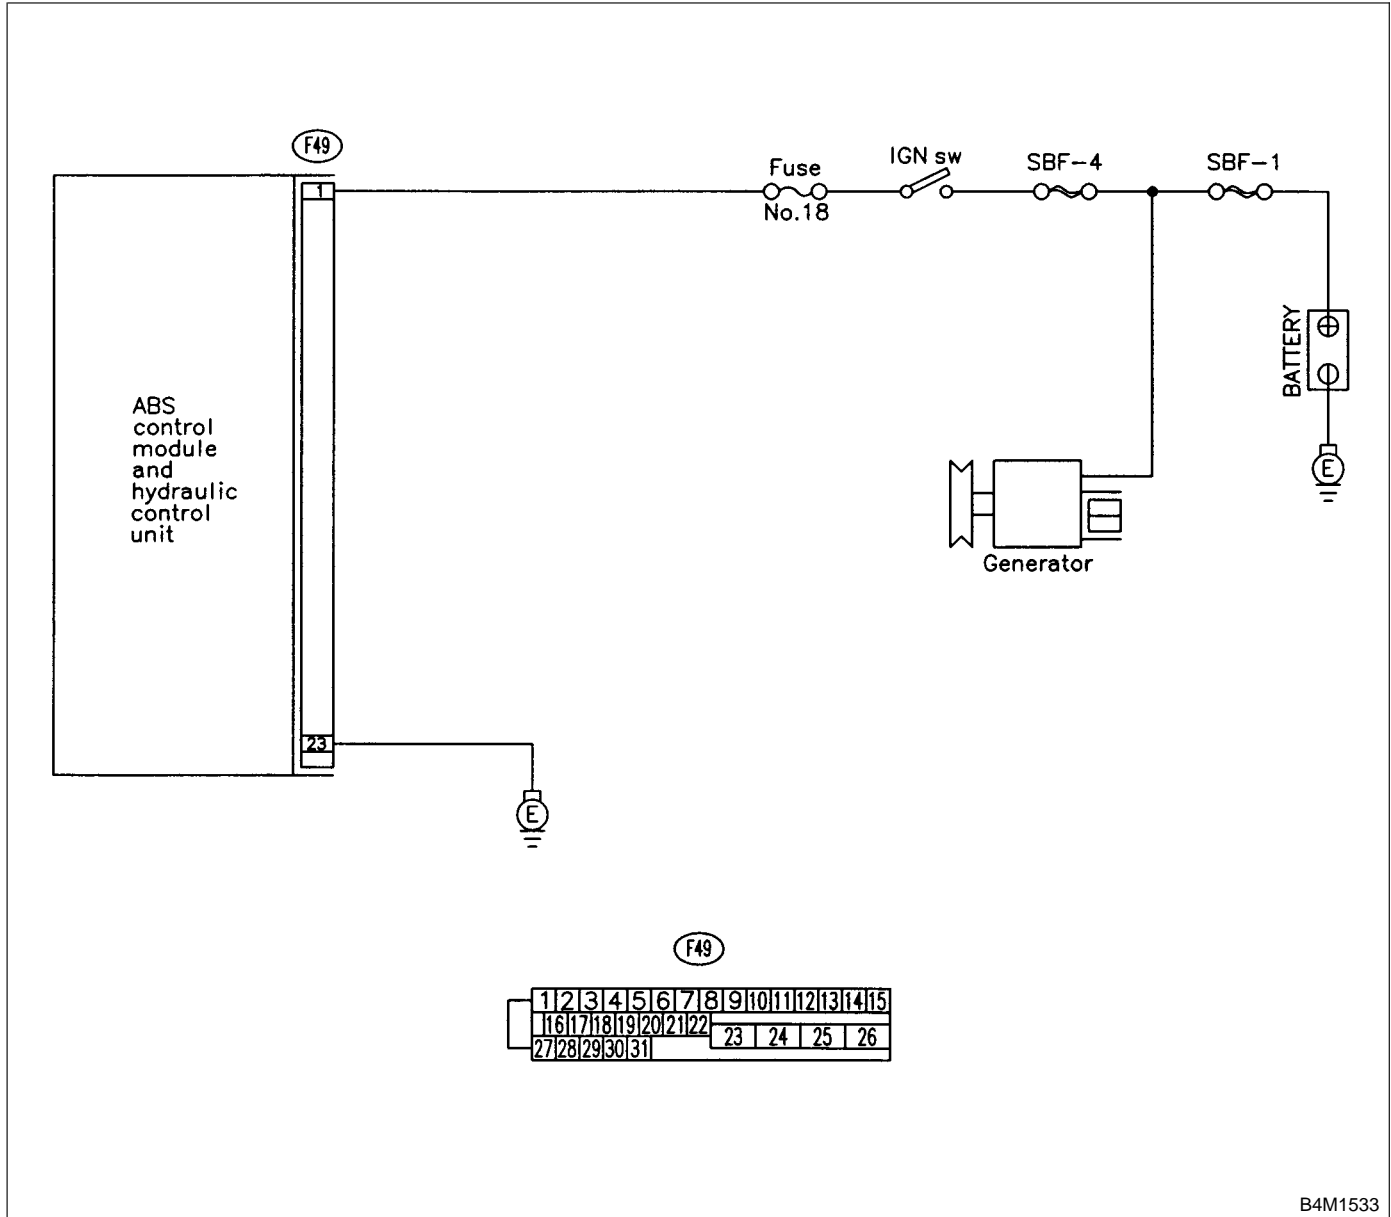


B4M1533

**10X1 : CHECK GENERATOR.**

- 1) Start engine.
- 2) Idling after warm-up.
- 3) Measure voltage between generator B terminal and chassis ground.

**Terminal**

**Generator B terminal — Chassis ground:**

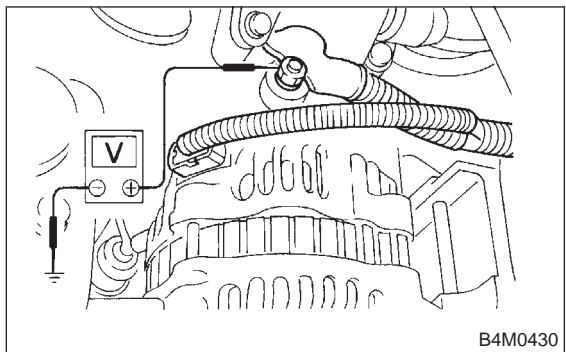

- CHECK** : *Is the voltage between 10 and 17 V?*
- YES** : Go to step 10X2.
- NO** : Repair generator. <Ref. to 6-1 [W2A0].>

**10X2 : CHECK BATTERY TERMINAL.**

Turn ignition switch to OFF.


- CHECK** : *Are the positive and negative battery terminals tightly clamped?*
- YES** : Go to step 10X3.
- NO** : Tighten the clamp of terminal.

**10X3 : CHECK INPUT VOLTAGE OF ABSCM&H/U.**

- 1) Disconnect connector from ABSCM&H/U.
- 2) Run the engine at idle.
- 3) Measure voltage between ABSCM&H/U connector and chassis ground.

**Connector & terminal**

**(F49) No. 1 (+) — Chassis ground (-):**

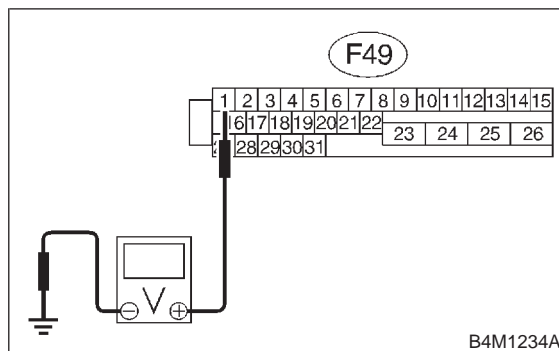


- CHECK** : *Is the voltage between 10 and 17 V?*
- YES** : Go to step 10X4.
- NO** : Repair harness connector between battery, ignition switch and ABSCM&H/U.

**10X4 : CHECK GROUND CIRCUIT OF ABSCM&H/U.**

- 1) Turn ignition switch to OFF.
- 2) Measure resistance between ABSCM&H/U connector and chassis ground.

**Connector & terminal**

**(F49) No. 23 — Chassis ground:**

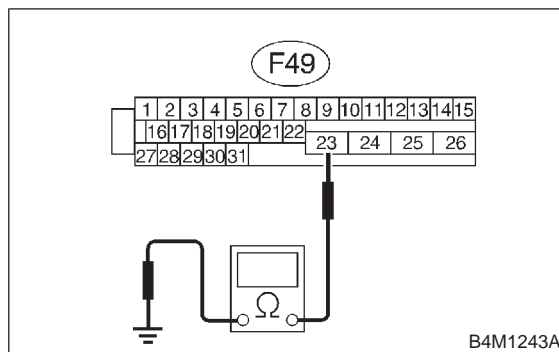

- CHECK** : *Is the resistance less than 0.5 Ω?*
- YES** : Go to step 10X5.
- NO** : Repair ABSCM&H/U ground harness.

**10X5 : CHECK POOR CONTACT IN CONNECTORS.**

**CHECK** : *Is there poor contact in connectors between generator, battery and ABSCM&H/U? <Ref. to FOREWORD [W3C1].>*

**YES** : Repair connector.

**NO** : Go to step **10X6**.

**10X6 : CHECK ABSCM&H/U.**

- 1) Connect all connectors.
- 2) Erase the memory.
- 3) Perform inspection mode.
- 4) Read out the trouble code.

**CHECK** : *Is the same trouble code as in the current diagnosis still being output?*

**YES** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>

**NO** : Go to step **10X7**.

**10X7 : CHECK ANY OTHER TROUBLE CODES APPEARANCE.**

**CHECK** : *Are other trouble codes being output?*

**YES** : Proceed with the diagnosis corresponding to the trouble code.

**NO** : A temporary poor contact.

**MEMO:**

**Y: TROUBLE CODE 44 ABS-AT CONTROL (NON CONTROLLED)**  
**— ABS-AT CONTROL (NON CONTROLLED) —**


**DIAGNOSIS:**

- Combination of AT control faults

**TROUBLE SYMPTOM:**

- ABS does not operate.


**WIRING DIAGRAM:**

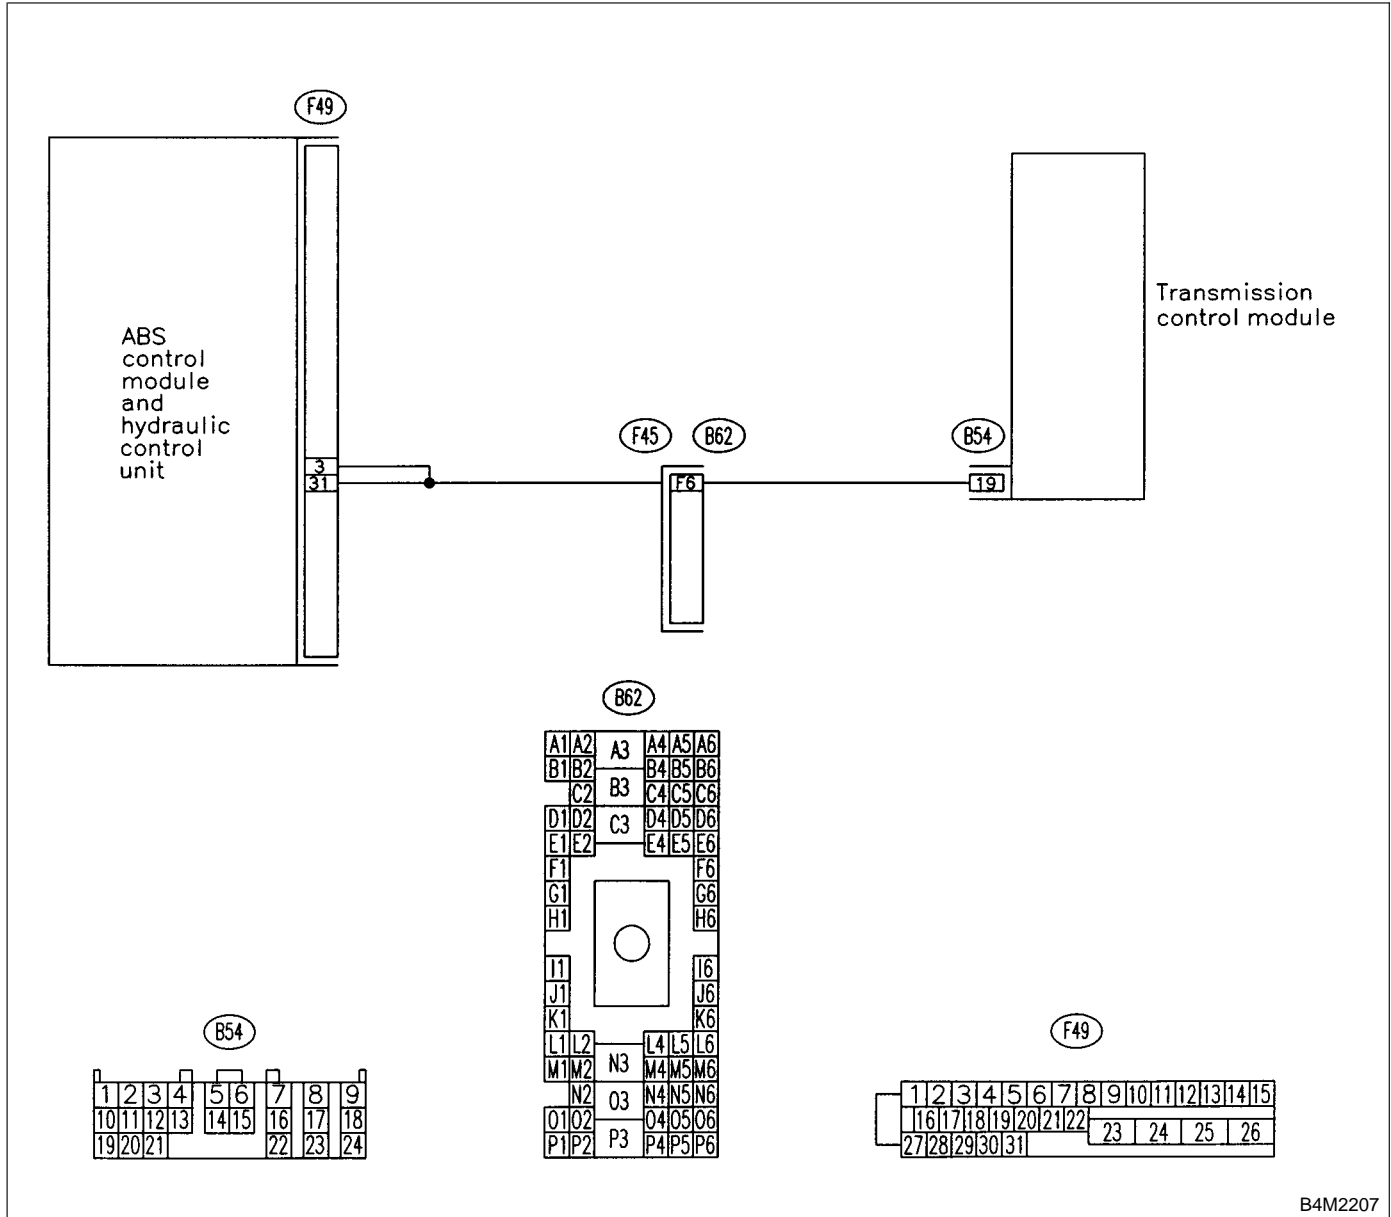

B4M2207

**10Y1 : CHECK SPECIFICATIONS OF THE ABSCM&H/U.**

Check specifications of the mark to the ABSCM&H/U.

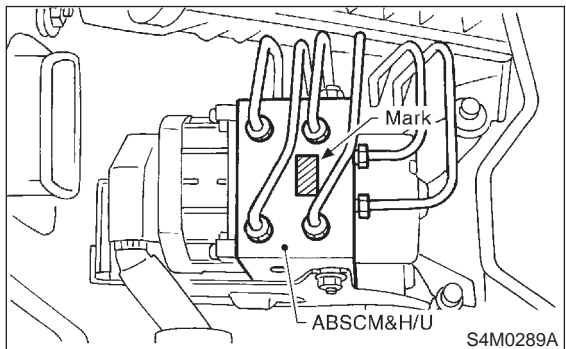


| Mark | Model               |
|------|---------------------|
| C5   | AT (Except OUTBACK) |
| C6   | MT (Except OUTBACK) |
| CE   | AT (OUTBACK)        |
| CF   | MT (OUTBACK)        |

- CHECK** : Is an ABSCM&H/U for AT model installed on a MT model?
- YES** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>
- NO** : Go to step 10Y2.

**10Y2 : CHECK GROUND SHORT OF HARNESS.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect two connectors from TCM.
- 3) Disconnect connector from ABSCM&H/U.
- 4) Measure resistance between ABSCM&H/U connector and chassis ground.

**Connector & terminal**  
(F49) No. 3 — Chassis ground:

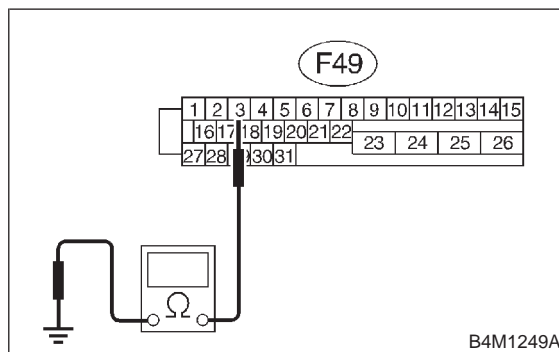


- CHECK** : Is the resistance more than 1 MΩ?
- YES** : Go to step 10Y3.
- NO** : Repair harness between TCM and ABSCM&H/U.

**10Y3 : CHECK TCM.**

- 1) Connect all connectors to TCM.
- 2) Turn ignition switch to ON.
- 3) Measure voltage between TCM connector terminal and chassis ground.

**Connector & terminal**  
(B54) No. 19 (+) — Chassis ground (-):

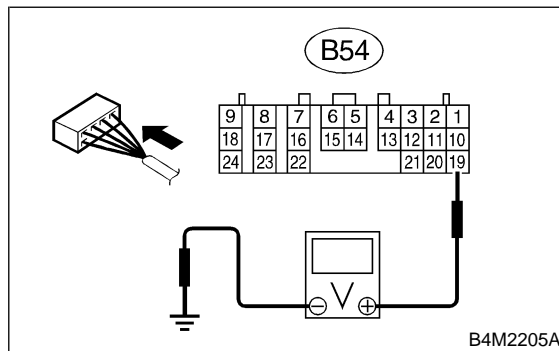

- CHECK** : Is the voltage between 10 and 15 V?
- YES** : Go to step 10Y5.
- NO** : Go to step 10Y4.

**10Y4 : CHECK AT.**

- CHECK** : *Is the AT functioning normally?*
- YES** : Replace TCM.
- NO** : Repair AT.


**10Y5 : CHECK OPEN CIRCUIT OF HARNESS.**

Measure voltage between ABSCM&H/U connector and chassis ground.

**Connector & terminal**

**(F49) No. 3 (+) — Chassis ground (-):**

**(F49) No. 31 (+) — Chassis ground (-):**

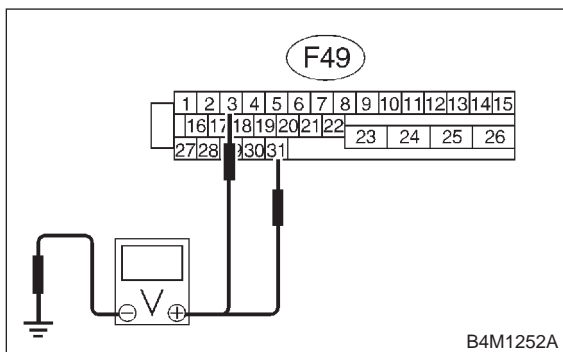

- CHECK** : *Is the voltage more than 10 V?*
- YES** : Go to step **10Y6**.
- NO** : Repair harness/connector between AT control module and ABSCM&H/U.

**10Y6 : CHECK POOR CONTACT IN CONNECTORS.**

- CHECK** : *Is there poor contact in connectors between AT control module and ABSCM&H/U? <Ref. to FOREWORD [W3C1].>*
- YES** : Repair connector.
- NO** : Go to step **10Y7**.

**10Y7 : CHECK ABSCM&H/U.**

- 1) Connect all connectors.
- 2) Erase the memory.
- 3) Perform inspection mode.
- 4) Read out the trouble code.

- CHECK** : *Is the same trouble code as in the current diagnosis still being output?*
- YES** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>
- NO** : Go to step **10Y8**.

**10Y8 : CHECK ANY OTHER TROUBLE CODES APPEARANCE.**

- CHECK** : *Are other trouble codes being output?*
- YES** : Proceed with the diagnosis corresponding to the trouble code.
- NO** : A temporary poor contact.

**MEMO:**



**Z: TROUBLE CODE 44 ABS-AT CONTROL (CONTROLLED)**  
**— ABS-AT CONTROL (CONTROLLED) —**


**DIAGNOSIS:**

- Combination of AT control faults

**TROUBLE SYMPTOM:**

- ABS does not operate.

**WIRING DIAGRAM:**

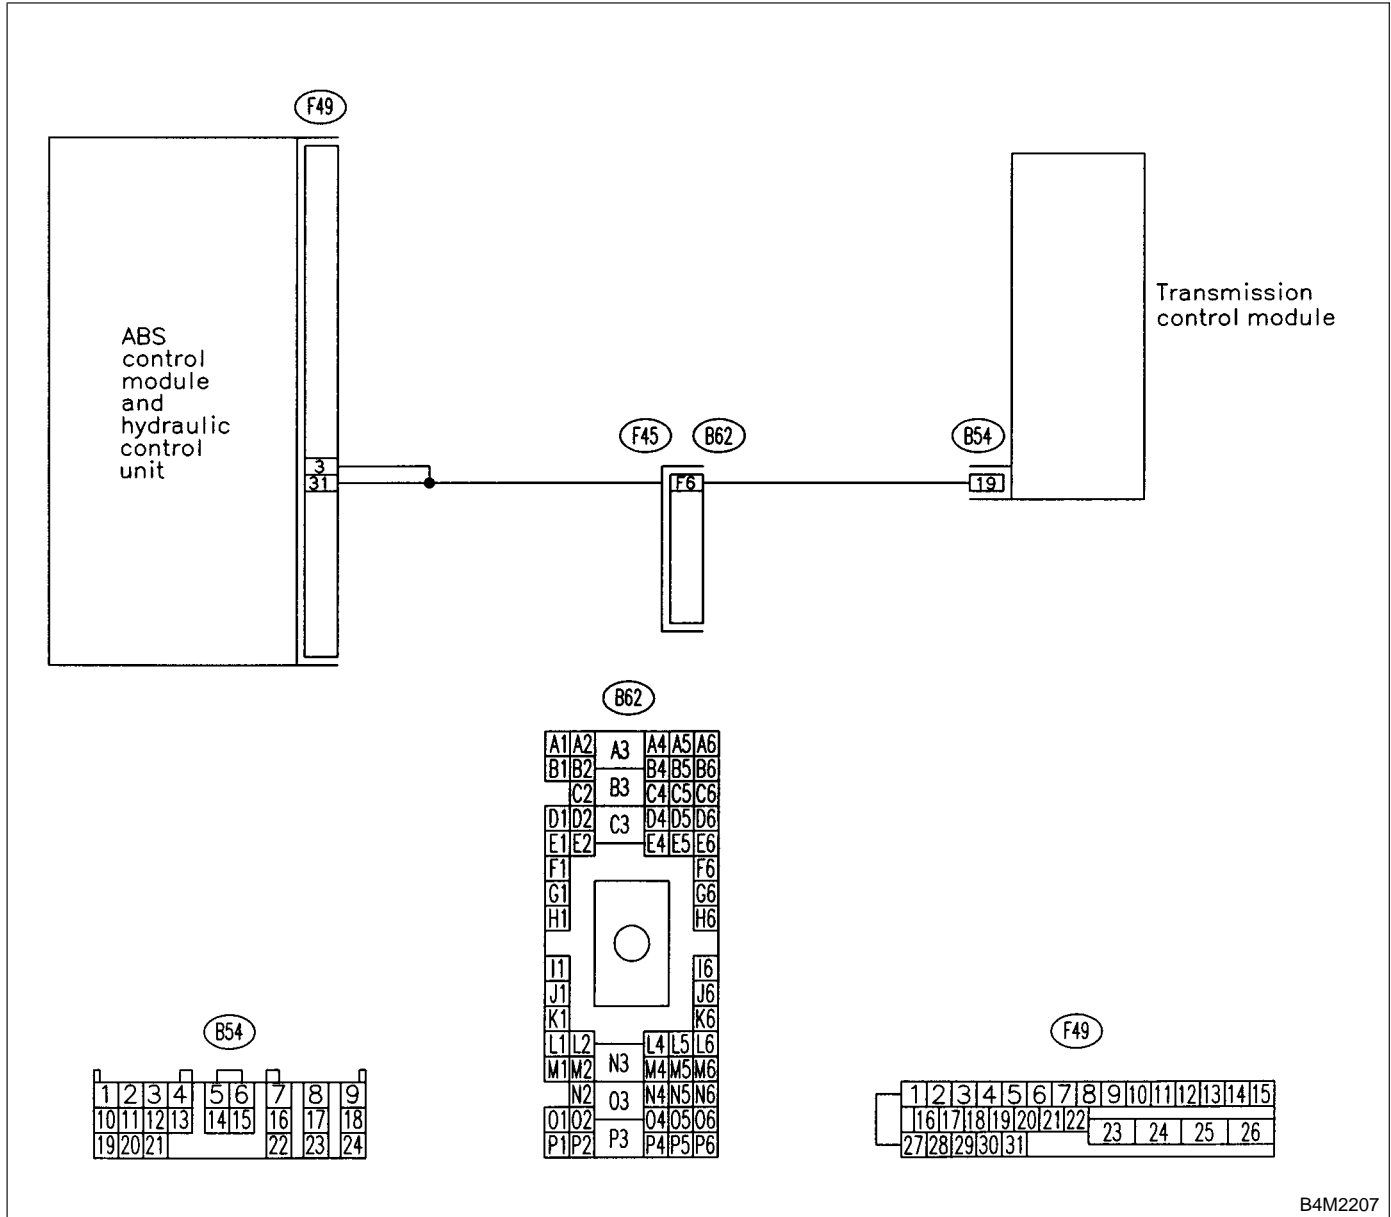


B4M2207

**10Z1 : CHECK BATTERY SHORT OF HARNESS.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect two connectors from AT control module.
- 3) Disconnect connector from ABSCM&H/U.
- 4) Measure voltage between ABSCM&H/U connector and chassis ground.

**Connector & terminal**

**(F49) No. 3 (+) — Chassis ground (-):**

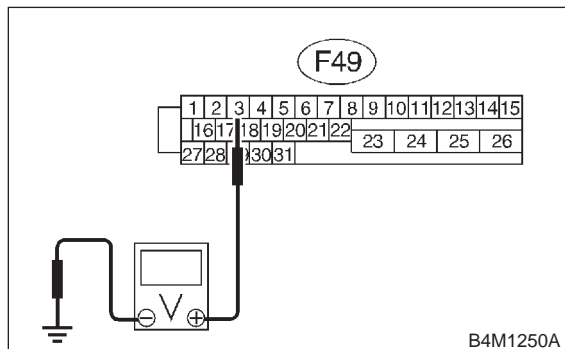


- CHECK** : *Is the voltage less than 1 V?*
- YES** : Go to step 10Z2.
- NO** : Repair harness between AT control module and ABSCM&H/U.

**10Z2 : CHECK BATTERY SHORT OF HARNESS.**

- 1) Turn ignition switch to ON.
- 2) Measure voltage between ABSCM&H/U connector and chassis ground.

**Connector & terminal**

**(F49) No. 3 (+) — Chassis ground (-):**

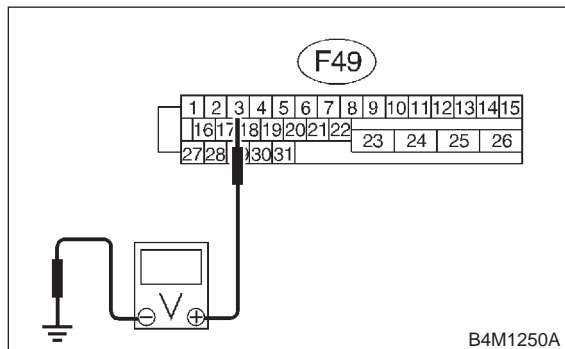

- CHECK** : *Is the voltage less than 1 V?*
- YES** : Go to step 10Z3.
- NO** : Repair harness between AT control module and ABSCM&H/U.


**10Z3 : CHECK OPEN CIRCUIT OF HARNESS.**

- 1) Turn ignition switch to OFF.
- 2) Connect all connectors to TCM.
- 3) Turn ignition switch to ON.
- 4) Measure voltage between ABSCM&H/U connector and chassis ground.

**Connector & terminal**

**(F49) No. 3 (+) — Chassis ground (-):**

**(F49) No. 31 (+) — Chassis ground (-):**

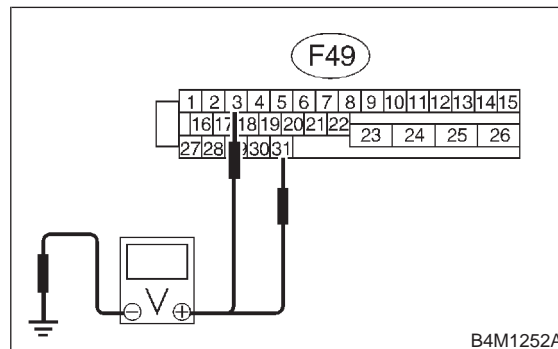

- CHECK** : *Is the voltage between 10 and 13 V?*
- YES** : Go to step 10Z4.
- NO** : Repair harness/connector between TCM and ABSCM&H/U.

**10Z4 : CHECK POOR CONTACT IN CONNECTORS.**

Turn ignition switch to OFF.

- CHECK** : *Is there poor contact in connectors between AT control module and ABSCM&H/U? <Ref. to FOREWORD [W3C1].>*
- YES** : Repair connector.
- NO** : Go to step 10Z5.

**10Z5 : CHECK ABSCM&H/U.**

- 1) Connect all connectors.
- 2) Erase the memory.
- 3) Perform inspection mode.
- 4) Read out the trouble code.

- CHECK** : *Is the same trouble code as in the current diagnosis still being output?*
- YES** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>
- NO** : Go to step 10Z6.

**10Z6 : CHECK ANY OTHER TROUBLE CODES APPEARANCE.**

**CHECK** : *Are other trouble codes being output?*

**YES** : Proceed with the diagnosis corresponding to the trouble code.

**NO** : A temporary poor contact.

**MEMO:**

**AA: TROUBLE CODE 51 VALVE RELAY MALFUNCTION  
— VALVE RELAY MALFUNCTION —**


**DIAGNOSIS:**

- Faulty valve relay

**TROUBLE SYMPTOM:**

- ABS does not operate.

**WIRING DIAGRAM:**

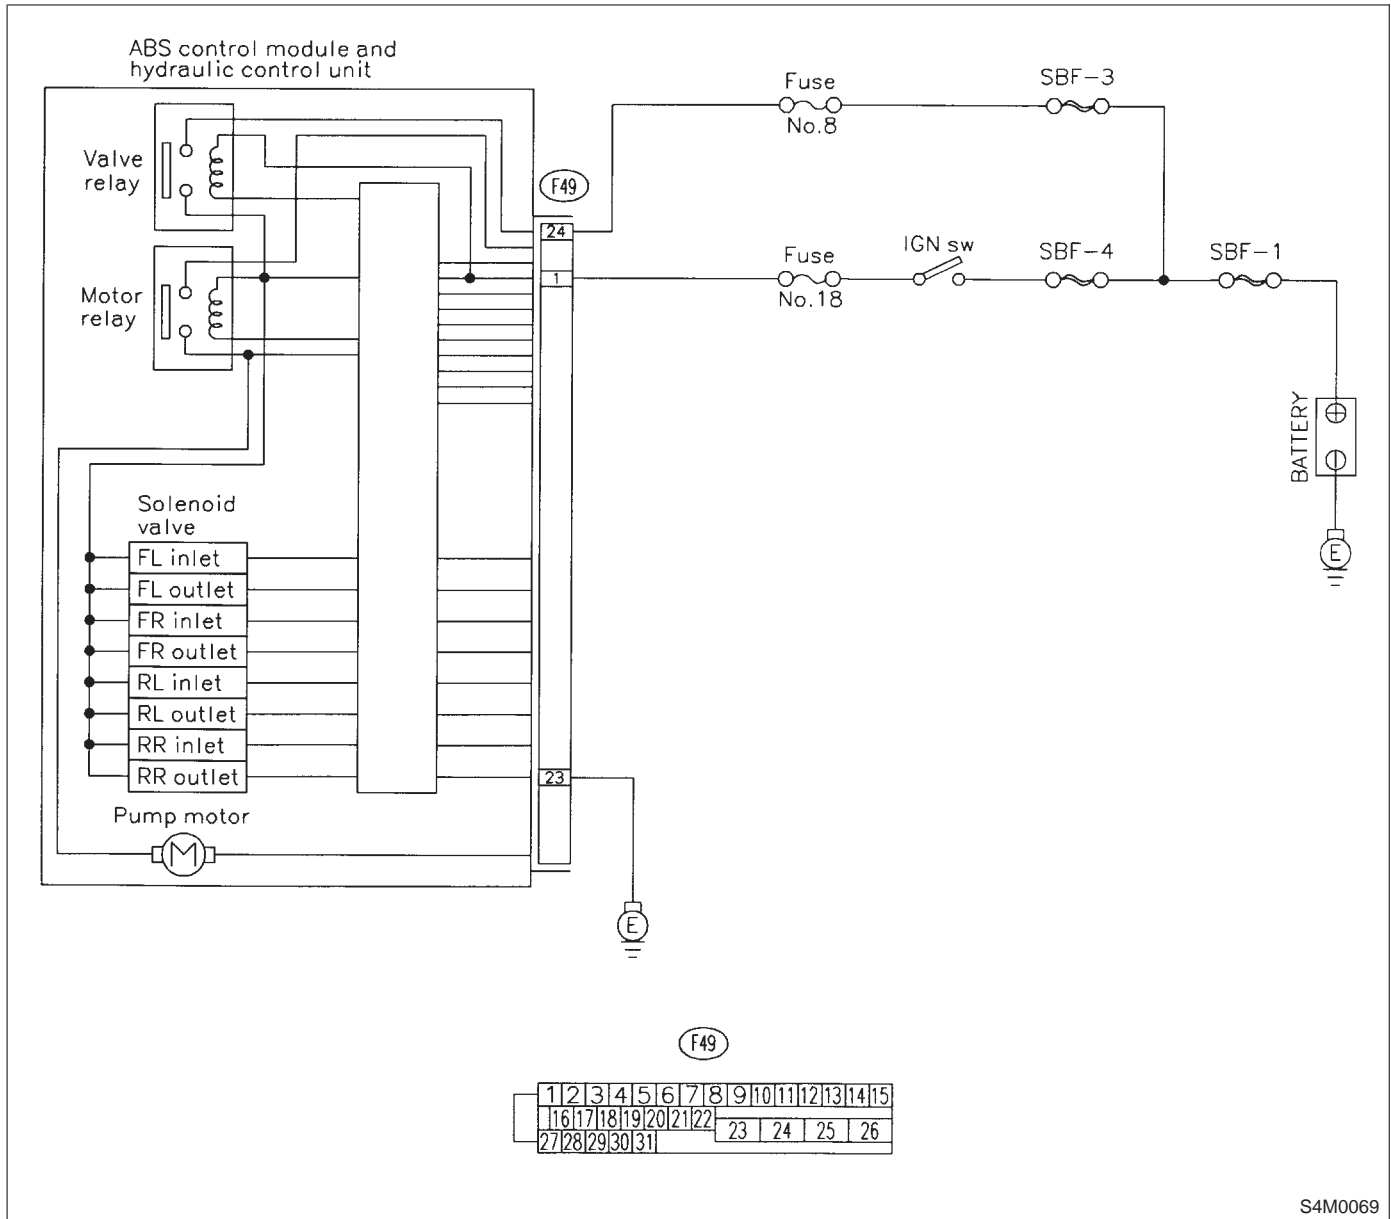


S4M0069

**10AA1 : CHECK INPUT VOLTAGE OF ABSCM&H/U.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ABSCM&H/U.
- 3) Run the engine at idle.
- 4) Measure voltage between ABSCM&H/U connector and chassis ground.

**Connector & terminal**

**(F49) No. 1 (+) — Chassis ground (-):**  
**(F49) No. 24 (+) — Chassis ground (-):**

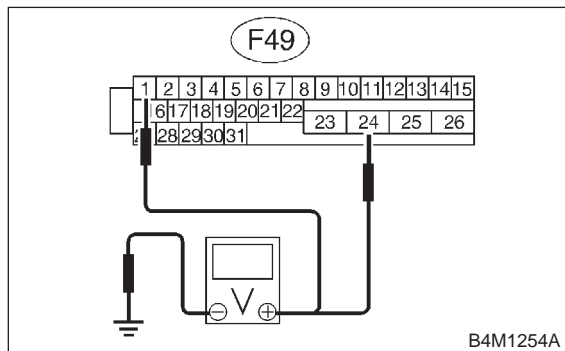


- CHECK** : *Is the voltage between 10 and 15 V?*
- YES** : Go to step 10AA2.
- NO** : Repair harness connector between battery and ABSCM&H/U.

**10AA2 : CHECK GROUND CIRCUIT OF ABSCM&H/U.**

- 1) Turn ignition switch to OFF.
- 2) Measure resistance between ABSCM&H/U connector and chassis ground.

**Connector & terminal**

**(F49) No. 23 — Chassis ground:**

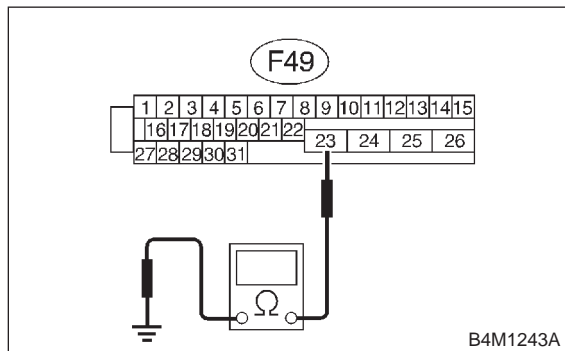

- CHECK** : *Is the resistance less than 0.5 Ω?*
- YES** : Go to step 10AA3.
- NO** : Repair ABSCM&H/U ground harness.

**10AA3 : CHECK POOR CONTACT IN CONNECTORS.**

- CHECK** : *Is there poor contact in connectors between generator, battery and ABSCM&H/U? <Ref. to FOREWORD [W3C1].>*
- YES** : Repair connector.
- NO** : Go to step 10AA4.

**10AA4 : CHECK ABSCM&H/U.**

- 1) Connect all connectors.
  - 2) Erase the memory.
  - 3) Perform inspection mode.
  - 4) Read out the trouble code.
- CHECK** : *Is the same trouble code as in the current diagnosis still being output?*
- YES** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>
- NO** : Go to step 10AA5.

**10AA5 : CHECK ANY OTHER TROUBLE CODES APPEARANCE.**

- CHECK** : *Are other trouble codes being output?*
- YES** : Proceed with the diagnosis corresponding to the trouble code.
- NO** : A temporary poor contact.

**AB: TROUBLE CODE 51 VALVE RELAY ON FAILURE**  
**— VALVE RELAY ON FAILURE —**


**DIAGNOSIS:**

- Faulty valve relay

**TROUBLE SYMPTOM:**

- ABS does not operate.

**WIRING DIAGRAM:**

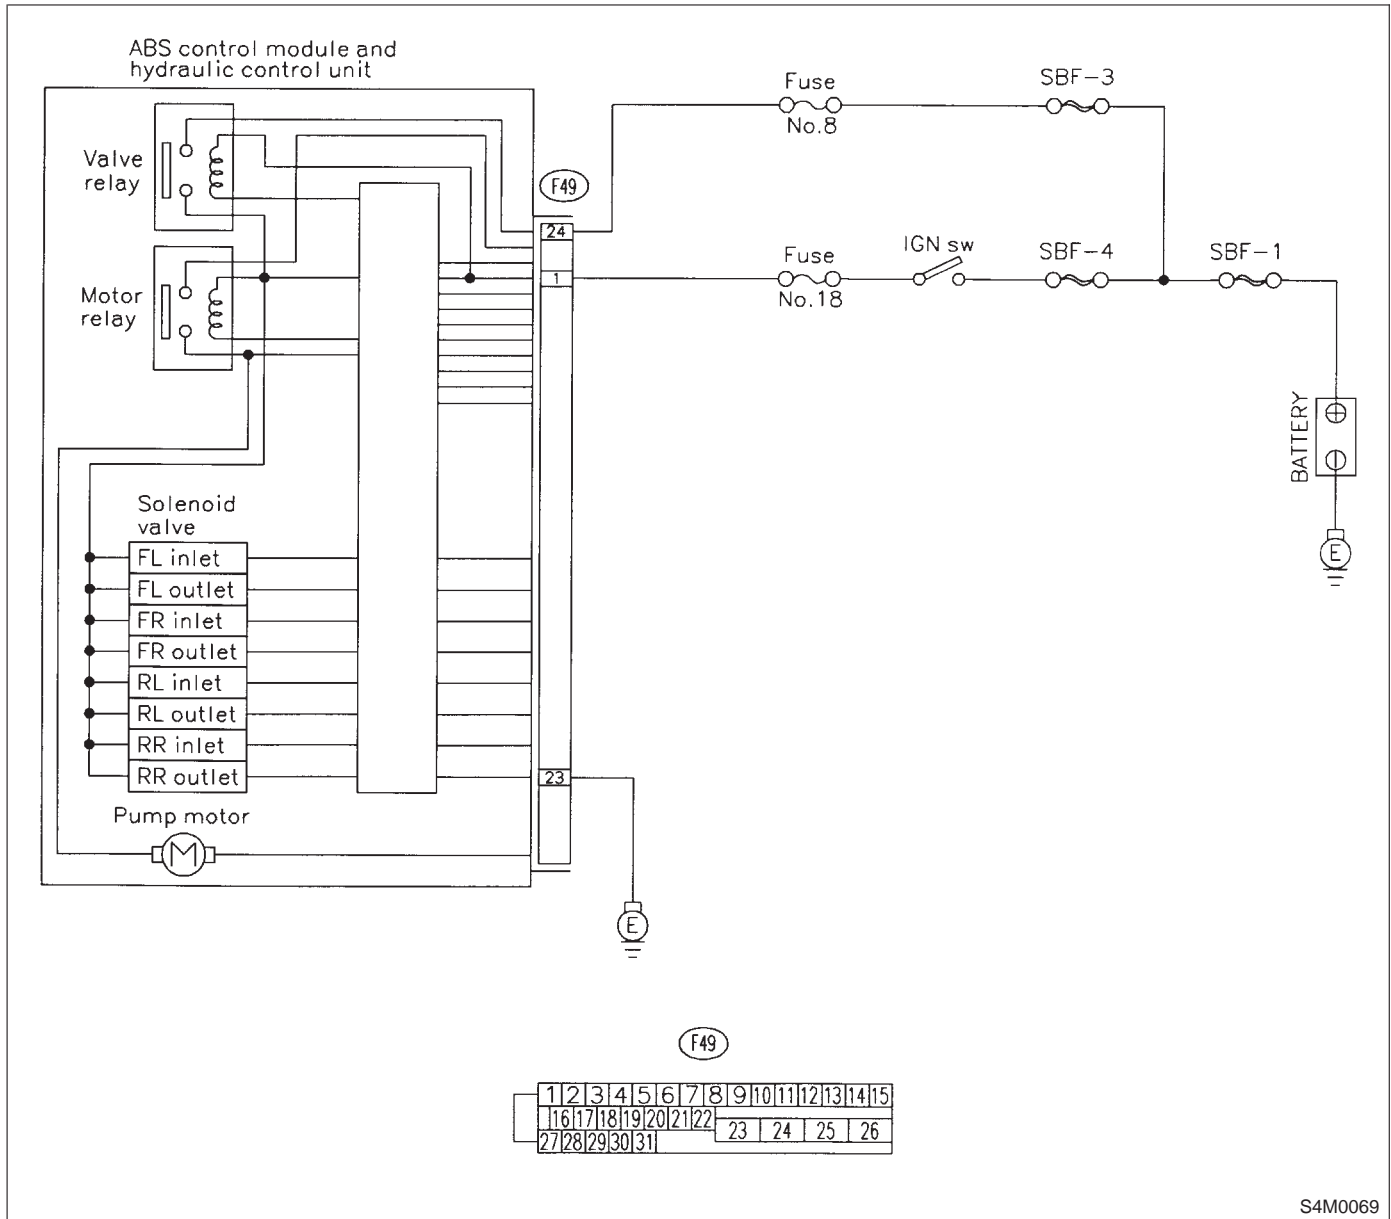


S4M0069

**10AB1 : CHECK VALVE RELAY IN ABSCM&H/U.**

Measure resistance between ABSCM&H/U terminals.

**Terminals**

**No. 23 (+) — No. 24 (-):**

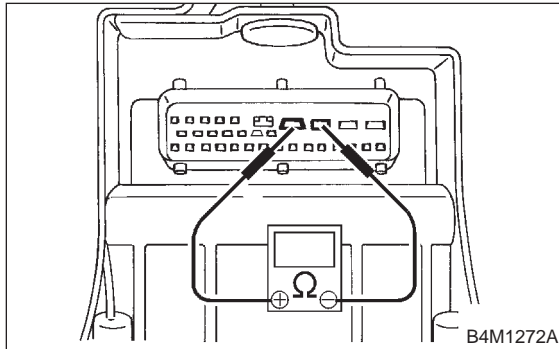

- CHECK** : *Is the resistance more than 1 MΩ?*
- YES** : Go to step **10AB2**.
- NO** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>

**10AB2 : CHECK POOR CONTACT IN CONNECTORS.**

- CHECK** : *Is there poor contact in connectors between generator, battery and ABSCM&H/U? <Ref. to FOREWORD [W3C1].>*
- YES** : Repair connector.
- NO** : Go to step **10AB3**.

**10AB3 : CHECK ABSCM&H/U.**

- 1) Connect all connectors.
- 2) Erase the memory.
- 3) Perform inspection mode.
- 4) Read out the trouble code.

- CHECK** : *Is the same trouble code as in the current diagnosis still being output?*
- YES** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>
- NO** : Go to step **10AB4**.

**10AB4 : CHECK ANY OTHER TROUBLE CODES APPEARANCE.**

- CHECK** : *Are other trouble codes being output?*
- YES** : Proceed with the diagnosis corresponding to the trouble code.
- NO** : A temporary poor contact.



**AC: TROUBLE CODE 52 OPEN CIRCUIT IN MOTOR RELAY CIRCUIT — OPEN CIRCUIT IN MOTOR RELAY CIRCUIT —**


**DIAGNOSIS:**

- Faulty motor
- Faulty motor relay
- Faulty harness connector

**TROUBLE SYMPTOM:**

- ABS does not operate.

**WIRING DIAGRAM:**

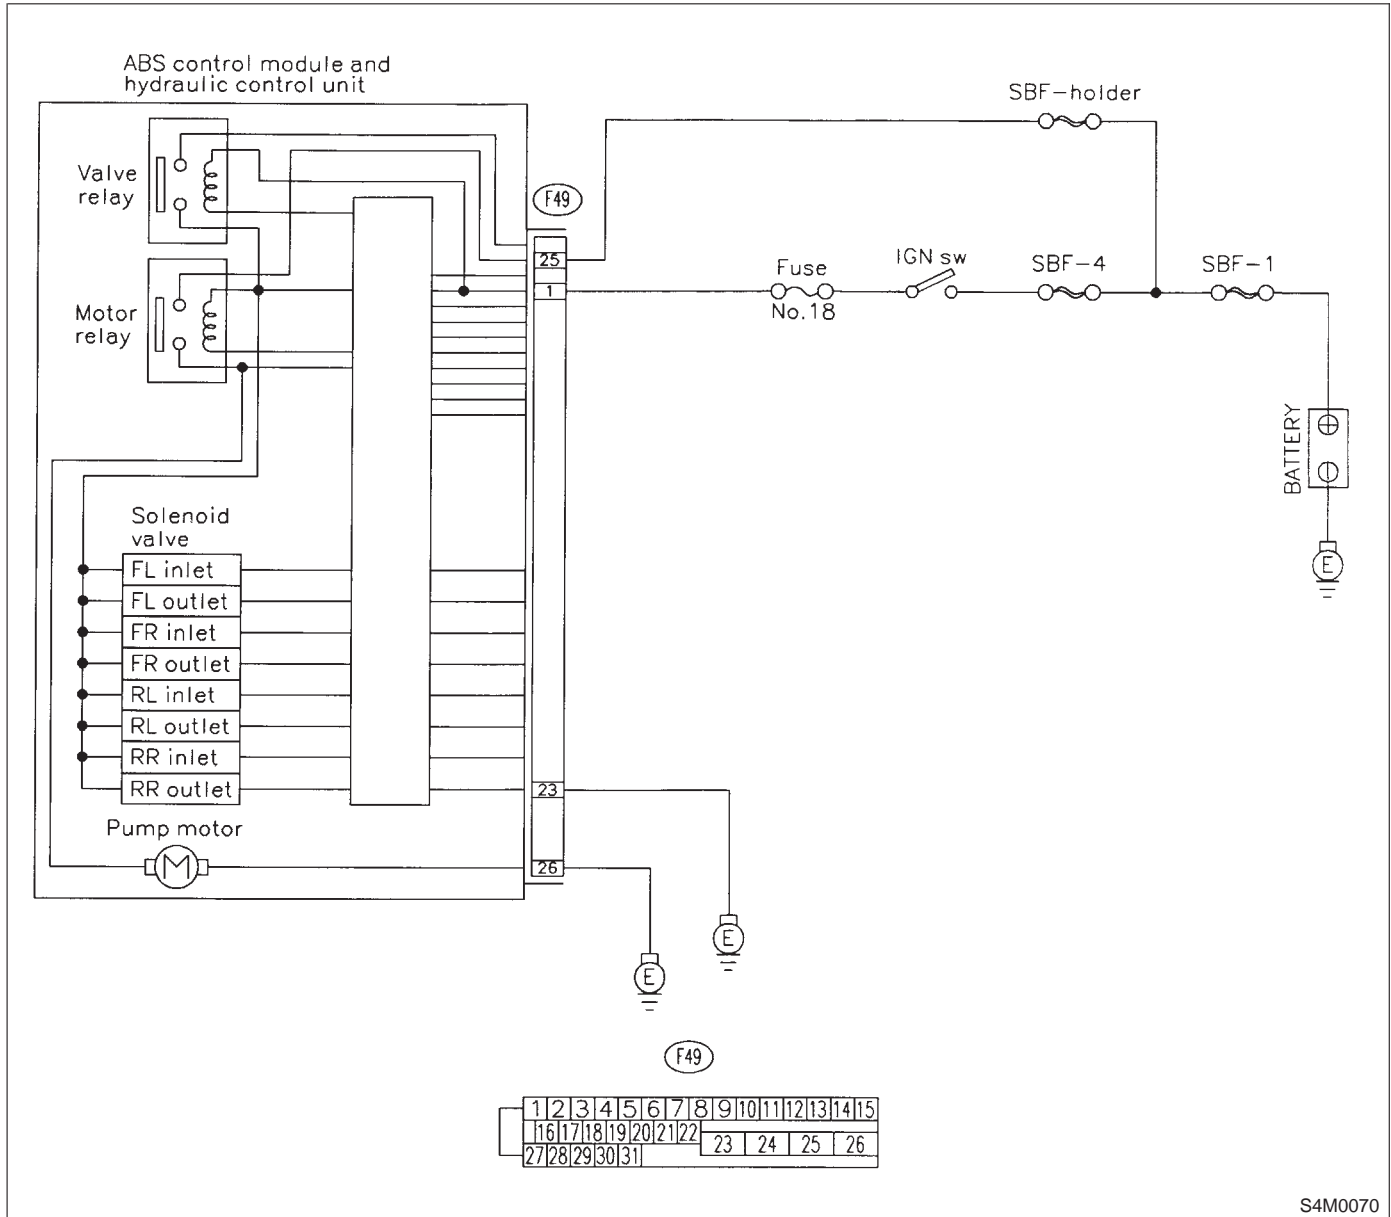


**10AC1 : CHECK INPUT VOLTAGE OF ABSCM&H/U.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ABSCM&H/U.
- 3) Turn ignition switch to ON.
- 4) Measure voltage between ABSCM&H/U connector and chassis ground.

**Connector & terminal**

**(F49) No. 25 (+) — Chassis ground (-):**

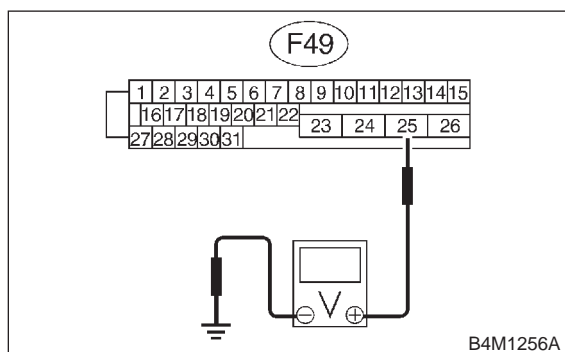


- CHECK** : *Is the voltage between 10 and 13 V?*
- YES** : Go to step **10AC2**.
- NO** : Repair harness/connector between battery and ABSCM&H/U and check fuse SBF6.

**10AC2 : CHECK GROUND CIRCUIT OF MOTOR.**

- 1) Turn ignition switch to OFF.
- 2) Measure resistance between ABSCM&H/U connector and chassis ground.

**Connector & terminal**

**(F49) No. 26 — Chassis ground:**

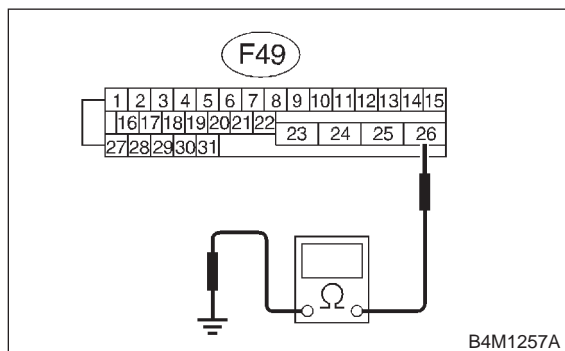

- CHECK** : *Is the resistance less than 0.5 Ω?*
- YES** : Go to step **10AC3**.
- NO** : Repair ABSCM&H/U ground harness.

**10AC3 : CHECK MOTOR OPERATION.**

Operate the sequence control. <Ref. to 4-4 [W15D0].>

**NOTE:**

Use the diagnosis connector to operate the sequence control.

- CHECK** : *Can motor revolution noise (buzz) be heard when carrying out the check sequence?*
- YES** : Go to step **10AC4**.
- NO** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>

**10AC4 : CHECK POOR CONTACT IN CONNECTORS.**

Turn ignition switch to OFF.

- CHECK** : *Is there poor contact in connector between hydraulic unit, relay box and ABSCM&H/U? <Ref. to FOREWORD [W3C1].>*
- YES** : Repair connector.
- NO** : Go to step **10AC5**.

**10AC5 : CHECK ABSCM&H/U.**

- 1) Connect all connectors.
- 2) Erase the memory.
- 3) Perform inspection mode.
- 4) Read out the trouble code.

- CHECK** : *Is the same trouble code as in the current diagnosis still being output?*
- YES** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>
- NO** : Go to step **10AC6**.

**10AC6 : CHECK ANY OTHER TROUBLE CODES APPEARANCE.**

- CHECK** : *Are other trouble codes being output?*
- YES** : Proceed with the diagnosis corresponding to the trouble code.
- NO** : A temporary poor contact.

**AD: TROUBLE CODE 52 MOTOR RELAY ON FAILURE**  
**— MOTOR RELAY ON FAILURE —**


**DIAGNOSIS:**

- Faulty motor
- Faulty motor relay
- Faulty harness connector

**TROUBLE SYMPTOM:**

- ABS does not operate.

**WIRING DIAGRAM:**

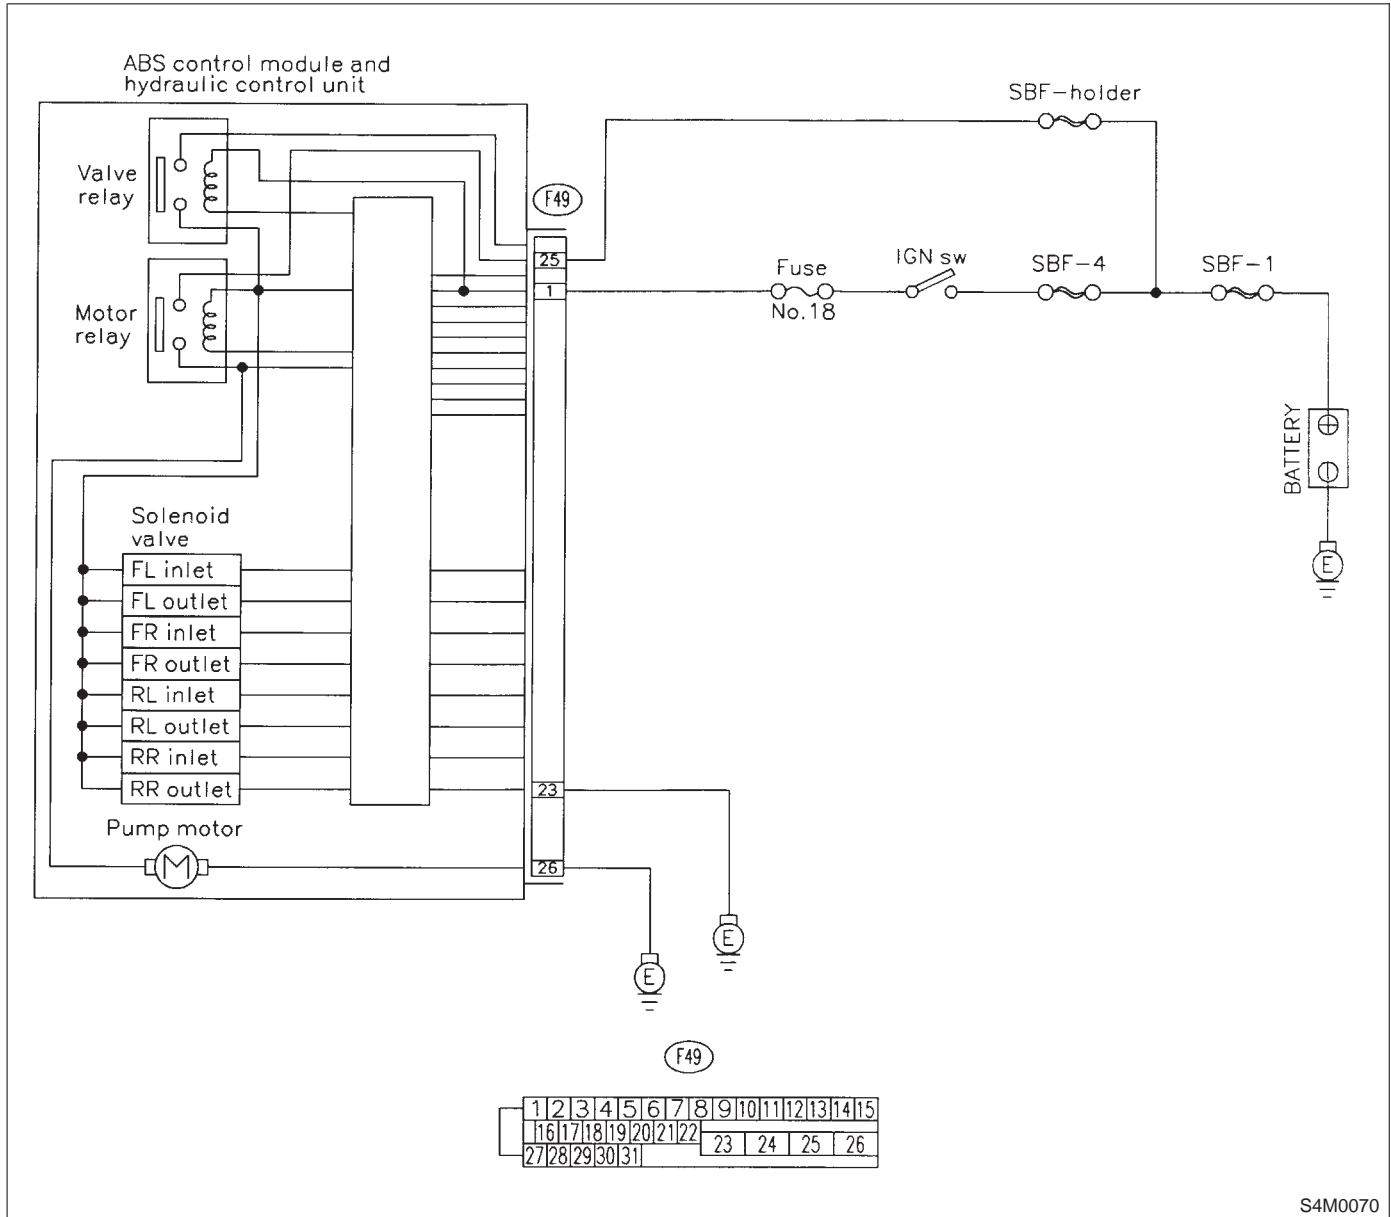


S4M0070

**10AD1 : CHECK MOTOR RELAY IN  
ABSCM&H/U.**

Measure resistance between ABSCM&H/U terminals.

**Terminals**

**No. 25 — No. 26:**

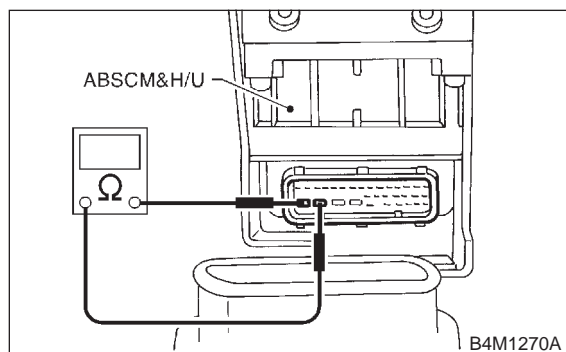

- CHECK** : *Is the resistance more than 1 MΩ?*  
**YES** : Go to step **10AD2**.  
**NO** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>

**10AD2 : CHECK MOTOR OPERATION.**

Operate the sequence control. <Ref. to 4-4 [W15D0].>

**NOTE:**

Use the diagnosis connector to operate the sequence control.

- CHECK** : *Can motor revolution noise (buzz) be heard when carrying out the sequence control?*  
**YES** : Go to step **10AD3**.  
**NO** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>

**10AD3 : CHECK POOR CONTACT IN CON-  
NECTORS.**

Turn ignition switch to OFF.

- CHECK** : *Is there poor contact in connector between hydraulic unit, relay box and ABSCM&H/U? <Ref. to FOREWORD [W3C1].>*  
**YES** : Repair connector.  
**NO** : Go to step **10AD4**.

**10AD4 : CHECK ABSCM&H/U.**

- 1) Connect all connectors.
- 2) Erase the memory.
- 3) Perform inspection mode.
- 4) Read out the trouble code.

- CHECK** : *Is the same trouble code as in the current diagnosis still being output?*  
**YES** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>  
**NO** : Go to step **10AD5**.

**10AD5 : CHECK ANY OTHER TROUBLE  
CODES APPEARANCE.**

- CHECK** : *Are other trouble codes being output?*  
**YES** : Proceed with the diagnosis corresponding to the trouble code.  
**NO** : A temporary poor contact.

**AE: TROUBLE CODE 52 MOTOR MALFUNCTION  
— MOTOR MALFUNCTION —**


**DIAGNOSIS:**

- Faulty motor
- Faulty motor relay
- Faulty harness connector

**TROUBLE SYMPTOM:**

- ABS does not operate.

**WIRING DIAGRAM:**

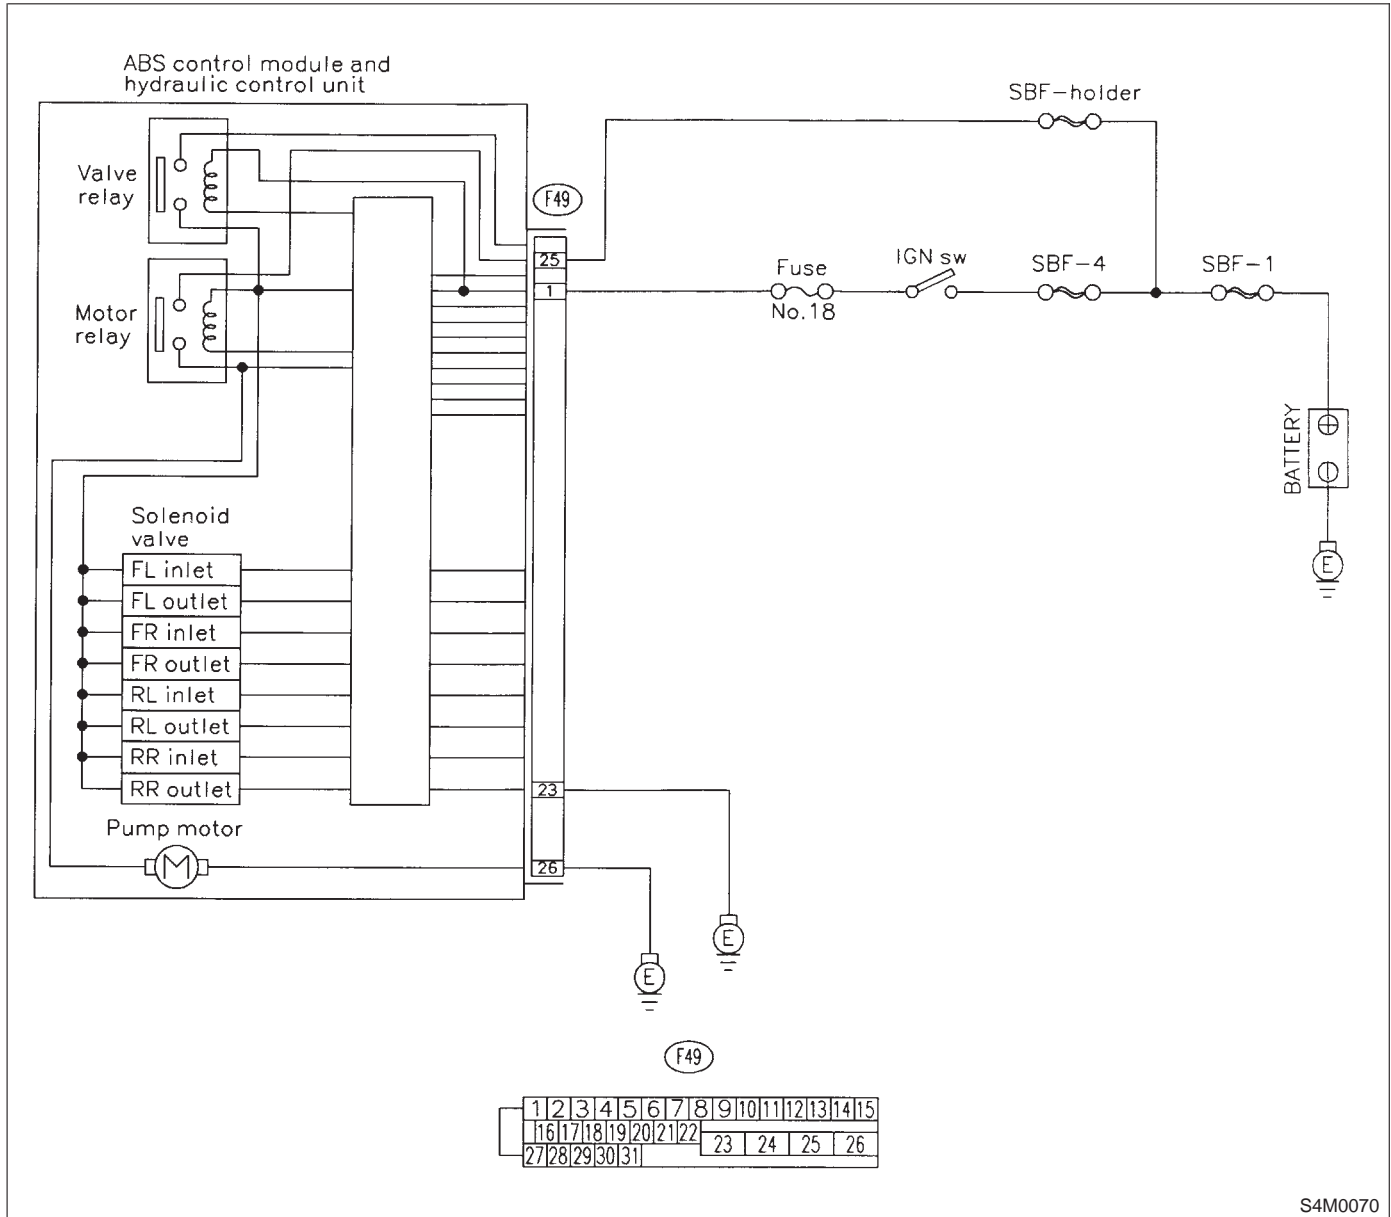


S4M0070

**10AE1 : CHECK INPUT VOLTAGE OF ABSCM&H/U.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ABSCM&H/U.
- 3) Turn ignition switch to ON.
- 4) Measure voltage between ABSCM&H/U connector and chassis ground.

**Connector & terminal**

**(F49) No. 25 (+) — Chassis ground (-):**

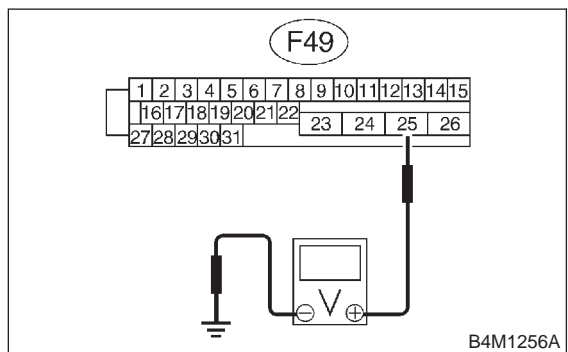


- CHECK** : Is the voltage between 10 and 13 V?
- YES** : Go to step 10AE2.
- NO** : Repair harness/connector between battery and ABSCM&H/U and check fuse SBF6.

**10AE2 : CHECK GROUND CIRCUIT OF MOTOR.**

- 1) Turn ignition switch to OFF.
- 2) Measure resistance between ABSCM&H/U connector and chassis ground.

**Connector & terminal**

**(F49) No. 26 — Chassis ground:**

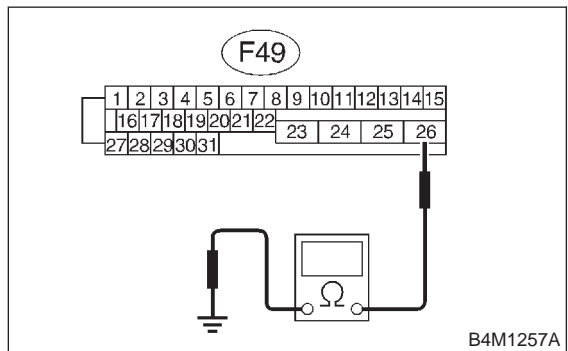


- CHECK** : Is the resistance less than 0.5 Ω?
- YES** : Go to step 10AE3.
- NO** : Repair ABSCM&H/U ground harness.

**10AE3 : CHECK INPUT VOLTAGE OF ABSCM&H/U.**

- 1) Run the engine at idle.
- 2) Measure voltage between ABSCM&H/U connector and chassis ground.

**Connector & terminal**

**(F49) No. 1 (+) — Chassis ground (-):**

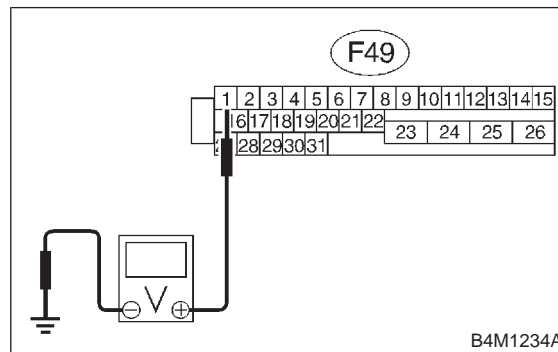


- CHECK** : Is the voltage between 10 and 15 V?
- YES** : Go to step 10AE4.
- NO** : Repair harness connector between battery, ignition switch and ABSCM&H/U.

**10AE4 : CHECK GROUND CIRCUIT OF ABSCM&H/U.**

- 1) Turn ignition switch to OFF.
- 2) Measure resistance between ABSCM&H/U connector and chassis ground.

**Connector & terminal**

**(F49) No. 23 — Chassis ground:**

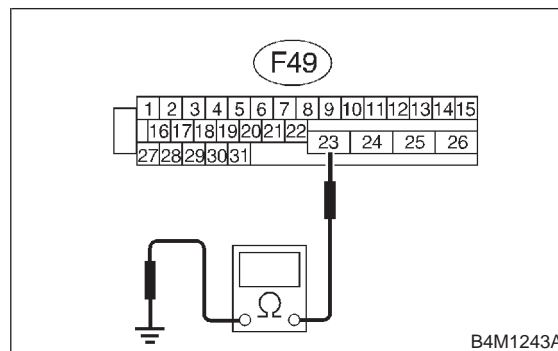

- CHECK** : Is the resistance less than 0.5 Ω?
- YES** : Go to step 10AE5.
- NO** : Repair ABSCM&H/U ground harness.

**10AE5 : CHECK MOTOR OPERATION.**

Operate the sequence control. <Ref. to 4-4 [W15D0].>

**NOTE:**

Use the diagnosis connector to operate the sequence control.

**CHECK** : *Can motor revolution noise (buzz) be heard when carrying out the sequence control?*

**YES** : Go to step **10AE6**.

**NO** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>

**10AE6 : CHECK POOR CONTACT IN CONNECTORS.**

Turn ignition switch to OFF.

**CHECK** : *Is there poor contact in connector between generator, battery and ABSCM&H/U? <Ref. to FOREWORD [W3C1].>*

**YES** : Repair connector.

**NO** : Go to step **10AE7**.

**10AE7 : CHECK ABSCM&H/U.**

- 1) Connect all connectors.
- 2) Erase the memory.
- 3) Perform inspection mode.
- 4) Read out the trouble code.

**CHECK** : *Is the same trouble code as in the current diagnosis still being output?*

**YES** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>

**NO** : Go to step **10AE8**.

**10AE8 : CHECK ANY OTHER TROUBLE CODES APPEARANCE.**

**CHECK** : *Are other trouble codes being output?*

**YES** : Proceed with the diagnosis corresponding to the trouble code.

**NO** : A temporary poor contact.

**MEMO:**



**AF: TROUBLE CODE 54 STOP LIGHT SWITCH SIGNAL CIRCUIT MALFUNCTION**

**— STOP LIGHT SWITCH SIGNAL CIRCUIT MALFUNCTION —**


**DIAGNOSIS:**

- Faulty stop light switch

**TROUBLE SYMPTOM:**

- ABS does not operate.

**WIRING DIAGRAM:**

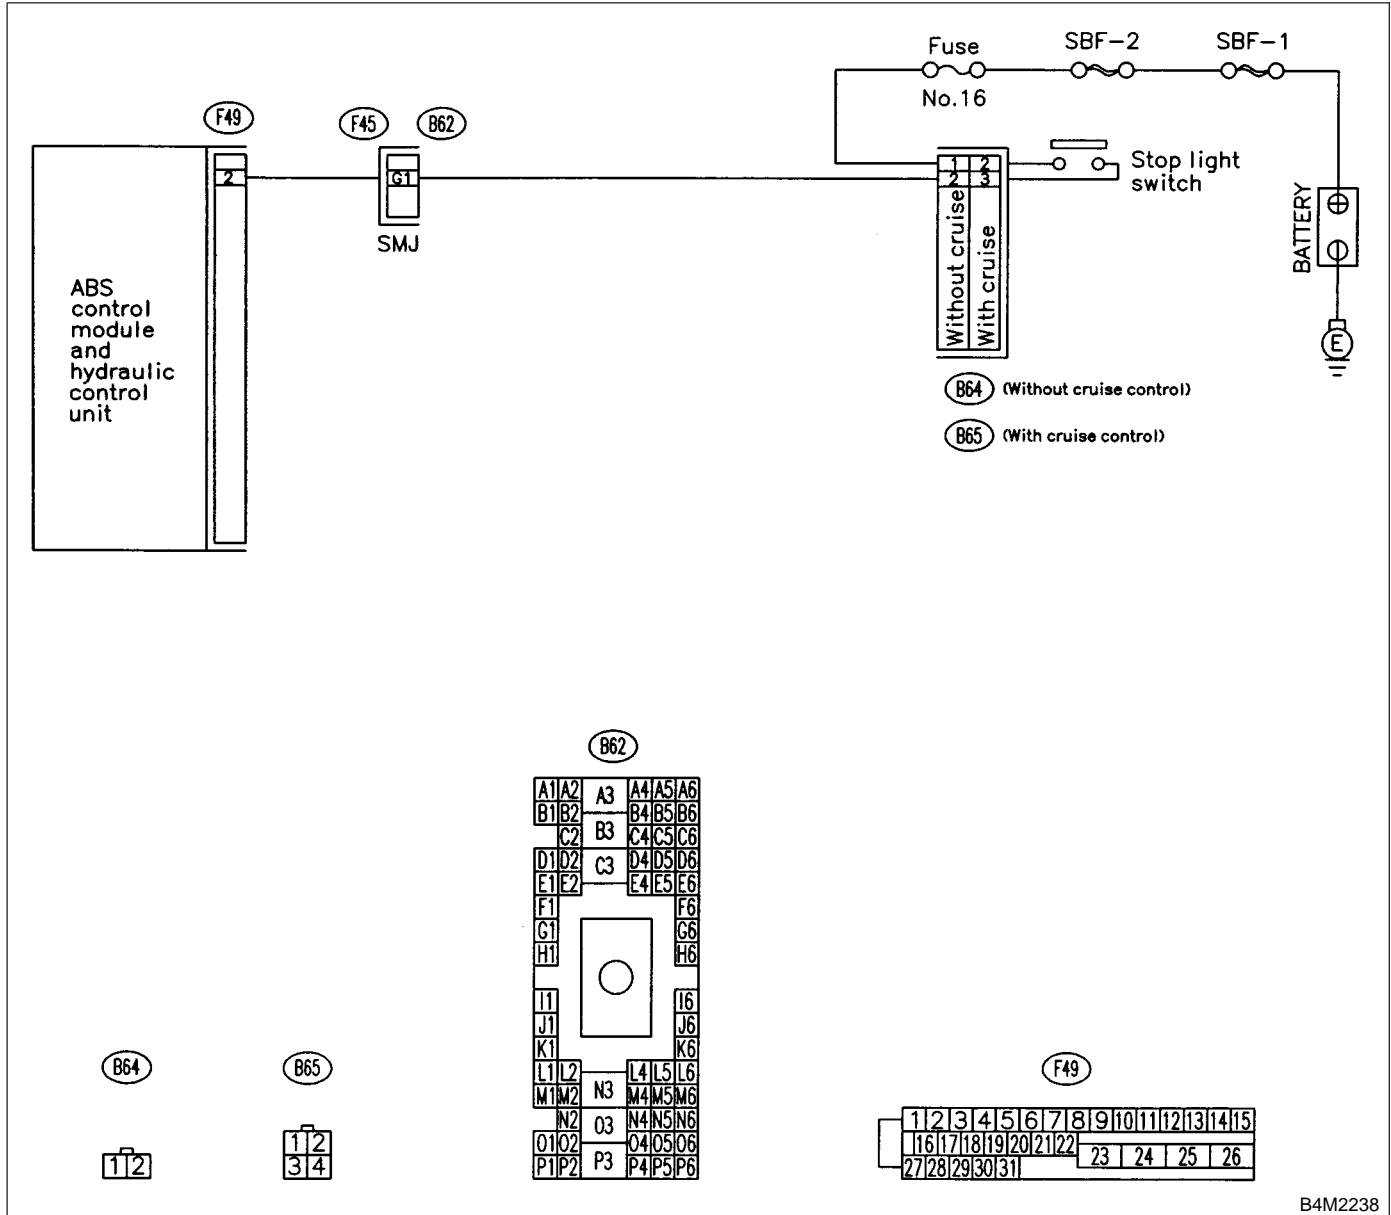

B4M2238

**10AF1 : CHECK OUTPUT OF STOP LIGHT SWITCH USING SELECT MONITOR.**

- 1) Select "Current data display & Save" on the select monitor.
- 2) Release the brake pedal.
- 3) Read the stop light switch output in the select monitor data display.

**CHECK** : *Is the reading indicated on monitor display less than 1.5 V?*

**YES** : Go to step **10AF2**.

**NO** : Go to step **10AF3**.

**10AF2 : CHECK OUTPUT OF STOP LIGHT SWITCH USING SELECT MONITOR.**

- 1) Depress the brake pedal.
- 2) Read the stop light switch output in the select monitor data display.

**CHECK** : *Is the reading indicated on monitor display between 10 and 15 V?*

**YES** : Go to step **10AF5**.

**NO** : Go to step **10AF3**.

**10AF3 : CHECK IF STOP LIGHTS COME ON.**

Depress the brake pedal.

**CHECK** : *Do stop lights turn on?*


**YES** : Go to step **10AF4**.

**NO** : Repair stop lights circuit.

**10AF4 : CHECK OPEN CIRCUIT IN HARNESS.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ABSCM&H/U.
- 3) Depress brake pedal.
- 4) Measure voltage between ABSCM&H/U connector and chassis ground.

**Connector & terminal**  
(F49) No. 2 — Chassis ground:

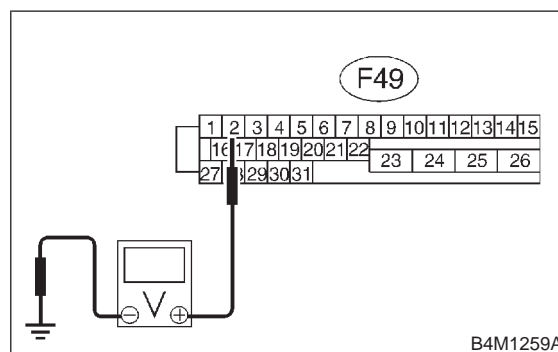

**CHECK** : *Is the voltage between 10 and 15 V?*

**YES** : Go to step **10AF5**.

**NO** : Repair harness between stop light switch and ABSCM&H/U connector.

**10AF5 : CHECK POOR CONTACT IN CONNECTORS.**

**CHECK** : *Is there poor contact in connector between stop light switch and ABSCM&H/U? <Ref. to FOREWORD [W3C1].>*

**YES** : Repair connector.

**NO** : Go to step **10AF6**.

**10AF6 : CHECK ABSCM&H/U.**

- 1) Connect all connectors.
- 2) Erase the memory.
- 3) Perform inspection mode.
- 4) Read out the trouble code.

**CHECK** : *Is the same trouble code as in the current diagnosis still being output?*

**YES** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>

**NO** : Go to step **10AF7**.

|  |
|--|
| <b>10AF7 : CHECK ANY OTHER TROUBLE CODES APPEARANCE.</b> |
|--|

- CHECK** : *Are other trouble codes being output?*
- YES** : Proceed with the diagnosis corresponding to the trouble code.
- NO** : A temporary poor contact.

**MEMO:**

**AG: TROUBLE CODE 56 OPEN OR SHORT CIRCUIT IN G SENSOR CIRCUIT — OPEN OR SHORT CIRCUIT IN G SENSOR CIRCUIT —**


**DIAGNOSIS:**

- Faulty G sensor output voltage

**TROUBLE SYMPTOM:**

- ABS does not operate.

**WIRING DIAGRAM:**

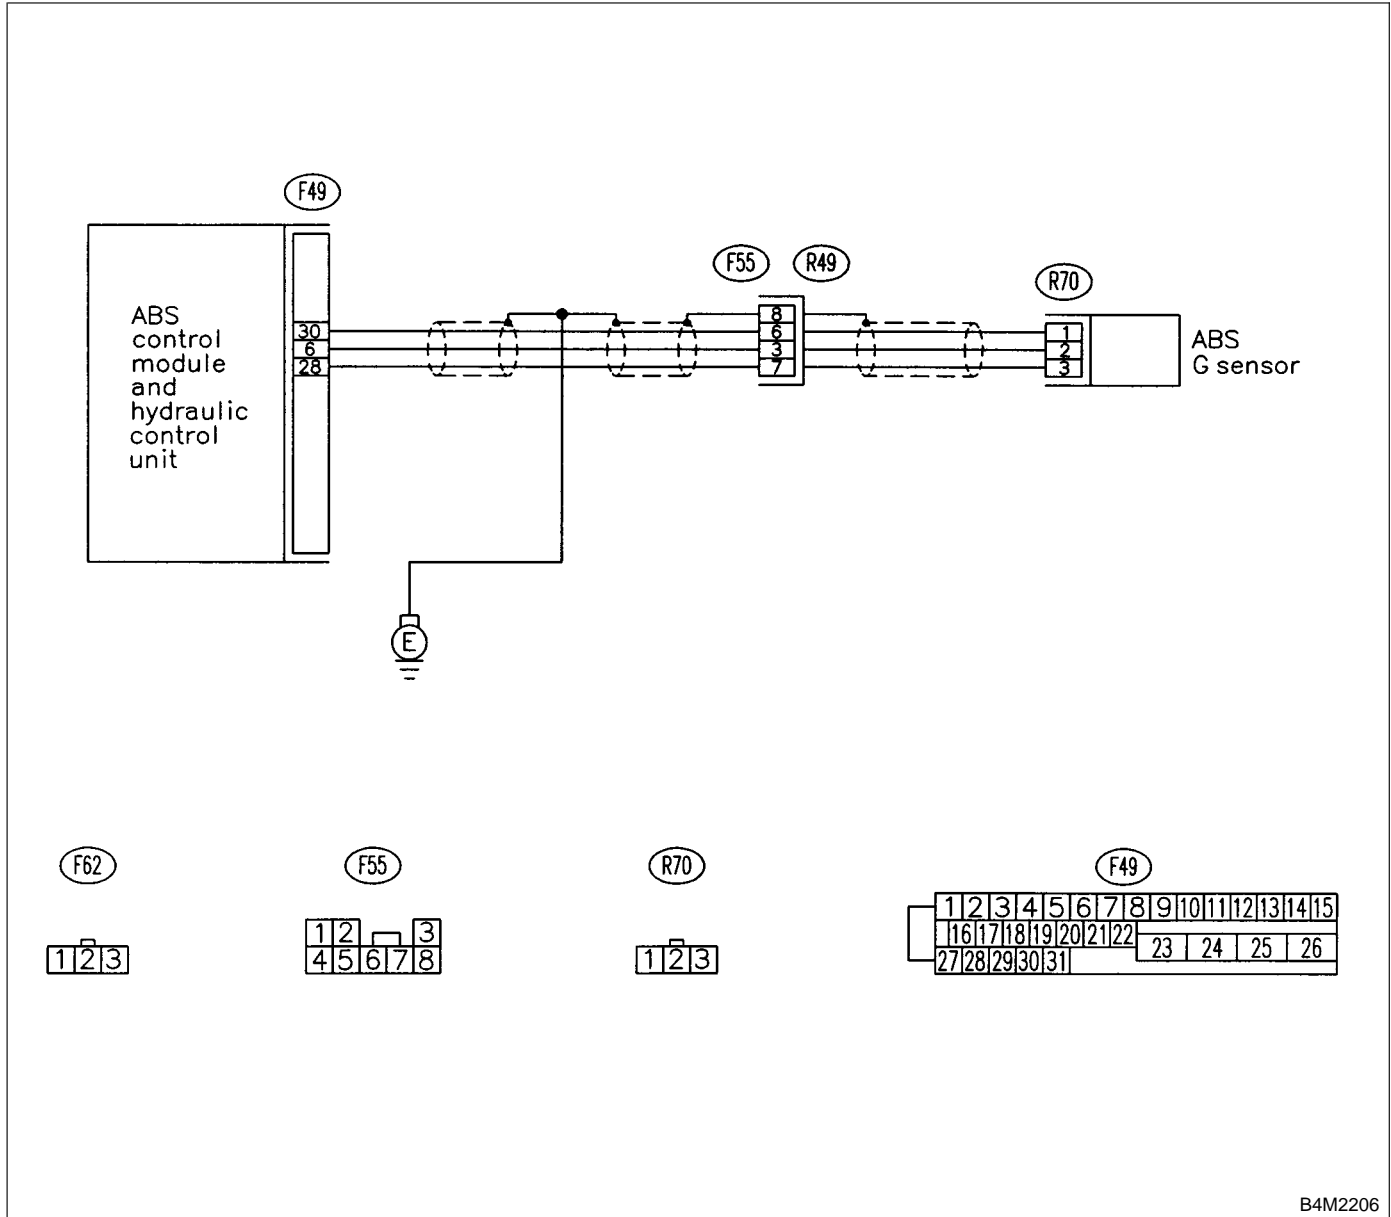

B4M2206

**10AG1 : CHECK OUTPUT OF G SENSOR USING SELECT MONITOR.**

- 1) Select "Current data display & Save" on the select monitor.
- 2) Read the G sensor output in select monitor data display.

**CHECK** : *Is the G sensor output on the monitor display between 2.1 and 2.5 V when the G sensor is in horizontal position?*

**YES** : Go to step **10AG2**.

**NO** : Go to step **10AG5**.

**10AG2 : CHECK POOR CONTACT IN CONNECTORS.**

**CHECK** : *Is there poor contact in connector between ABSCM&H/U and G sensor? <Ref. to FOREWORD [W3C1].>*

**YES** : Repair connector.

**NO** : Go to step **10AG3**.

**10AG3 : CHECK ABSCM&H/U.**

- 1) Connect all connectors.
- 2) Erase the memory.
- 3) Perform inspection mode.
- 4) Read out the trouble code.

**CHECK** : *Is the same trouble code as in the current diagnosis still being output?*

**YES** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>

**NO** : Go to step **10AG4**.

**10AG4 : CHECK ANY OTHER TROUBLE CODES APPEARANCE.**

**CHECK** : *Are other trouble codes being output?*

**YES** : Proceed with the diagnosis corresponding to the trouble code.


**NO** : A temporary poor contact.

**10AG5 : CHECK INPUT VOLTAGE OF G SENSOR.**

- 1) Turn ignition switch to OFF.
- 2) Remove console box.
- 3) Disconnect G sensor from body. (Do not disconnect connector.)
- 4) Turn ignition switch to ON.
- 5) Measure voltage between G sensor connector terminals.

**Connector & terminal**

**(R70) No. 1 (+) — No. 3 (-):**

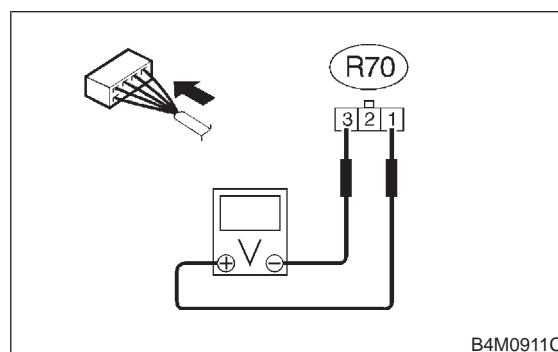

B4M0911C

**CHECK** : *Is the voltage between 4.75 and 5.25 V?*


**YES** : Go to step **10AG6**.

**NO** : Repair harness/connector between G sensor and ABSCM&H/U.

**10AG6 : CHECK OPEN CIRCUIT IN G SENSOR OUTPUT HARNESS AND GROUND HARNESS.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ABSCM&H/U.
- 3) Measure resistance between ABSCM&H/U connector terminals.

**Connector & terminal**  
(F49) No. 6 — No. 28:

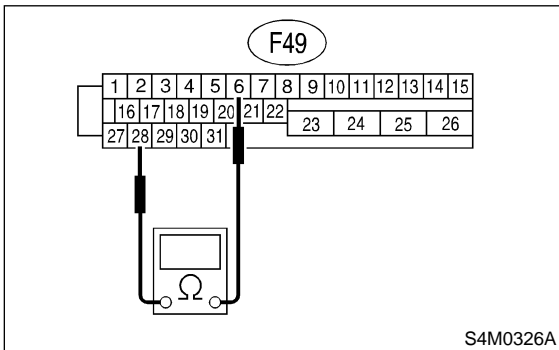


- CHECK** : Is the resistance between 4.3 and 4.9 kΩ?
- YES** : Go to step 10AG7.
- NO** : Repair harness/connector between G sensor and ABSCM&H/U.

**10AG7 : CHECK GROUND SHORT IN G SENSOR OUTPUT HARNESS.**

- 1) Disconnect connector from G sensor.
- 2) Measure resistance between ABSCM&H/U connector and chassis ground.

**Connector & terminal**  
(F49) No. 6 — Chassis ground:


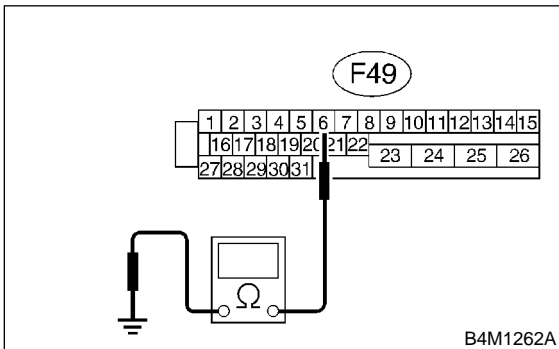


- CHECK** : Is the resistance more than 1 MΩ?
- YES** : Go to step 10AG8.
- NO** : Repair harness between G sensor and ABSCM&H/U.

**10AG8 : CHECK G SENSOR.**

- 1) Connect connector to G sensor.
- 2) Connect connector to ABSCM&H/U.
- 3) Turn ignition switch to ON.
- 4) Measure voltage between G sensor connector terminals.

**Connector & terminal**  
(R70) No. 2 (+) — No. 3 (-):

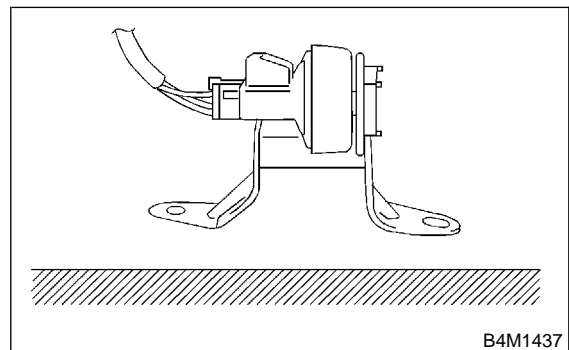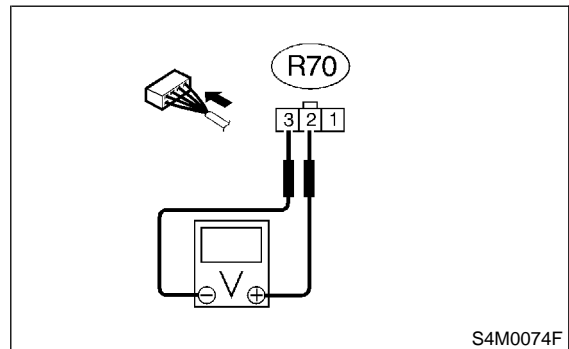


- CHECK** : Is the voltage between 2.1 and 2.5 V when G sensor is horizontal?
- YES** : Go to step 10AG9.
- NO** : Replace G sensor. <Ref. to 4-4 [W16A0].>

**10AG9 : CHECK G SENSOR.**

Measure voltage between G sensor connector terminals.

**Connector & terminal**

**(R70) No. 2 (+) — No. 3 (-):**

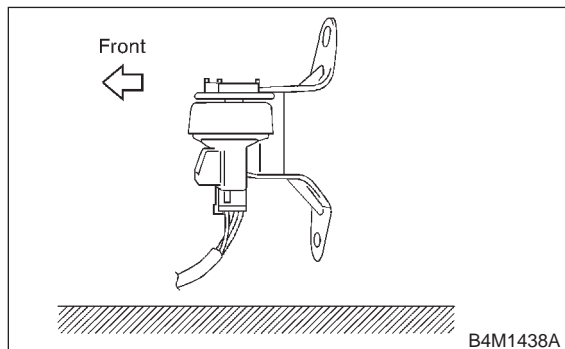

**CHECK** : *Is the voltage between 3.7 and 4.1 V when G sensor is inclined forwards to 90°?*

**YES** : Go to step 10AG10.


**NO** : Replace G sensor. <Ref. to 4-4 [W16A0].>

**10AG10 : CHECK G SENSOR.**

Measure voltage between G sensor connector terminals.

**Connector & terminal**

**(R70) No. 2 (+) — No. 3 (-):**

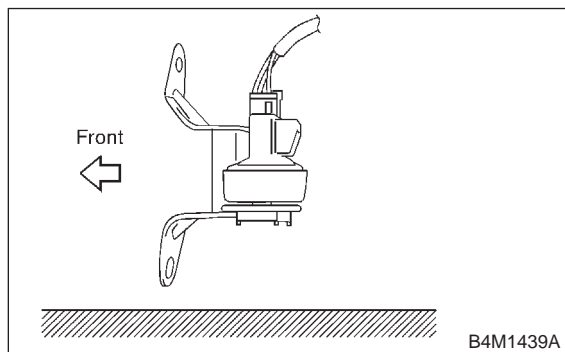

**CHECK** : *Is the voltage between 0.5 and 0.9 V when G sensor is inclined backwards to 90°?*

**YES** : Go to step 10AG11.

**NO** : Replace G sensor. <Ref. to 4-4 [W16A0].>

**10AG11 : CHECK POOR CONTACT IN CONNECTORS.**

Turn ignition switch to OFF.

**CHECK** : *Is there poor contact in connector between ABSCM&H/U and G sensor? <Ref. to FOREWORD [W3C1].>*

**YES** : Repair connector.

**NO** : Go to step 10AG12.

**10AG12 : CHECK ABSCM&H/U.**

- 1) Connect all connectors.
- 2) Erase the memory.
- 3) Perform inspection mode.
- 4) Read out the trouble code.

**CHECK** : *Is the same trouble code as in the current diagnosis still being output?*

**YES** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>

**NO** : Go to step 10AG13.

**10AG13 : CHECK ANY OTHER TROUBLE CODES APPEARANCE.**

**CHECK** : *Are other trouble codes being output?*

**YES** : Proceed with the diagnosis corresponding to the trouble code.

**NO** : A temporary poor contact.



**AH: TROUBLE CODE 56 BATTERY SHORT IN G SENSOR CIRCUIT — BATTERY SHORT IN G SENSOR CIRCUIT —**


**DIAGNOSIS:**

- Faulty G sensor output voltage

**TROUBLE SYMPTOM:**

- ABS does not operate.

**WIRING DIAGRAM:**

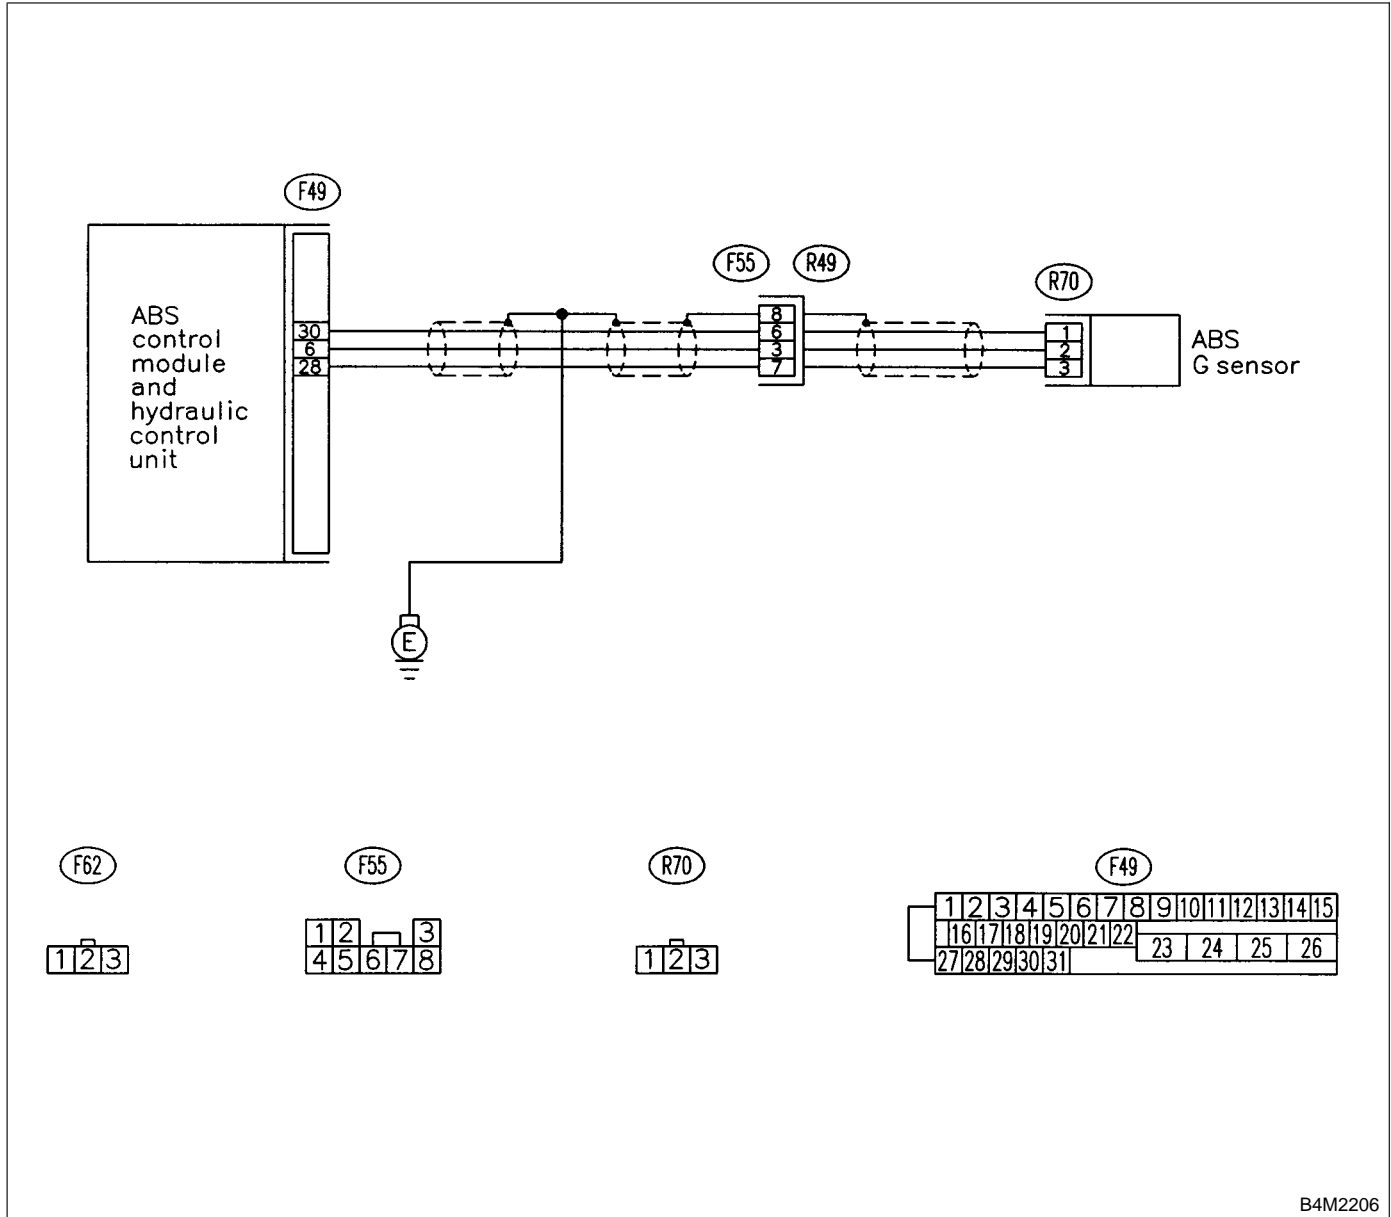

B4M2206

**10AH1 : CHECK OUTPUT OF G SENSOR USING SELECT MONITOR.**

- 1) Select "Current data display & Save" on the select monitor.
- 2) Read the G sensor output in select monitor data display.

**CHECK** : *Is the G sensor output on the monitor display between 2.1 and 2.5 V when the G sensor is in horizontal position?*

**YES** : Go to step 10AH2.

**NO** : Go to step 10AH5.

**10AH2 : CHECK POOR CONTACT IN CONNECTORS.**

**CHECK** : *Is there poor contact in connector between ABSCM&H/U and G sensor? <Ref. to FOREWORD [W3C1].>*

**YES** : Repair connector.

**NO** : Go to step 10AH3.

**10AH3 : CHECK ABSCM&H/U.**

- 1) Connect all connectors.
- 2) Erase the memory.
- 3) Perform inspection mode.
- 4) Read out the trouble code.

**CHECK** : *Is the same trouble code as in the current diagnosis still being output?*

**YES** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>

**NO** : Go to step 10AH4.

**10AH4 : CHECK ANY OTHER TROUBLE CODES APPEARANCE.**

**CHECK** : *Are other trouble codes being output?*

**YES** : Proceed with the diagnosis corresponding to the trouble code.

**NO** : A temporary poor contact.

**10AH5 : CHECK FREEZE FRAME DATA.**

- 1) Select "Freeze frame data" on the select monitor.
- 2) Read front right wheel speed on the select monitor display.

**CHECK** : *Is the front right wheel speed on monitor display 0 km?*

**YES** : Go to step 10AH6.

**NO** : Go to step 10AH16.

**10AH6 : CHECK FREEZE FRAME DATA.**

Read front left wheel speed on the select monitor display.

**CHECK** : *Is the front left wheel speed on monitor display 0 km?*

**YES** : Go to step 10AH7.

**NO** : Go to step 10AH16.

**10AH7 : CHECK FREEZE FRAME DATA.**

Read rear right wheel speed on the select monitor display.

**CHECK** : *Is the rear right wheel speed on monitor display 0 km?*

**YES** : Go to step 10AH8.

**NO** : Go to step 10AH16.

**10AH8 : CHECK FREEZE FRAME DATA.**

Read rear left wheel speed on the select monitor display.

**CHECK** : *Is the rear left wheel speed on monitor display 0 km?*

**YES** : Go to step 10AH9.

**NO** : Go to step 10AH16.

**10AH9 : CHECK FREEZE FRAME DATA.**

Read G sensor output on the select monitor display.

**CHECK** : *Is the G sensor output on monitor display more than 3.65 V?*

**YES** : Go to step 10AH10.


**NO** : Go to step 10AH16.

**10AH10 : CHECK OPEN CIRCUIT IN G SENSOR OUTPUT HARNESS AND GROUND HARNESS.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ABSCM&H/U.
- 3) Measure resistance between ABSCM&H/U connector terminals.

**Connector & terminal**

**(F49) No. 6 — No. 28:**

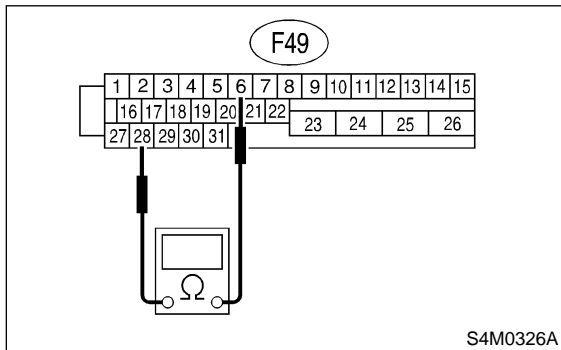


- CHECK** : Is the resistance between 4.3 and 4.9 kΩ?
- YES** : Go to step 10AH11.
- NO** : Repair harness/connector between G sensor and ABSCM&H/U.

**10AH11 : CHECK BATTERY SHORT OF HARNESS.**

- 1) Turn ignition switch to OFF.
- 2) Remove console box.
- 3) Disconnect connector from G sensor.
- 4) Disconnect connector from ABSCM&H/U.
- 5) Measure voltage between ABSCM&H/U connector and chassis ground.

**Connector & terminal**

**(F49) No. 6 (+) — Chassis ground (-):**

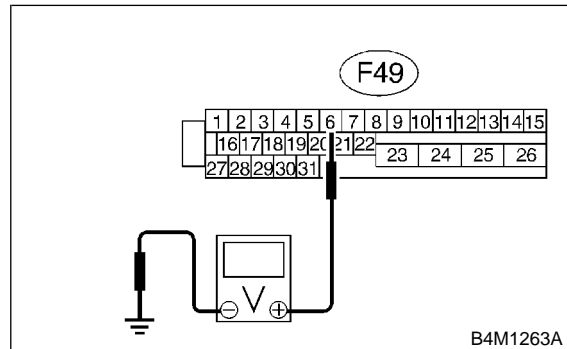


- CHECK** : Is the voltage less than 1 V?
- YES** : Go to step 10AH12.
- NO** : Repair harness between G sensor and ABSCM&H/U.

**10AH12 : CHECK BATTERY SHORT OF HARNESS.**

- 1) Turn ignition switch to ON.
- 2) Measure voltage between ABSCM&H/U connector and chassis ground.

**Connector & terminal**

**(F49) No. 6 (+) — Chassis ground (-):**

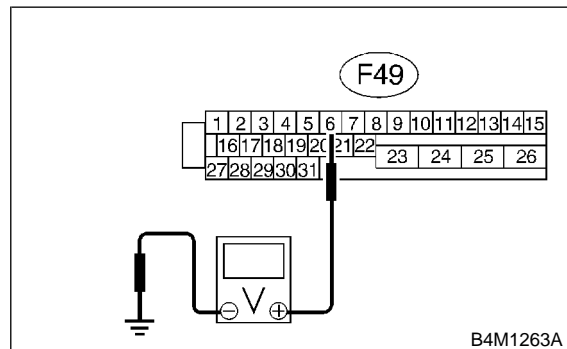

- CHECK** : Is the voltage less than 1 V?
- YES** : Go to step 10AH13.
- NO** : Repair harness between G sensor and ABSCM&H/U.

**10AH13 : CHECK POOR CONTACT IN CONNECTORS.**

**CHECK** : *Is there poor contact in connector between ABSCM&H/U and G sensor? <Ref. to FOREWORD [W3C1].>*

**YES** : Repair connector.

**NO** : Go to step **10AH14**.

**10AH14 : CHECK ABSCM&H/U.**

- 1) Connect all connectors.
- 2) Erase the memory.
- 3) Perform inspection mode.
- 4) Read out the trouble code.

**CHECK** : *Is the same trouble code as in the current diagnosis still being output?*

**YES** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>

**NO** : Go to step **10AH15**.

**10AH15 : CHECK ANY OTHER TROUBLE CODES APPEARANCE.**

**CHECK** : *Are other trouble codes being output?*

**YES** : Proceed with the diagnosis corresponding to the trouble code.


**NO** : A temporary poor contact.

**10AH16 : CHECK INPUT VOLTAGE OF G SENSOR.**

- 1) Turn ignition switch to OFF.
- 2) Remove console box.
- 3) Disconnect G sensor from body. (Do not disconnect connector.)
- 4) Turn ignition switch to ON.
- 5) Measure voltage between G sensor connector terminals.

**Connector & terminal**

**(R70) No. 1 (+) — No. 3 (-):**

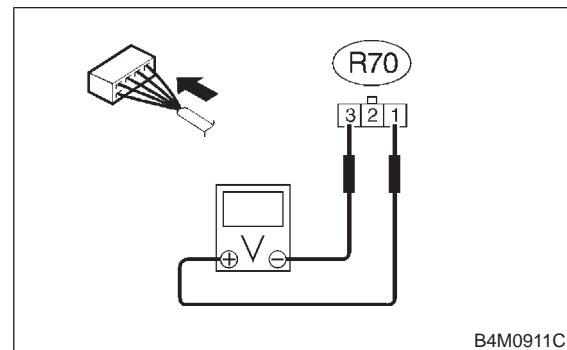

**CHECK** : *Is the voltage between 4.75 and 5.25 V?*


**YES** : Go to step **10AH17**.

**NO** : Repair harness/connector between G sensor and ABSCM&H/U.

**10AH17 : CHECK OPEN CIRCUIT IN G SENSOR OUTPUT HARNESS AND GROUND HARNESS.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ABSCM&H/U.
- 3) Measure resistance between ABSCM&H/U connector terminals.

**Connector & terminal**  
**(F49) No. 6 — No. 28:**


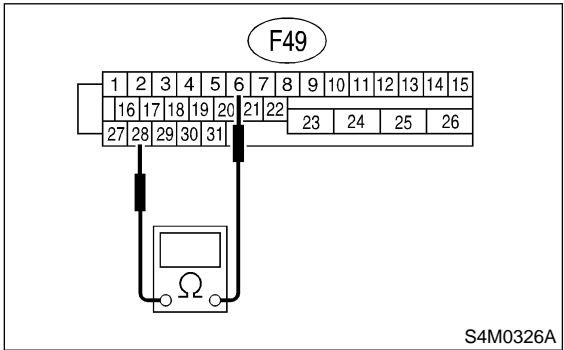


- CHECK** : *Is the resistance between 4.3 and 4.9 kΩ?*
- YES** : Go to step **10AH18**.
- NO** : Repair harness/connector between G sensor and ABSCM&H/U.

**10AH18 : CHECK G SENSOR.**

- 1) Connect connector to G sensor.
- 2) Connect connector to ABSCM&H/U.
- 3) Turn ignition switch to ON.
- 4) Measure voltage between G sensor connector terminals.

**Connector & terminal**  
**(R70) No. 2 (+) — No. 3 (-):**

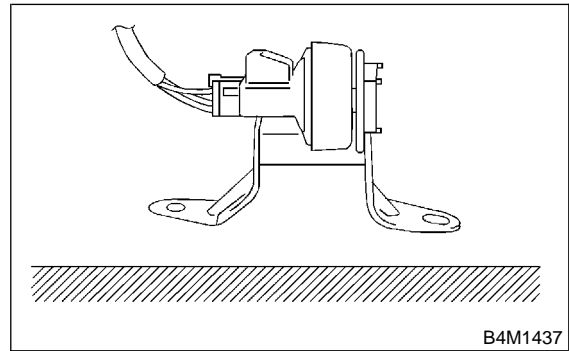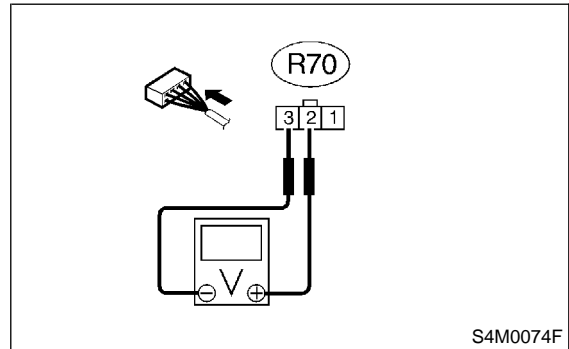


- CHECK** : *Is the voltage between 2.1 and 2.5 V when G sensor is horizontal?*
- YES** : Go to step **10AH19**.
- NO** : Replace G sensor. <Ref. to 4-4 [W16A0].>

**10AH19 : CHECK G SENSOR.**

Measure voltage between G sensor connector terminals.

**Connector & terminal**

**(R70) No. 2 (+) — No. 3 (-):**

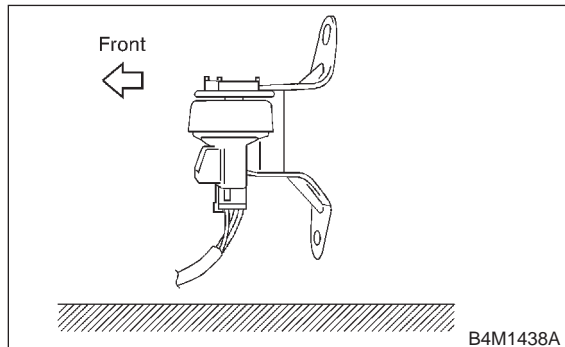

**CHECK** : *Is the voltage between 3.7 and 4.1 V when G sensor is inclined forwards to 90°?*

**YES** : Go to step 10AH20.


**NO** : Replace G sensor. <Ref. to 4-4 [W16A0].>

**10AH20 : CHECK G SENSOR.**

Measure voltage between G sensor connector terminals.

**Connector & terminal**

**(R70) No. 2 (+) — No. 3 (-):**

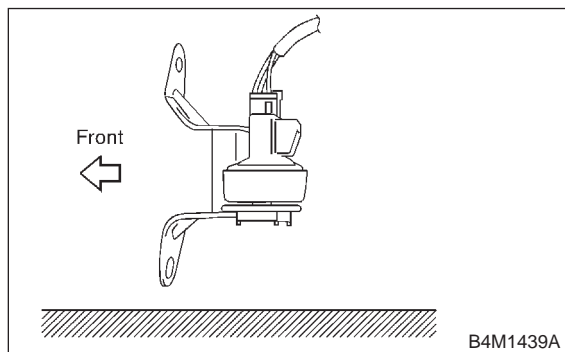

**CHECK** : *Is the voltage between 0.5 and 0.9 V when G sensor is inclined backwards to 90°?*

**YES** : Go to step 10AH21.

**NO** : Replace G sensor. <Ref. to 4-4 [W16A0].>

**10AH21 : CHECK POOR CONTACT IN CONNECTORS.**

Turn ignition switch to OFF.

**CHECK** : *Is there poor contact in connector between ABSCM&H/U and G sensor? <Ref. to FOREWORD [W3C1].>*

**YES** : Repair connector.

**NO** : Go to step 10AH22.

**10AH22 : CHECK ABSCM&H/U.**

- 1) Connect all connectors.
- 2) Erase the memory.
- 3) Perform inspection mode.
- 4) Read out the trouble code.

**CHECK** : *Is the same trouble code as in the current diagnosis still being output?*

**YES** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>

**NO** : Go to step 10AH23.

**10AH23 : CHECK ANY OTHER TROUBLE CODES APPEARANCE.**

**CHECK** : *Are other trouble codes being output?*

**YES** : Proceed with the diagnosis corresponding to the trouble code.

**NO** : A temporary poor contact.

**AI: TROUBLE CODE 56 ABNORMAL G SENSOR HIGH  $\mu$  OUTPUT  
 — ABNORMAL G SENSOR HIGH  $\mu$  OUTPUT —**


**DIAGNOSIS:**

- Faulty G sensor output voltage

**TROUBLE SYMPTOM:**

- ABS does not operate.

**WIRING DIAGRAM:**

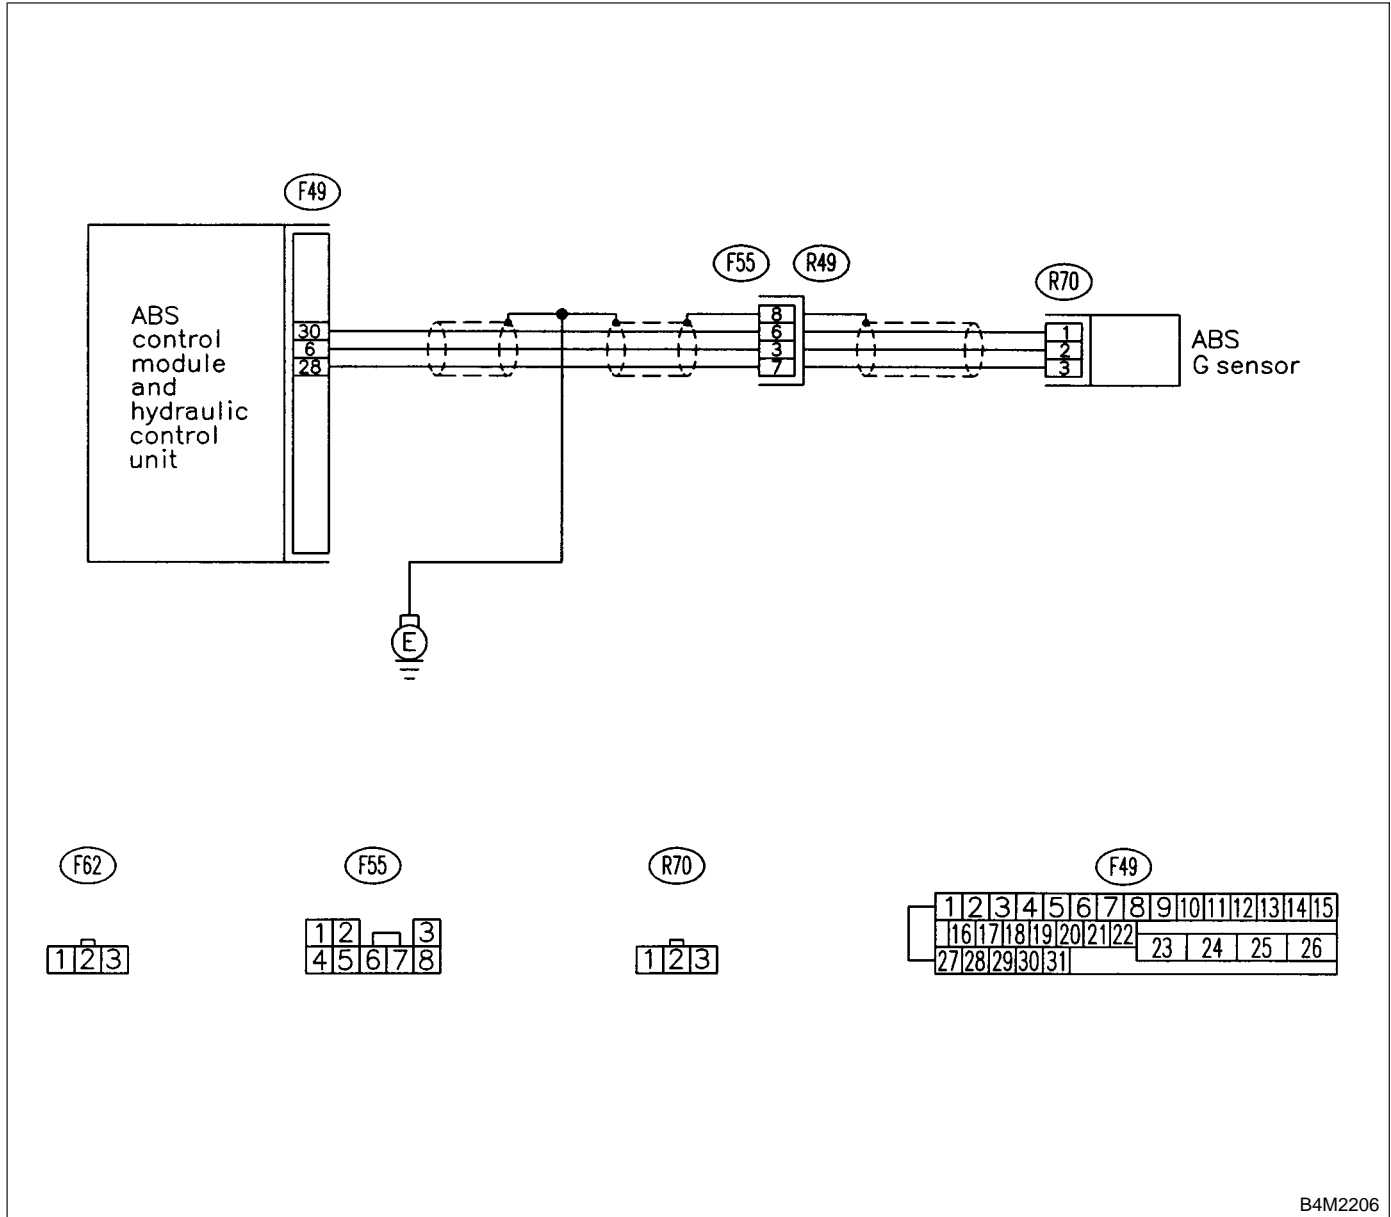

B4M2206

**10A11 : CHECK OUTPUT OF G SENSOR USING SELECT MONITOR.**

- 1) Select "Current data display & Save" on the select monitor.
- 2) Read G sensor output on the select monitor display.

**CHECK** : *Is the G sensor output on monitor display  $2.3 \pm 0.2$  V when the G sensor is in horizontal position?*

**YES** : Go to step 10A12.

**NO** : Go to step 10A16.

**10A12 : CHECK POOR CONTACT IN CONNECTORS.**

Turn ignition switch to OFF.

**CHECK** : *Is there poor contact in connector between ABSCM&H/U and G sensor? <Ref. to FOREWORD [W3C1].>*

**YES** : Repair connector.

**NO** : Go to step 10A13.

**10A13 : CHECK ABSCM&H/U.**

- 1) Connect all connectors.
- 2) Erase the memory.
- 3) Perform inspection mode.
- 4) Read out the trouble code.

**CHECK** : *Is the same trouble code as in the current diagnosis still being output?*

**YES** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>

**NO** : Go to step 10A14.

**10A14 : CHECK ANY OTHER TROUBLE CODES APPEARANCE.**

**CHECK** : *Are other trouble codes being output?*


**YES** : Proceed with the diagnosis corresponding to the trouble code.

**NO** : A temporary poor contact.

**10A15 : CHECK OPEN CIRCUIT IN G SENSOR OUTPUT HARNESS AND GROUND HARNESS.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ABSCM&H/U.
- 3) Measure resistance between ABSCM&H/U connector terminals.

**Connector & terminal**  
(F49) No. 6 — No. 28:

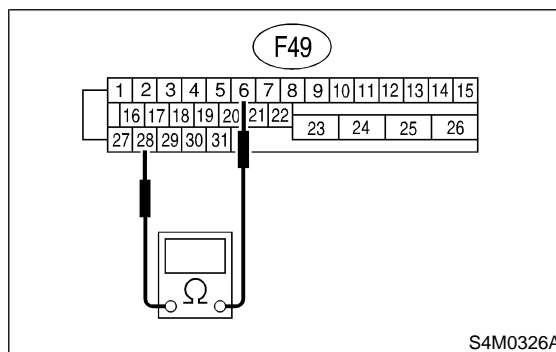

**CHECK** : *Is the resistance between 4.3 and 4.9 kΩ?*


**YES** : Go to step 10A16.

**NO** : Repair harness/connector between G sensor and ABSCM&H/U.

**10A16 : CHECK GROUND SHORT OF HARNESS.**

Measure resistance between ABSCM&H/U connector and chassis ground.

**Connector & terminal**  
(F49) No. 28 — Chassis ground:

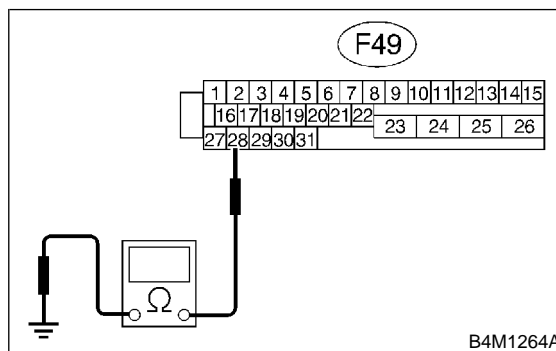

**CHECK** : *Is the resistance more than 1 MΩ?*

**YES** : Go to step 10A17.



**NO** : Repair harness between G sensor and ABSCM&H/U. Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>



**10AI7 : CHECK G SENSOR.**

- 1) Remove console box.
- 2) Remove G sensor from vehicle.
- 3) Connect connector to G sensor.
- 4) Connect connector to ABSCM&H/U.
- 5) Turn ignition switch to ON.
- 6) Measure voltage between G sensor connector terminals.

**Connector & terminal**  
**(R70) No. 2 (+) — No. 3 (-):**

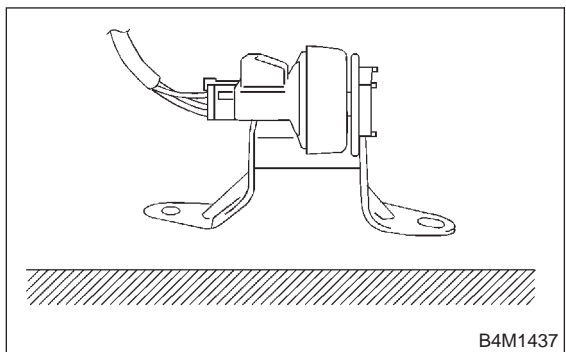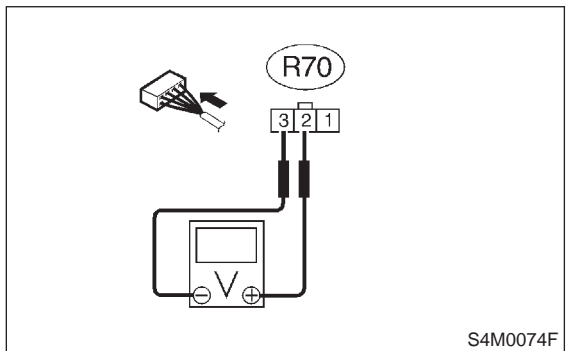


- CHECK** : *Is the voltage between 2.1 and 2.5 V when G sensor is horizontal?*
- YES** : Go to step **10AI8**.
- NO** : Replace G sensor. <Ref. to 4-4 [W16A0].>

**10AI8 : CHECK G SENSOR.**

Measure voltage between G sensor connector terminals.

**Connector & terminal**  
**(R70) No. 2 (+) — No. 3 (-):**

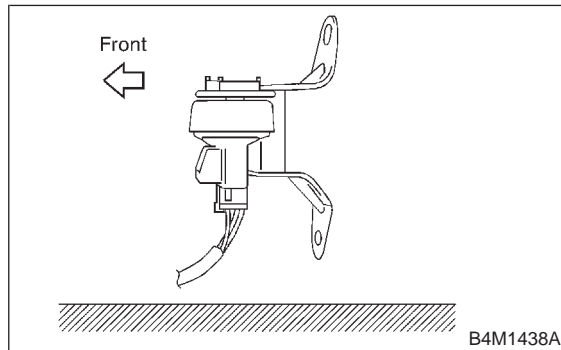


- CHECK** : *Is the voltage between 3.7 and 4.1 V when G sensor is inclined forwards to 90°?*
- YES** : Go to step **10AI9**.
- NO** : Replace G sensor. <Ref. to 4-4 [W16A0].>

**10AI9 : CHECK G SENSOR.**

Measure voltage between G sensor connector terminals.

**Connector & terminal**  
**(R70) No. 2 (+) — No. 3 (-):**

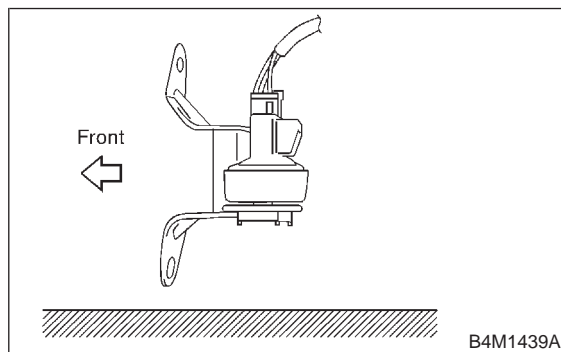

- CHECK** : *Is the voltage between 0.5 and 0.9 V when G sensor is inclined backwards to 90°?*
- YES** : Go to step **10AI10**.
- NO** : Replace G sensor. <Ref. to 4-4 [W16A0].>

**10A110 : CHECK ABSCM&H/U.**

- 1) Turn ignition switch to OFF.
- 2) Connect all connectors.
- 3) Erase the memory.
- 4) Perform inspection mode.
- 5) Read out the trouble code.

**CHECK** : *Is the same trouble code as in the current diagnosis still being output?*

**YES** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>

**NO** : Go to step **10A111**.

**10A111 : CHECK ANY OTHER TROUBLE CODES APPEARANCE.**

**CHECK** : *Are other trouble codes being output?*

**YES** : Proceed with the diagnosis corresponding to the trouble code.

**NO** : A temporary poor contact.

**AJ: TROUBLE CODE 56 DETECTION OF G SENSOR STICK  
— DETECTION OF G SENSOR STICK —**


**DIAGNOSIS:**

- Faulty G sensor output voltage

**TROUBLE SYMPTOM:**

- ABS does not operate.

**WIRING DIAGRAM:**

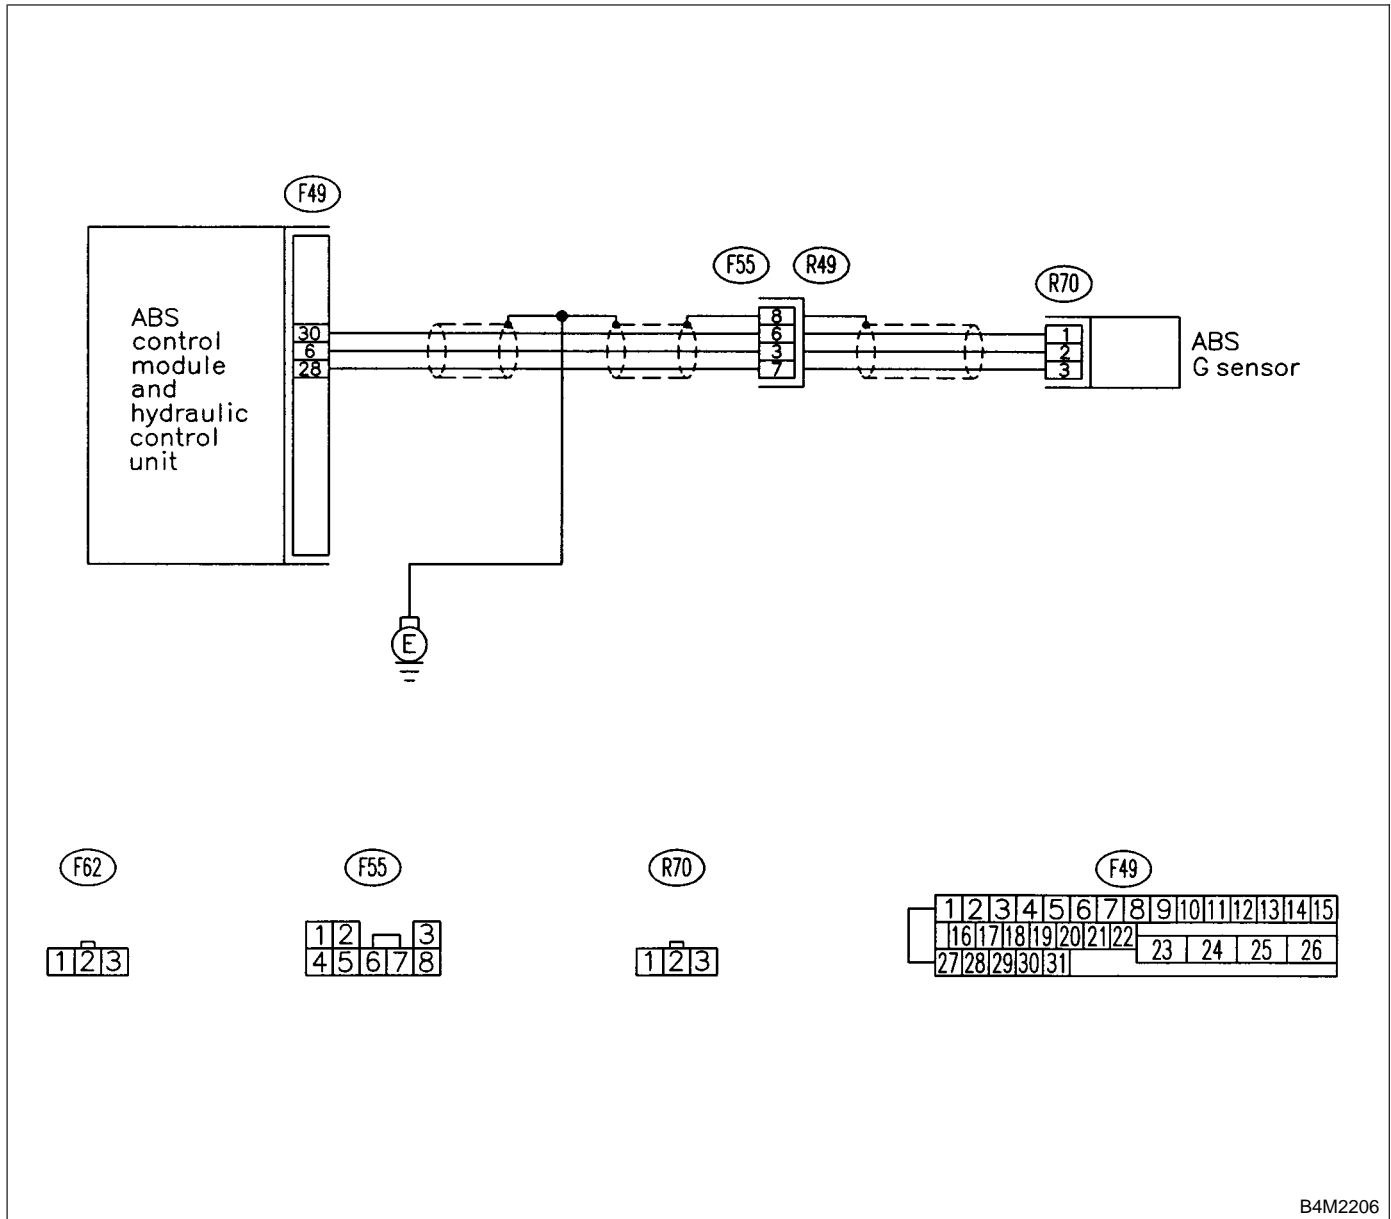

B4M2206

**10AJ1 : CHECK ALL FOUR WHEELS FOR FREE TURNING.**

**CHECK** : *Have the wheels been turned freely such as when the vehicle is lifted up, or operated on a rolling road?*

**YES** : The ABS is normal. Erase the trouble code.

**NO** : Go to step **10AJ2**.

**10AJ2 : CHECK OUTPUT OF G SENSOR USING SELECT MONITOR.**

1) Select "Current data display & Save" on the select monitor.

2) Read the select monitor display.

**CHECK** : *Is the G sensor output on the monitor display between 2.1 and 2.5 V when the vehicle is in horizontal position?*

**YES** : Go to step **10AJ3**.

**NO** : Go to step **10AJ8**.

**10AJ3 : CHECK OUTPUT OF G SENSOR USING SELECT MONITOR.**

1) Turn ignition switch to OFF.


2) Remove console box.

3) Remove G sensor from vehicle. (Do not disconnect connector.)

4) Turn ignition switch to ON.

5) Select "Current data display & Save" on the select monitor.

6) Read the select monitor display.

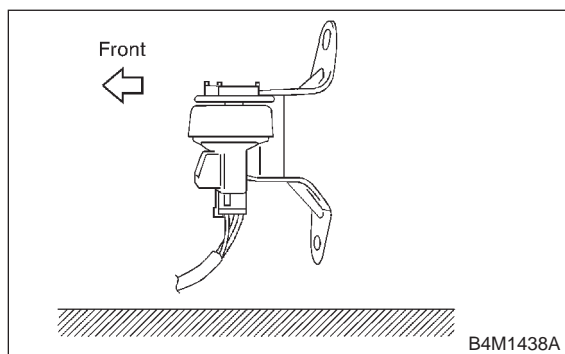


**CHECK** : *Is the G sensor output on the monitor display between 3.7 and 4.1 V when G sensor is inclined forwards to 90°?*

**YES** : Go to step **10AJ4**.

**NO** : Replace G sensor. <Ref. to 4-4 [W16A0].>

**10AJ4 : CHECK OUTPUT OF G SENSOR USING SELECT MONITOR.**

Read the select monitor display.

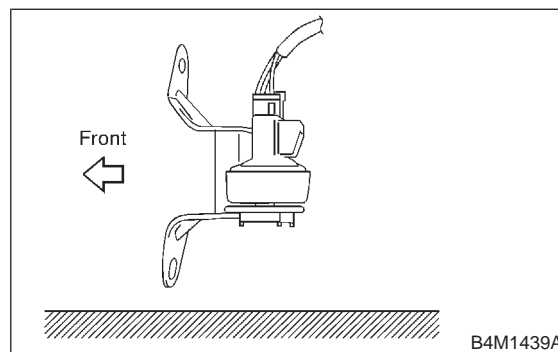

**CHECK** : *Is the G sensor output on the monitor display between 0.5 and 0.9 V when G sensor is inclined backwards to 90°?*

**YES** : Go to step **10AJ5**.

**NO** : Replace G sensor. <Ref. to 4-4 [W16A0].>

**10AJ5 : CHECK POOR CONTACT IN CONNECTORS.**

Turn ignition switch to OFF.

**CHECK** : *Is there poor contact in connector between ABSCM&H/U and G sensor? <Ref. to FOREWORD [W3C1].>*

**YES** : Repair connector.

**NO** : Go to step **10AJ6**.

**10AJ6 : CHECK ABSCM&H/U.**

1) Connect all connectors.

2) Erase the memory.

3) Perform inspection mode.

4) Read out the trouble code.

**CHECK** : *Is the same trouble code as in the current diagnosis still being output?*

**YES** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>

**NO** : Go to step **10AJ7**.


**10AJ7 : CHECK ANY OTHER TROUBLE CODES APPEARANCE.**

- CHECK** : Are other trouble codes being output?
- YES** : Proceed with the diagnosis corresponding to the trouble code.
- NO** : A temporary poor contact.

**10AJ8 : CHECK OPEN CIRCUIT IN G SENSOR OUTPUT HARNESS AND GROUND HARNESS.**

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ABSCM&H/U.
- 3) Measure resistance between ABSCM&H/U connector terminals.

**Connector & terminal**  
(F49) No. 6 — No. 28:


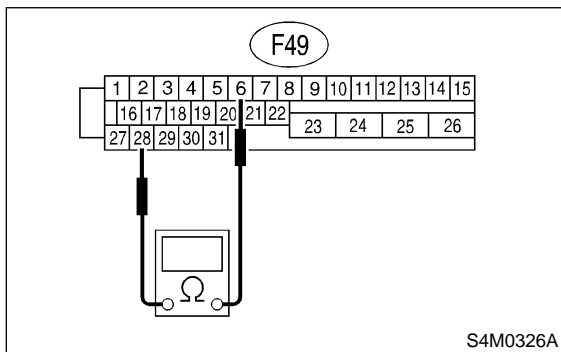


- CHECK** : Is the resistance between 4.3 and 4.9 kΩ?
- YES** : Go to step 10AJ9.
- NO** : Repair harness/connector between G sensor and ABSCM&H/U.

**10AJ9 : CHECK G SENSOR.**

- 1) Remove console box.
- 2) Remove G sensor from vehicle.
- 3) Connect connector to G sensor.
- 4) Connect connector to ABSCM&H/U.
- 5) Turn ignition switch to ON.
- 6) Measure voltage between G sensor connector terminals.

**Connector & terminal**  
(R70) No. 2 (+) — No. 3 (-):

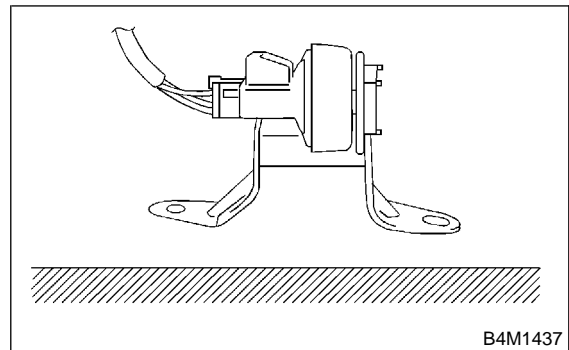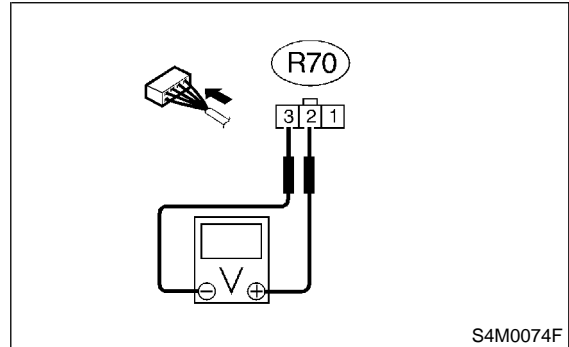


- CHECK** : Is the voltage between 2.1 and 2.5 V when G sensor is horizontal?
- YES** : Go to step 10AJ10.
- NO** : Replace G sensor. <Ref. to 4-4 [W16A0].>

**10AJ10 : CHECK G SENSOR.**

Measure voltage between G sensor connector terminals.

**Connector & terminal**

**(R70) No. 2 (+) — No. 3 (-):**

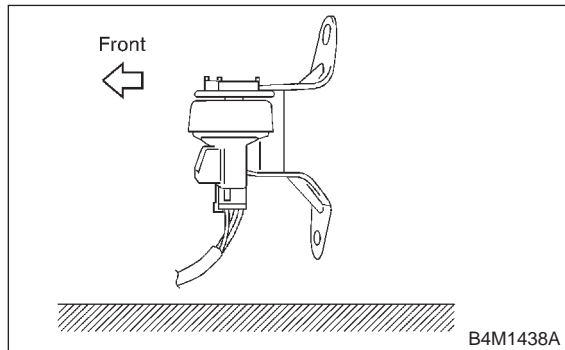

**CHECK** : *Is the voltage between 3.7 and 4.1 V when G sensor is inclined forwards to 90°?*

**YES** : Go to step 10AJ11.


**NO** : Replace G sensor. <Ref. to 4-4 [W16A0].>

**10AJ11 : CHECK G SENSOR.**

Measure voltage between G sensor connector terminals.

**Connector & terminal**

**(R70) No. 2 (+) — No. 3 (-):**

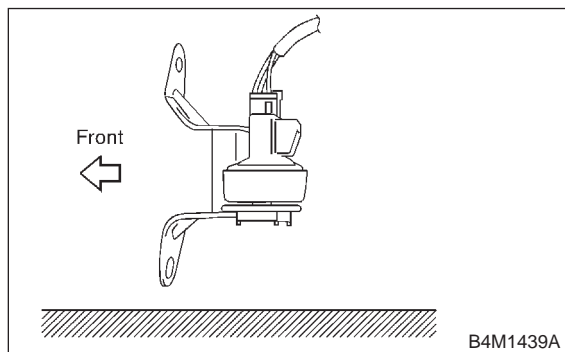

**CHECK** : *Is the voltage between 0.5 and 0.9 V when G sensor is inclined backwards to 90°?*

**YES** : Go to step 10AJ12.

**NO** : Replace G sensor. <Ref. to 4-4 [W16A0].>

**10AJ12 : CHECK ABSCM&H/U.**

- 1) Turn ignition switch to OFF.
- 2) Connect all connectors.
- 3) Erase the memory.
- 4) Perform inspection mode.
- 5) Read out the trouble code.

**CHECK** : *Is the same trouble code as in the current diagnosis still being output?*

**YES** : Replace ABSCM&H/U. <Ref. to 4-4 [W15A0].>

**NO** : Go to step 10AJ13.

**10AJ13 : CHECK ANY OTHER TROUBLE CODES APPEARANCE.**

**CHECK** : *Are other trouble codes being output?*

**YES** : Proceed with the diagnosis corresponding to the trouble code.

**NO** : A temporary poor contact.