


SECURITY SYSTEM

Security and Locks

4. Security System S909347


A: SCHEMATIC S909347A21

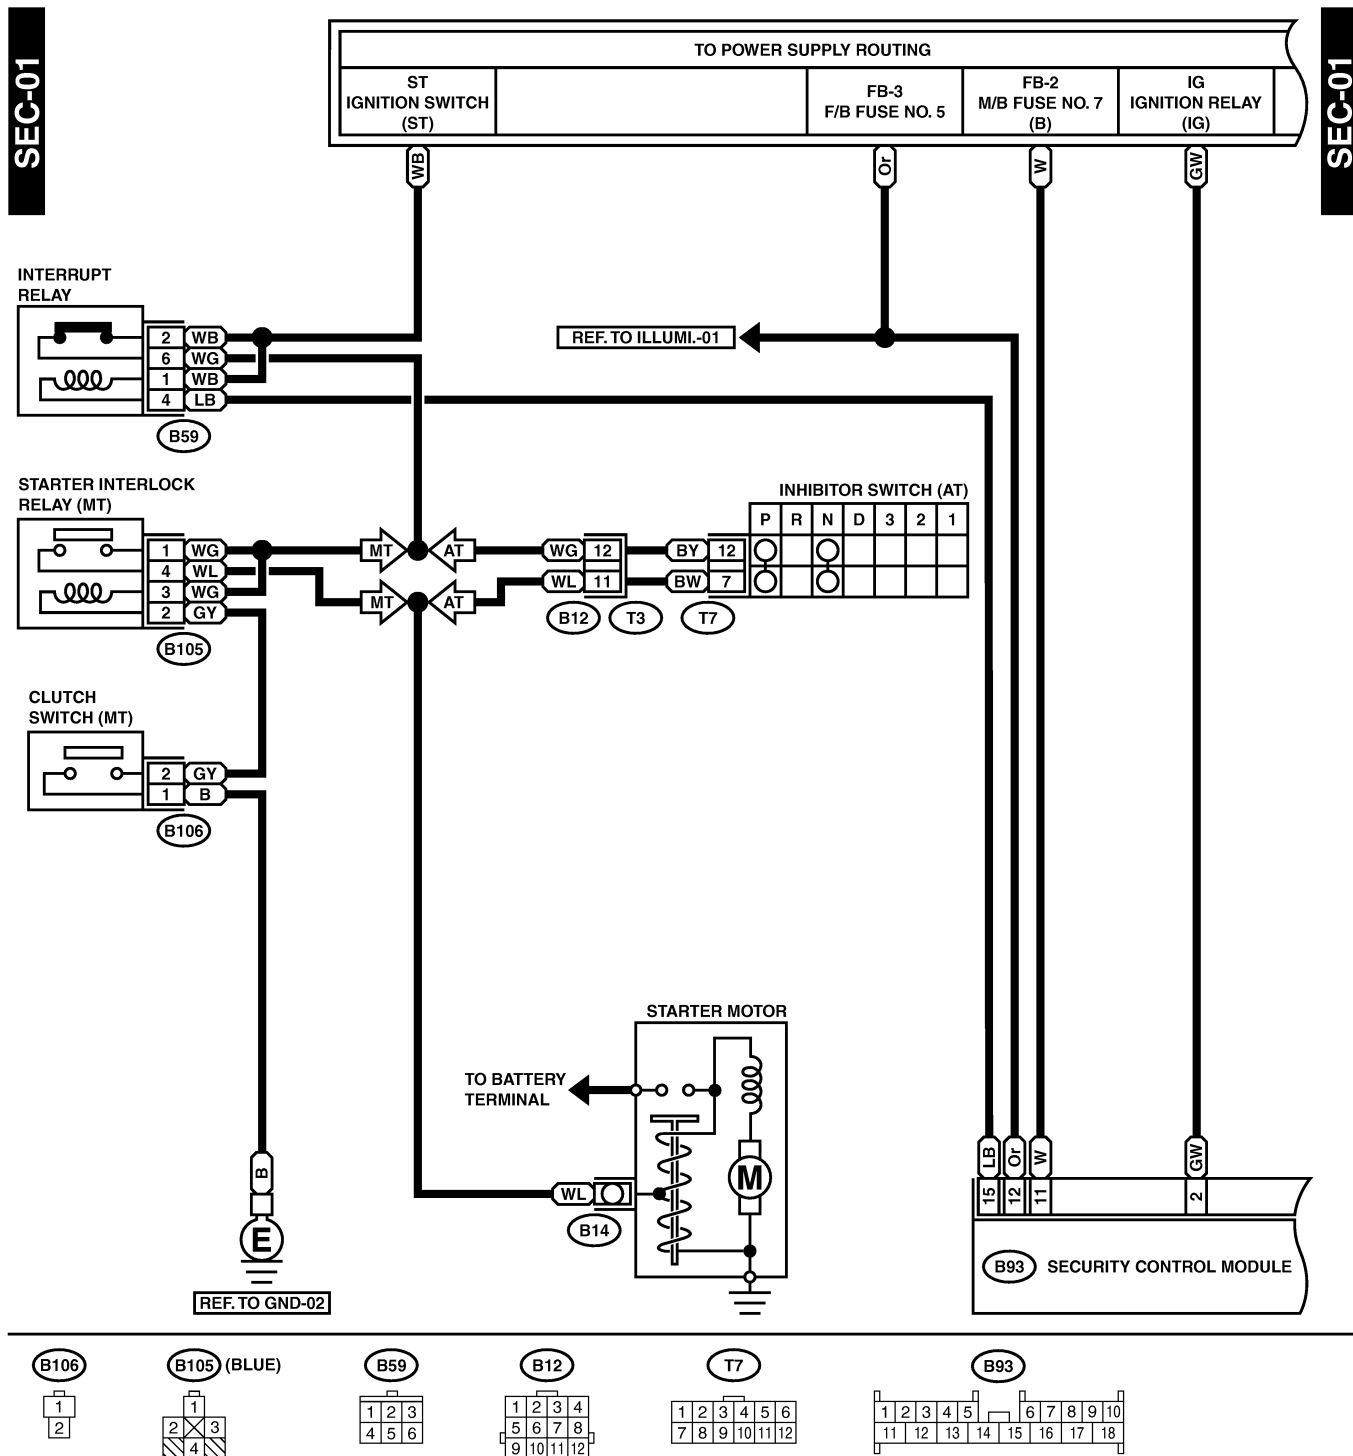

BU94-22A

SECURITY SYSTEM

Security and Locks

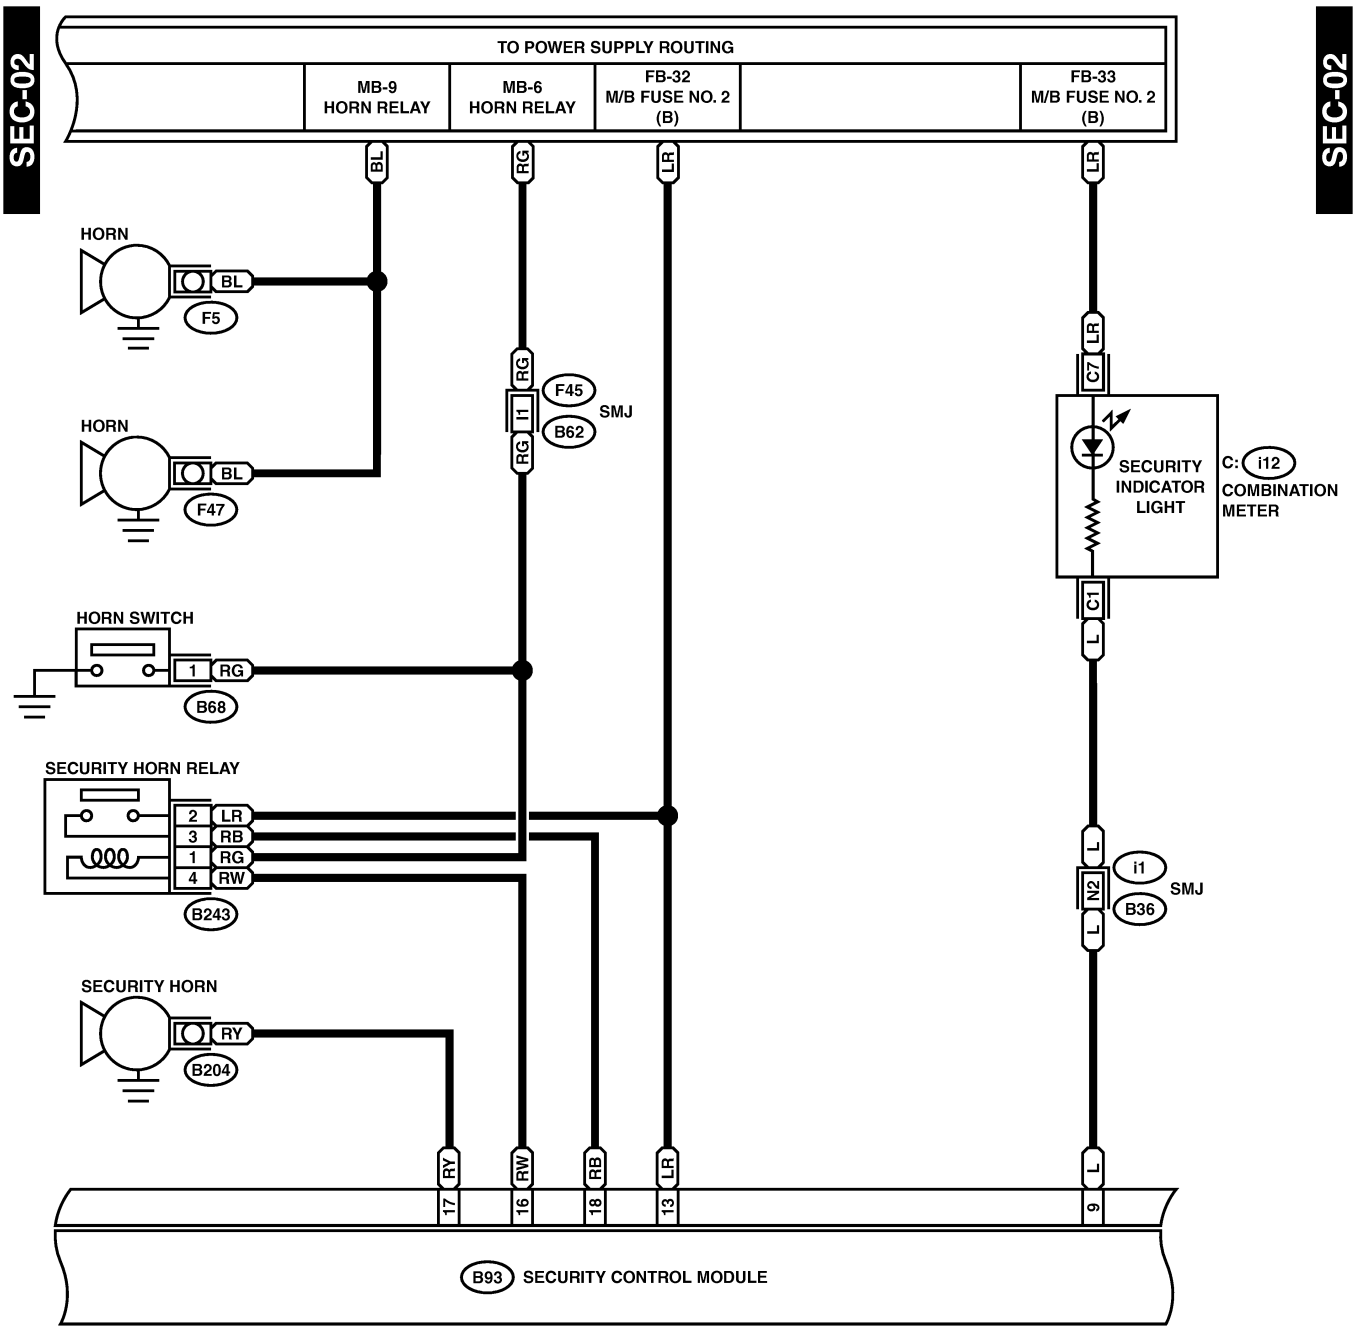


B68 (BLACK)




B243 (BLACK)



C: i12 (GREEN)






B93



BU94-22B

SECURITY SYSTEM


Security and Locks

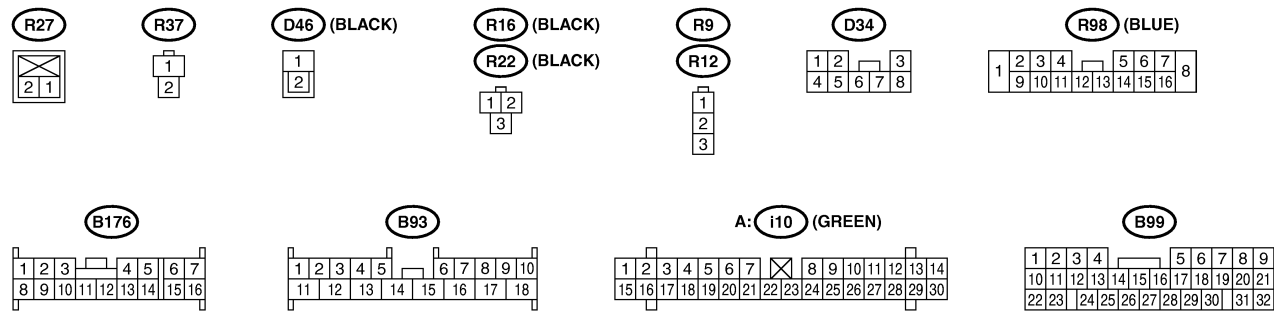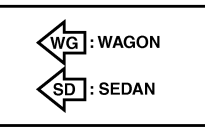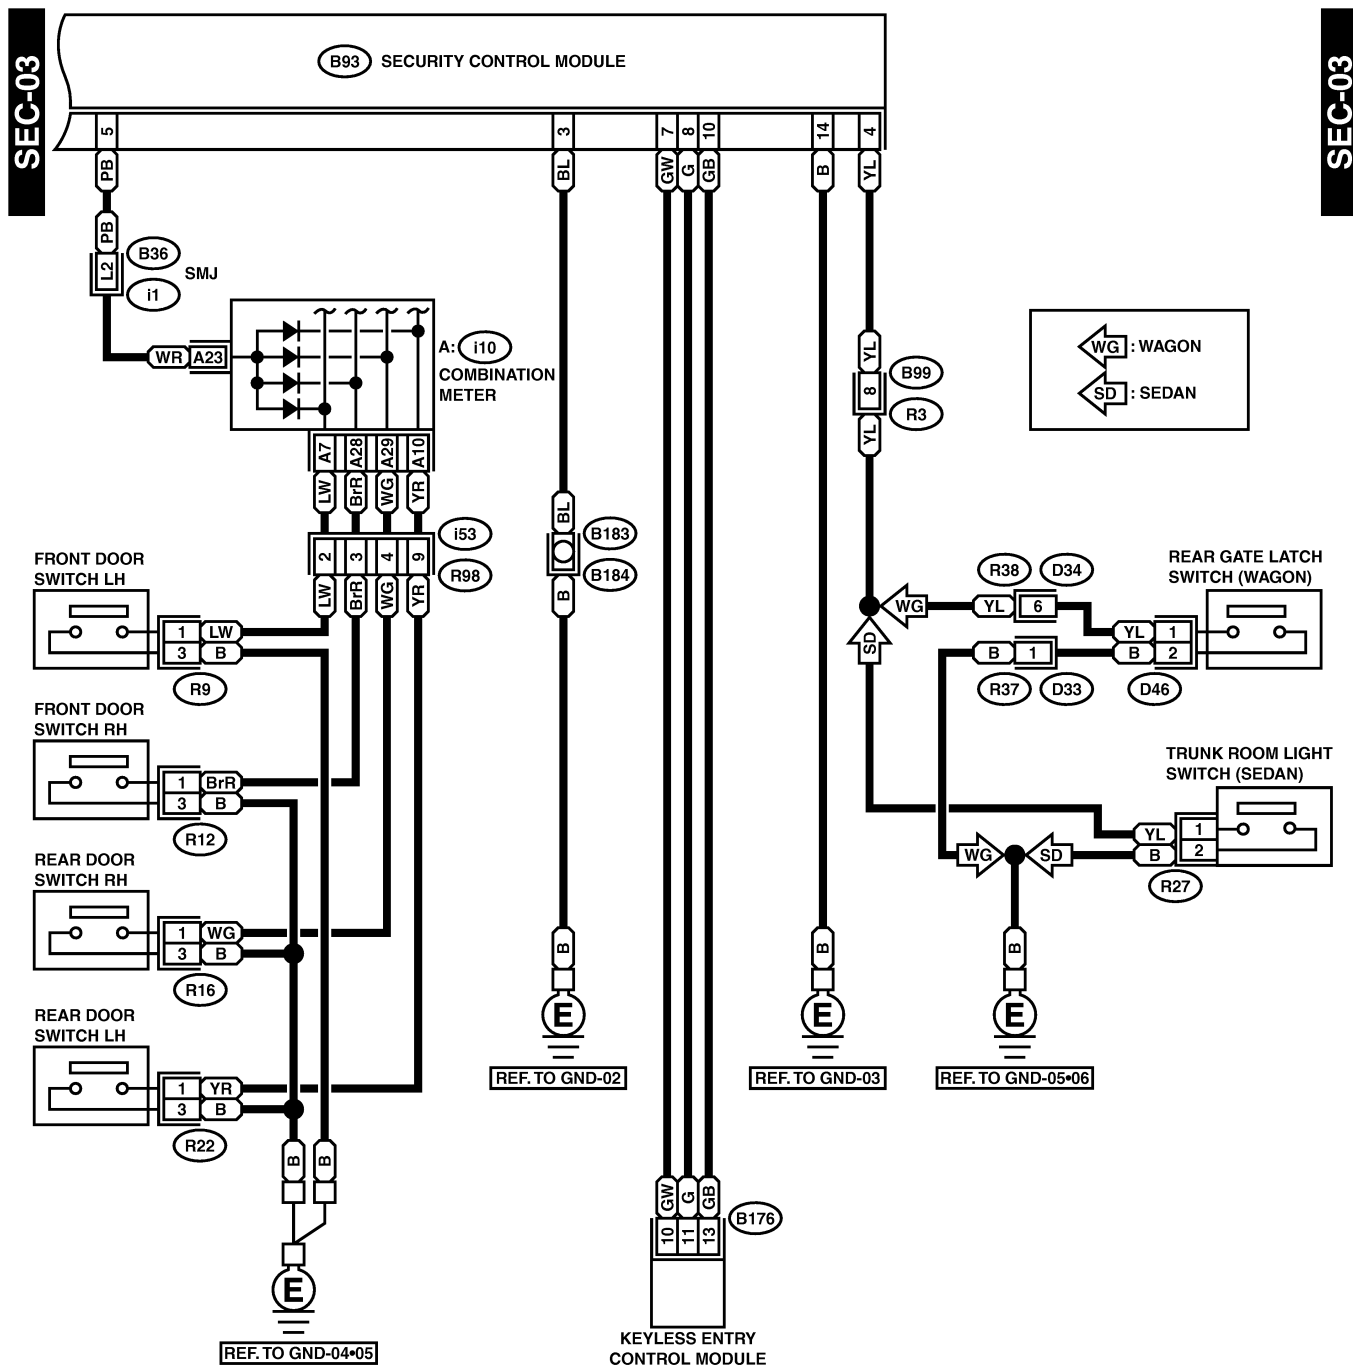

BU94-22C

B: ELECTRICAL SPECIFICATION

S909347A08

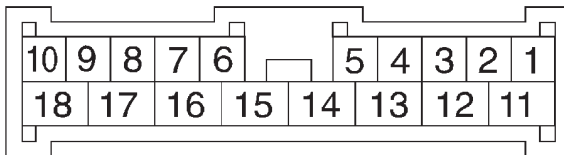

B6M0972

| Content | Terminal No. | Measuring condition |
|---|--------------|---|
| Empty | 1 | — |
| Ignition switch (ON) | 2 (INPUT) | Battery voltage is present when ignition switch is turned ON. |
| Passive arm | 3 | — |
| Trunk room light switch (Sedan), rear gate latch switch (Wagon) | 4 (INPUT) | 0 V is present when trunk room light switch or rear gate latch switch is turned ON. |
| Door switch | 5 (INPUT) | 0 V is present when any door is open. |
| Empty | 6 | — |
| Keyless entry control module | 7 | — |
| Keyless entry control module | 8 | — |
| Security indicator light | 9 (OUTPUT) | 0 V is present when activating the alarm operation. |
| Keyless entry control module | 10 | — |
| Power supply for clearance light (Back-up) | 11 | Battery voltage is constantly present. |
| Clearance light | 12 (OUTPUT) | Battery voltage is present when activating the alarm operation. |
| Power supply (Back-up) | 13 | Battery voltage is constantly present. |
| Ground | 14 | — |
| Interrupt relay | 15 (OUTPUT) | Battery voltage is present when activating the alarm operation. |
| Security horn relay | 16 (INPUT) | Battery voltage is present when activating the alarm operation. |
| Security horn | 17 (OUTPUT) | Battery voltage is present when activating the alarm operation. |
| Security horn relay | 18 (INPUT) | Battery voltage is present when activating the alarm operation. |

SECURITY SYSTEM

Security and Locks

C: INSPECTION S909347A10

1. BASIC DIAGNOSTIC PROCEDURE

S909347A1001

| No. | Step | Check | Yes | No |
|-----|---|--|--|--|
| 1 | CHECK SECURITY SYSTEM SET OPERATION. 1) Before starting this diagnosis, open all windows. 2) Remove key from ignition key cylinder, and then close all doors and rear gate or trunk lid. 3) Press LOCK/ARM button of transmitter. | Can security system be set? | Go to step 2. | Go to symptom 1. <Ref. to SL-29 SYMPTOM CHART, INSPECTION, Security System.> |
| 2 | CHECK SECURITY INDICATOR LIGHT AND CLEARANCE LIGHT BLINKING. Check security indicator light and clearance light blinking. | Do security indicator light and clearance light blink? | Go to step 3. | Go to symptom 2. <Ref. to SL-29 SYMPTOM CHART, INSPECTION, Security System.> |
| 3 | CHECK SECURITY ALARM OPERATION. 1) Unlock all doors using door lock switch on front door. 2) Open any door, rear gate or trunk lid. | Does security system not alarm when one of the doors is opened? | Go to symptom 3. <Ref. to SL-29 SYMPTOM CHART, INSPECTION, Security System.> | Go to step 4. |
| 4 | CHECK SECURITY ALARM OPERATION. Check security alarm operation. | Does security alarm (horn, clearance light and security indicator light) operate? And is starter motor deactivated? | Go to step 5. | Go to symptom 4. <Ref. to SL-29 SYMPTOM CHART, INSPECTION, Security System.> |
| 5 | CHECK SECURITY ALARM CANCEL OPERATION. Press UNLOCK/DISARM button of transmitter. | Does security alarm (horn and clearance light) stop? And is starter motor activated? | Go to step 6. | Go to symptom 5. <Ref. to SL-29 SYMPTOM CHART, INSPECTION, Security System.> |
| 6 | CHECK BATTERY DISCONNECT PROTECTION. Check battery disconnect protection. <Ref. to SL-28 CHECK BATTERY DISCONNECT PROTECTION, INSPECTION, Security System.> | Is battery disconnect protection OK? | Go to step 7. | Replace security control module. |
| 7 | PERFORM IMPACT SENSITIVITY TEST. Perform impact sensitivity test. <Ref. to SL-50 IMPACT SENSITIVITY TEST, INSPECTION, Security Control Module.> | Is impact sensitivity OK? | Press UNLOCK/DISARM button of transmitter, and finish the diagnosis. | Replace security control module. |

2. CHECK BATTERY DISCONNECT PROTECTION S909347A1002

If NG, replace the security control module.

- 1) Remove the key from the ignition switch.
- 2) Close all the doors and rear gate or trunk lid.
- 3) Open the front hood.
- 4) Press the LOCK/ARM button of the transmitter.
- 5) Disconnect the ground cable from the battery.
- 6) Reconnect the cable to the battery.
- 7) Check that the security indicator light blinks after reconnecting the battery cable.

SL-28

3. SYMPTOM CHART S909347A1004

| Symptom | | Repair order | Reference |
|---------|---|---|---|
| 1 | The security system cannot be set. | 1. Check the transmitter function. | <Ref. to SL-20 CHECK TRANSMITTER BATTERY AND FUNCTION, INSPECTION, Keyless Entry System.> |
| | | 2. Check the fuse. | <Ref. to SL-30 CHECK FUSE, INSPECTION, Security System.> |
| | | 3. Check the security control module power supply and ground circuit. | <Ref. to SL-30 CHECK POWER SUPPLY AND GROUND CIRCUIT, INSPECTION, Security System.> |
| | | 4. Check the door switch. | <Ref. to SL-30 CHECK DOOR SWITCH, INSPECTION, Security System.> |
| | | 5. Replace the security control module. | <Ref. to SL-50 Security Control Module.> |
| 2 | The security system can be set, but the security indicator light or clearance light does not blink. | Security indicator light | <Ref. to SL-31 CHECK SECURITY INDICATOR LIGHT CIRCUIT, INSPECTION, Security System.> |
| | | Clearance light | <Ref. to SL-32 CHECK CLEARANCE LIGHT OPERATION, INSPECTION, Security System.> |
| 3 | The security system does not alarm when one of the door is opened. | Check the door switch. | <Ref. to SL-30 CHECK DOOR SWITCH, INSPECTION, Security System.> |
| 4 | The security alarm does not activate. | All functions | Check the door switch. <Ref. to SL-30 CHECK DOOR SWITCH, INSPECTION, Security System.> |
| | | Security indicator light | Check the security indicator light circuit. <Ref. to SL-31 CHECK SECURITY INDICATOR LIGHT CIRCUIT, INSPECTION, Security System.> |
| | | Security horn | Check the security horn. <Ref. to SL-31 CHECK SECURITY HORN, INSPECTION, Security System.> |
| | | Clearance light | Check the clearance light operation. <Ref. to SL-32 CHECK CLEARANCE LIGHT OPERATION, INSPECTION, Security System.> |
| | | Starter motor deactivation | Check the interrupt relay circuit. <Ref. to SL-33 CHECK INTERRUPT RELAY CIRCUIT, INSPECTION, Security System.> |
| 5 | The security system cannot be canceled. | Transmitter | Check the transmitter function. <Ref. to SL-28 CHECK TRANSMITTER BATTERY AND FUNCTION, INSPECTION, Keyless Entry System.> |
| | | Ignition switch | Check the ignition switch circuit. <Ref. to SL-33 CHECK IGNITION SWITCH CIRCUIT, INSPECTION, Security System.> |

SECURITY SYSTEM

Security and Locks

4. CHECK FUSE S909347A1005

| No. | Step | Check | Yes | No |
|-----|--|------------------------------------|----------------------------------|--|
| 1 | CHECK FUSE. Remove and visually check fuse No. 2 and 7 (in main fuse box). | Is the fuse blown? (15 A and 20 A) | Replace the fuse with a new one. | Check power supply and ground circuit. <Ref. to SL-30 CHECK POWER SUPPLY AND GROUND CIRCUIT, INSPECTION, Security System.> |

5. CHECK POWER SUPPLY AND GROUND CIRCUIT S909347A1006

| No. | Step | Check | Yes | No |
|-----|---|-----------------------------------|---|--|
| 1 | CHECK POWER SUPPLY. 1) Disconnect the security control module harness connector. 2) Measure the voltage between the harness connector terminal and chassis ground. Connector & terminal (B93) No. 11 (+) — chassis ground (-): | Is the voltage more than 10 V? | Go to step 2. | Check the harness for open circuits and shorts between the security control module and fuse. |
| 2 | CHECK POWER SUPPLY. 1) Disconnect the security control module harness connector. 2) Measure the voltage between harness connector terminal and chassis ground. Connector & terminal (B93) No. 13 (+) — chassis ground (-): | Is the voltage more than 10 V? | Go to step 3. | Check the harness for open circuits and shorts between the security control module and fuse. |
| 3 | CHECK GROUND CIRCUIT. Measure the resistance between the harness connector terminal and chassis ground. Connector & terminal (B93) No. 14 (+) — chassis ground (-): | Is the resistance less than 10 Ω? | The power supply and ground circuit are OK. | Repair the harness. |

6. CHECK DOOR SWITCH S909347A1007

| No. | Step | Check | Yes | No |
|-----|---|---|--------------------|---------------|
| 1 | CHECK DOOR SWITCH CIRCUIT. Measure the voltage between the security control module harness connector terminal and chassis ground. Connector & terminal Front and rear door: (B93) No. 5 (+) — chassis ground (-): Rear gate or trunk lid: (B93) No. 4 (+) — chassis ground (-): | Is voltage 0 V when each door, rear gate or trunk lid is opened? | Go to step 2. | Go to step 3. |
| 2 | CHECK DOOR SWITCH CIRCUIT. Measure voltage between security control module harness connector terminal and chassis ground. Connector & terminal Front and rear door: (B93) No. 5 (+) — chassis ground (-): Rear gate or trunk lid: (B93) No. 4 (+) — chassis ground (-): | Is the voltage approx. 10 V when each door, rear gate or trunk lid is closed? | Door switch is OK. | Go to step 3. |

| No. | Step | Check | Yes | No |
|-----|--|---|---|--------------------------|
| 3 | CHECK DOOR SWITCH. 1) Disconnect door switch harness connector. 2) Check continuity between door switch terminals. <i>Terminal</i> <i>Front LH No. 1 — No. 3:</i> <i>Front RH No. 1 — No. 3:</i> <i>Rear LH No. 1 — No. 3:</i> <i>Rear RH No. 1 — No. 3:</i> <i>Rear gate No. 1 — No. 2:</i> <i>Trunk lid No. 1 — No. 2:</i> | Does continuity exist when the door switch is pushed? | Replace the door switch. | Go to step 4. |
| 4 | CHECK DOOR SWITCH. Check continuity between the door switch terminals. <i>Terminal</i> <i>Front LH No. 1 — No. 3:</i> <i>Front RH No. 1 — No. 3:</i> <i>Rear LH No. 1 — No. 3:</i> <i>Rear RH No. 1 — No. 3:</i> <i>Rear gate No. 1 — No. 2:</i> <i>Trunk lid No. 1 — No. 2:</i> | Does continuity exist when the door switch is released? | Check the harness for open circuits and shorts between the security control module and door switch. | Replace the door switch. |

7. CHECK SECURITY INDICATOR LIGHT CIRCUIT

S909347A1008

| No. | Step | Check | Yes | No |
|-----|--|---|--|---|
| 1 | CHECK SECURITY INDICATOR LIGHT. 1) Disconnect the security control module harness connector. 2) Ground the harness connector terminal with a suitable wire. <i>Connector & terminal</i> <i>(B93) No. 9 — chassis ground:</i> | Does the security indicator light illuminate? | Replace the security control module. | Go to step 2. |
| 2 | CHECK POWER SUPPLY FOR SECURITY INDICATOR LIGHT. 1) Disconnect the connector from the combination meter. 2) Measure the voltage between the combination meter harness connector terminal and chassis ground. <i>Connector & terminal</i> <i>(i12) No. 7 (+) — chassis ground (-):</i> | Is voltage more than 10 V? | Go to step 3. | Check the harness for open circuits and shorts between the combination meter and the fuse. |
| 3 | CHECK SECURITY INDICATOR LIGHT CIRCUIT. Measure the resistance between the combination meter harness connector terminal and security control module harness connector terminal. <i>Connector & terminal</i> <i>(i12) No. 1 — (B93) No. 9:</i> | Is resistance less than 10 Ω ? | Replace the combination meter printed circuit. | Check the harness for open circuits and shorts between the combination meter and security control module. |

8. CHECK SECURITY HORN

S909347A1009

| No. | Step | Check | Yes | No |
|-----|--|--------------------------------|---------------|----------------------------------|
| 1 | CHECK SECURITY HORN RELAY. Remove and check the security horn relay. <Ref. to SL-52 Security Horn Relay.> | Is the security horn relay OK? | Go to step 2. | Replace the security horn relay. |

SECURITY SYSTEM

Security and Locks

| No. | Step | Check | Yes | No |
|-----|---|---|--------------------------------------|---|
| 2 | CHECK POWER SUPPLY FOR SECURITY HORN RELAY. Measure the voltage between the security horn relay harness connector terminal and chassis ground. <i>Connector & terminal</i> <i>(B243) No. 1 (+) — chassis ground (-):</i> | Is the voltage more than 10 V? | Go to step 3. | Check the harness for open circuits and shorts between the security horn relay and horn relay. |
| 3 | CHECK POWER SUPPLY FOR SECURITY HORN RELAY. Measure the voltage between the security horn relay harness connector terminal and chassis ground. <i>Connector & terminal</i> <i>(B243) No. 2 (+) — chassis ground (-):</i> | Is the voltage more than 10 V? | Go to step 4. | Check the harness for open circuits and shorts between the security horn relay and the fuse. |
| 4 | CHECK HARNESS BETWEEN SECURITY HORN RELAY AND SECURITY CONTROL MODULE. 1) Disconnect the security control module harness connector. 2) Measure the resistance between the security horn relay harness connector terminal and security control module harness connector terminal. <i>Connector & terminal</i> <i>(B243) No. 3 — (B93) No. 18:</i> | Is the resistance less than 10 Ω ? | Go to step 5. | Check the harness for open circuits and shorts between the security horn relay and security control module. |
| 5 | CHECK HARNESS BETWEEN SECURITY HORN RELAY AND SECURITY CONTROL MODULE. Measure the resistance between the security horn relay harness connector terminal and security control module harness connector terminal. <i>Connector & terminal</i> <i>(B243) No. 4 — (B93) No. 16:</i> | Is the resistance less than 10 Ω ? | Go to step 6. | Check the harness for open circuits and shorts between the security horn relay and security control module. |
| 6 | CHECK HARNESS BETWEEN SECURITY CONTROL MODULE AND SECURITY HORN. 1) Disconnect the security horn harness connector. 2) Measure the resistance between the security control module harness connector terminal and security horn harness connector terminal. <i>Connector & terminal</i> <i>(B93) No. 17 — (B204) No. 1:</i> | Is the resistance less than 10 Ω ? | Go to step 7. | Check the harness for open circuits and shorts between the security control module and security horn. |
| 7 | CHECK SECURITY HORN. Remove and check the security horn. <Ref. to SL-51 Security Horn.> | Is the security horn OK? | Replace the security control module. | Replace the security horn. |

9. CHECK CLEARANCE LIGHT OPERATION

S909347A1010

| No. | Step | Check | Yes | No |
|-----|---|--------------------------------------|---------------|------------------------------------|
| 1 | CHECK CLEARANCE LIGHT OPERATION. Turn the parking switch ON and check if the clearance light illuminates. | Does the clearance light illuminate? | Go to step 2. | Check the clearance light circuit. |

| No. | Step | Check | Yes | No |
|-----|--|-----------------------------------|--------------------------------------|--|
| 2 | CHECK POWER SUPPLY FOR SECURITY CONTROL MODULE. 1) Turn the parking switch OFF. 2) Disconnect the security control module harness connector. 3) Measure the voltage between the security control module harness connector terminal and chassis ground. Connector & terminal (B93) No. 11 (+) — chassis ground (-): | Is the voltage more than 10 V? | Go to step 3. | Check the harness for open circuits and shorts between the security control module and the fuse. |
| 3 | CHECK HARNESS BETWEEN SECURITY CONTROL MODULE AND FUSE BOX. 1) Disconnect the fuse box harness connector (B152). 2) Measure the resistance between the security control module harness connector terminal and fuse box harness connector terminal. Connector & terminal (B93) No. 12 — (B152) No. 11: | Is the resistance less than 10 Ω? | Replace the security control module. | Check the harness for open circuits and shorts between the security control module and the fuse. |

10. CHECK INTERRUPT RELAY CIRCUIT

S909347A1011

| No. | Step | Check | Yes | No |
|-----|---|--|--------------------------------------|---|
| 1 | CHECK INTERRUPT RELAY. Remove and check the interrupt relay. <Ref. to INTERRUPT RELAY.> | Is the interrupt relay OK? | Go to step 2. | Replace the interrupt relay. |
| 2 | CHECK POWER SUPPLY FOR INTERRUPT RELAY. Measure the voltage between the interrupt relay harness connector terminal and chassis ground. Connector & terminal (B59) No. 1 (+) — chassis ground (-): | Is the voltage more than 10 V when the ignition switch is turned to START? | Go to step 3. | Check the harness for open circuits and shorts between the interrupt relay and ignition switch. |
| 3 | CHECK HARNESS BETWEEN INTERRUPT RELAY AND SECURITY CONTROL MODULE. Measure the resistance between the interrupt relay harness connector terminal and security control module harness connector terminal. Connector & terminal (B59) No. 4 — (B93) No. 15: | Is the resistance less than 10 Ω? | Replace the security control module. | Check the harness for open circuits and shorts between the interrupt relay and security control module. |

11. CHECK IGNITION SWITCH CIRCUIT

S909347A1012

| No. | Step | Check | Yes | No |
|-----|---|--------------------------------|--------------------------------|--|
| 1 | CHECK IGNITION SWITCH SIGNAL. 1) Disconnect the security control module harness connector. 2) Turn the ignition switch ON. 3) Measure the voltage between the harness connector terminal and chassis ground. Connector & terminal (B93) No. 2 (+) — chassis ground (-): | Is the voltage more than 10 V? | Ignition switch circuit is OK. | Check the harness for open circuits and shorts between the security control module and ignition relay. |