


AT SHIFT LOCK SYSTEM

Control Systems

3. AT Shift Lock System SS01240


A: ELECTRICAL SPECIFICATION SS01240A08

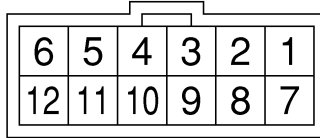

B3M1861

Contents	Terminal No. (+) — (-)	Input/Output signal
		Measured value and measuring conditions
Back-up power supply	3 — 10	10 — 15 V
Ignition power supply	1 — 10	10 — 15 V when ignition switch is ON or START.
Ignition power supply	7 — 10	10 — 15 V when ignition switch is ACC.
Inhibitor Switch ("P" position)	2 — 10	0 V when select lever is in "P" position. 5 - 7 V when select lever is in other positions than "P" position.
Stop light switch	4 — 10	10 - 15 V when stop light switch is ON. 0 V when stop light switch is OFF.
"P" position switch	5 — 10	0 V when select lever is in "P" position. 5 - 7 V when select lever is in other positions than "P" position.
Shift lock solenoid signal	6 — 10	10 - 15 V when shift lock is released. 0 V when shift lock is operating.
Key warning switch signal	8 — 10	10 - 15 V when key is inserted. 0 V when key is removed.
Key lock solenoid signal	9 — 10	8.5 — 15 V when turning ignition switch ON, select lever is in "P" position and brake switch is ON. 0 V at other conditions than above.
Key lock solenoid signal ground	11 — 10	0 V
Ground	10	—

B: SCHEMATIC SS01240A21

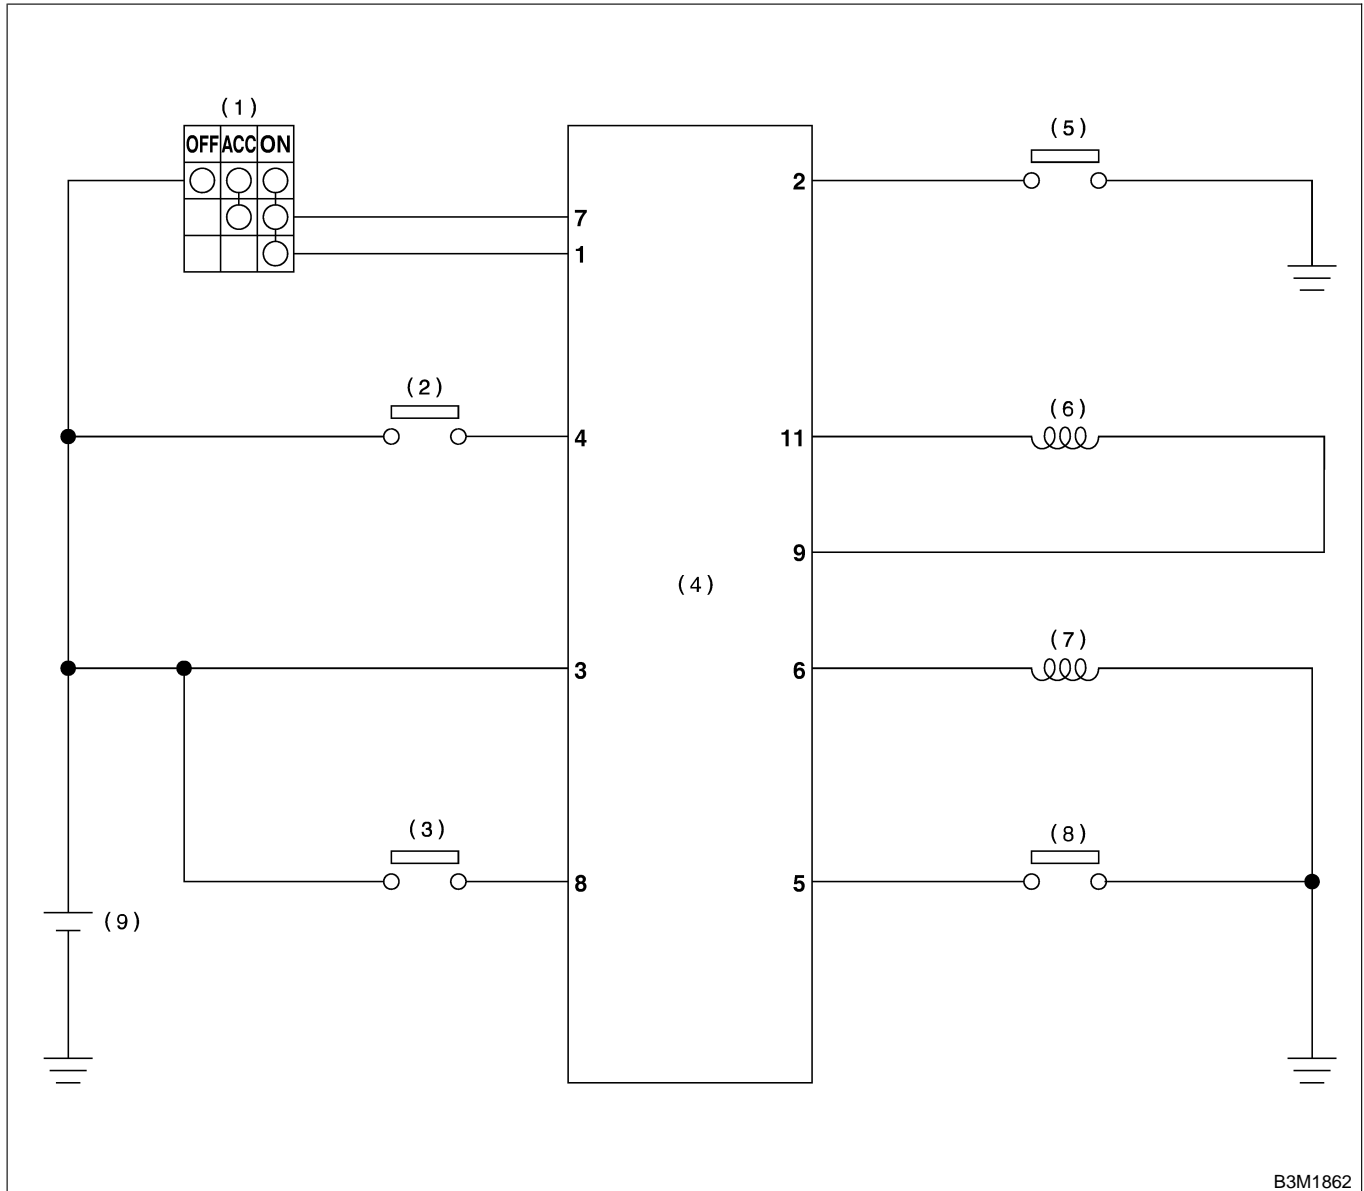

- (1) Ignition switch
- (2) Stop light switch
- (3) Key warning switch

- (4) AT shift lock control module
- (5) Inhibitor switch
- (6) Key lock solenoid

- (7) Shift lock solenoid
- (8) "P" position switch
- (9) Battery

AT SHIFT LOCK SYSTEM

Control Systems



C: INSPECTION S501240A10

No.	Step	Check	Yes	No
1	CHECK SHIFT LOCK. 1) Turn ignition switch ON. 2) Move select lever to "P" position.	While brake pedal is depressed, can select lever move from "P" range to other positions?	Go to step 2.	Inspect "SELECT LEVER CANNOT BE SHIFT LOCKED". <Ref. to CS-13 SELECT LEVER CANNOT BE SHIFT LOCKED, INSPECTION, AT Shift Lock System.>
2	CHECK SHIFT LOCK.	While brake pedal is not depressed, can select lever move from "P" range to other positions?	Inspect "SELECT LEVER SHIFT LOCK CANNOT BE RELEASED". <Ref. to CS-15 SELECT LEVER SHIFT LOCK CANNOT BE RELEASED, INSPECTION, AT Shift Lock System.>	Go to step 3.
3	CHECK KEY INTER LOCK.	When select lever is in other than "P" position, does ignition switch turn to "LOCK" position? Or when select lever is in "P" position, does ignition switch turn to "LOCK" position?	Inspect "KEY INTERLOCK DOES NOT BE LOCKED OR RELEASED". <Ref. to CS-18 KEY INTERLOCK DOES NOT LOCK OR RELEASE, INSPECTION, AT Shift Lock System.>	AT shift lock system is normal.

AT SHIFT LOCK SYSTEM

1. AT SHIFT LOCK CONTROL MODULE POWER SUPPLY AND GROUND LINE S501240A1001

WIRING DIAGRAM:

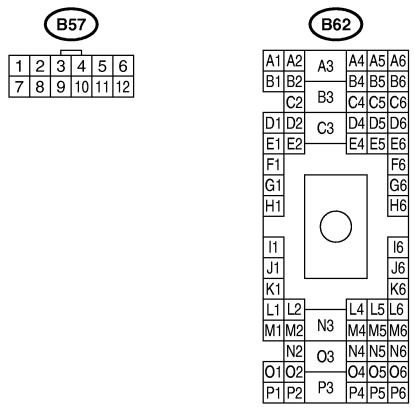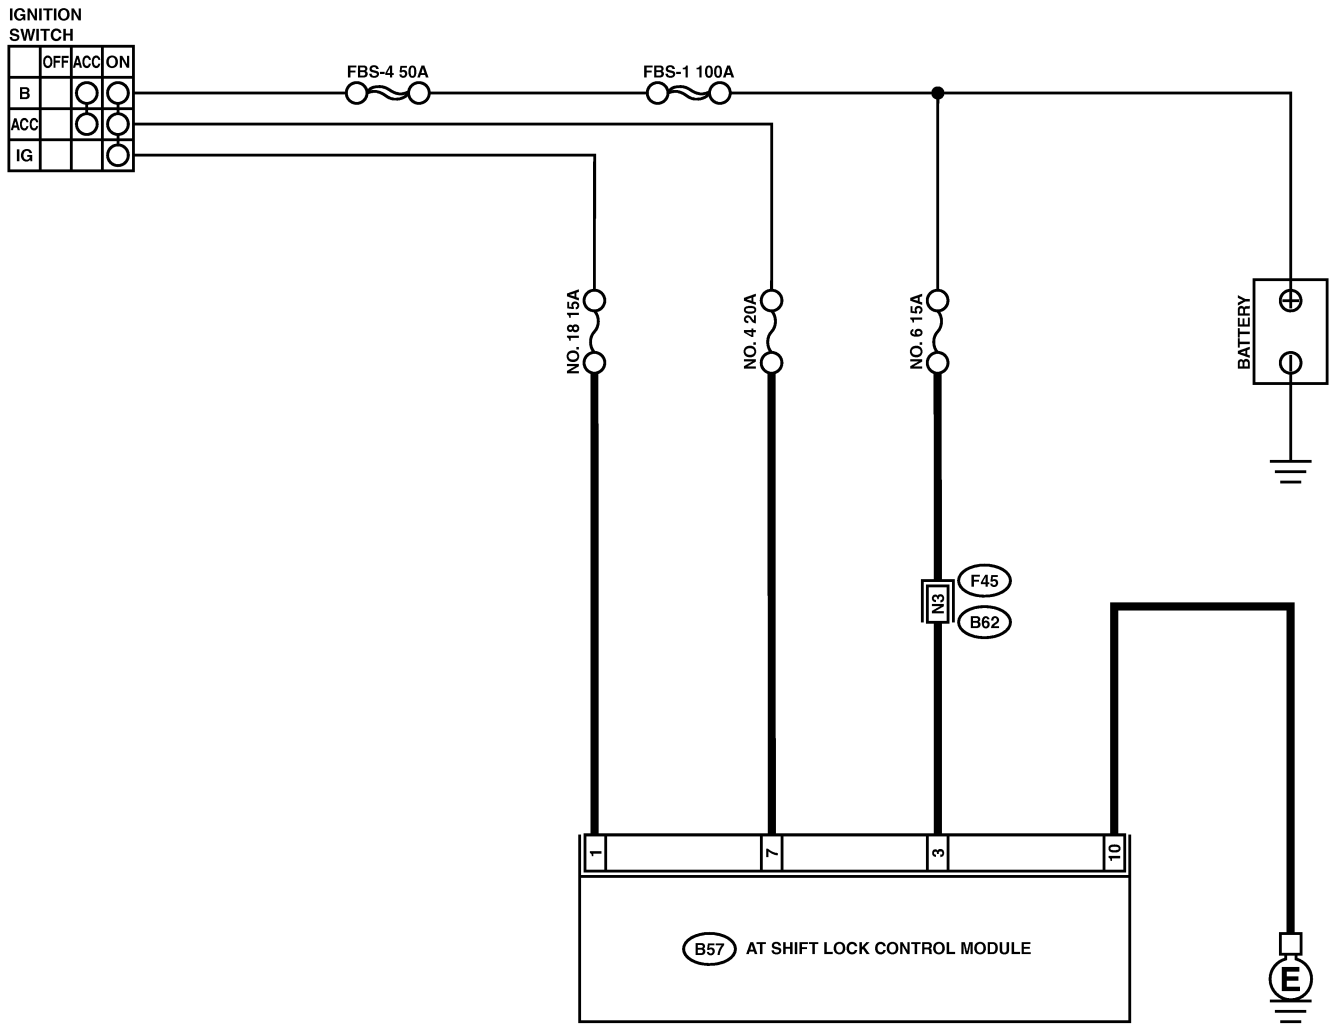

B3M1863



AT SHIFT LOCK SYSTEM

Control Systems

No.	Step	Check	Yes	No
1	CHECK FUSE (No. 6). 1) Remove the fuse (No. 6, 18 and 4).	Is the fuse (No. 6, 18 or 4) blown out?	Replace the fuse (No. 6, 18 or 4). If replace fuse (No. 6, 18 or 4) has blown out easily, repair short circuit in harness between fuse and AT shift lock control module.	Go to step 2.
2	CHECK HARNESS CONNECTOR BETWEEN AT SHIFT LOCK CONTROL MODULE AND BODY GROUND. 1) Turn ignition switch to OFF. 2) Measure the resistance of harness between AT shift lock control module and body ground. Connector & terminal (B57) No. 10 (+) — Body ground (-)	Is the resistance less than 1 Ω?	Go to step 3.	Repair open circuit in harness between AT shift lock control module and body ground.
3	CHECK BACK-UP POWER SUPPLY. 1) Turn ignition switch to ON (engine OFF). 2) Measure the voltages between AT shift lock control module and body ground. Connector & terminal (B57) No. 3 (+) — Body ground (-)	Is the voltage more than 10 V?	Go to step 4.	Repair open circuit harness between fuse (No. 6) and AT shift lock control module, and poor contact in coupling connector.
4	CHECK IGNITION POWER SUPPLY CIRCUIT. 1) Turn ignition switch to ACC. 2) Measure the voltage between AT shift lock control module and body ground. Connector & terminal (B57) No. 7 (+) — Body ground (-)	Is the voltage more than 10 V?	Go to step 5.	Repair open circuit harness between fuse (No. 4) and AT shift lock control module, and poor contact in coupling connector.
5	CHECK IGNITION POWER SUPPLY CIRCUIT. 1) Turn ignition switch to ON (engine OFF). 2) Measure the voltage between AT shift lock control module and body ground. Connector & terminal (B57) No. 1 (+) — Body ground (-)	Is the voltage more than 10 V?	Go to step 6.	Repair open circuit harness between fuse (No. 18) and AT shift lock control module, and poor contact in coupling connector.
6	CHECK POOR CONTACT.	Is there poor contact in power supply and ground line circuit?	Repair poor contact.	Replace AT shift lock control module.

2. SELECT LEVER CANNOT BE SHIFT LOCKED S501240A1002

WIRING DIAGRAM:

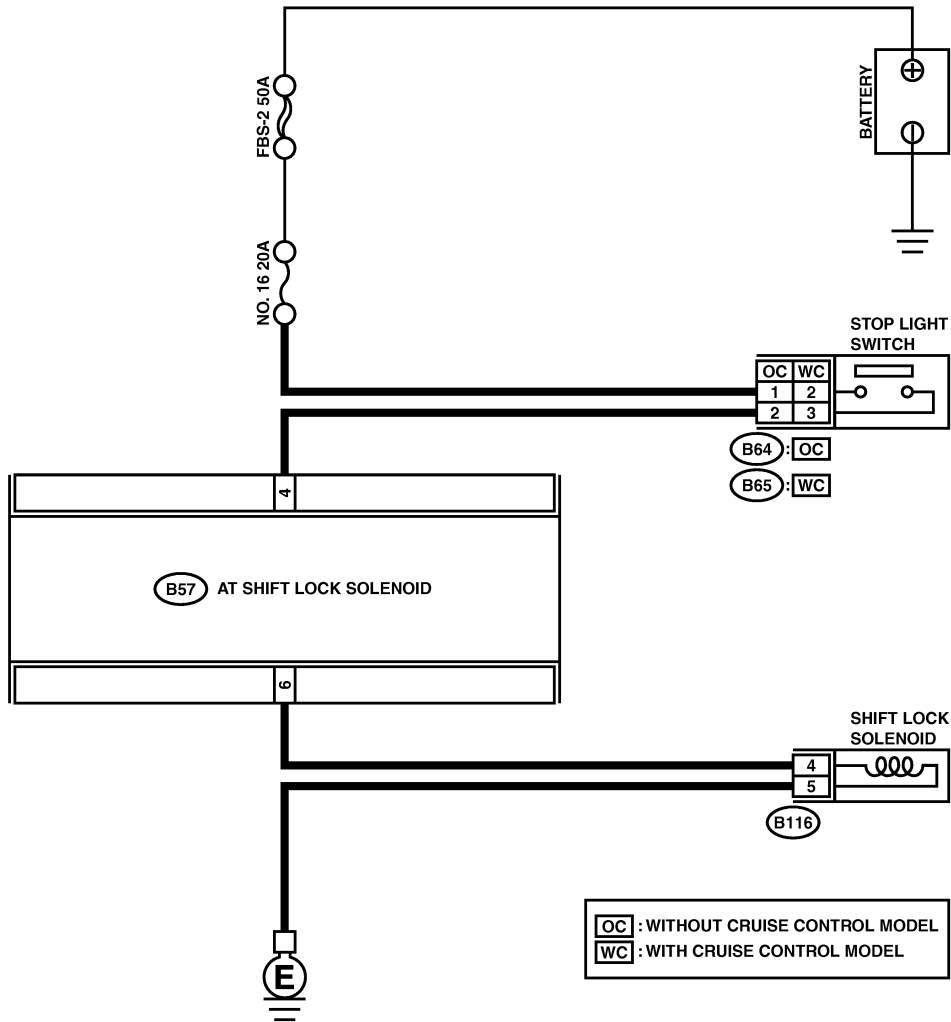

B3M1864


No.	Step	Check	Yes	No
1	CHECK STOP LIGHT SWITCH. Depress brake pedal.	Does stop light turn ON?	Go to step 2.	Inspect stop light system.

AT SHIFT LOCK SYSTEM

No.	Step	Check	Yes	No
2	<p>CHECK HARNESS BETWEEN STOP LIGHT SWITCH AND AT SHIFT LOCK CONTROL MODULE.</p> <p>1) Turn ignition switch to OFF. 2) Measure the resistance of harness between stop light switch and AT shift lock control module.</p> <p>Connector & terminal <i>Without cruise control model</i> (B64) No. 2 — (B57) NO. 4 <i>Without cruise control model</i> (B65) No. 3 — (B57) No. 4</p>	Is the resistance more than 1 MΩ?	Go to step 3.	Repair open circuit in harness between AT shift lock control module and stop light switch.
3	<p>CHECK HARNESS BETWEEN STOP LIGHT SWITCH AND AT SHIFT LOCK CONTROL MODULE.</p> <p>1) Turn ignition switch to OFF. 2) Measure the resistance of harness between stop light switch and body ground.</p> <p>Connector & terminal <i>Without cruise control model</i> (B64) No. 2 — (B57) NO. 4 <i>Without cruise control model</i> (B65) No. 3 — (B57) No. 4</p>	Is the resistance less than 10 Ω?	Go to step 4.	Repair open circuit in harness between AT shift lock control module and stop light switch.
4	<p>CHECK HARNESS BETWEEN AT SHIFT LOCK CONTROL MODULE AND SHIFT LOCK SOLENOID.</p> <p>1) Ignition switch to OFF. 2) Disconnect connector and shift lock solenoid. 3) Measure the resistance of harness between AT shift lock control module and shift lock solenoid.</p> <p>Connector & terminal (B116) No. 4 — (B57) No. 6</p>	Is the resistance more than 1 MΩ?	Go to step 5.	Repair open circuit in harness between AT shift lock control module and shift lock solenoid.
5	<p>CHECK HARNESS BETWEEN AT SHIFT LOCK CONTROL MODULE AND SHIFT LOCK SOLENOID.</p> <p>Measure the resistance of harness between shift lock solenoid and body ground.</p> <p>Connector & terminal (B116) No. 4 — Body ground</p>	Is the resistance less than 10 Ω?	Go to step 6.	Repair open circuit in harness between AT shift lock control module and shift lock solenoid.
6	<p>CHECK HARNESS BETWEEN SHIFT LOCK SOLENOID AND BODY GROUND.</p> <p>Measure the resistance of harness between shift lock solenoid and body ground.</p> <p>Connector & terminal (B116) No. 5 — Body ground</p>	Is the resistance more than 1 MΩ?	Go to step 7.	Repair open circuit in harness between shift lock solenoid and body ground.
7	<p>CHECK SHIFT LOCK SOLENOID.</p> <p>Measure the resistance of shift lock solenoid connector terminals.</p> <p>Terminal No. 4 — No. 5</p>	Is the resistance between 10 and 20 Ω?	Go to step 8.	Replace shift lock solenoid.
8	<p>CHECK SHIFT LOCK SOLENOID.</p> <p>Connect battery with shift lock solenoid connector terminal and operate solenoid.</p> <p>Terminal No. 4 (+) — No. 5 (-)</p>	Does shift lock solenoid operate properly?	Go to step 9.	Replace shift lock solenoid.
9	<p>CHECK POOR CONTACT.</p>	Is there poor contact in key lock circuit?	Repair poor contact.	Replace AT shift lock control module.

3. SELECT LEVER SHIFT LOCK CANNOT BE RELEASED S501240A1003

WIRING DIAGRAM:

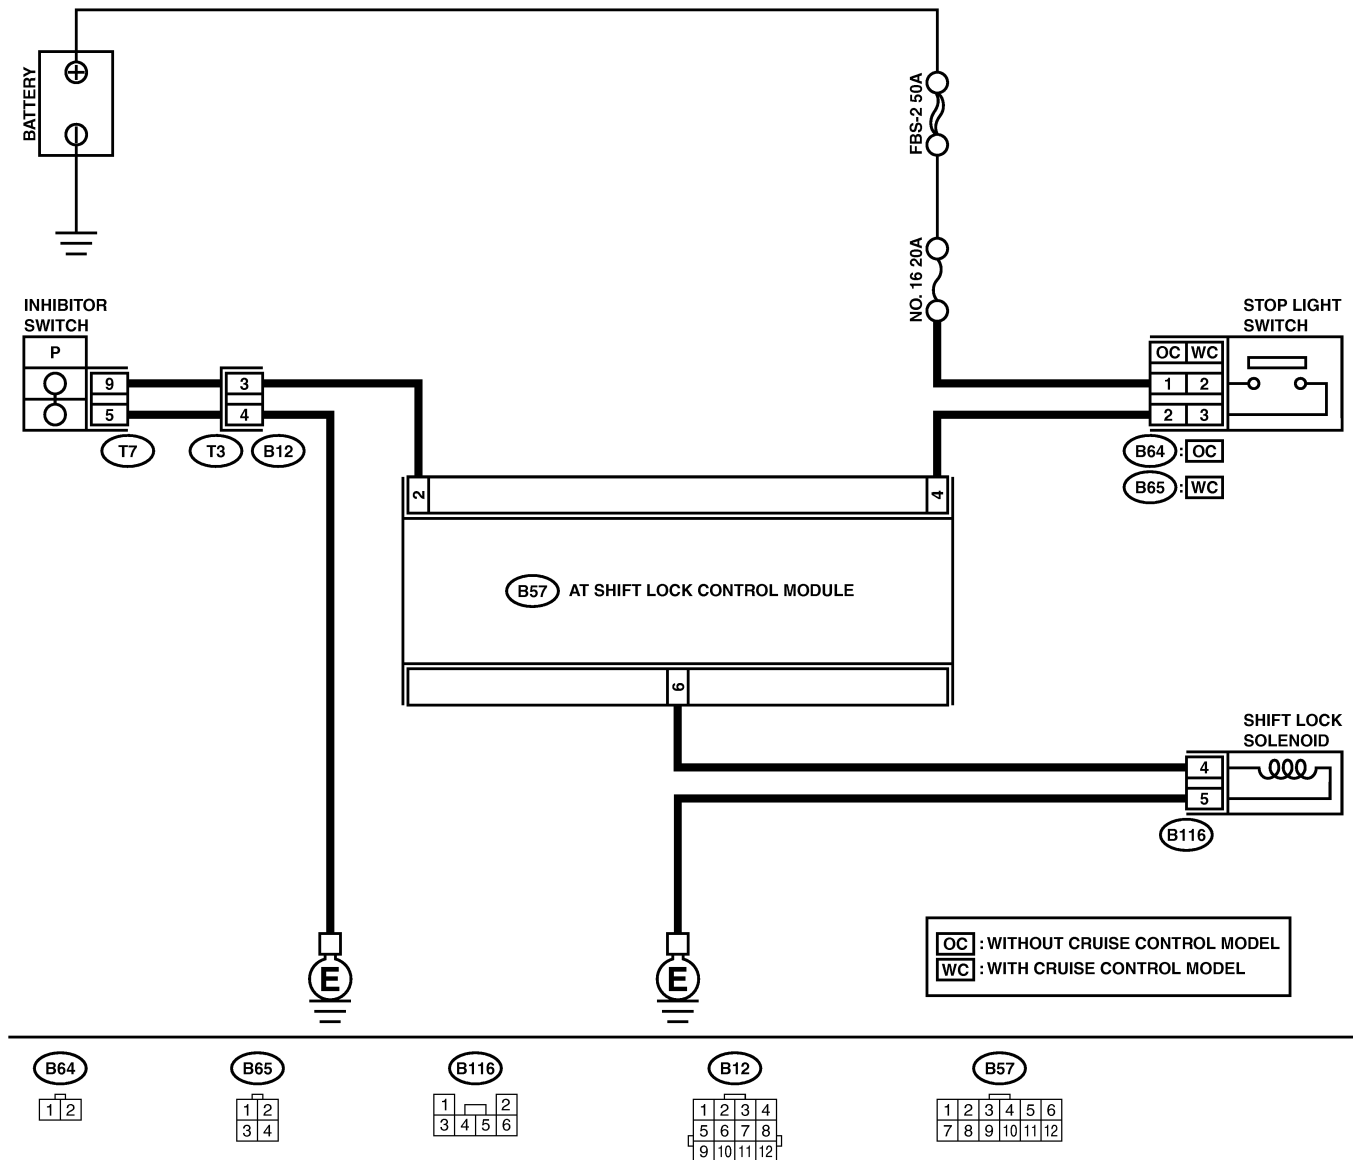

B3M1865

AT SHIFT LOCK SYSTEM

No.	Step	Check	Yes	No
1	CHECK INHIBITOR SWITCH. 1) Turn ignition switch to ON (engine OFF). 2) Move select lever from "P" to "1" range.	Combination meter indicator lamp and select lever "P", "R", "N", "3", "2" and "1" are correctly matched?	Go to step 2.	Adjust inhibitor switch and select cable.
2	CHECK HARNESS BETWEEN INHIBITOR SWITCH AND AT SHIFT LOCK CONTROL MODULE. 1) Disconnect connector transmission harness. 2) Turn ignition switch to OFF. 3) Measure the resistance of harness between AT shift lock control module and inhibitor switch. <i>Connector & terminal</i> <i>(B12) No. 3 (+) — (B57) No. 2</i>	Is the resistance less than 1 Ω?	Go to step 3.	Repair open circuit in harness between AT shift lock control module and body ground.
3	CHECK HARNESS BETWEEN INHIBITOR SWITCH AND AT SHIFT LOCK CONTROL MODULE. Measure the resistance of harness between AT shift lock control module and inhibitor switch. <i>Connector & terminal</i> <i>(B12) No. 3 (+) — (B57) No. 2</i>	Is the resistance more than 1 MΩ?	Go to step 4.	Repair open circuit in harness between AT shift lock control module and body ground.
4	CHECK OUTPUT SIGNAL FOR AT SHIFT LOCK CONTROL MODULE. 1) Turn ignition switch to ON. 2) Measure the voltage between AT shift lock control module and body ground. <i>Connector & terminal</i> <i>(B57) No. 2 (+) — Body ground (-)</i>	Is the voltage between 5 and 7 V?	Go to step 5.	Go to step 16.
5	CHECK HARNESS BETWEEN INHIBITOR SWITCH AND BODY GROUND. 1) Turn ignition switch to OFF. 2) Measure the resistance of harness between AT shift lock control module and body ground. <i>Connector & terminal</i> <i>(B12) No. 4 — Body ground</i>	Is the resistance less than 1 Ω?	Go to step 6.	Repair open circuit in harness between AT shift lock control module and body ground.
6	CHECK INHIBITOR SWITCH. 1) Move select lever to "P" position. 2) Measure the resistance of transmission harness connector terminals. <i>Connector & terminal</i> <i>(T3) No. 3 — No. 4</i>	Is the resistance more than 1 MΩ?	Go to step 7.	Repair or replace inhibitor switch.
7	CHECK STOP LIGHT SWITCH. 1) Turn ignition switch to ON (engine OFF). 2) Depress brake pedal.	Does stop light turn on?	Go to step 8.	Inspect stop light system.
8	CHECK HARNESS BETWEEN STOP LIGHT SWITCH AND AT SHIFT LOCK CONTROL MODULE. 1) Turn ignition switch to OFF. 2) Measure the resistance of harness between stop light switch and AT shift lock control module. <i>Connector & terminal</i> <i>Without cruise control model</i> <i>(B64) No. 2 — (B57) No. 4</i> <i>Without cruise control model</i> <i>(B65) No. 3 — (B57) No. 4</i>	Is the resistance more than 1 MΩ?	Go to step 9.	Repair open circuit in harness between AT shift lock control module and stop light switch.

AT SHIFT LOCK SYSTEM

Control Systems


No.	Step	Check	Yes	No
9	CHECK HARNESS BETWEEN STOP LIGHT SWITCH AND AT SHIFT LOCK CONTROL MODULE. 1) Disconnect connector from shift lock solenoid. 2) Measure the resistance of harness between stop light switch and body ground. <i>Connector & terminal</i> <i>Without cruise control model</i> <i>(B64) No. 2 — Body ground</i> <i>Without cruise control model</i> <i>(B65) No. 3 — Body ground</i>	Is the resistance less than 10 Ω?	Go to step 10.	Repair open circuit in harness between AT shift lock control module and stop light switch.
10	CHECK HARNESS BETWEEN AT SHIFT LOCK CONTROL MODULE AND SHIFT LOCK SOLENOID. 1) Disconnect connector from shift lock solenoid. 2) Turn ignition switch to ON (engine OFF). 3) Measure the resistance of harness between shift lock solenoid and body ground. <i>Connector & terminal</i> <i>(B57) No. 6 — (B116) No. 4</i>	Is the resistance more than 1 MΩ?	Go to step 11.	Repair open circuit in harness between AT shift lock control module and shift lock solenoid.
11	CHECK HARNESS BETWEEN AT SHIFT LOCK CONTROL MODULE AND SHIFT LOCK SOLENOID. 1) Disconnect connector from shift lock solenoid. 2) Turn ignition switch to ON (engine OFF). 3) Measure the resistance of harness between shift lock solenoid and body ground. <i>Connector & terminal</i> <i>(B57) No. 6 — Body ground</i>	Is the resistance less than 10 Ω?	Go to step 12.	Repair open circuit in harness between AT shift lock control module and shift lock solenoid.
12	CHECK HARNESS BETWEEN SHIFT LOCK SOLENOID AND BODY GROUND. Measure the resistance of harness between shift lock solenoid and body ground. <i>Connector & terminal</i> <i>(B116) No. 5 — Body ground</i>	Is the resistance more than 1 MΩ?	Go to step 13.	Repair open circuit in harness between shift lock solenoid and body ground.
13	CHECK SHIFT LOCK SOLENOID. Measure the resistance of shift lock solenoid connector terminals. <i>Terminal</i> <i>No. 4 — No. 5</i>	Is the resistance between 10 and 20 Ω?	Go to step 14.	Replace shift lock solenoid.
14	CHECK SHIFT LOCK SOLENOID. Connect battery with shift lock solenoid connector terminal and operate solenoid. <i>Terminal</i> <i>No. 4 (+) — No. 5 (-)</i>	Is shift lock solenoid operating properly?	Go to step 15.	Replace shift lock solenoid.
15	CHECK OUTPUT SIGNAL FOR AT SHIFT LOCK CONTROL MODULE. 1) Turn ignition switch to ON (engine OFF). 2) Measure the voltage between AT shift lock control module and body ground. <i>Connector & terminal</i> <i>(B57) No. 6 (+) — Body ground (-)</i>	Is the voltage more than 10 V?	Go to step 16.	Go to step 16.
16	CHECK POOR CONTACT.	Is there poor contact in key lock circuit?	Repair poor contact.	Replace AT shift lock control module.

AT SHIFT LOCK SYSTEM

Control Systems

4. KEY INTERLOCK DOES NOT LOCK OR RELEASE SS01240A1004

WIRING DIAGRAM:

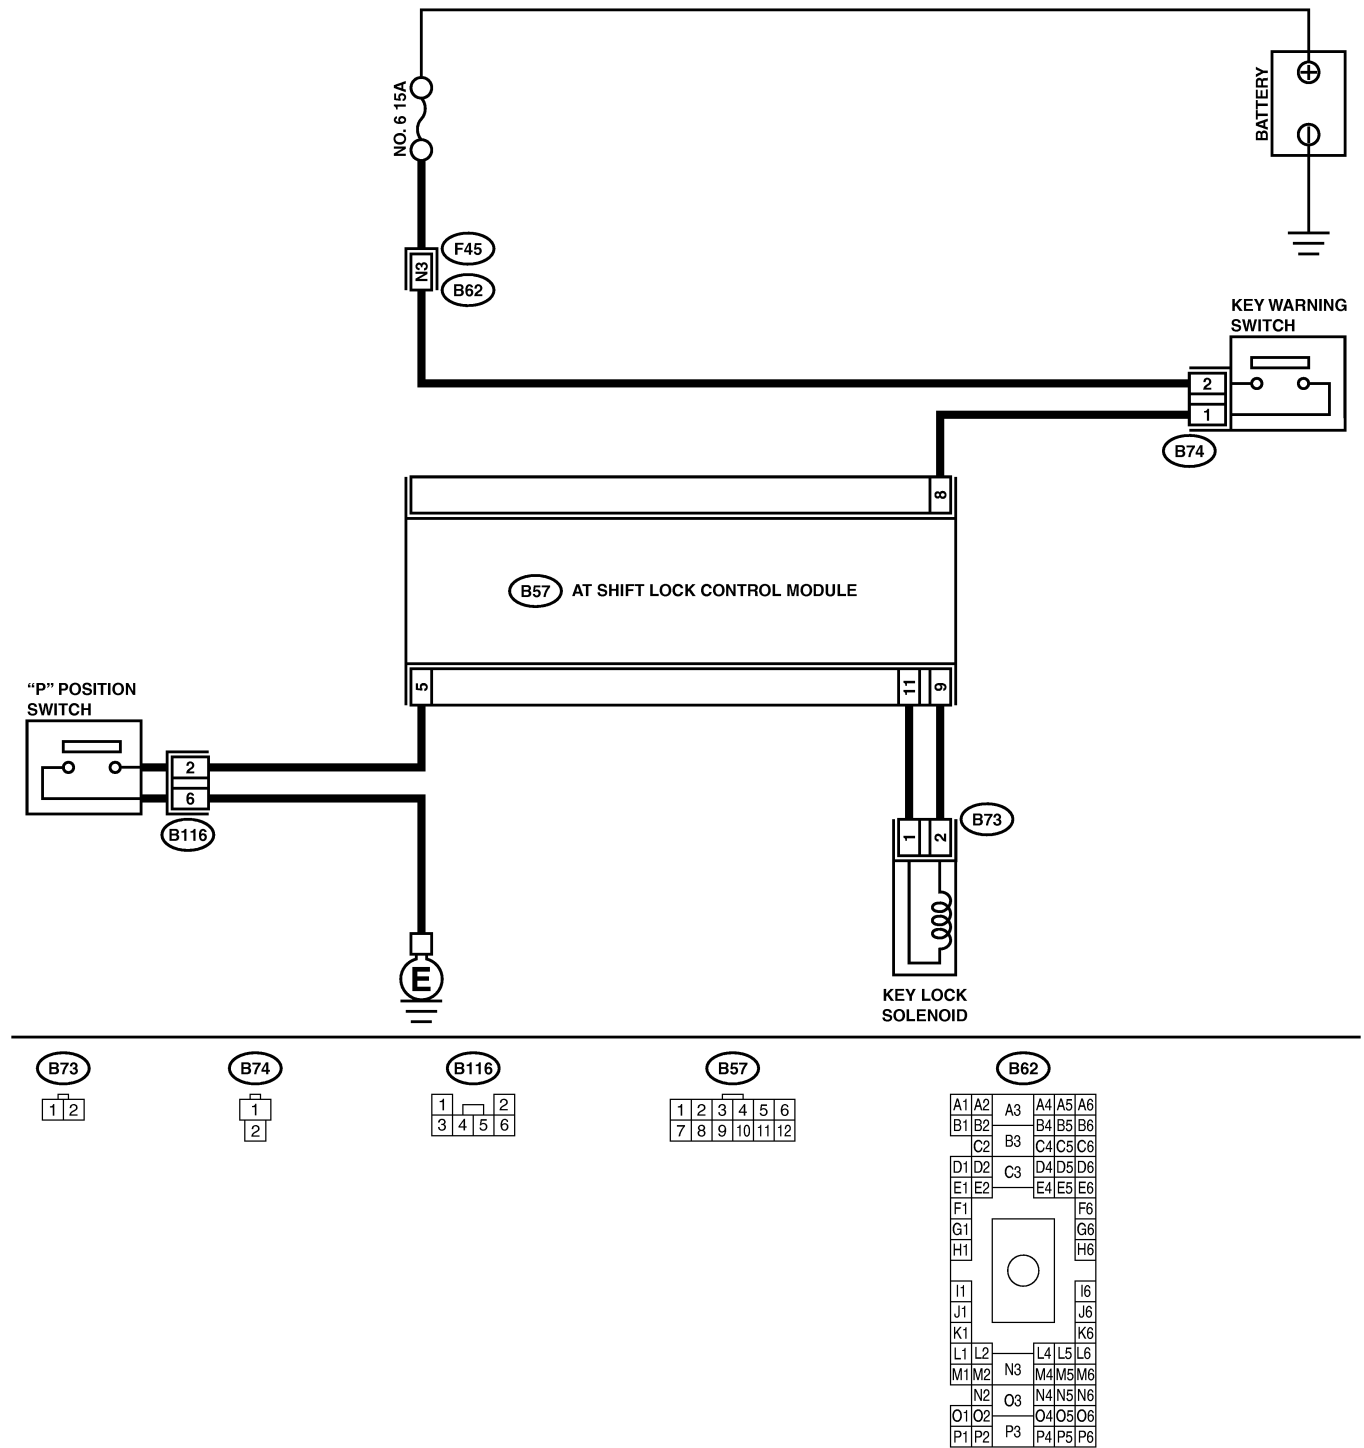

B3M1866

AT SHIFT LOCK SYSTEM

No.	Step	Check	Yes	No
1	<p>CHECK HARNESS BETWEEN FUSE (No. 6) AND KEY WARNING SWITCH. 1) Disconnect connector key warning switch. 2) Measure the voltage of harness between key warning switch and body ground. <i>Connector & terminal</i> <i>(B74) No. 2 — Body ground</i></p>	Is the voltage between 10 and 15 V?	Go to step 2.	Repair open circuit in harness between fuse (No. 6) and key warning switch.
2	<p>CHECK HARNESS BETWEEN AT SHIFT LOCK CONTROL MODULE AND KEY WARNING SWITCH. Measure the voltage of harness between key warning switch and AT shift lock control module. <i>Connector & terminal</i> <i>(B57) No. 8 — Body ground</i></p>	Is the resistance more than 10 V?	Go to step 3.	Repair open circuit in harness between AT shift lock control module and key warning switch.
3	<p>CHECK KEY WARNING SWITCH. Measure the resistance of stop light switch connector terminals. <i>Terminal</i> <i>No. 1 — No. 2</i></p>	Is the resistance more than 1 MΩ?	Go to step 4.	Replace key warning switch.
4	<p>CHECK KEY WARNING SWITCH. 1) Remove key. 2) Measure the resistance of stop light switch connector terminals. <i>Terminal</i> <i>No. 1 — No. 2</i></p>	Is the resistance ∞ MΩ?	Go to step 5.	Replace key warning switch.
5	<p>CHECK HARNESS BETWEEN AT SHIFT LOCK CONTROL MODULE AND KEY LOCK SOLENOID. 1) Disconnect connector from key lock solenoid. 2) Turn ignition switch to OFF. 3) Measure the resistance of harness between AT shift lock control module and key lock solenoid. <i>Connector & terminal</i> <i>(B73) No. 2 — (B57) No. 9</i></p>	Is the resistance more than 1 MΩ?	Go to step 6.	Repair open circuit in harness between AT shift lock control module and key lock solenoid.
6	<p>CHECK HARNESS BETWEEN AT SHIFT LOCK CONTROL MODULE AND KEY LOCK SOLENOID. Measure the resistance of harness between AT shift lock control module and body ground. <i>Connector & terminal</i> <i>(B57) No. 9 — Body ground</i></p>	Is the resistance less than 10 Ω?	Go to step 7.	Repair open circuit in harness between AT shift lock control module and key lock solenoid.
7	<p>CHECK HARNESS BETWEEN AT SHIFT LOCK CONTROL MODULE AND KEY LOCK SOLENOID. Measure the resistance of harness between AT shift lock control module and key lock solenoid. <i>Connector & terminal</i> <i>(B73) No. 1 — (B57) No. 11</i></p>	Is the resistance more than 1 MΩ?	Go to step 8.	Repair open circuit in harness between AT shift lock control module and key lock solenoid.
8	<p>CHECK HARNESS BETWEEN AT SHIFT LOCK CONTROL MODULE AND KEY LOCK SOLENOID. Measure the resistance of harness between key lock solenoid and body ground. <i>Connector & terminal</i> <i>(B57) No. 11 — Body ground</i></p>	Is the resistance less than 10 Ω?	Go to step 9.	Repair open circuit in harness between AT shift lock control module and key lock solenoid.

AT SHIFT LOCK SYSTEM

No.	Step	Check	Yes	No
9	CHECK KEY LOCK SOLENOID. Measure the resistance of key lock solenoid connector terminals. <i>Connector & terminal (B73) No. 1 — No. 2</i>	Is the resistance between 4 and 8 Ω?	Go to step 10.	Replace key lock solenoid.
10	CHECK OUTPUT SIGNAL FOR AT SHIFT LOCK CONTROL MODULE. 1) Turn ignition to ON (engine OFF). 2) Move select lever to "P" position. 3) Press brake pedal. 4) Measure the voltage of AT shift lock control module connector terminals. <i>Connector & terminal (B57) No. 9 (+) — No. 10 (-)</i>	Is the voltage 8.5 and 15 V?	Go to step 11.	Go to step 16.
11	CHECK HARNESS BETWEEN AT SHIFT LOCK CONTROL MODULE AND "P" POSITION SWITCH. 1) Disconnect connector from "P" position switch. 2) Measure the resistance of harness between AT shift lock control module and "P" position switch. <i>Connector & terminal (B116) No. 2 — (B57) No. 5</i>	Is the resistance more than 1 MΩ?	Go to step 12.	Repair open circuit in harness between AT shift lock control module and "P" position switch.
12	CHECK HARNESS BETWEEN AT SHIFT LOCK CONTROL MODULE AND "P" POSITION SWITCH. 1) Disconnect connector from "P" position switch. 2) Measure the resistance of harness between AT shift lock control module and body ground. <i>Connector & terminal (B116) No. 2 — Body ground</i>	Is the resistance less than 10Ω?	Go to step 13.	Go to step 16.
13	CHECK HARNESS BETWEEN "P" POSITION SWITCH AND BODY GROUND. Measure the resistance of harness between shift lock solenoid and "P" position switch. <i>Connector & terminal (B116) No. 6 — Body ground</i>	Is the resistance more than 1 MΩ?	Go to step 14.	Repair open circuit in harness between "P" position switch and body ground.
14	CHECK "P" POSITION SWITCH. When select lever is on "P" position (switch ON), measure resistance between connectors. Or when select lever is on other than "P" position (switch OFF), measure the resistance. <i>Terminal No. 2 — No. 6</i>	When select lever is on "P" position, is resistance 1 MΩ or less? Or when select lever is on other than "P" position, is resistance ∞ MΩ?	Go to step 15.	Replace "P" position switch.
15	CHECK OUTPUT SIGNAL FOR AT SHIFT LOCK CONTROL MODULE. 1) Turn ignition switch to ON (engine OFF). 2) Measure the voltage between AT shift lock control module connectors. <i>Connector & terminal (B57) No. 5 — No. 10</i>	Is the voltage between 5 and 7 V?	Go to step 16.	Replace AT shift lock control module.
16	CHECK POOR CONTACT.	Is there poor contact in AT shift lock circuit?	Repair poor contact.	Replace AT shift lock control module.