

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

19. Diagnostic Procedure with Diagnostic Trouble Code (DTC)


A: DTC P0030 — HO2S HEATER CONTROL CIRCUIT (BANK 1 SENSOR 1) —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

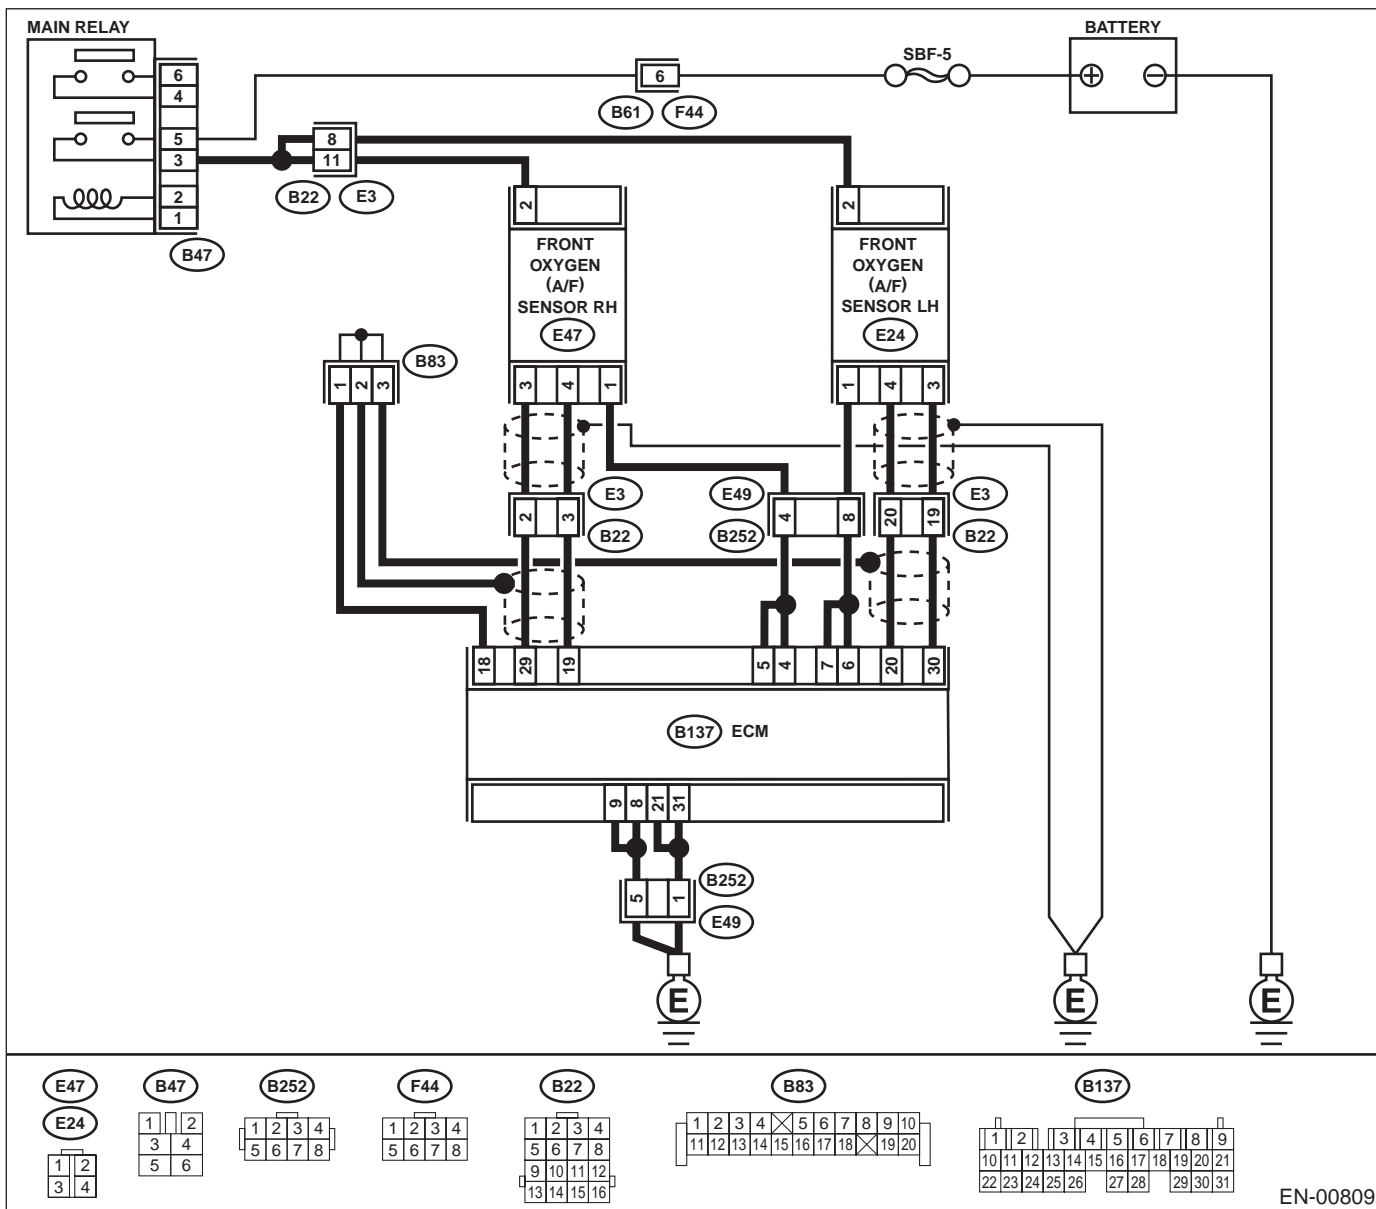

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1 CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.</p> <p>1) Start engine, and warm-up the engine. 2) Turn ignition switch to OFF. 3) Disconnect connectors from ECM and front oxygen (A/F) sensor. 4) Measure resistance of harness between ECM and front oxygen (A/F) sensor connector.</p> <p>Connector & terminal (B137) No. 4 — (E47) No. 1: (B137) No. 5 — (E47) No. 1:</p> <p>Is the measured value less than the specified value?</p>	1 Ω	Go to step 2.	Repair open circuit in harness between ECM and front oxygen (A/F) sensor connector.
<p>2 CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.</p> <p>Measure resistance of harness between ECM and front oxygen (A/F) sensor connector.</p> <p>Connector & terminal (B137) No. 19 — (E47) No. 4:</p> <p>Is the measured value less than the specified value?</p>	1 Ω	Go to step 3.	Repair open circuit in harness between ECM and front oxygen (A/F) sensor connector.
<p>3 CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.</p> <p>Measure resistance of harness between ECM and front oxygen (A/F) sensor connector.</p> <p>Connector & terminal (B137) No. 29 — (E47) No. 3:</p> <p>Is the measured value less than the specified value?</p>	1 Ω	Go to step 4.	Repair open circuit in harness between ECM and front oxygen (A/F) sensor connector.
<p>4 CHECK FRONT OXYGEN (A/F) SENSOR.</p> <p>Measure resistance between front oxygen (A/F) sensor connector terminals.</p> <p>Terminals No. 2 — No. 1:</p> <p>Is the measured value less than the specified value?</p>	5 Ω	Go to step 5.	Replace front oxygen (A/F) sensor. <Ref. to FU(H6DO)-43, Front Oxygen (A/F) Sensor.>
<p>5 CHECK POOR CONTACT.</p> <p>Check poor contact in ECM and front oxygen (A/F) sensor connector. Is there poor contact in ECM or front oxygen (A/F) sensor connector?</p>	There is poor contact.	Repair poor contact in ECM or front oxygen (A/F) sensor connector.	Replace front oxygen (A/F) sensor. <Ref. to FU(H6DO)-43, Front Oxygen (A/F) Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)


B: DTC P0031 — HO2S HEATER CONTROL CIRCUIT LOW (BANK 1 SENSOR 1)

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

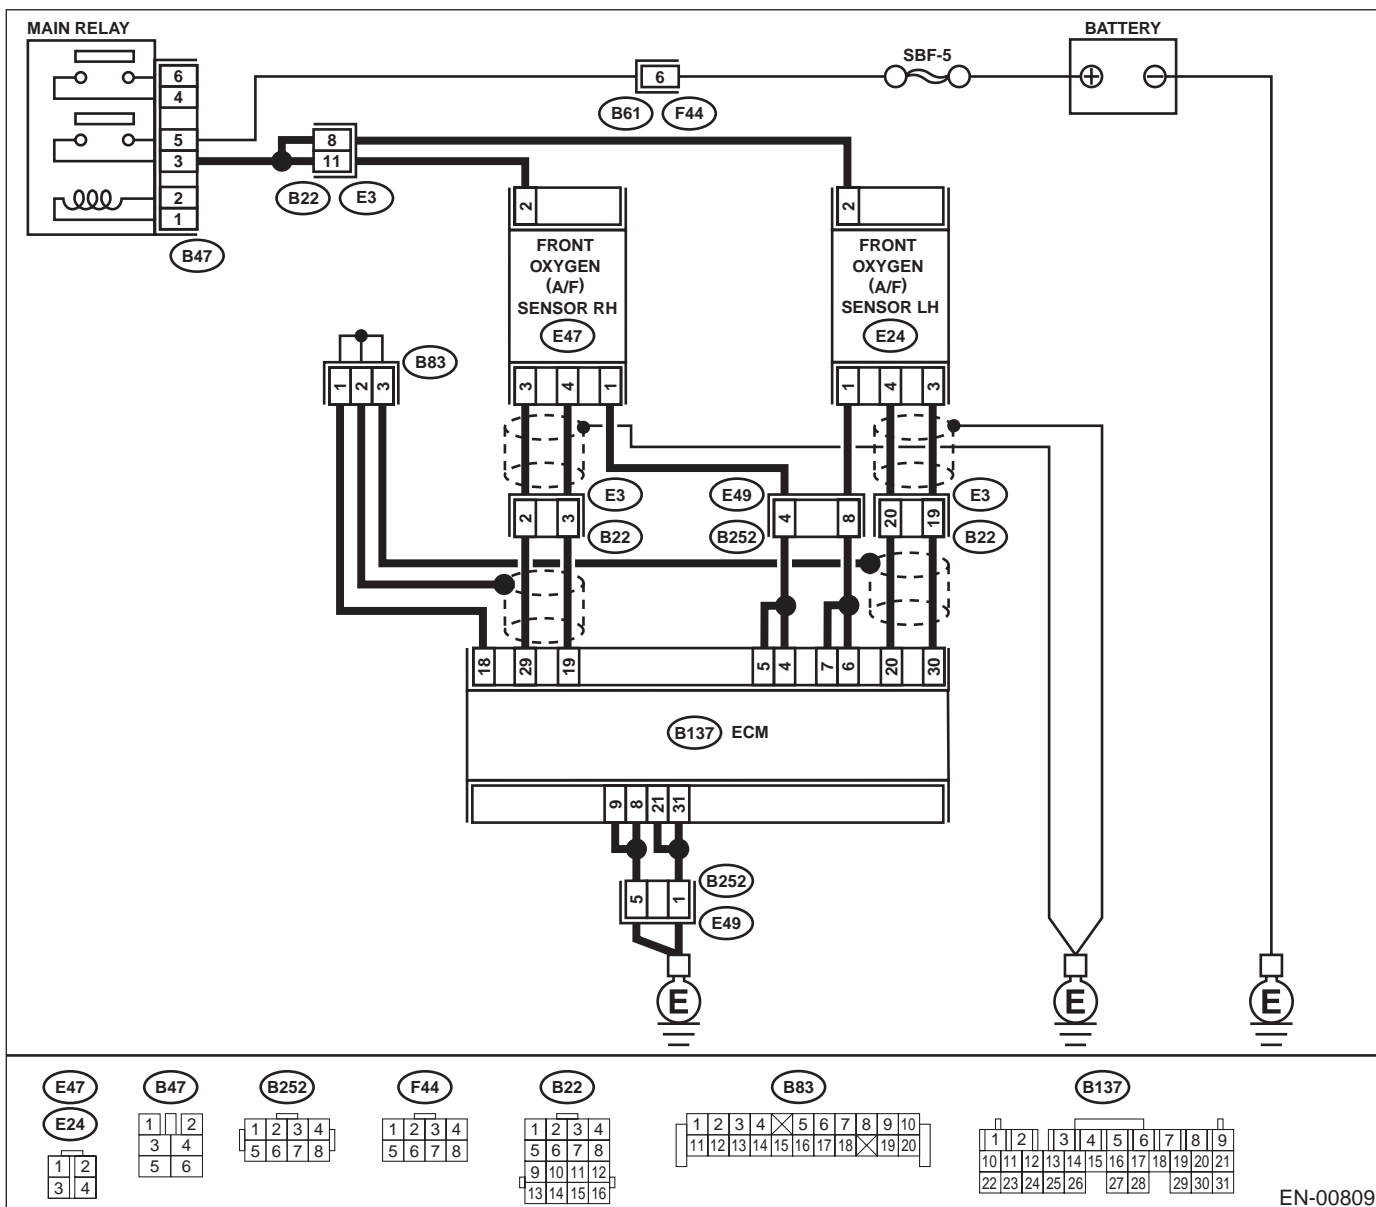

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1 CHECK GROUND CIRCUIT OF ECM. Measure resistance of harness between ECM connector and chassis ground. Connector & terminal (B137) No. 31 — Chassis ground: (B137) No. 21 — Chassis ground: (B137) No. 8 — Chassis ground: (B137) No. 9 — Chassis ground: Is the measured value less than the specified value?</p>	5 Ω	Go to step 2.	<p>Repair harness and connector. NOTE: In this case, repair the following:</p> <ul style="list-style-type: none"> • Open circuit in harness between ECM and engine ground terminal • Poor contact in ECM connector • Poor contact in coupling connector
<p>2 CHECK CURRENT DATA. 1) Start engine 2) Read data of front oxygen (A/F) sensor heater current using Subaru Select Monitor or OBD-II general scan tool. Does the measured value exceed the specified value? NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.> • OBD-II scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.</p>	0.2 A	<p>Repair poor contact in connector. NOTE: In this case, repair the following:</p> <ul style="list-style-type: none"> • Poor contact in front oxygen (A/F) sensor connector • Poor contact in ECM connector 	Go to step 3.
<p>3 CHECK OUTPUT SIGNAL FROM ECM. 1) Start and idle the engine. 2) Measure voltage between ECM connector and chassis ground. Connector & terminal (B137) No. 4 (+) — Chassis ground (-): Is the measured value less than the specified value?</p>	1.0 V	Go to step 5.	Go to step 4.
<p>4 CHECK OUTPUT SIGNAL FROM ECM. Measure voltage between ECM connector and chassis ground. Connector & terminal (B137) No. 4 (+) — Chassis ground (-): Does the voltage change less than the specified value by shaking harness and connector of ECM while monitoring the value with voltage meter?</p>	1.0 V	<p>Repair poor contact in ECM connector.</p>	Go to step 5.
<p>5 CHECK OUTPUT SIGNAL FROM ECM. Measure voltage between ECM connector and chassis ground. Connector & terminal (B137) No. 5 (+) — Chassis ground (-): Is the measured value less than the specified value?</p>	1.0 V	Go to step 7.	Go to step 6.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>6 CHECK OUTPUT SIGNAL FROM ECM. Measure voltage between ECM connector and chassis ground. Connector & terminal (B137) No. 5 (+) — Chassis ground (-): Does the voltage change less than the specified value by shaking harness and connector of ECM while monitoring the value with voltage meter?</p>	1.0 V	Repair poor contact in ECM connector.	Go to step 7.
<p>7 CHECK POWER SUPPLY TO FRONT OXYGEN (A/F) SENSOR. 1) Turn ignition switch to OFF. 2) Disconnect connector from front oxygen (A/F) sensor. 3) Turn ignition switch to ON. 4) Measure voltage between front oxygen (A/F) sensor connector and engine ground. Connector & terminal (E47) No. 2 (+) — Engine ground (-): Does the measured value exceed the specified value?</p>	10 V	Go to step 8.	Repair power supply line. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Open circuit in harness between main relay and front oxygen (A/F) sensor connector • Poor contact in front oxygen (A/F) sensor connector • Poor contact in main relay connector
<p>8 CHECK FRONT OXYGEN (A/F) SENSOR. 1) Turn ignition switch to OFF. 2) Measure resistance between front oxygen (A/F) sensor connector terminals. Terminals No. 2 — No. 1: Is the measured value less than the specified value?</p>	10 Ω	Repair harness and connector. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Open or ground short circuit in harness between front oxygen (A/F) sensor and ECM connector • Poor contact in front oxygen (A/F) sensor connector • Poor contact in ECM connector 	Replace front oxygen (A/F) sensor. NOTE: <Ref. to FU(H6DO)-43, Front Oxygen (A/F) Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

MEMO:

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)


C: DTC P0032 — HO2S HEATER CONTROL CIRCUIT HIGH (BANK 1 SENSOR 1) —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

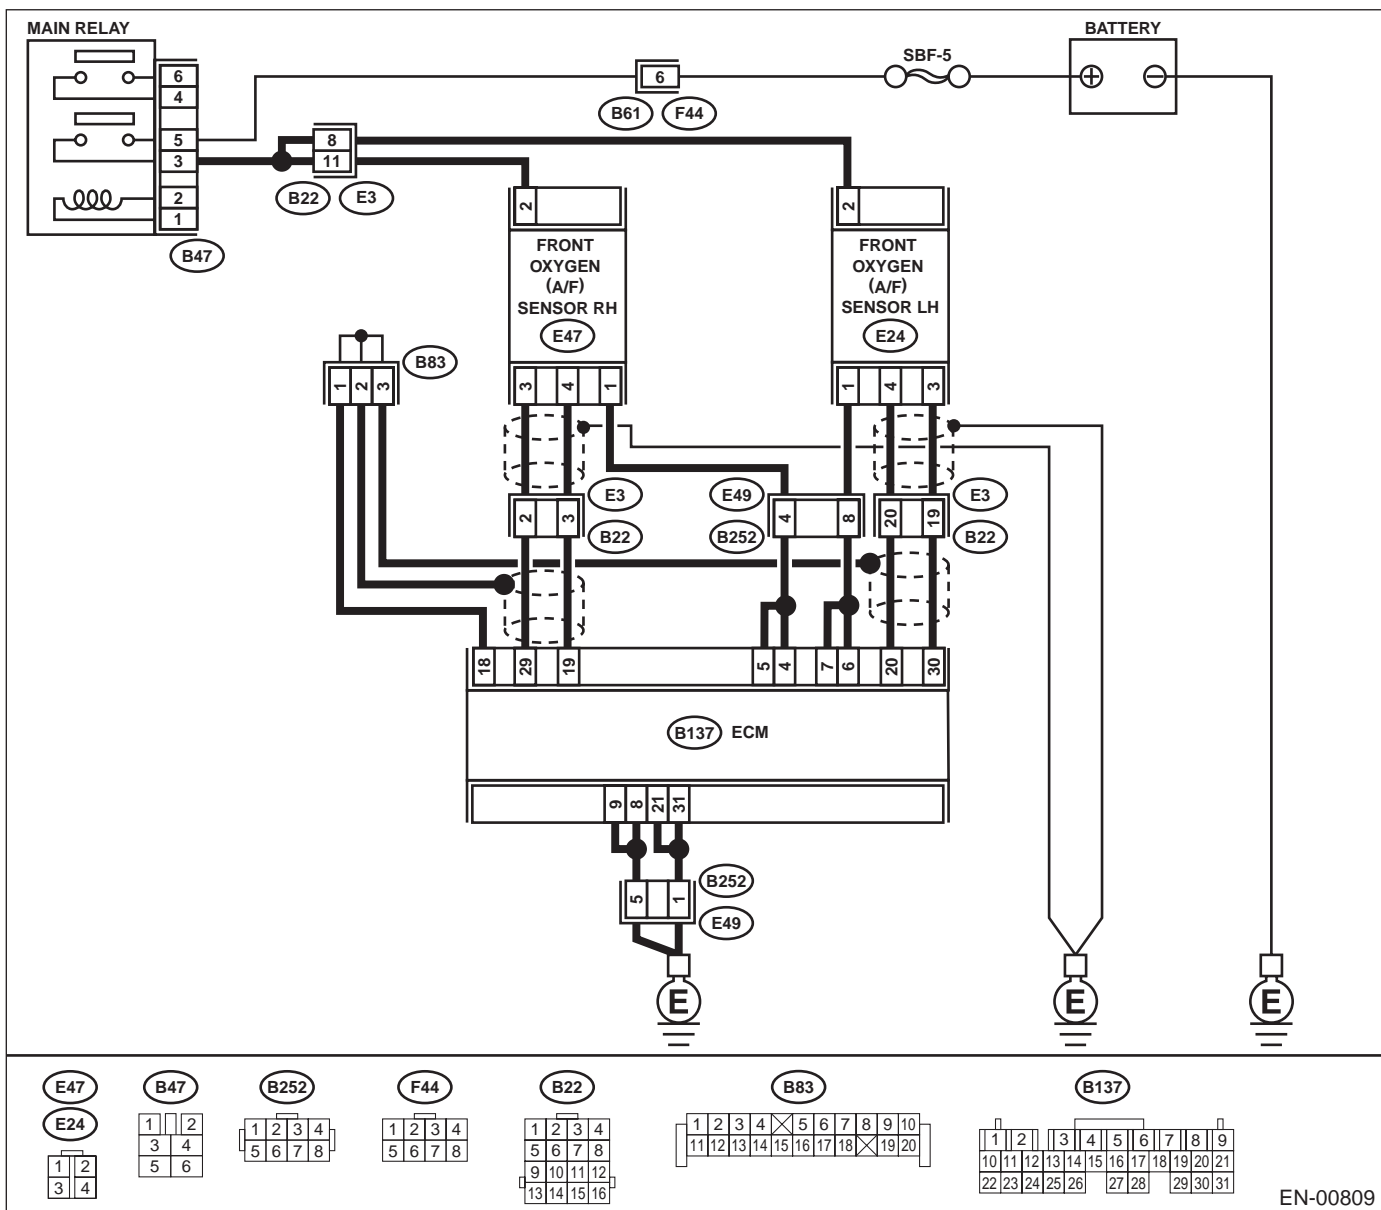

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK OUTPUT SIGNAL FROM ECM. 1) Turn ignition switch to ON. 2) Measure voltage between ECM connector and chassis ground. Connector & terminal (B137) No. 4 (+) — Chassis ground (-): Does the measured value exceed the specified value?	8 V	Go to step 3.	Go to step 2.
2 CHECK OUTPUT SIGNAL FROM ECM. Measure voltage between ECM connector and chassis ground. Connector & terminal (B137) No. 5 (+) — Chassis ground (-): Does the measured value exceed the specified value?	8 V	Go to step 3.	Go to step 4.
3 CHECK FRONT OXYGEN (A/F) SENSOR HEATER CURRENT. 1) Turn ignition switch to OFF. 2) Repair battery short circuit in harness between ECM and front oxygen (A/F) sensor connector. 3) Turn ignition switch to ON. 4) Read data of front oxygen (A/F) sensor heater current using Subaru Select Monitor or the OBD-II general scan tool. Does the measured value exceed the specified value? NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.> • OBD-II general scan tool For detailed operation procedure, refer to the OBD-II General Scan Tool Instruction Manual.	2.3 A	Replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>	END
4 CHECK OUTPUT SIGNAL FROM ECM. Measure voltage between ECM connector and chassis ground. Connector & terminal (B137) No. 4 (+) — Chassis ground (-): Does the voltage change more than the specified value by shaking harness and connector of ECM while monitoring the value with voltage meter?	8 V	Repair battery short circuit in harness between ECM and front oxygen (A/F) sensor connector.	Go to step 5.
5 CHECK OUTPUT SIGNAL FROM ECM. Measure voltage between ECM connector and chassis ground. Connector & terminal (B137) No. 5 (+) — Chassis ground (-): Does the voltage change more than the specified value by shaking harness and connector of ECM while monitoring the value with voltage meter?	8 V	Repair battery short circuit in harness between ECM and front oxygen (A/F) sensor connector.	END

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

D: DTC P0037 — HO2S HEATER CONTROL CIRCUIT LOW (BANK 1 SENSOR 2)


DTC DETECTING CONDITION:

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>

WIRING DIAGRAM:

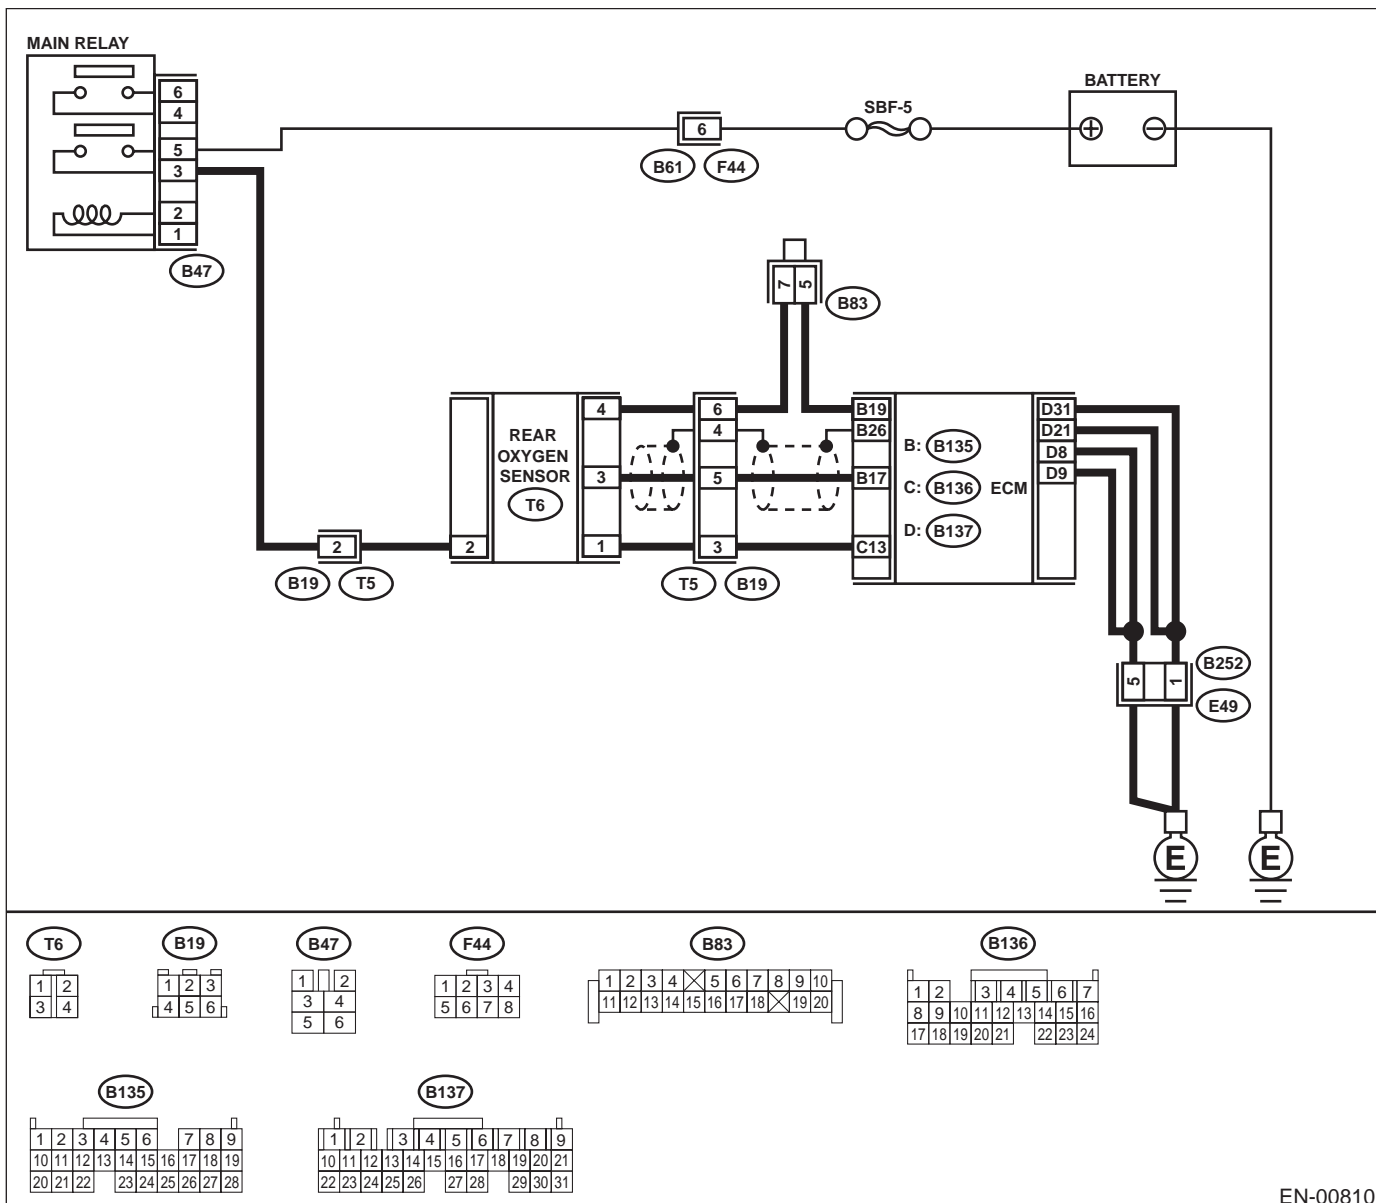

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1 CHECK GROUND CIRCUIT OF ECM. 1) Turn ignition switch to OFF. 2) Disconnect ECM connector. 3) Measure resistance of harness between ECM connector and chassis ground.</p> <p>Connector & terminal (B137) No. 31 — Chassis ground: (B137) No. 21 — Chassis ground: (B137) No. 8 — Chassis ground: (B137) No. 9 — Chassis ground:</p> <p>Is the measured value less than the specified value?</p>	5 Ω	Go to step 2.	Repair harness and connector. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Open circuit in harness between ECM and engine ground terminal • Poor contact in ECM connector • Poor contact in coupling connector
<p>2 CHECK CURRENT DATA. 1) Start engine. 2) Read data of rear oxygen sensor heater current using Subaru Select Monitor or OBD-II general scan tool. Does the measured value exceed the specified value?</p> <p>NOTE: <ul style="list-style-type: none"> • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.> <ul style="list-style-type: none"> • OBD-II scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.</p>	0.2 A	Repair connector. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Poor contact in rear oxygen sensor connector • Poor contact in rear oxygen sensor connecting harness connector • Poor contact in ECM connector 	Go to step 3.
<p>3 CHECK OUTPUT SIGNAL FROM ECM. 1) Start and idle the engine. 2) Measure voltage between ECM connector and chassis ground.</p> <p>Connector & terminal (B136) No. 13 (+) — Chassis ground (-):</p> <p>Is the measured value less than the specified value?</p>	1.0 V	Go to step 6.	Go to step 4.
<p>4 CHECK OUTPUT SIGNAL FROM ECM. Measure voltage between ECM connector and chassis ground.</p> <p>Connector & terminal (B136) No. 13 (+) — Chassis ground (-):</p> <p>Does the voltage change less than the specified value by shaking harness and connector of ECM while monitoring the value with voltage meter?</p>	1.0 V	Repair poor contact in ECM connector.	Go to step 5.
<p>5 CHECK OUTPUT SIGNAL FROM ECM. 1) Turn ignition switch to OFF. 2) Disconnect connector from rear oxygen sensor. 3) Measure voltage between ECM connector and chassis ground.</p> <p>Connector & terminal (B136) No. 13 (+) — Chassis ground (-):</p> <p>Is the measured value less than the specified value?</p>	1.0 V	Contact with SOA (distributor) service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.	Repair battery short circuit in harness between ECM and rear oxygen sensor connector. After repair, replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>6</p> <p>CHECK POWER SUPPLY TO REAR OXYGEN SENSOR.</p> <ol style="list-style-type: none"> 1) Turn ignition switch to OFF. 2) Disconnect connector from rear oxygen sensor. 3) Turn ignition switch to ON. 4) Measure voltage between rear oxygen sensor connector and engine ground or chassis ground. <p>Connector & terminal (T6) No. 2 (+) — Chassis ground (-): Does the measured value exceed the specified value?</p>	10 V	Go to step 7.	Repair power supply line. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Open circuit in harness between main relay and rear oxygen sensor connector • Poor contact in rear oxygen sensor connector • Poor contact in coupling connector
<p>7</p> <p>CHECK REAR OXYGEN SENSOR.</p> <ol style="list-style-type: none"> 1) Turn ignition switch to OFF. 2) Measure resistance between rear oxygen sensor connector terminals. <p>Terminals No. 1 — No. 2: Is the measured value less than the specified value?</p>	30 Ω	Repair harness and connector. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Open circuit in harness between rear oxygen sensor and ECM connector • Poor contact in rear oxygen sensor connector • Poor contact in ECM connector • Poor contact in coupling connector 	Replace rear oxygen sensor. <Ref. to FU(H6DO)-45, Rear Oxygen Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

MEMO:

EN(H6DO)-111

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

E: DTC P0038 — HO2S HEATER CONTROL CIRCUIT HIGH (BANK 1 SENSOR 2) —


DTC DETECTING CONDITION:

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

WIRING DIAGRAM:

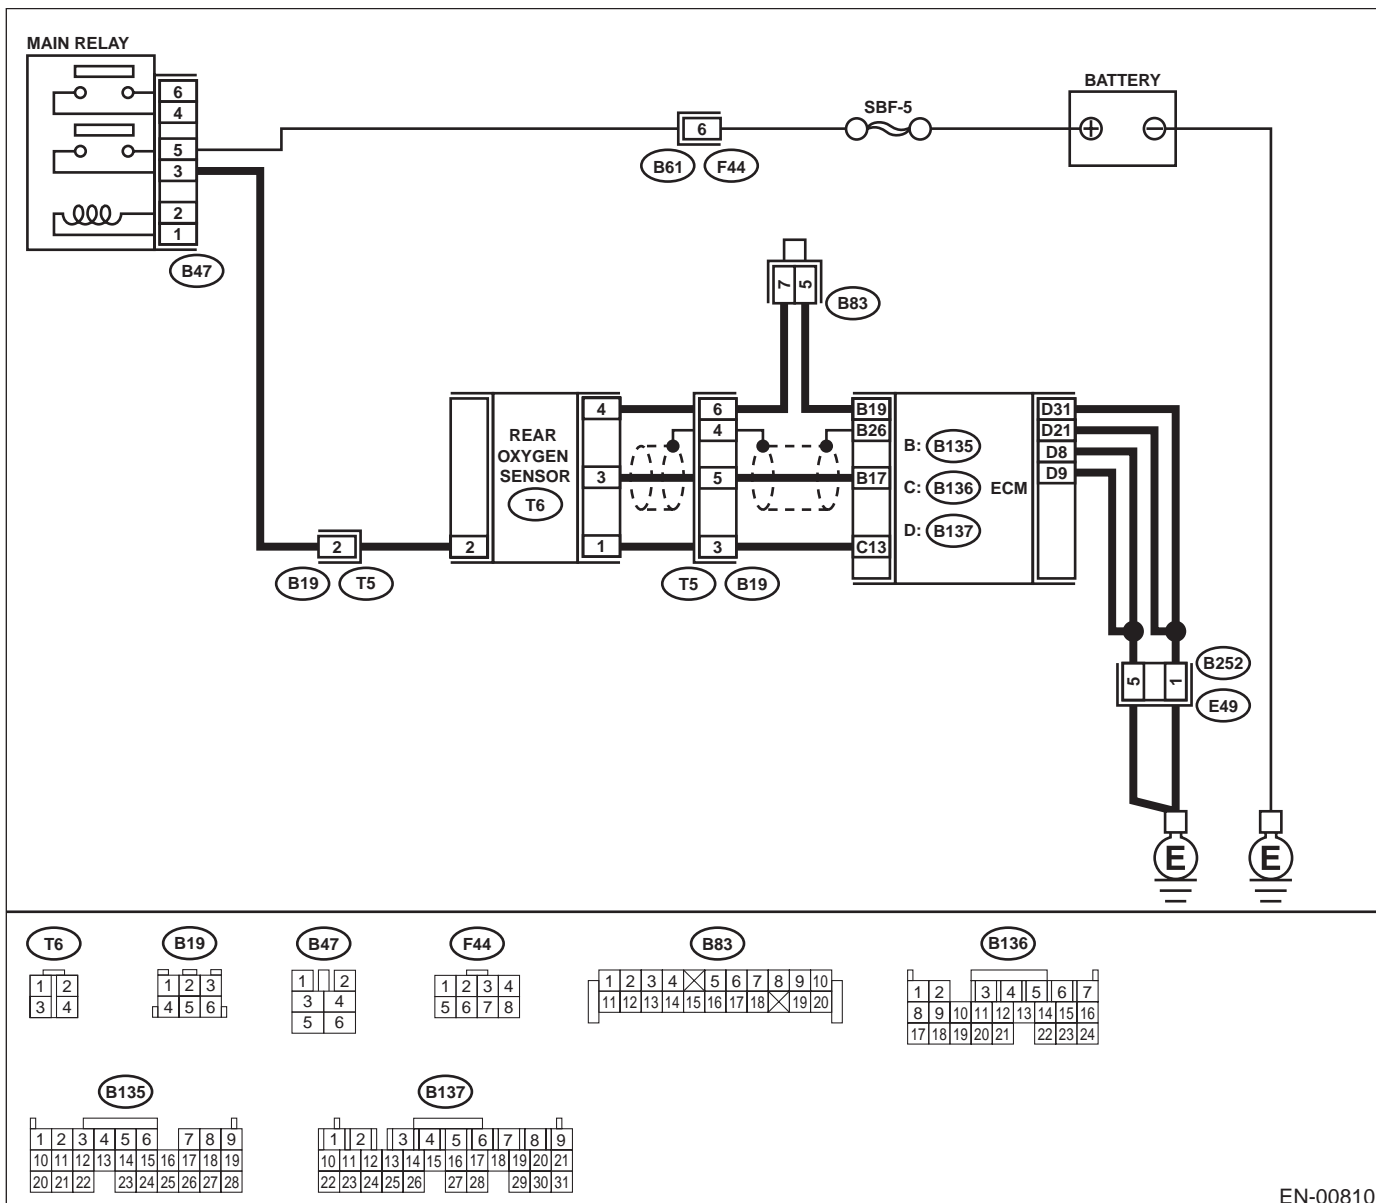

EN-00810

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK OUTPUT SIGNAL FROM ECM. Measure voltage between ECM connector and chassis ground. Connector & terminal (B136) No. 13 (+) — Chassis ground (-): Does the measured value exceed the specified value?	8 V	Go to step 2.	Go to step 3.
2 CHECK CURRENT DATA. 1) Repair battery short circuit in harness between ECM and rear oxygen sensor connector. 2) Turn ignition switch to ON. 3) Read data of rear oxygen sensor heater current using Subaru Select Monitor or the OBD-II general scan tool. Does the measured value exceed the specified value? NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.> • OBD-II general scan tool For detailed operation procedure, refer to the OBD-II General Scan Tool Instruction Manual.	7 A	Replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>	END
3 CHECK POOR CONTACT. Check poor contact in ECM connector. Is there poor contact in ECM connector?	There is poor contact.	Repair poor contact in ECM connector.	END

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)


F: DTC P0050 — HO2S HEATER CONTROL CIRCUIT (BANK 2 SENSOR 1) —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>

• **WIRING DIAGRAM:**

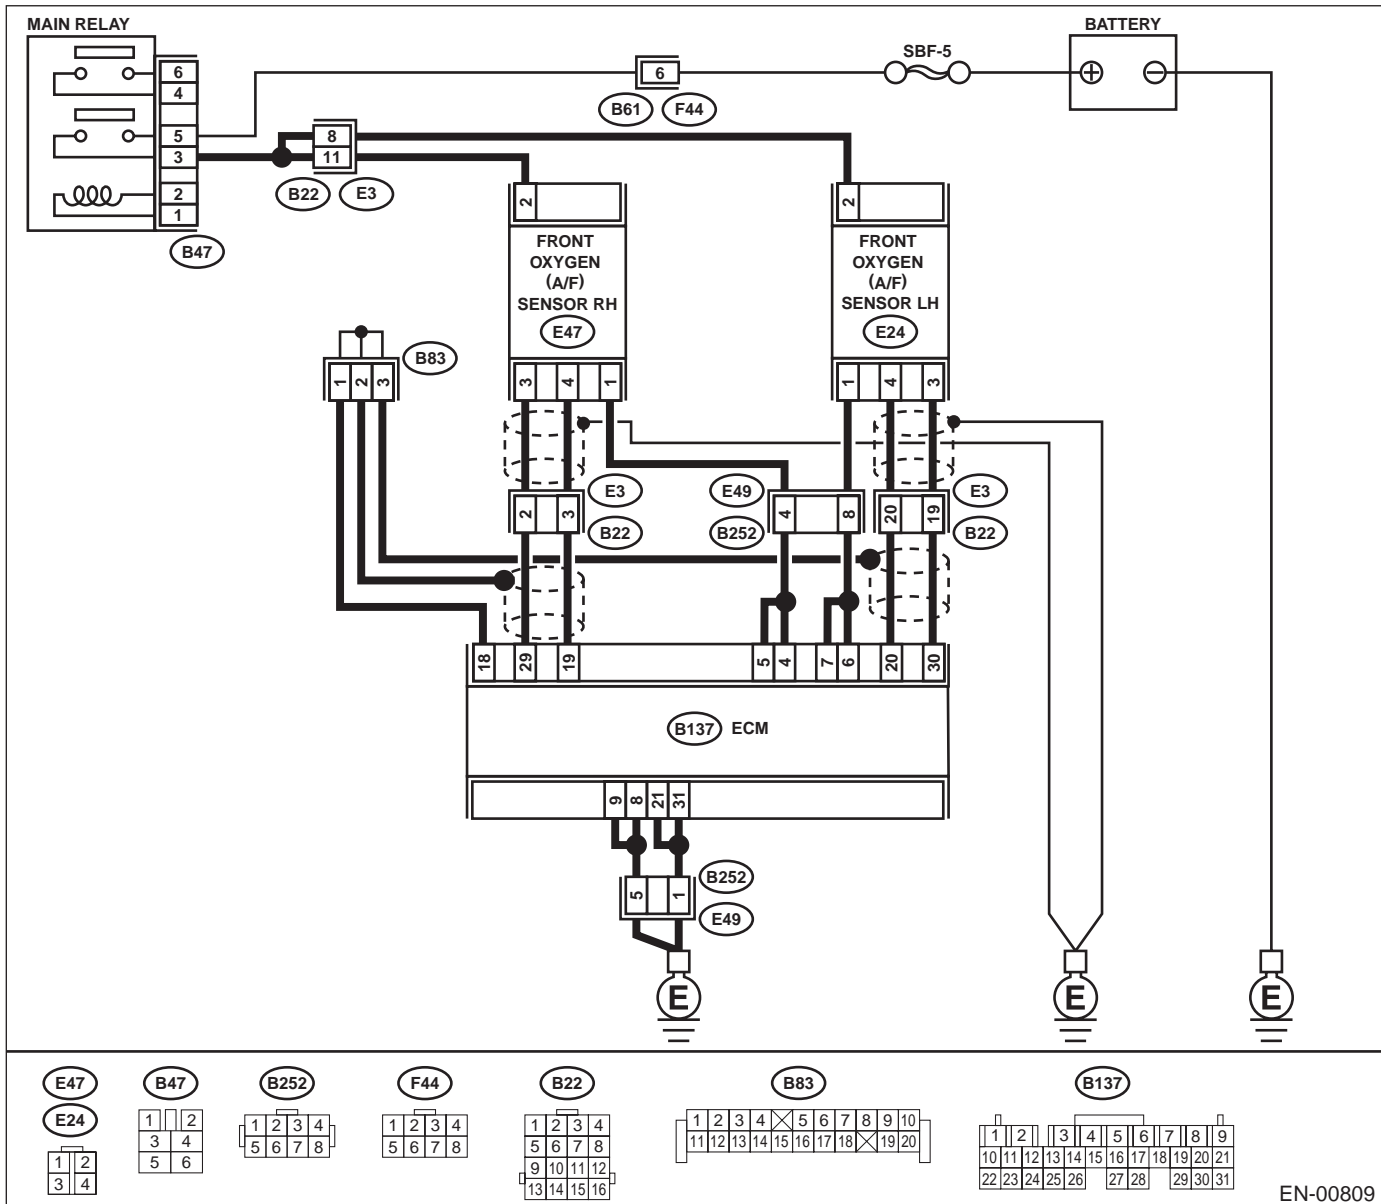

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1 CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.</p> <p>1) Start engine, and warm-up the engine. 2) Turn ignition switch to OFF. 3) Disconnect connectors from ECM and front oxygen (A/F) sensor. 4) Measure resistance of harness between ECM and front oxygen (A/F) sensor connector.</p> <p>Connector & terminal (B137) No. 4 — (E24) No. 6: (B137) No. 5 — (E24) No. 7:</p> <p>Is the measured value less than the specified value?</p>	1 Ω	Go to step 2.	Repair open circuit in harness between ECM and front oxygen (A/F) sensor connector.
<p>2 CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.</p> <p>Measure resistance of harness between ECM and front oxygen (A/F) sensor connector.</p> <p>Connector & terminal (B137) No. 20 — (E24) No. 4:</p> <p>Is the measured value less than the specified value?</p>	1 Ω	Go to step 3.	Repair open circuit in harness between ECM and front oxygen (A/F) sensor connector.
<p>3 CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.</p> <p>Measure resistance of harness between ECM and front oxygen (A/F) sensor connector.</p> <p>Connector & terminal (B137) No. 30 — (E24) No. 3:</p> <p>Is the measured value less than the specified value?</p>	1 Ω	Go to step 4.	Repair open circuit in harness between ECM and front oxygen (A/F) sensor connector.
<p>4 CHECK FRONT OXYGEN (A/F) SENSOR.</p> <p>Measure resistance between front oxygen (A/F) sensor connector terminals.</p> <p>Terminals No. 2 — No. 1:</p> <p>Is the measured value less than the specified value?</p>	5 Ω	Go to step 5.	Replace front oxygen (A/F) sensor. <Ref. to FU(H6DO)-43, Front Oxygen (A/F) Sensor.>
<p>5 CHECK POOR CONTACT.</p> <p>Check poor contact in ECM and front oxygen (A/F) sensor connector. Is there poor contact in ECM or front oxygen (A/F) sensor connector?</p>	There is poor contact.	Repair poor contact in ECM or front oxygen (A/F) sensor connector.	Replace front oxygen (A/F) sensor. <Ref. to FU(H6DO)-43, Front Oxygen (A/F) Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


G: DTC P0051 — HO2S HEATER CONTROL CIRCUIT LOW (BANK 2 SENSOR 1)

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

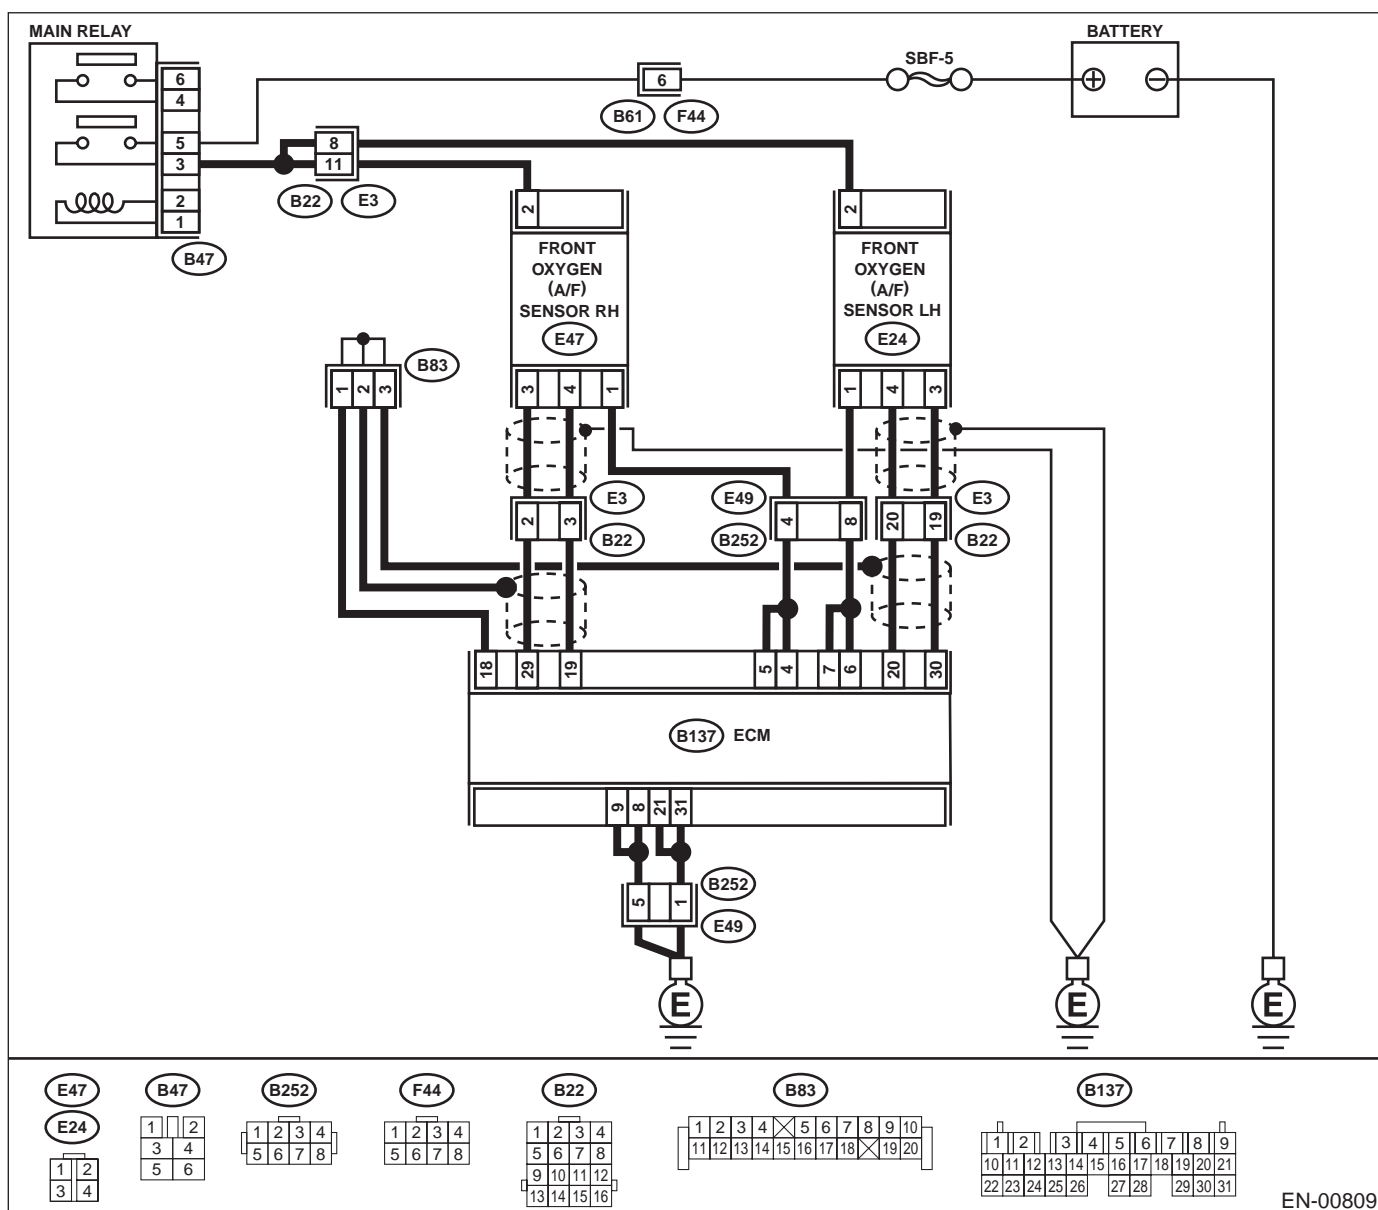

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1 CHECK GROUND CIRCUIT OF ECM. Measure resistance of harness between ECM connector and chassis ground. Connector & terminal (B137) No. 31 — Chassis ground: (B137) No. 21 — Chassis ground: (B137) No. 8 — Chassis ground: (B137) No. 9 — Chassis ground: Is the measured value less than the specified value?</p>	5 Ω	Go to step 2.	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and engine ground terminal • Poor contact in ECM connector Poor contact in coupling connector
<p>2 CHECK CURRENT DATA. 1) Start engine 2) Read data of front oxygen (A/F) sensor heater current using Subaru Select Monitor or OBD-II general scan tool. Does the measured value exceed the specified value? NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.> • OBD-II scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.</p>	0.2 A	Repair poor contact in connector. NOTE: In this case, repair the following: • Poor contact in front oxygen (A/F) sensor connector • Poor contact in ECM connector	Go to step 3.
<p>3 CHECK OUTPUT SIGNAL FROM ECM. 1) Start and idle the engine. 2) Measure voltage between ECM connector and chassis ground. Connector & terminal (B137) No. 7 (+) — Chassis ground (-): Is the measured value less than the specified value?</p>	1.0 V	Go to step 5.	Go to step 4.
<p>4 CHECK OUTPUT SIGNAL FROM ECM. Measure voltage between ECM connector and chassis ground. Connector & terminal (B137) No. 7 (+) — Chassis ground (-): Does the voltage change less than the specified value by shaking harness and connector of ECM while monitoring the value with voltage meter?</p>	1.0 V	Repair poor contact in ECM connector.	Go to step 5.
<p>5 CHECK OUTPUT SIGNAL FROM ECM. Measure voltage between ECM connector and chassis ground. Connector & terminal (B137) No. 6 (+) — Chassis ground (-): Is the measured value less than the specified value?</p>	1.0 V	Go to step 7.	Go to step 6.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>6 CHECK OUTPUT SIGNAL FROM ECM. Measure voltage between ECM connector and chassis ground. Connector & terminal (B137) No. 6 (+) — Chassis ground (-): Does the voltage change less than the specified value by shaking harness and connector of ECM while monitoring the value with voltage meter?</p>	1.0 V	Repair poor contact in ECM connector.	Go to step 7.
<p>7 CHECK POWER SUPPLY TO FRONT OXYGEN (A/F) SENSOR. 1) Turn ignition switch to OFF. 2) Disconnect connector from front oxygen (A/F) sensor. 3) Turn ignition switch to ON. 4) Measure voltage between front oxygen (A/F) sensor connector and engine ground. Connector & terminal (E24) No. 2 (+) — Engine ground (-): Does the measured value exceed the specified value?</p>	10 V	Go to step 8.	Repair power supply line. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Open circuit in harness between main relay and front oxygen (A/F) sensor connector • Poor contact in front oxygen (A/F) sensor connector • Poor contact in main relay connector
<p>8 CHECK FRONT OXYGEN (A/F) SENSOR. 1) Turn ignition switch to OFF. 2) Measure resistance between front oxygen (A/F) sensor connector terminals. Terminals No. 2 — No. 1: Is the measured value less than the specified value?</p>	10 Ω	Repair harness and connector. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Open or ground short circuit in harness between front oxygen (A/F) sensor and ECM connector • Poor contact in front oxygen (A/F) sensor connector • Poor contact in ECM connector 	Replace front oxygen (A/F) sensor. <Ref. to FU(H6DO)-43, Front Oxygen (A/F) Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

MEMO:

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)


H: DTC P0052 — HO2S HEATER CONTROL CIRCUIT HIGH (BANK 2 SENSOR 1) —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

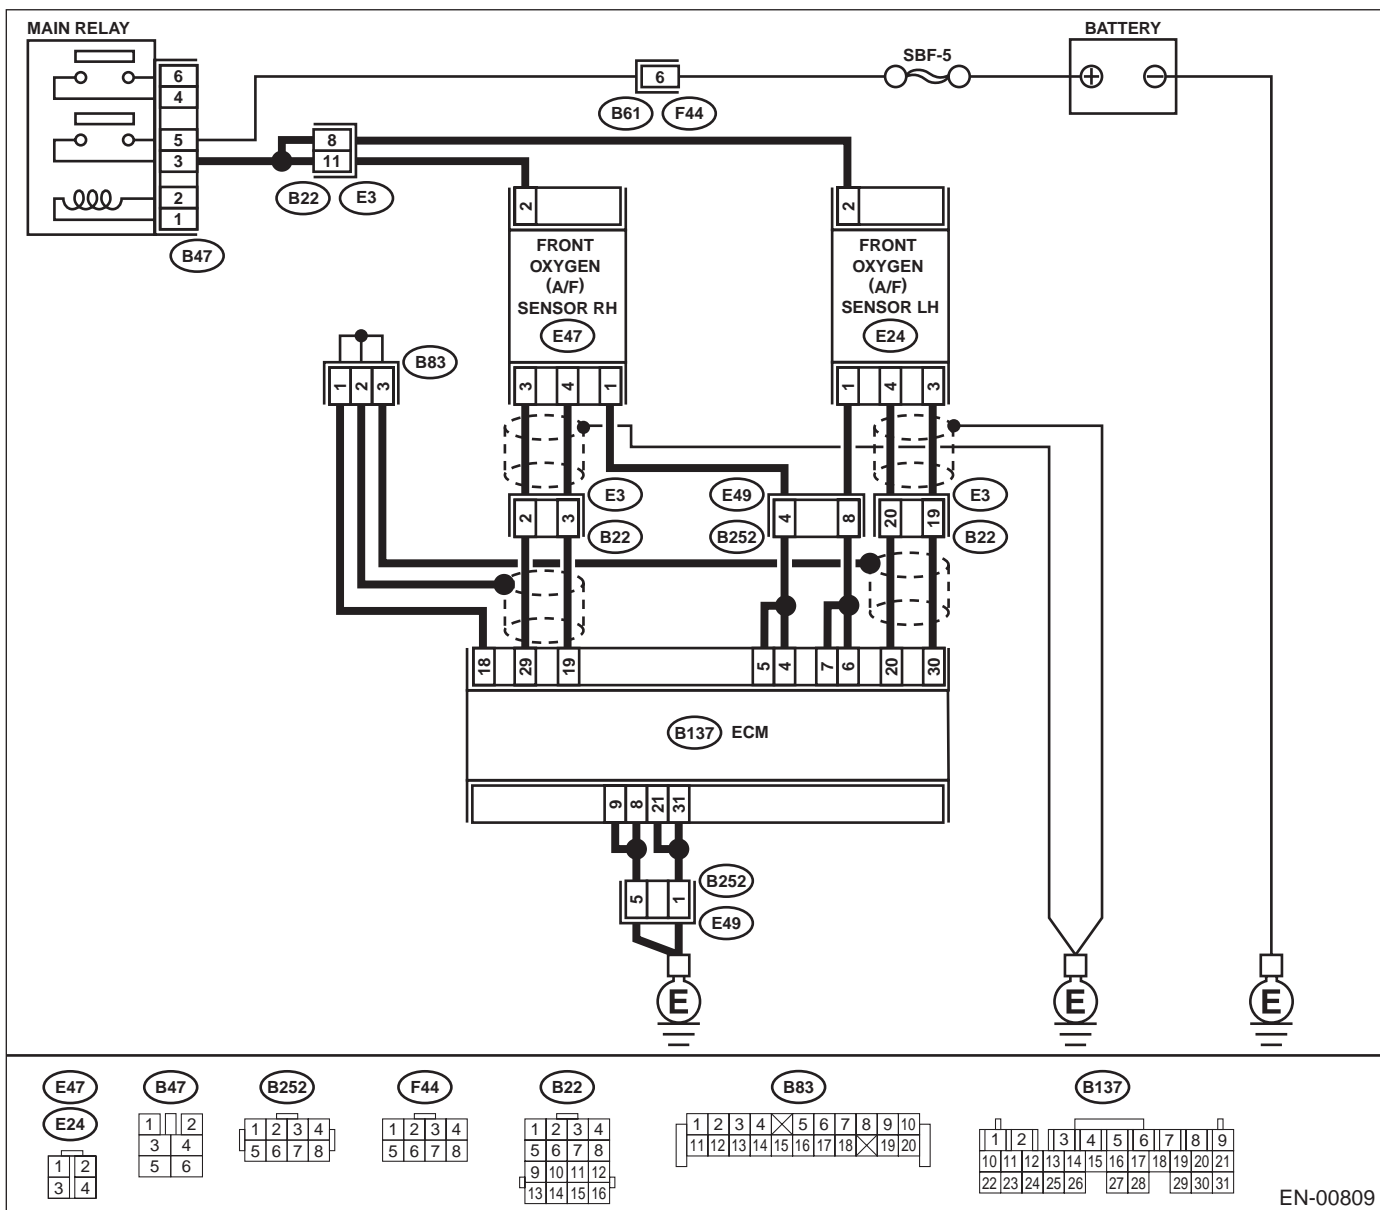

EN-00809

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1 CHECK OUTPUT SIGNAL FROM ECM. 1) Turn ignition switch to ON. 2) Measure voltage between ECM connector and chassis ground. Connector & terminal (B137) No. 6 (+) — Chassis ground (-): Does the measured value exceed the specified value?</p>	8 V	Go to step 3.	Go to step 2.
<p>2 CHECK OUTPUT SIGNAL FROM ECM. Measure voltage between ECM connector and chassis ground. Connector & terminal (B137) No. 7 (+) — Chassis ground (-): Does the measured value exceed the specified value?</p>	8 V	Go to step 3.	Go to step 4.
<p>3 CHECK FRONT OXYGEN (A/F) SENSOR HEATER CURRENT. 1) Turn ignition switch to OFF. 2) Repair battery short circuit in harness between ECM and front oxygen (A/F) sensor connector. 3) Turn ignition switch to ON. 4) Read data of front oxygen (A/F) sensor heater current using Subaru Select Monitor or the OBD-II general scan tool. Does the measured value exceed the specified value?</p> <p>NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.> • OBD-II general scan tool For detailed operation procedure, refer to the OBD-II General Scan Tool Instruction Manual.</p>	2.3 A	Replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>	END
<p>4 CHECK OUTPUT SIGNAL FROM ECM. Measure voltage between ECM connector and chassis ground. Connector & terminal (B137) No. 6 (+) — Chassis ground (-): Does the voltage change more than the specified value shaking harness and connector of ECM while monitoring the value with voltage meter?</p>	8 V	Repair battery short circuit in harness between ECM and front oxygen (A/F) sensor connector.	Go to step 5.
<p>5 CHECK OUTPUT SIGNAL FROM ECM. Measure voltage between ECM connector and chassis ground. Connector & terminal (B137) No. 7 (+) — Chassis ground (-): Does the voltage change more than the specified value by shaking harness and connector of ECM while monitoring the value with voltage meter?</p>	8 V	Repair battery short circuit in harness between ECM and front oxygen (A/F) sensor connector.	END


DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

I: DTC P0068 — MANIFOLD ABSOLUTE PRESSURE/BAROMETRIC PRESSURE CIRCUIT RANGE/PERFORMANCE —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM**
 - Erroneous idling

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

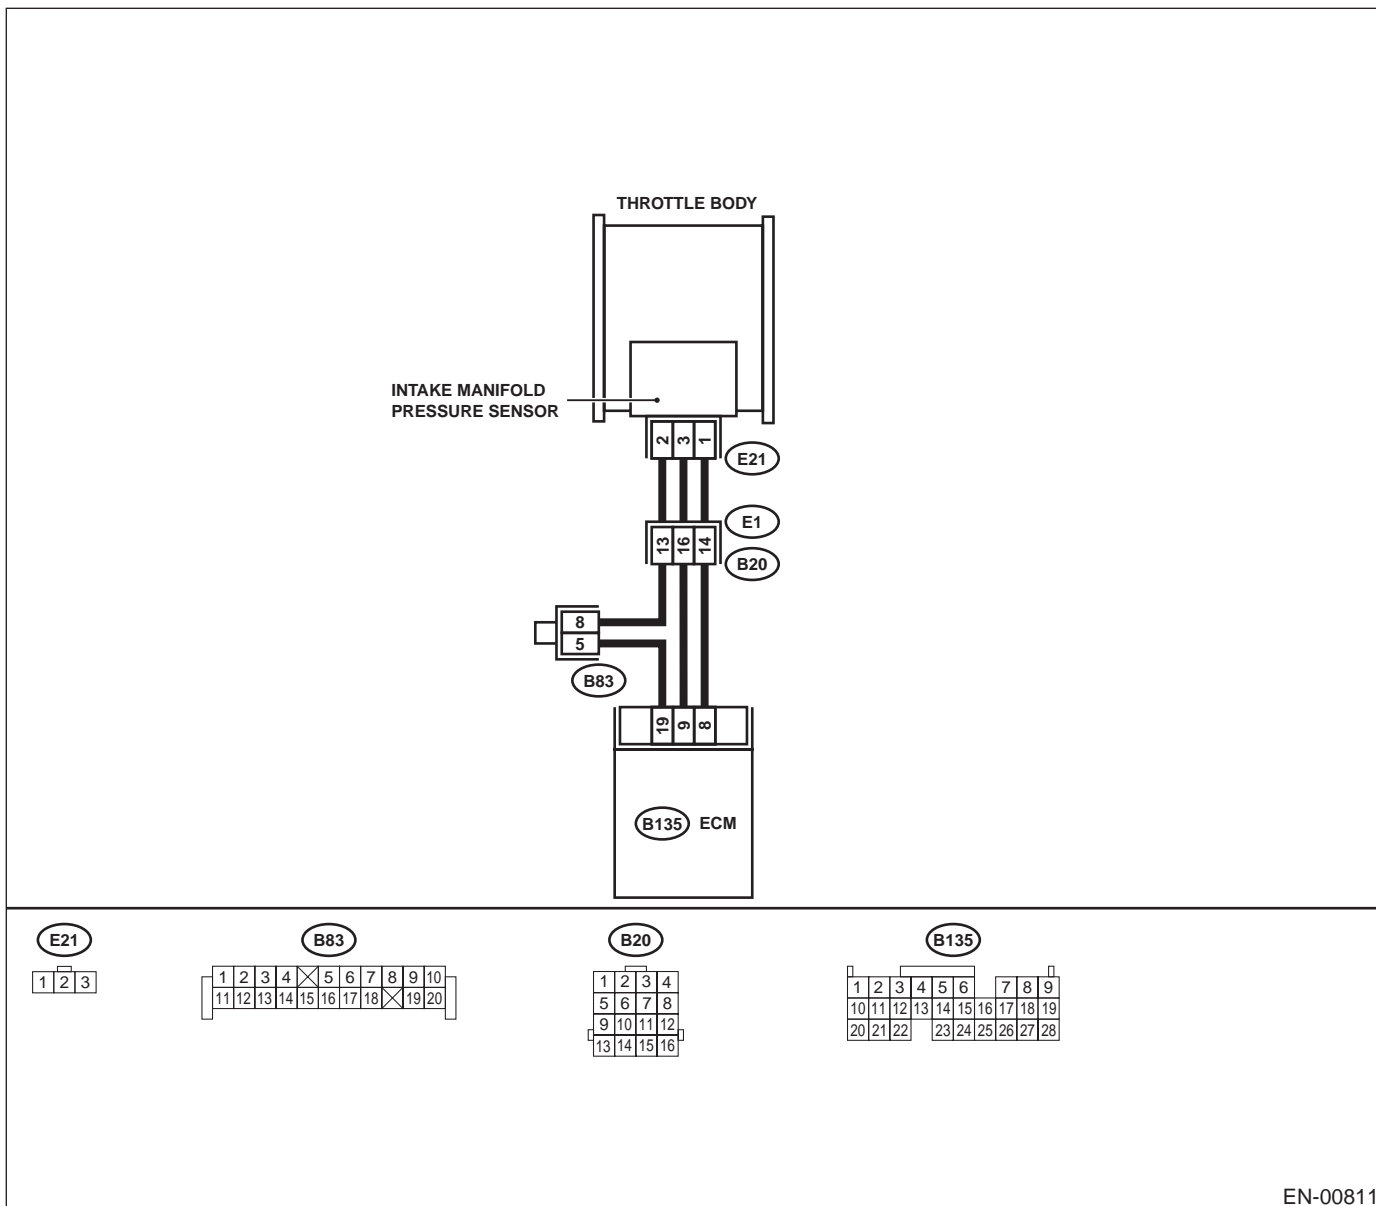

EN-00811

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK IDLE SWITCH SIGNAL. 1) Turn ignition switch to ON. 2) Operate the LED operation mode for engine using Subaru Select Monitor. Does the LED of {Idle Switch Signal} come on? NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "LED OPERATION MODE FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.>	LED comes on.	Go to step 2.	Check throttle position sensor circuit. <Ref. to EN(H6DO)-146, DTC P0121 — THROTTLE/ PEDAL POSITION SENSOR/ SWITCH "A" CIRCUIT RANGE/ PERFORMANCE —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0106.
2 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0106.	Go to step 3.
3 CHECK CONDITION OF INTAKE MANIFOLD PRESSURE SENSOR. Is the intake manifold pressure sensor installation bolt tightened securely?	Tightened securely.	Go to step 4.	Tighten intake manifold pressure sensor installation bolt securely.
4 CHECK CONDITION OF THROTTLE BODY. Is the throttle body installation bolt tightened securely?	Tightened securely.	Go to step 5.	Tighten throttle body installation bolt securely.
5 CHECK CONDITION OF EGR VALVE. Is there any foreign object caught between EGR solenoid valve and intake manifold?	There is a foreign object.	Completely remove foreign object, and install EGR solenoid valve securely to the intake manifold.	Replace intake manifold pressure sensor. <Ref. to FU(H6DO)-34, Intake Manifold Pressure Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


J: DTC P0107 — MANIFOLD ABSOLUTE PRESSURE/BAROMETRIC PRESSURE CIRCUIT LOW INPUT —

- DTC DETECTING CONDITION:
 - Immediately at fault recognition

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• WIRING DIAGRAM:

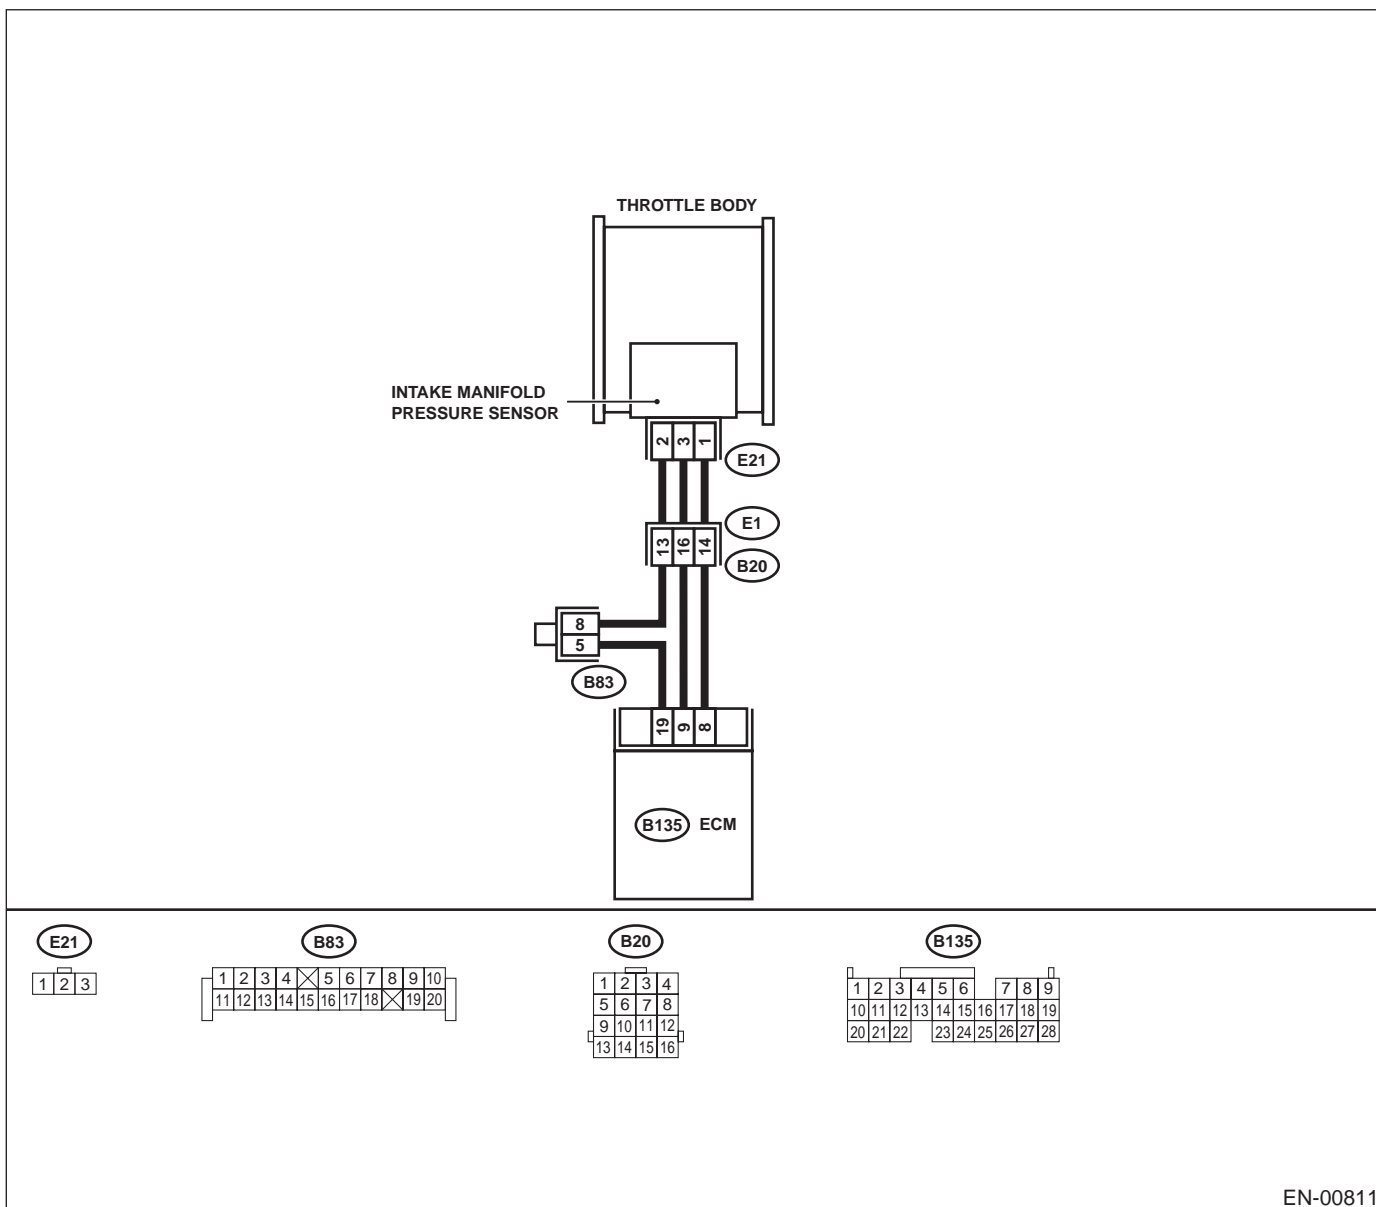

EN-00811

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK CURRENT DATA. 1) Start engine. 2) Read the data of intake manifold absolute pressure signal using Subaru Select Monitor or OBD-II general scan tool. Is the measured value less than the specified value? NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.> • OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	1.7 kPa (13 mmHg, 0.51 inHg)	Go to step 3.	Go to step 2.
2 CHECK POOR CONTACT. Check poor contact in ECM and pressure sensor connector. Is there poor contact in ECM or pressure sensor connector?	There is poor contact.	Repair poor contact in ECM or pressure sensor connector.	Even if MIL lights up, the circuit has returned to a normal condition at this time.
3 CHECK INPUT SIGNAL FOR ECM. Measure voltage between ECM connector and chassis ground. Connector & terminal (B135) No. 9 (+) — Chassis ground (-): Does the measured value exceed the specified value?	4.5 V	Go to step 5.	Go to step 4.
4 CHECK INPUT SIGNAL FOR ECM. Measure voltage between ECM connector and chassis ground. Connector & terminal (B135) No. 9 (+) — Chassis ground (-): Does the voltage change more than the specified value by shaking harness and connector of ECM while monitoring the value with voltage meter?	4.5 V	Repair poor contact in ECM connector.	Contact with SOA service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.
5 CHECK INPUT SIGNAL FOR ECM. Measure voltage between ECM and chassis ground. Connector & terminal (B135) No. 8 (+) — Chassis ground (-): Is the measured value less than the specified value?	0.7 V	Go to step 7.	Go to step 6.
6 CHECK INPUT SIGNAL FOR ECM. Read data of intake manifold atmospheric absolute pressure signal using Subaru Select Monitor. Does the value change more than the specified value by shaking harness and connector of ECM while monitoring the value with Subaru Select Monitor? NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.>	1.7 kPa (13 mmHg, 0.51 inHg)	Repair poor contact in ECM connector.	Go to step 7.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>7 CHECK HARNESS BETWEEN ECM AND INTAKE MANIFOLD PRESSURE SENSOR CONNECTOR.</p> <p>1) Turn ignition switch to OFF. 2) Disconnect connector from intake manifold pressure sensor. 3) Turn ignition switch to ON. 4) Measure voltage between intake manifold pressure sensor connector and engine ground.</p> <p>Connector & terminal (E21) No. 3 (+) — Engine ground (-): Does the measured value exceed the specified value?</p>	4.5 V	Go to step 8 .	Repair open circuit in harness between ECM and intake manifold pressure sensor connector.
<p>8 CHECK HARNESS BETWEEN ECM AND INTAKE MANIFOLD PRESSURE SENSOR CONNECTOR.</p> <p>1) Turn ignition switch to OFF. 2) Disconnect connector from ECM. 3) Measure resistance of harness between ECM and intake manifold pressure sensor connector.</p> <p>Connector & terminal (B135) No. 19 — (E21) No. 2: Is the measured value less than the specified value?</p>	1 Ω	Go to step 9 .	Repair open circuit in harness between ECM and intake manifold pressure sensor connector.
<p>9 CHECK HARNESS BETWEEN ECM AND INTAKE MANIFOLD PRESSURE SENSOR CONNECTOR.</p> <p>Measure resistance of harness between intake manifold pressure sensor connector and engine ground.</p> <p>Connector & terminal (E21) No. 1 — Engine ground: Does the measured value exceed the specified value?</p>	1 MΩ	Go to step 10 .	Repair ground short circuit in harness between ECM and intake manifold pressure sensor connector.
<p>10 CHECK POOR CONTACT.</p> <p>Check poor contact in intake manifold pressure sensor connector. Is there poor contact in intake manifold pressure sensor connector?</p>	There is poor contact.	Repair poor contact in intake manifold pressure sensor connector.	Replace intake manifold pressure sensor. <Ref. to FU(H6DO)-34, Intake Manifold Pressure Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

MEMO:

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


K: DTC P0108 — MANIFOLD ABSOLUTE PRESSURE/BAROMETRIC PRESSURE CIRCUIT HIGH INPUT —

- DTC DETECTING CONDITION:
 - Immediately at fault recognition

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

- WIRING DIAGRAM:

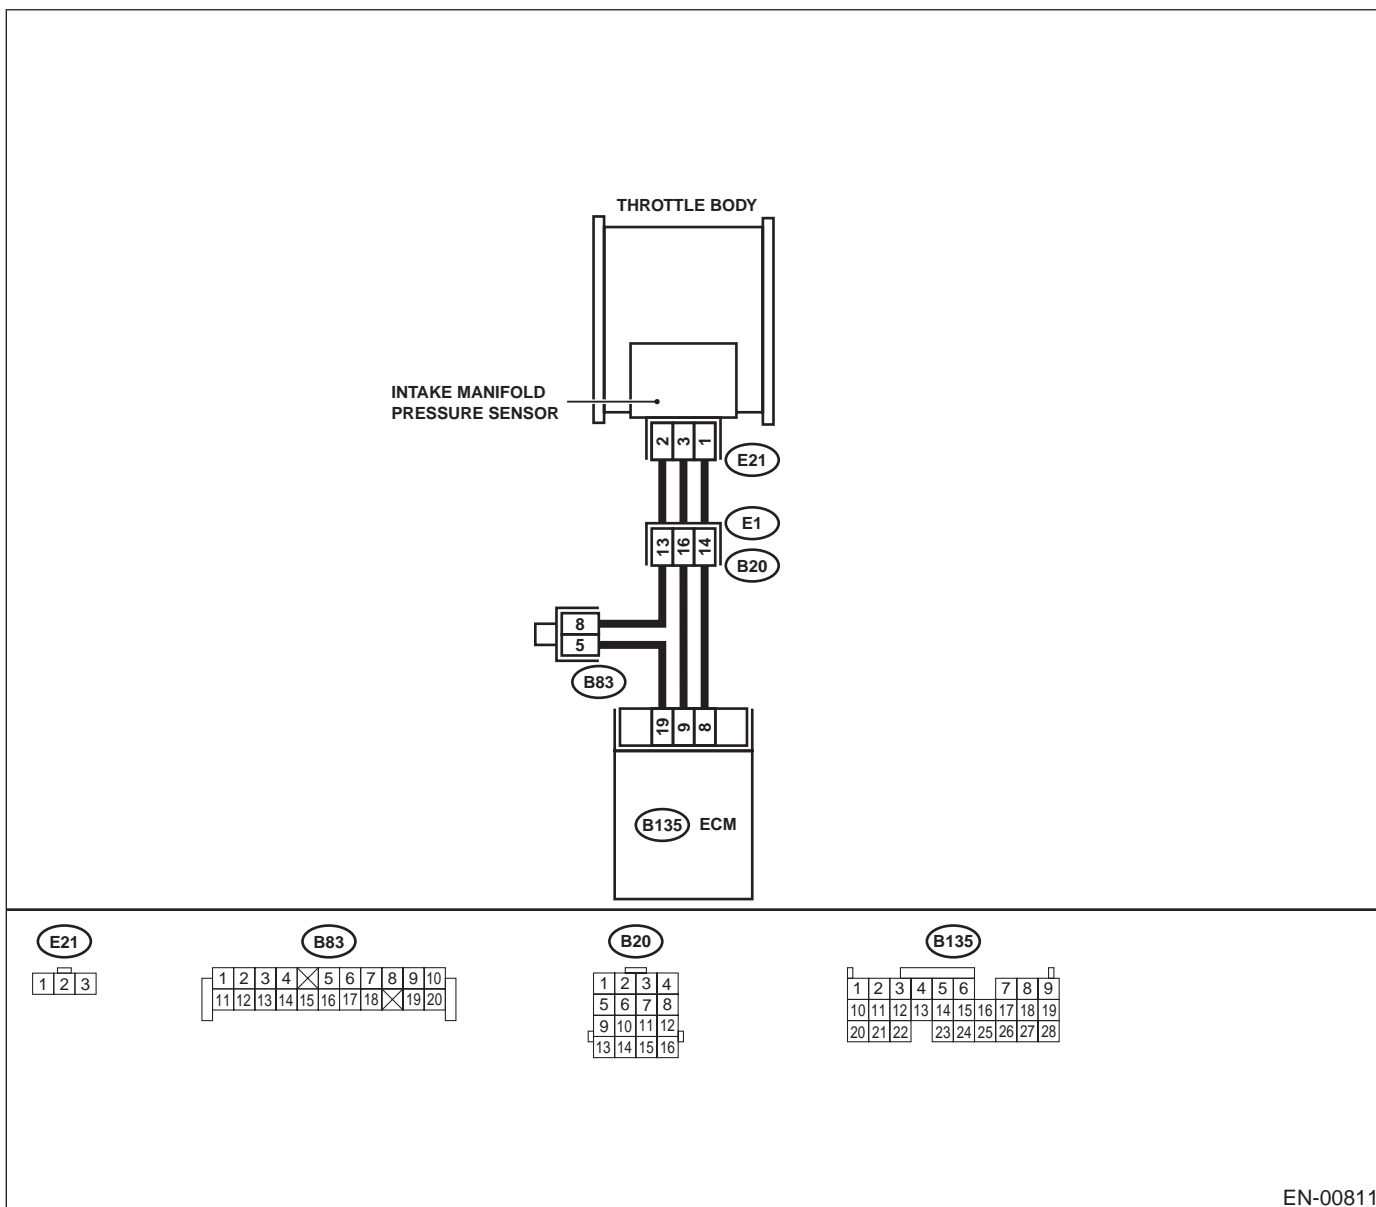

EN-00811

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1 CHECK CURRENT DATA. 1) Start engine. 2) Read the data of intake manifold absolute pressure signal using Subaru Select Monitor or OBD-II general scan tool. Does the measured value exceed the specified value?</p> <p>NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.> • OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.</p>	130 kPa (975 mmHg, 38.39 inHg)	Go to step 10.	Go to step 2.
<p>2 CHECK INPUT SIGNAL FOR ECM. Measure voltage between ECM connector and chassis ground. Connector & terminal (B135) No. 9 (+) — Chassis ground (-): Does the measured value exceed the specified value?</p>	4.5 V	Go to step 4.	Go to step 3.
<p>3 CHECK INPUT SIGNAL FOR ECM. Measure voltage between ECM connector and chassis ground. Connector & terminal (B135) No. 9 (+) — Chassis ground (-): Does the voltage change more than the specified value by shaking harness and connector of ECM while monitoring the value with voltage meter?</p>	4.5 V	Repair poor contact in ECM connector.	Contact with SOA service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.
<p>4 CHECK INPUT SIGNAL FOR ECM. Measure voltage between ECM connector and chassis ground. Connector & terminal (B135) No. 8 (+) — Chassis ground (-): Is the measured value less than the specified value?</p>	0.7 V	Go to step 6.	Go to step 5.
<p>5 CHECK INPUT SIGNAL FOR ECM. Read data of intake manifold atmospheric absolute pressure signal using Subaru Select Monitor. Does the value change more than the specified value by shaking harness and connector of ECM while monitoring the value with Subaru Select Monitor?</p> <p>NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.></p>	1.7 kPa (13 mmHg, 0.51 inHg)	Repair poor contact in ECM connector.	Go to step 6.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
6 CHECK HARNESS BETWEEN ECM AND INTAKE MANIFOLD PRESSURE SENSOR CONNECTOR. 1) Turn ignition switch to OFF. 2) Disconnect connector from intake manifold pressure sensor. 3) Turn ignition switch to ON. 4) Measure voltage between intake manifold pressure sensor connector and engine ground. Connector & terminal (E21) No. 3 (+) — Engine ground (-): Does the measured value exceed the specified value?	4.5 V	Go to step 7.	Repair open circuit in harness between ECM and intake manifold pressure sensor connector.
7 CHECK HARNESS BETWEEN ECM AND INTAKE MANIFOLD PRESSURE SENSOR CONNECTOR. 1) Turn ignition switch to OFF. 2) Disconnect connector from ECM. 3) Measure resistance of harness between ECM and intake manifold pressure sensor connector. Connector & terminal (B135) No. 8 — (E21) No. 1: Is the measured value less than the specified value?	1 Ω	Go to step 8.	Repair open circuit in harness between ECM and intake manifold pressure sensor connector.
8 CHECK HARNESS BETWEEN ECM AND INTAKE MANIFOLD PRESSURE SENSOR CONNECTOR. Measure resistance of harness between ECM and intake manifold pressure sensor connector. Connector & terminal (B135) No. 19 — (E21) No. 2: Is the measured value less than the specified value?	1 Ω	Go to step 9.	Repair open circuit in harness between ECM and intake manifold pressure sensor connector.
9 CHECK POOR CONTACT. Check poor contact in intake manifold pressure sensor connector. Is there poor contact in intake manifold pressure sensor connector?	There is poor contact.	Repair poor contact in intake manifold pressure sensor connector.	Replace intake manifold pressure sensor. <Ref. to FU(H6DO)-34, Intake Manifold Pressure Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>10 CHECK HARNESS BETWEEN ECM AND PRESSURE SENSOR CONNECTOR.</p> <p>1) Turn ignition switch to OFF and Subaru Select Monitor or the OBD-II general scan tool switch to OFF.</p> <p>2) Disconnect connector from pressure sensor.</p> <p>3) Turn ignition switch to ON and Subaru Select Monitor or the OBD-II general scan tool switch to ON.</p> <p>4) Read data of intake manifold absolute pressure signal using Subaru Select Monitor or OBD-II general scan tool. Does the measured value exceed the specified value?</p> <p>NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.> • OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.</p>	<p>130 kPa (975 mmHg, 38.39 inHg)</p>	<p>Repair battery short circuit in harness between ECM and intake manifold pressure sensor connector.</p>	<p>Replace intake manifold pressure sensor. <Ref. to FU(H6DO)-34, Intake Manifold Pressure Sensor.></p>


DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

L: DTC P0111 — INTAKE AIR TEMPERATURE CIRCUIT RANGE/PERFORMANCE —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Erroneous idling
 - Poor driving performance

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

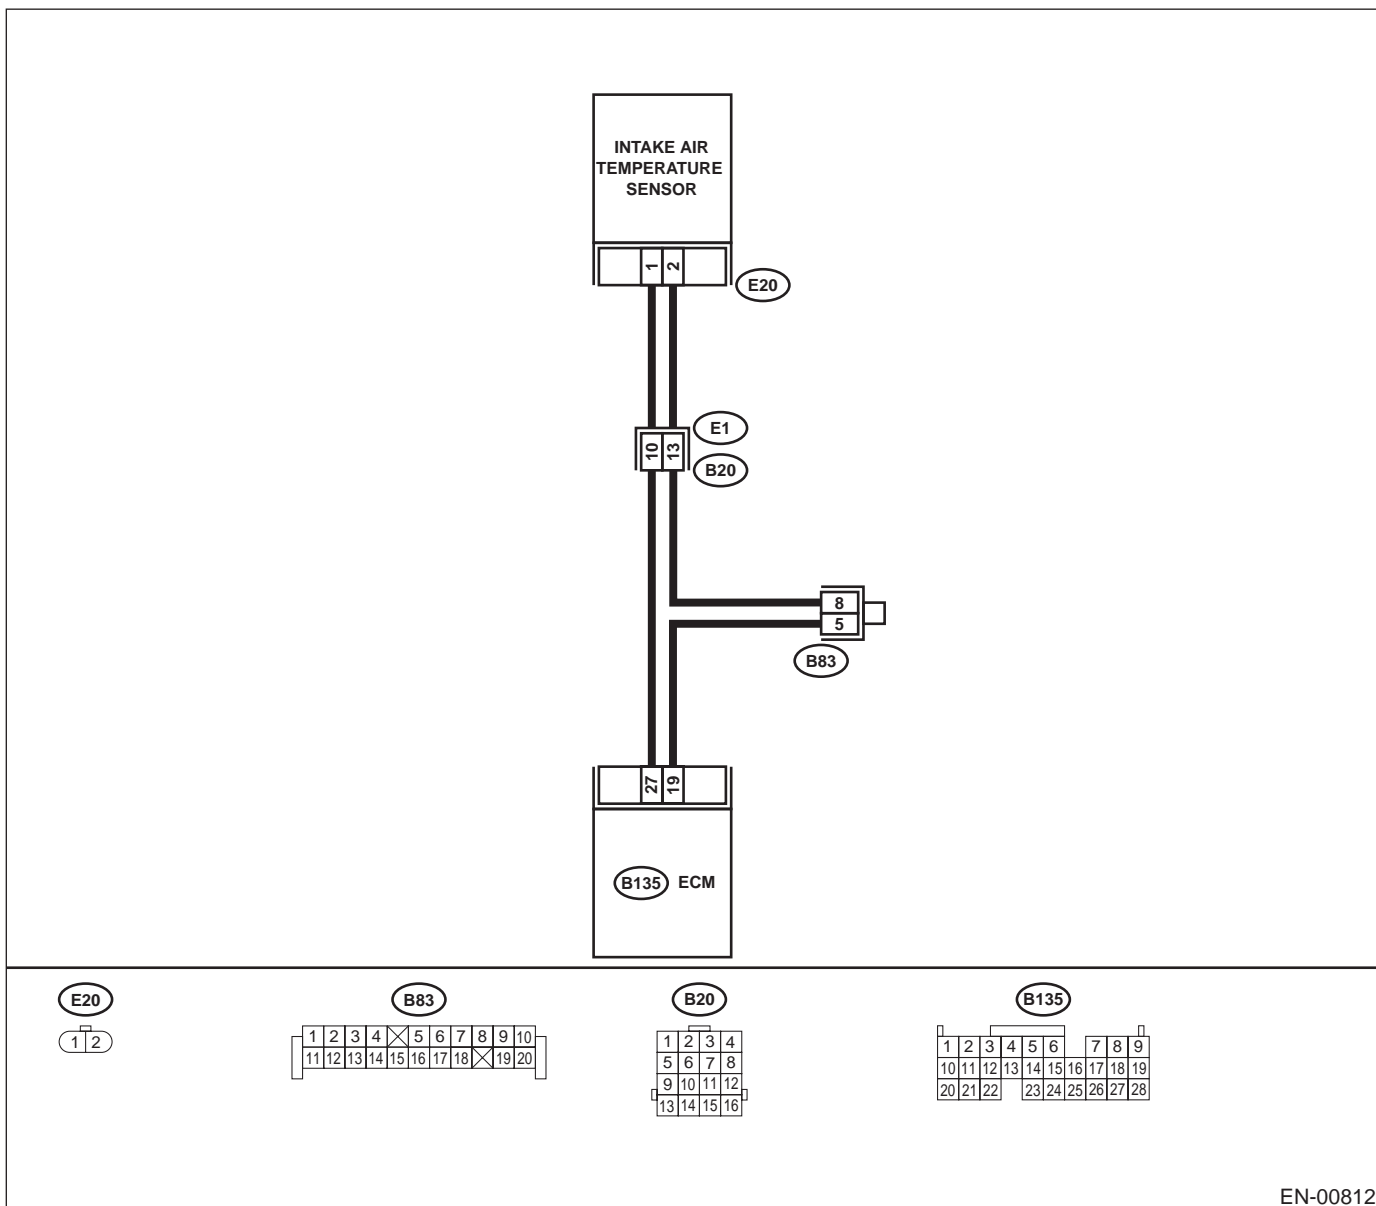

EN-00812

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0111.	Replace intake air temperature sensor. <Ref. to FU(H6DO)-35, Intake Air Temperature Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

M: DTC P0112 — INTAKE AIR TEMPERATURE CIRCUIT LOW INPUT —


- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition

- **TROUBLE SYMPTOM:**
 - Erroneous idling
 - Poor driving performance

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

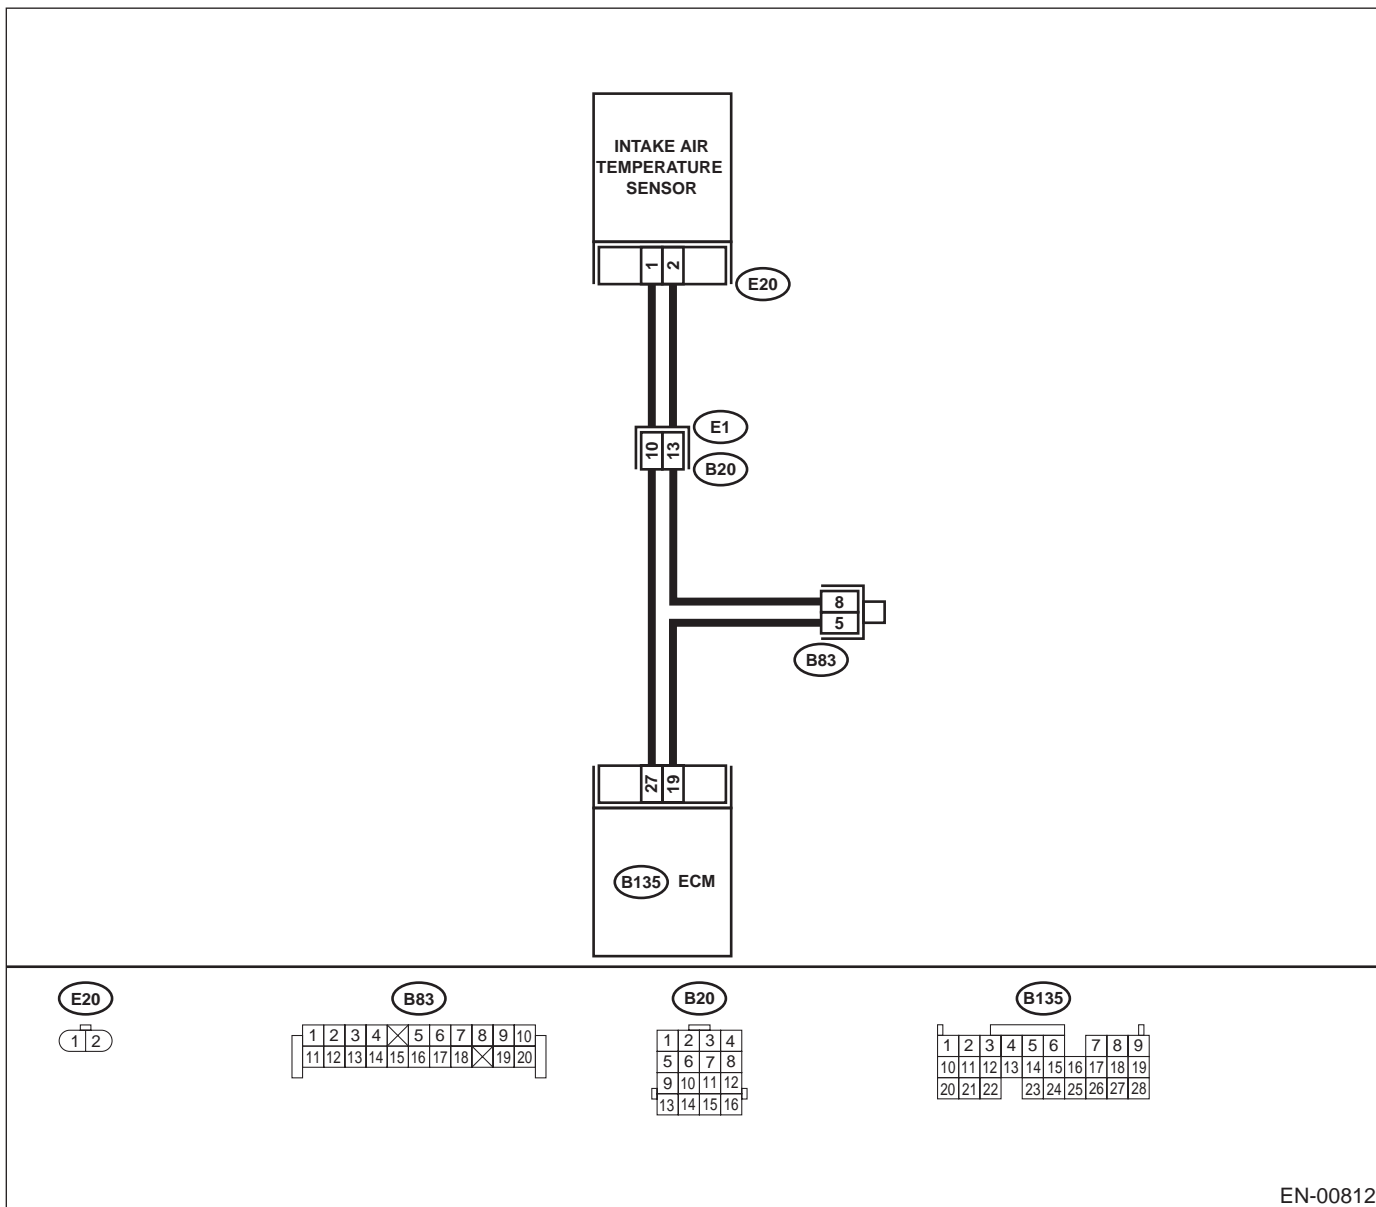

EN-00812

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1 CHECK CURRENT DATA.</p> <p>1) Start engine. 2) Read data of intake air temperature sensor signal using Subaru Select Monitor or the OBD-II general scan tool. Does the measured value exceed the specified value?</p> <p>NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.> • OBD-II general scan tool For detailed operation procedure, refer to the OBD-II General Scan Tool Instruction Manual.</p>	120°C (248°F)	Go to step 2.	<p>Repair poor contact.</p> <p>NOTE: In this case, repair the following:</p> <ul style="list-style-type: none"> • Poor contact in intake air temperature sensor • Poor contact in ECM • Poor contact in coupling connector • Poor contact in joint connector
<p>2 CHECK HARNESS BETWEEN INTAKE AIR TEMPERATURE SENSOR AND ECM CONNECTOR.</p> <p>1) Turn ignition switch to OFF. 2) Disconnect connector from intake air temperature sensor. 3) Turn ignition switch to ON. 4) Read data of intake air temperature sensor signal using Subaru Select Monitor or the OBD-II general scan tool. Is the measured value less than the specified value?</p> <p>NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.> • OBD-II general scan tool For detailed operation procedure, refer to the OBD-II General Scan Tool Instruction Manual.</p>	-40°C (-40°F)	Replace intake air temperature sensor. <Ref. to FU(H6DO)-35, Intake Air Temperature Sensor.>	Repair ground short circuit in harness between intake air temperature sensor and ECM connector.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

N: DTC P0113 — INTAKE AIR TEMPERATURE CIRCUIT HIGH INPUT —


- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition

- **TROUBLE SYMPTOM:**
 - Erroneous idling
 - Poor driving performance

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

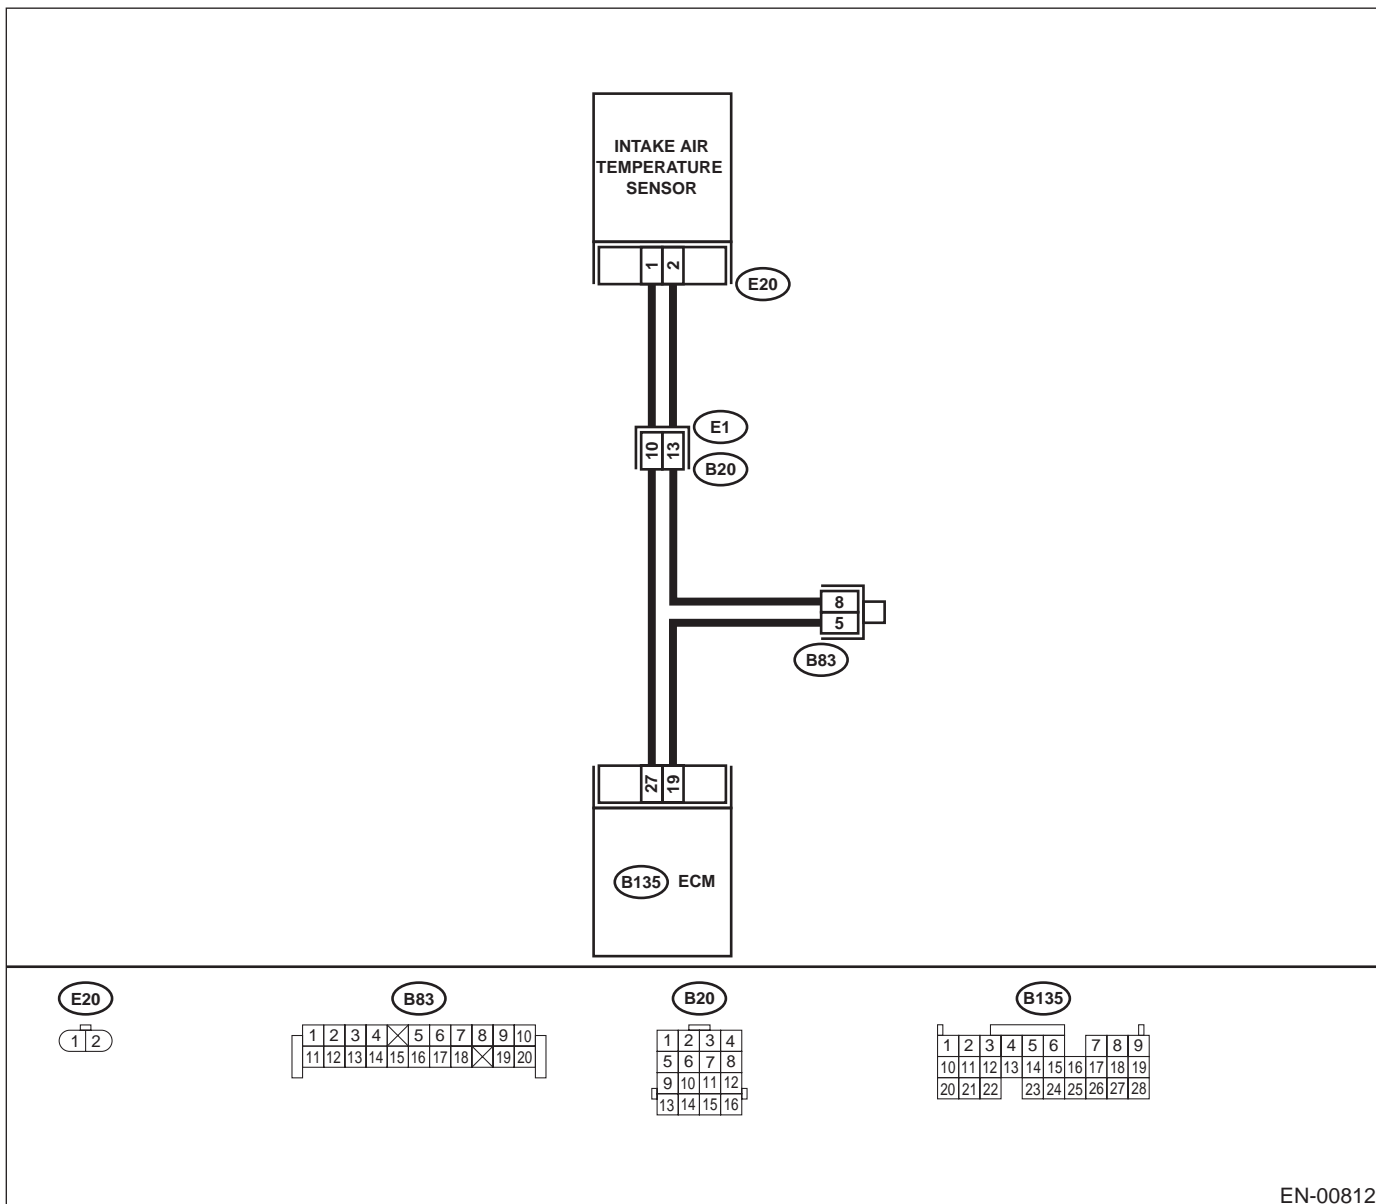

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1 CHECK CURRENT DATA.</p> <p>1) Turn ignition switch to ON. 2) Start engine. 3) Read data of intake air temperature sensor signal using Subaru Select Monitor or the OBD-II general scan tool. Is the measured value less than the specified value?</p> <p>NOTE:</p> <ul style="list-style-type: none"> Subaru Select Monitor <p>For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.></p> <ul style="list-style-type: none"> OBD-II general scan tool <p>For detailed operation procedure, refer to the OBD-II General Scan Tool Instruction Manual.</p>	-40°C (-40°F)	Go to step 2.	<p>Repair poor contact.</p> <p>NOTE: In this case, repair the following:</p> <ul style="list-style-type: none"> Poor contact in intake air temperature sensor Poor contact in ECM Poor contact in coupling connector Poor contact in joint connector
<p>2 CHECK HARNESS BETWEEN INTAKE AIR TEMPERATURE SENSOR AND ECM CONNECTOR.</p> <p>1) Turn ignition switch to OFF. 2) Disconnect connector from intake air temperature sensor. 3) Measure voltage between intake air temperature sensor connector and engine ground.</p> <p>Connector & terminal (E20) No. 1 (+) — Engine ground (-): Does the measured value exceed the specified value?</p>	10 V	Repair battery short circuit in harness between intake air temperature sensor and ECM connector.	Go to step 3.
<p>3 CHECK HARNESS BETWEEN INTAKE AIR TEMPERATURE SENSOR AND ECM CONNECTOR.</p> <p>1) Turn ignition switch to ON. 2) Measure voltage between intake air temperature sensor connector and engine ground.</p> <p>Connector & terminal (E20) No. 1 (+) — Engine ground (-): Does the measured value exceed the specified value?</p>	10 V	Repair battery short circuit in harness between intake air temperature sensor and ECM connector.	Go to step 4.
<p>4 CHECK HARNESS BETWEEN INTAKE AIR TEMPERATURE SENSOR AND ECM CONNECTOR.</p> <p>Measure voltage between intake air temperature sensor connector and engine ground.</p> <p>Connector & terminal (E20) No. 1 (+) — Engine ground (-): Does the measured value exceed the specified value?</p>	3 V	Go to step 5.	<p>Repair harness and connector.</p> <p>NOTE: In this case, repair the following:</p> <ul style="list-style-type: none"> Open circuit in harness between intake air temperature sensor and ECM connector Poor contact in intake air temperature sensor Poor contact in ECM Poor contact in coupling connector Poor contact in joint connector

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>5</p> <p>CHECK HARNESS BETWEEN INTAKE AIR TEMPERATURE SENSOR AND ECM CONNECTOR.</p> <p>1) Turn ignition switch to OFF.</p> <p>2) Measure resistance of harness between intake air temperature sensor connector and engine ground.</p> <p>Connector & terminal (E20) No. 2 — Engine ground: Is the measured value less than the specified value?</p>	5 Ω	Replace intake air temperature sensor. <Ref. to FU(H6DO)-35, Intake Air Temperature Sensor.>	Repair harness and connector. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Open circuit in harness between intake air temperature sensor and ECM connector • Poor contact in intake air temperature sensor • Poor contact in ECM • Poor contact in coupling connector • Poor contact in joint connector

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

MEMO:

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


O: DTC P0117 — ENGINE COOLANT TEMPERATURE CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
 - Hard to start
 - Erroneous idling
 - Poor driving performance

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• WIRING DIAGRAM:

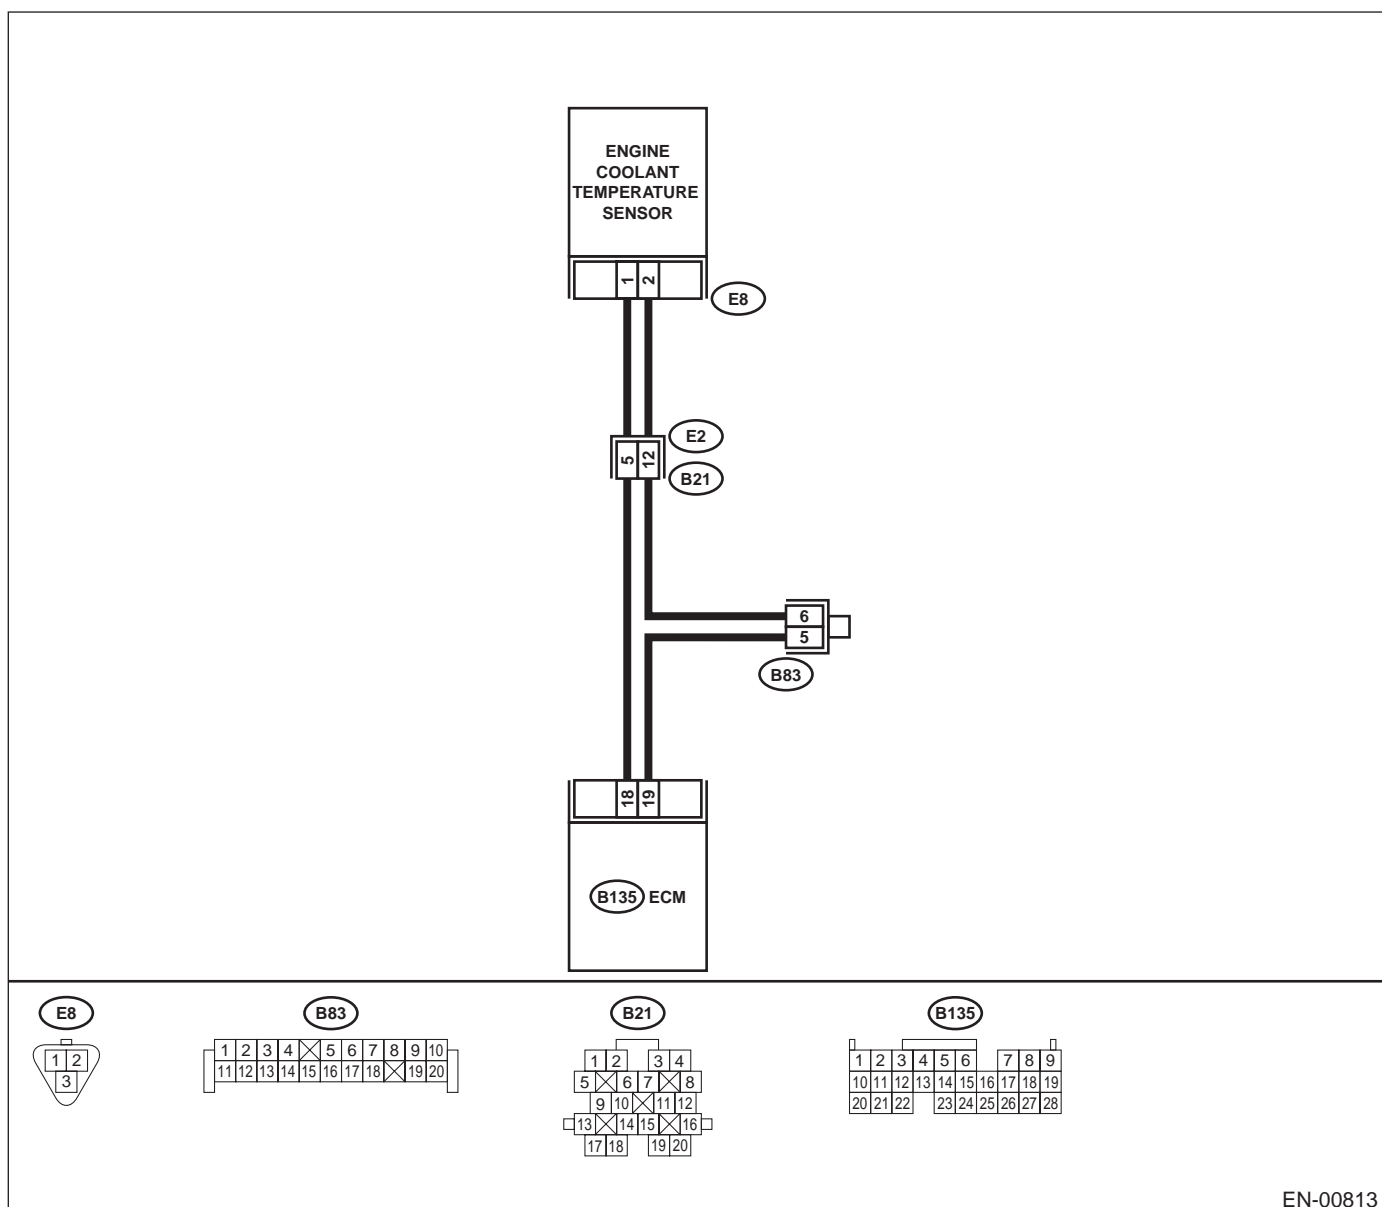

EN-00813

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1</p> <p>CHECK CURRENT DATA.</p> <p>1) Start engine. 2) Read data of engine coolant temperature sensor signal using Subaru Select Monitor or OBD-II general scan tool. Does the measured value exceed the specified value?</p> <p>NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.> • OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.</p>	120°C (248°F)	Go to step 2.	<p>Repair poor contact.</p> <p>NOTE: In this case, repair the following:</p> <ul style="list-style-type: none"> • Poor contact in engine coolant temperature sensor • Poor contact in ECM • Poor contact in coupling connector • Poor contact in joint connector
<p>2</p> <p>CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND ECM CONNECTOR.</p> <p>1) Turn ignition switch to OFF. 2) Disconnect connector from engine coolant temperature sensor. 3) Turn ignition switch to ON. 4) Read data of engine coolant temperature sensor signal using Subaru Select Monitor or OBD-II general scan tool. Is the measured value less than the specified value?</p> <p>NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.> • OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.</p>	-40°C (-40°F)	Replace engine coolant temperature sensor. <Ref. to FU(H6DO)-29, Engine Coolant Temperature Sensor.>	<p>Repair ground short circuit in harness between engine coolant temperature sensor and ECM connector.</p>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


P: DTC P0118 — ENGINE COOLANT TEMPERATURE CIRCUIT HIGH INPUT —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
 - Hard to start
 - Erroneous idling
 - Poor driving performance

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

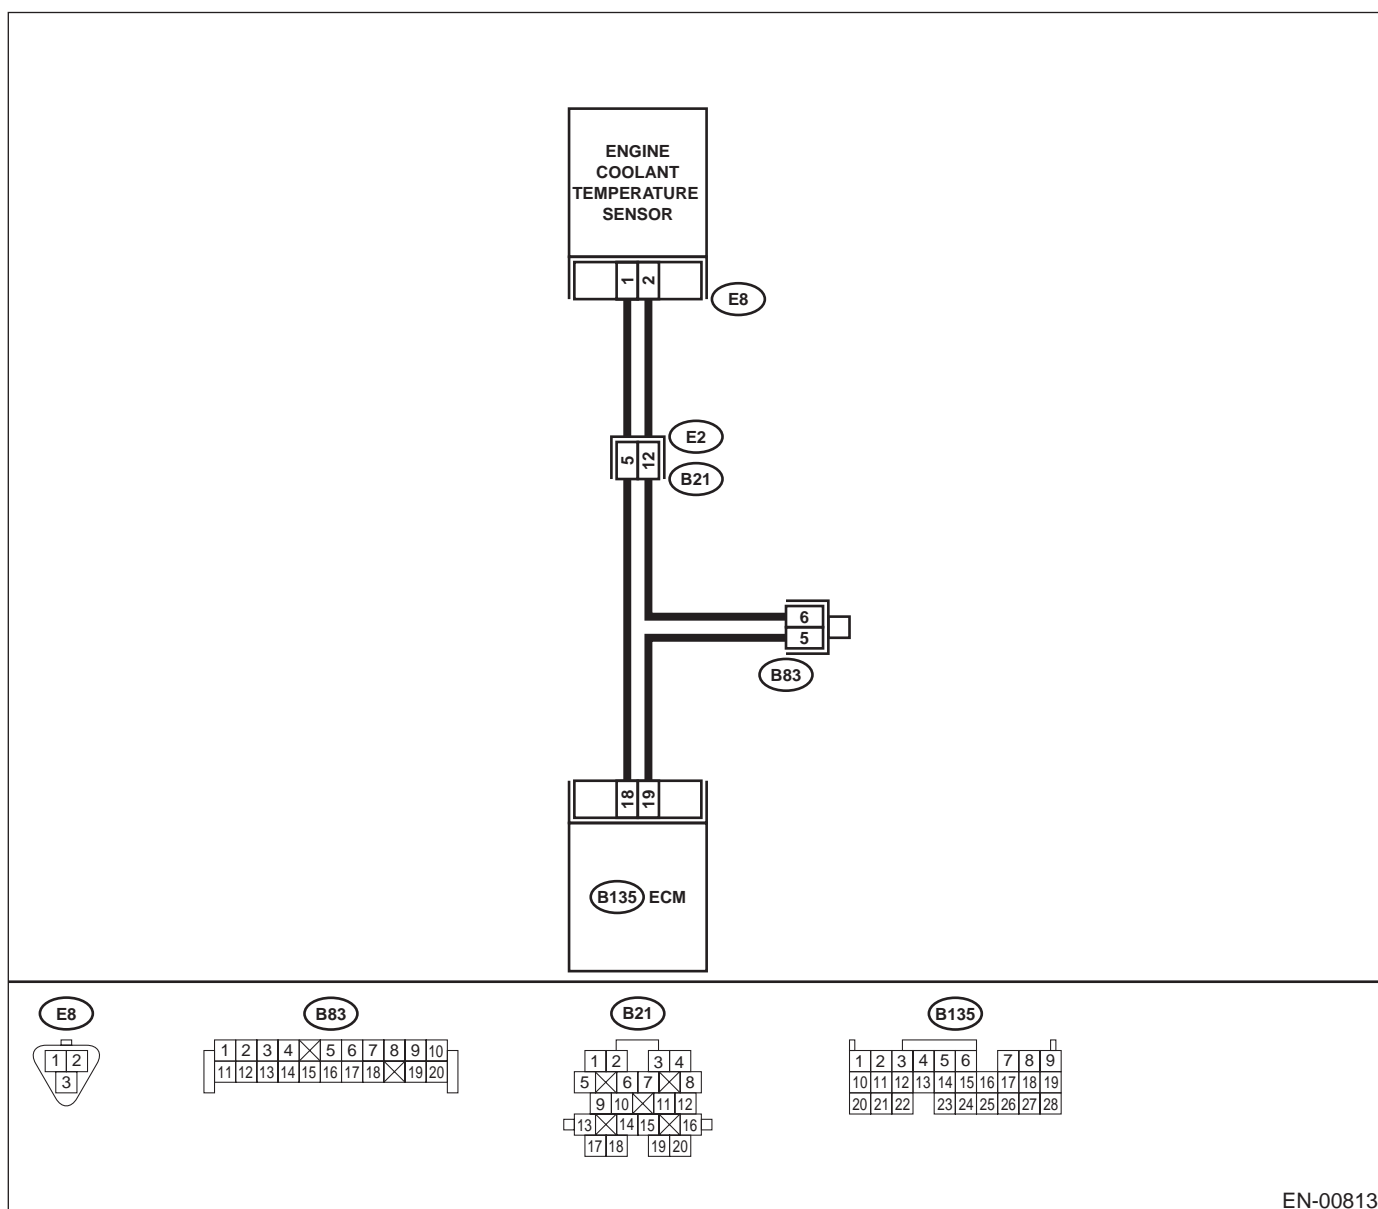

EN-00813

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1 CHECK CURRENT DATA. 1) Start engine. 2) Read data of engine coolant temperature sensor signal using Subaru Select Monitor or OBD-II general scan tool. Is the measured value less than the specified value? NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.> • OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.</p>	<p align="center">-40°C (-40°F)</p>	<p>Go to step 2.</p>	<p>Repair poor contact. NOTE: In this case, repair the following: • Poor contact in engine coolant temperature sensor • Poor contact in ECM • Poor contact in coupling connector • Poor contact in joint connector</p>
<p>2 CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND ECM CONNECTOR. 1) Turn ignition switch to OFF. 2) Disconnect connector from engine coolant temperature sensor. 3) Measure voltage between engine coolant temperature sensor connector and engine ground. Connector & terminal (E8) No. 1 (+) — Engine ground (-): Does the measured value exceed the specified value?</p>	<p align="center">10 V</p>	<p>Repair battery short circuit in harness between ECM and engine coolant temperature sensor connector.</p>	<p>Go to step 3.</p>
<p>3 CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND ECM CONNECTOR. 1) Turn ignition switch to ON. 2) Measure voltage between engine coolant temperature sensor connector and engine ground. Connector & terminal (E8) No. 1 (+) — Engine ground (-): Does the measured value exceed the specified value?</p>	<p align="center">10 V</p>	<p>Repair battery short circuit in harness between ECM and engine coolant temperature sensor connector.</p>	<p>Go to step 4.</p>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>4</p> <p>CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND ECM CONNECTOR. Measure voltage between engine coolant temperature sensor connector and engine ground. Connector & terminal (E8) No. 1 (+) — Engine ground (-): Does the measured value exceed the specified value?</p>	4 V	Go to step 5.	Repair harness and connector. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Open circuit in harness between ECM and engine coolant temperature sensor connector • Poor contact in engine coolant temperature sensor connector • Poor contact in ECM connector • Poor contact in coupling connector • Poor contact in joint connector
<p>5</p> <p>CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND ECM CONNECTOR. 1) Turn ignition switch to OFF. 2) Measure resistance of harness between engine coolant temperature sensor connector and engine ground. Connector & terminal (E8) No. 2 — Engine ground: Is the measured value less than the specified value?</p>	5 Ω	Replace engine coolant temperature sensor. <Ref. to FU(H6DO)-29, Engine Coolant Temperature Sensor.>	Repair harness and connector. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Open circuit in harness between ECM and engine coolant temperature sensor connector • Poor contact in engine coolant temperature sensor connector • Poor contact in ECM connector • Poor contact in coupling connector • Poor contact in joint connector

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

MEMO:

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Q: DTC P0121 — THROTTLE/PEDAL POSITION SENSOR/SWITCH “A” CIRCUIT RANGE/PERFORMANCE —

• DTC DETECTING CONDITION:

- Two consecutive driving cycles with fault


• TROUBLE SYMPTOM:

- Erroneous idling
- Engine stalls.
- Poor driving performance

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• WIRING DIAGRAM:

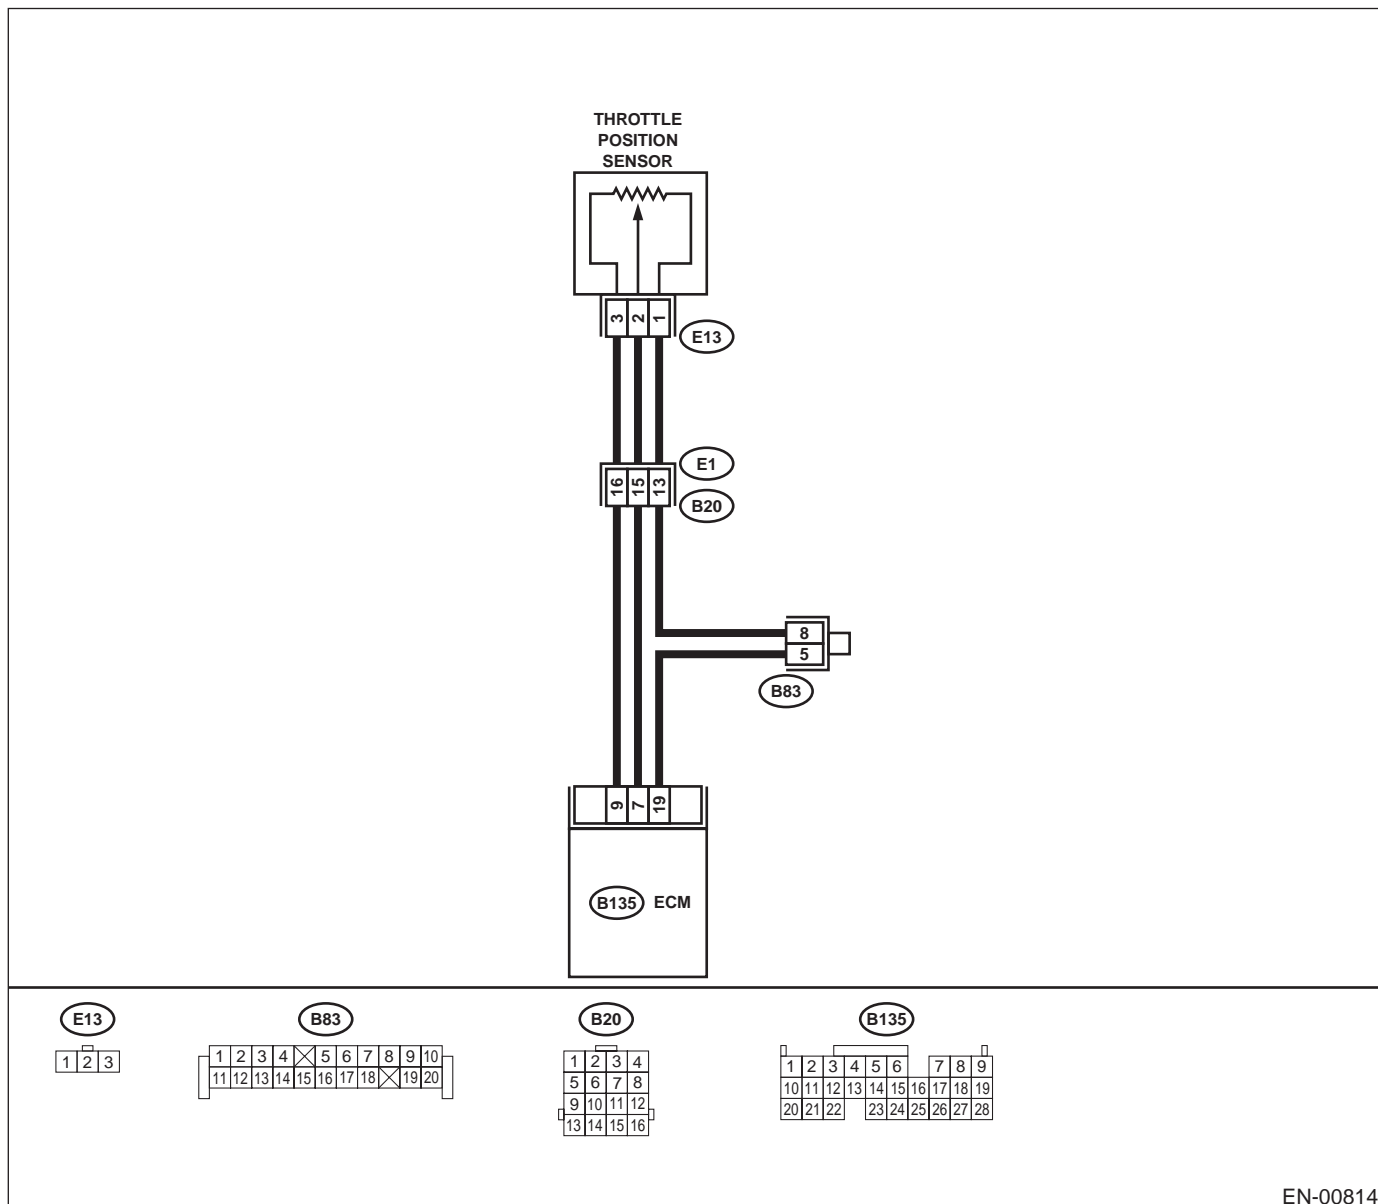

EN-00814

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0121.	Replace throttle position sensor. <Ref. to FU(H6DO)-33, Throttle Position Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)


R: DTC P0122 — THROTTLE/PEDAL POSITION SENSOR/SWITCH “A” CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
 - Erroneous idling
 - Engine stalls.
 - Poor driving performance

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

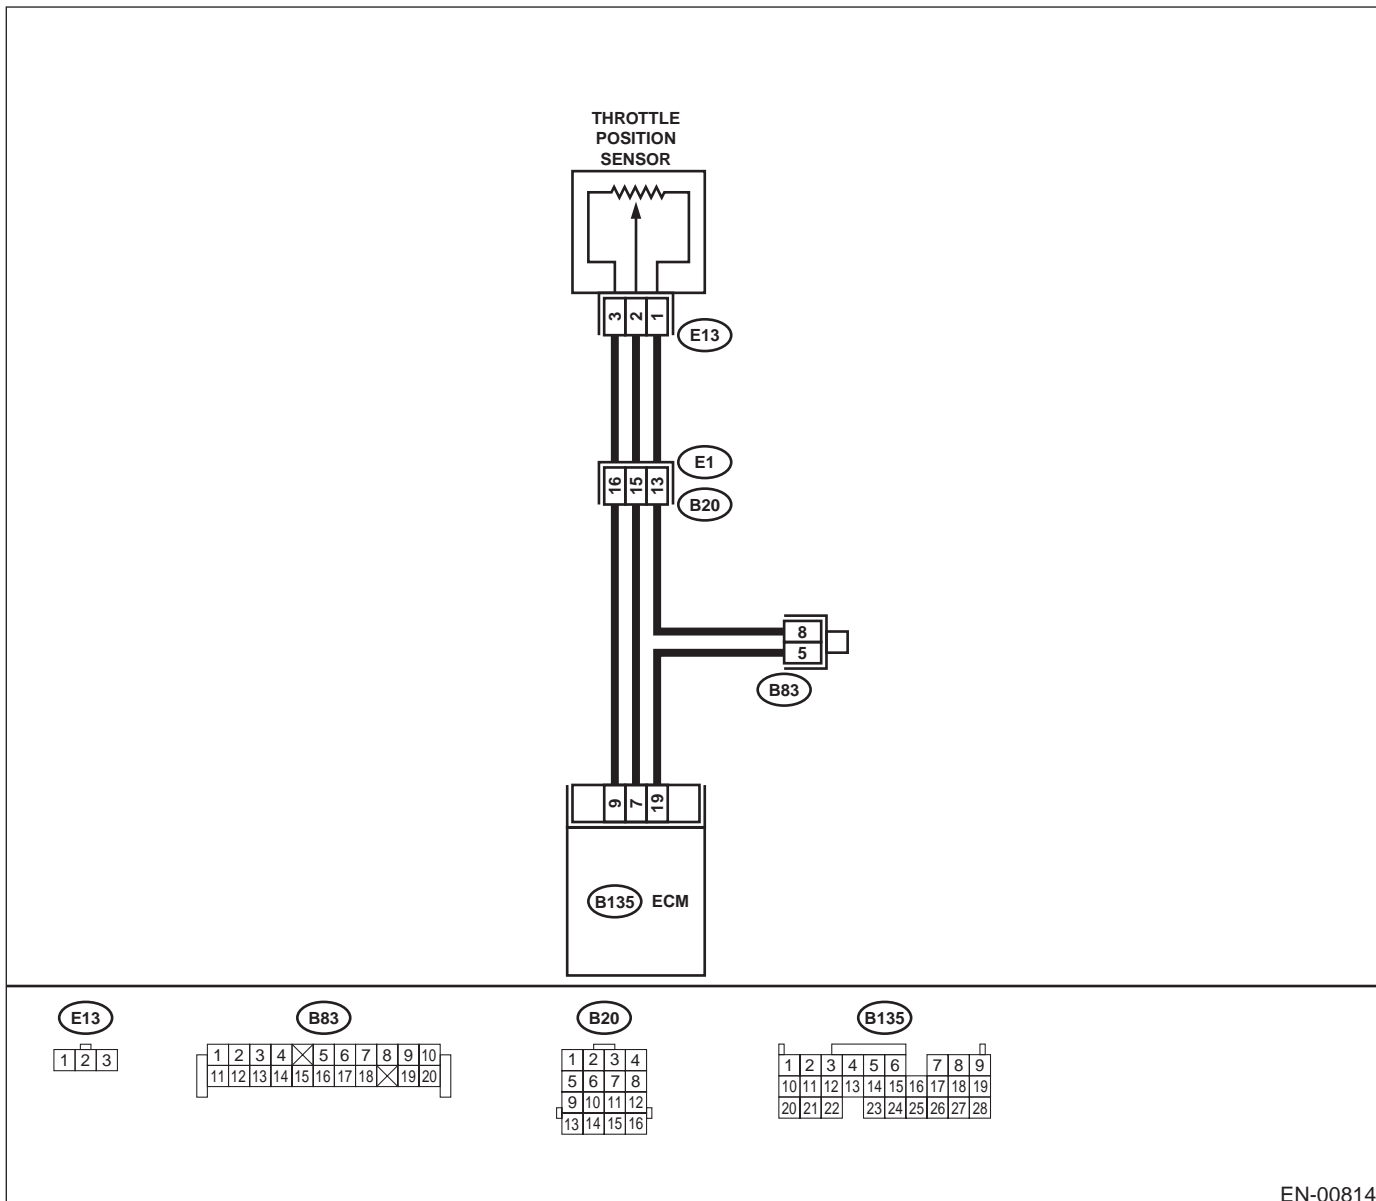

EN-00814

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1 CHECK CURRENT DATA. 1) Start engine. 2) Read data of throttle position sensor signal using Subaru Select Monitor or OBD-II general scan tool. Is the measured value less than the specified value? NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.> • OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.</p>	0.1 V	Go to step 2.	Even if MIL lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector may be the cause. NOTE: In this case, repair the following: • Poor contact in throttle position sensor connector • Poor contact in ECM connector • Poor contact in coupling connector
<p>2 CHECK INPUT SIGNAL FOR ECM. Measure voltage between ECM connector and chassis ground while throttle valve is fully closed. Connector & terminal (B135) No. 7 (+) — Chassis ground (-): Does the measured value exceed the specified value?</p>	4.5 V	Go to step 4.	Go to step 3.
<p>3 CHECK INPUT SIGNAL FOR ECM. Measure voltage between ECM connector and chassis ground. Connector & terminal (B135) No. 7 (+) — Chassis ground (-): Does the voltage change more than the specified value by shaking harness and connector of ECM while monitoring the value with voltage meter?</p>	4.5 V	Repair poor contact in ECM connector.	Contact with SOA (distributor) service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.
<p>4 CHECK INPUT SIGNAL FOR ECM. Measure voltage between ECM connector and chassis ground. Connector & terminal (B135) No. 9 (+) — Chassis ground (-): Is the measured value less than the specified value?</p>	0.1 V	Go to step 6.	Go to step 5.
<p>5 CHECK INPUT SIGNAL FOR ECM. (USING SUBARU SELECT MONITOR.) Measure voltage between ECM connector and chassis ground. Does the voltage change more than the specified value by shaking harness and connector of ECM while monitoring the value with Subaru Select Monitor?</p>	0.1 V	Repair poor contact in ECM connector.	Go to step 6.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>6 CHECK HARNESS BETWEEN ECM AND THROTTLE POSITION SENSOR CONNECTOR.</p> <p>1) Turn ignition switch to OFF. 2) Disconnect connectors from throttle position sensor. 3) Turn ignition switch to ON. 4) Measure voltage between throttle position sensor connector and engine ground.</p> <p>Connector & terminal (E13) No. 1 (+) — Engine ground (-): Does the measured value exceed the specified value?</p>	4.5 V	Go to step 7.	Repair harness and connector. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Open circuit in harness between throttle position sensor and ECM connector • Poor contact in throttle position sensor connector • Poor contact in ECM connector • Poor contact in coupling connector • Poor contact in joint connector
<p>7 CHECK HARNESS BETWEEN ECM AND THROTTLE POSITION SENSOR CONNECTOR.</p> <p>1) Turn ignition switch to OFF. 2) Measure resistance of harness between ECM connector and throttle position sensor connector.</p> <p>Connector & terminal (B135) No. 9 — (E13) No. 3: Is the measured value less than the specified value?</p>	1 Ω	Go to step 8.	Repair harness and connector. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Open circuit in harness between throttle position sensor and ECM connector • Poor contact in ECM connector • Poor contact in throttle position sensor connector • Poor contact in coupling connector
<p>8 CHECK HARNESS BETWEEN ECM AND THROTTLE POSITION SENSOR CONNECTOR.</p> <p>Measure resistance of harness between throttle position sensor connector and engine ground.</p> <p>Connector & terminal (E13) No. 3 — Engine ground: Is the measured value less than the specified value?</p>	10 Ω	Repair ground short circuit in harness between throttle position sensor and ECM connector.	Go to step 9.
<p>9 CHECK POOR CONTACT.</p> <p>Check poor contact in throttle position sensor connector. Is there poor contact in throttle position sensor connector?</p>	There is poor contact.	Repair poor contact in throttle position sensor connector.	Replace throttle position sensor. <Ref. to FU(H6DO)-33, Throttle Position Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

MEMO:

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


S: DTC P0123 — THROTTLE/PEDAL POSITION SENSOR/SWITCH “A” CIRCUIT HIGH INPUT —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
 - Erroneous idling
 - Engine stalls.
 - Poor driving performance

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

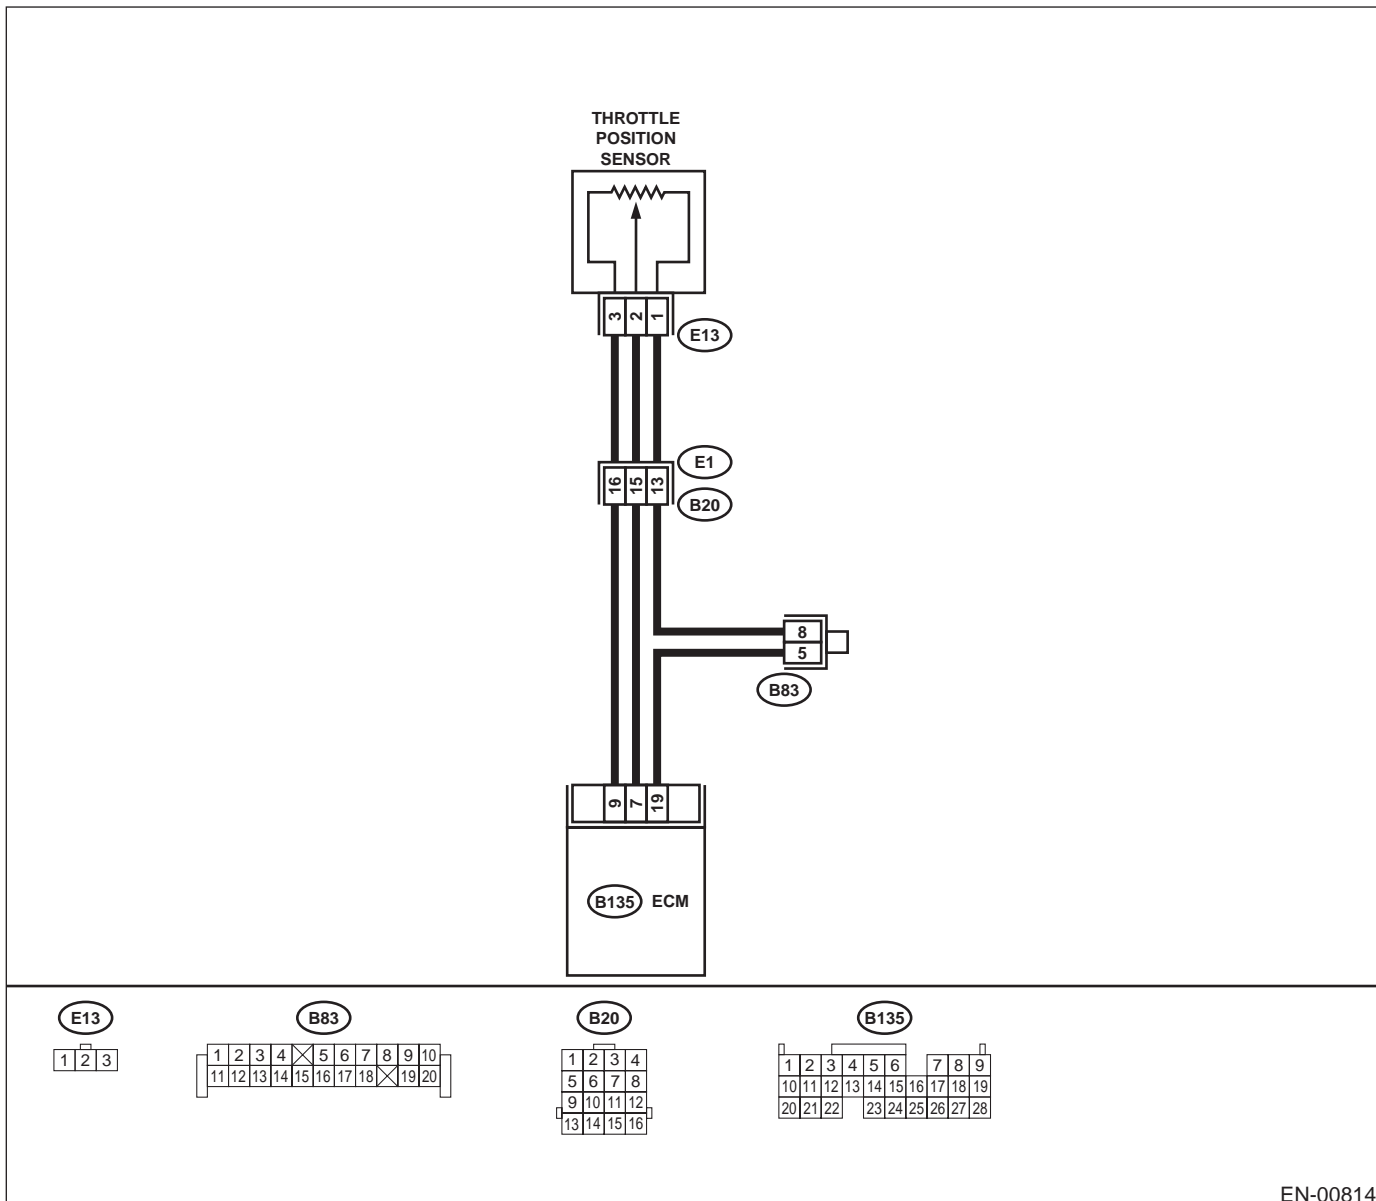

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1 CHECK CURRENT DATA.</p> <p>1) Start engine. 2) Read data of throttle position sensor signal using Subaru Select Monitor or OBD-II general scan tool. Does the measured value exceed the specified value?</p> <p>NOTE:</p> <ul style="list-style-type: none"> • Subaru Select Monitor <p>For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.></p> <ul style="list-style-type: none"> • OBD-II general scan tool <p>For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.</p>	4.75 V	Go to step 2.	<p>Even if MIL lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector may be the cause.</p> <p>NOTE:</p> <p>In this case, repair the following:</p> <ul style="list-style-type: none"> • Poor contact in throttle position sensor connector • Poor contact in ECM connector • Poor contact in coupling connector
<p>2 CHECK HARNESS BETWEEN THROTTLE POSITION SENSOR AND ECM CONNECTOR.</p> <p>1) Turn ignition switch to OFF. 2) Disconnect connector from throttle position sensor. 3) Measure resistance of harness between throttle position sensor connector and engine ground.</p> <p>Connector & terminal (E13) No. 2 — Engine ground:</p> <p>Is the measured value less than the specified value?</p>	5 Ω	Go to step 3.	<p>Repair harness and connector.</p> <p>NOTE:</p> <p>In this case, repair the following:</p> <ul style="list-style-type: none"> • Open circuit in harness between throttle position sensor and ECM connector • Poor contact in coupling connector • Poor contact in joint connector
<p>3 CHECK HARNESS BETWEEN THROTTLE POSITION SENSOR AND ECM CONNECTOR.</p> <p>1) Turn ignition switch to ON. 2) Measure voltage between throttle position sensor connector and engine ground.</p> <p>Connector & terminal (E13) No. 3 (+) — Engine ground (-):</p> <p>Does the measured value exceed the specified value?</p>	4.9 V	Repair battery short circuit in harness between throttle position sensor and ECM connector. After repair, replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>	<p>Replace throttle position sensor. <Ref. to FU(H6DO)-33, Throttle Position Sensor.></p>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


T: DTC P0125 — INSUFFICIENT COOLANT TEMPERATURE FOR CLOSED LOOP FUEL CONTROL —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Engine does not return to idle.

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

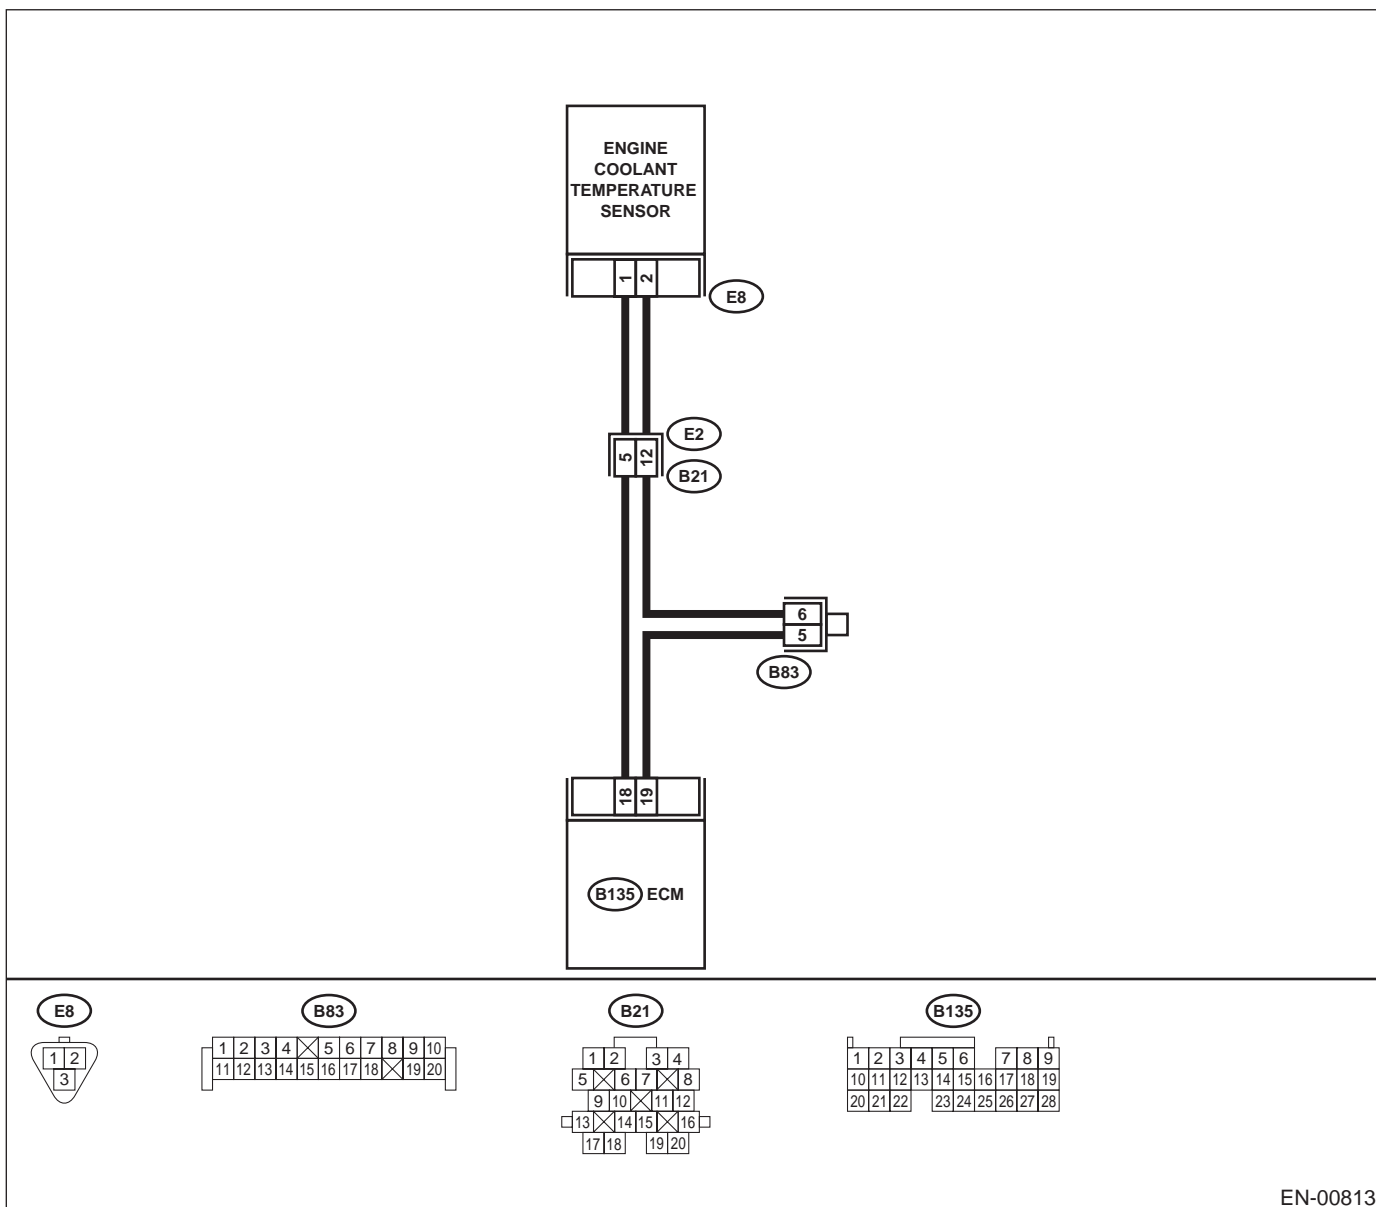

EN-00813

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0125.	Go to step 2.
2 CHECK TIRE SIZE. Is the tire size the same as designated tire and four-wheel tire?	Same.	Go to step 3.	Replace tire.
3 CHECK ENGINE COOLANT. Check the following items. <ul style="list-style-type: none"> • Engine coolant volume • Engine coolant freezing • Contamination in engine coolant Is the engine coolant normal?	Normal.	Go to step 4.	Refill or replace coolant. <Ref. to CO(H6DO)-23, INSPECTION, Engine Coolant.>
4 CHECK THERMOSTAT. Does thermostat remain open?	Remains open.	Replace thermostat. <Ref. to CO(H6DO)-25, Thermostat.>	Replace engine coolant temperature sensor. <Ref. to FU(H6DO)-29, Engine Coolant Temperature Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

U: DTC P0128 — COOLANT THERMOSTAT (COOLANT TEMPERATURE BELOW THERMOSTAT REGULATING TEMPERATURE) —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Thermostat remains open.

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

Step	Value	Yes	No
1 CHECK VEHICLE CONDITION. Has engine operated or has vehicle been driven with engine submerged under water?	Engine has operated or vehicle has been driven with engine submerged under water.	In this case, it is not necessary to inspect DTC P0128.	Go to step 2.
2 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	DTC indicated.	Go to step 3.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).>
3 CHECK TIRE SIZE. Is the tire size the same as designated tire and four wheel tire?	Same.	Go to step 4.	Replace tire.
4 CHECK ENGINE COOLANT. Check the following items: <ul style="list-style-type: none"> • Engine coolant for level • Engine coolant for icing • Engine coolant for dirt Is condition of engine coolant OK?	OK.	Go to step 5.	Replace engine coolant. <Ref. to CO(H6DO)-22, REPLACEMENT, Engine Coolant.>
5 CHECK RADIATOR FAN. 1) Start the engine. 2) Check radiator fan operation. Does radiator fan continuously rotate for more than 3 minutes during idling?	Continuously rotates.	Repair radiator fan circuit. <Ref. to CO(H6DO)-32, Radiator Main Fan and Fan Motor.> and <Ref. to CO(H6DO)-35, Radiator Sub Fan and Fan Motor.>	Replace thermostat. <Ref. to CO(H6DO)-25, Thermostat.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

V: DTC P0129 — BAROMETRIC PRESSURE TOO LOW —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

	Step	Value	Yes	No
1	CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).>	Replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.> NOTE: Atmospheric pressure sensor is built into ECM.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


W: DTC P0130 — O2 SENSOR CIRCUIT (BANK 1 SENSOR 1) —

- DTC DETECTING CONDITION:
 - Immediately at fault recognition

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>

• WIRING DIAGRAM:

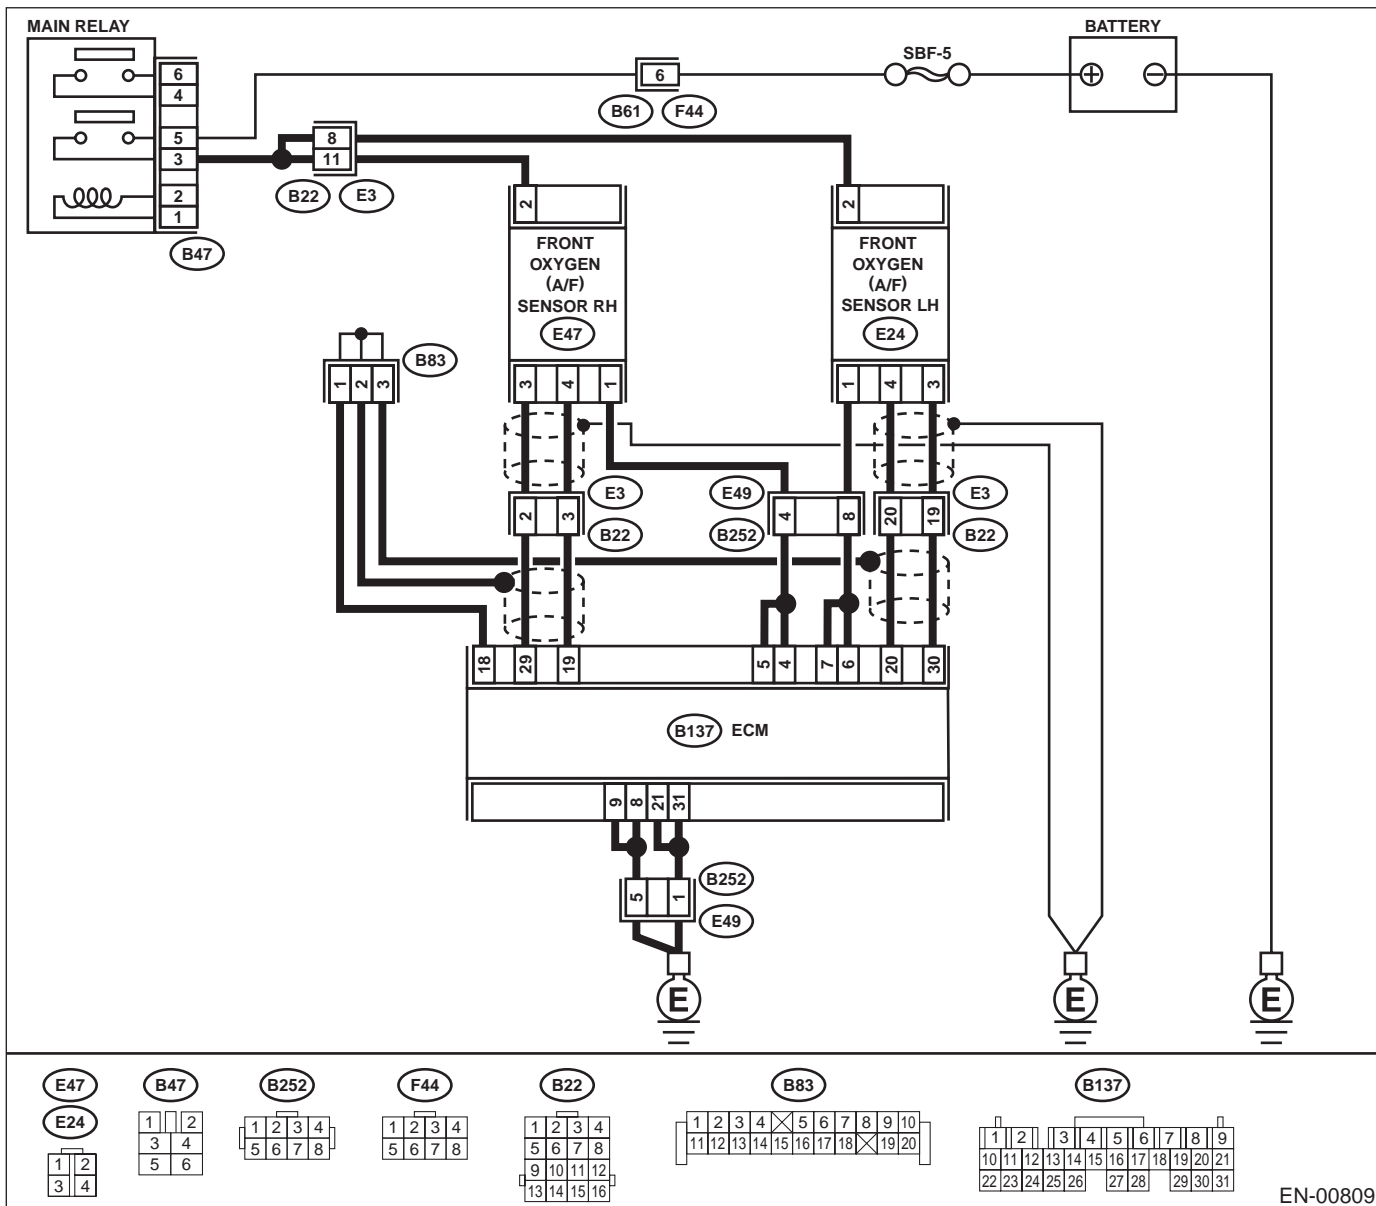

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR. 1) Turn ignition switch to OFF. 2) Disconnect connector from ECM. 3) Measure resistance of harness between ECM connector and chassis ground. Connector & terminal (B137) No. 19 — Chassis ground: Does the measured value exceed the specified value?	10 Ω	Go to step 2.	Repair ground short circuit in harness between ECM and front oxygen (A/F) sensor connector.
2 CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR. Measure resistance of harness between ECM connector and chassis ground. Connector & terminal (B137) No. 29 — Chassis ground: Does the measured value exceed the specified value?	10 Ω	Go to step 3.	Repair ground short circuit in harness between ECM and front oxygen (A/F) sensor connector.
3 CHECK OUTPUT SIGNAL FOR ECM. 1) Connect connector to ECM. 2) Turn ignition switch to ON. 3) Measure voltage between ECM connector and chassis ground. Connector & terminal (B137) No. 19 (+) — Chassis ground (-): Does the measured value exceed the specified value?	4.5 V	Go to step 4.	Go to step 5.
4 CHECK OUTPUT SIGNAL FOR ECM. Measure voltage between ECM connector and chassis ground. Connector & terminal (B137) No. 19 (+) — Chassis ground (-): Does the measured value exceed the specified value?	10 V	Repair battery short circuit in harness between ECM and front oxygen (A/F) sensor connector. After repair, replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>	Repair poor contact in ECM connector.
5 CHECK OUTPUT SIGNAL FOR ECM. Measure voltage between ECM connector and chassis ground. Connector & terminal (B137) No. 29 (+) — Chassis ground (-): Does the measured value exceed the specified value?	4.95 V	Go to step 6.	Replace front oxygen (A/F) sensor. <Ref. to FU(H6DO)-43, Front Oxygen (A/F) Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
6 CHECK OUTPUT SIGNAL FOR ECM. Measure voltage between ECM connector and chassis ground. <i>Connector & terminal</i> <i>(B137) No. 29 (+) — Chassis ground (-):</i> Does the measured value exceed the specified value?	10 V	Repair battery short circuit in harness between ECM and front oxygen (A/F) sensor connector. After repair, replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>	Repair poor contact in ECM connector.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

MEMO:

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

X: DTC P0133 — O2 SENSOR CIRCUIT SLOW RESPONSE (BANK 1 SENSOR 1)


DTC DETECTING CONDITION:

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

WIRING DIAGRAM:

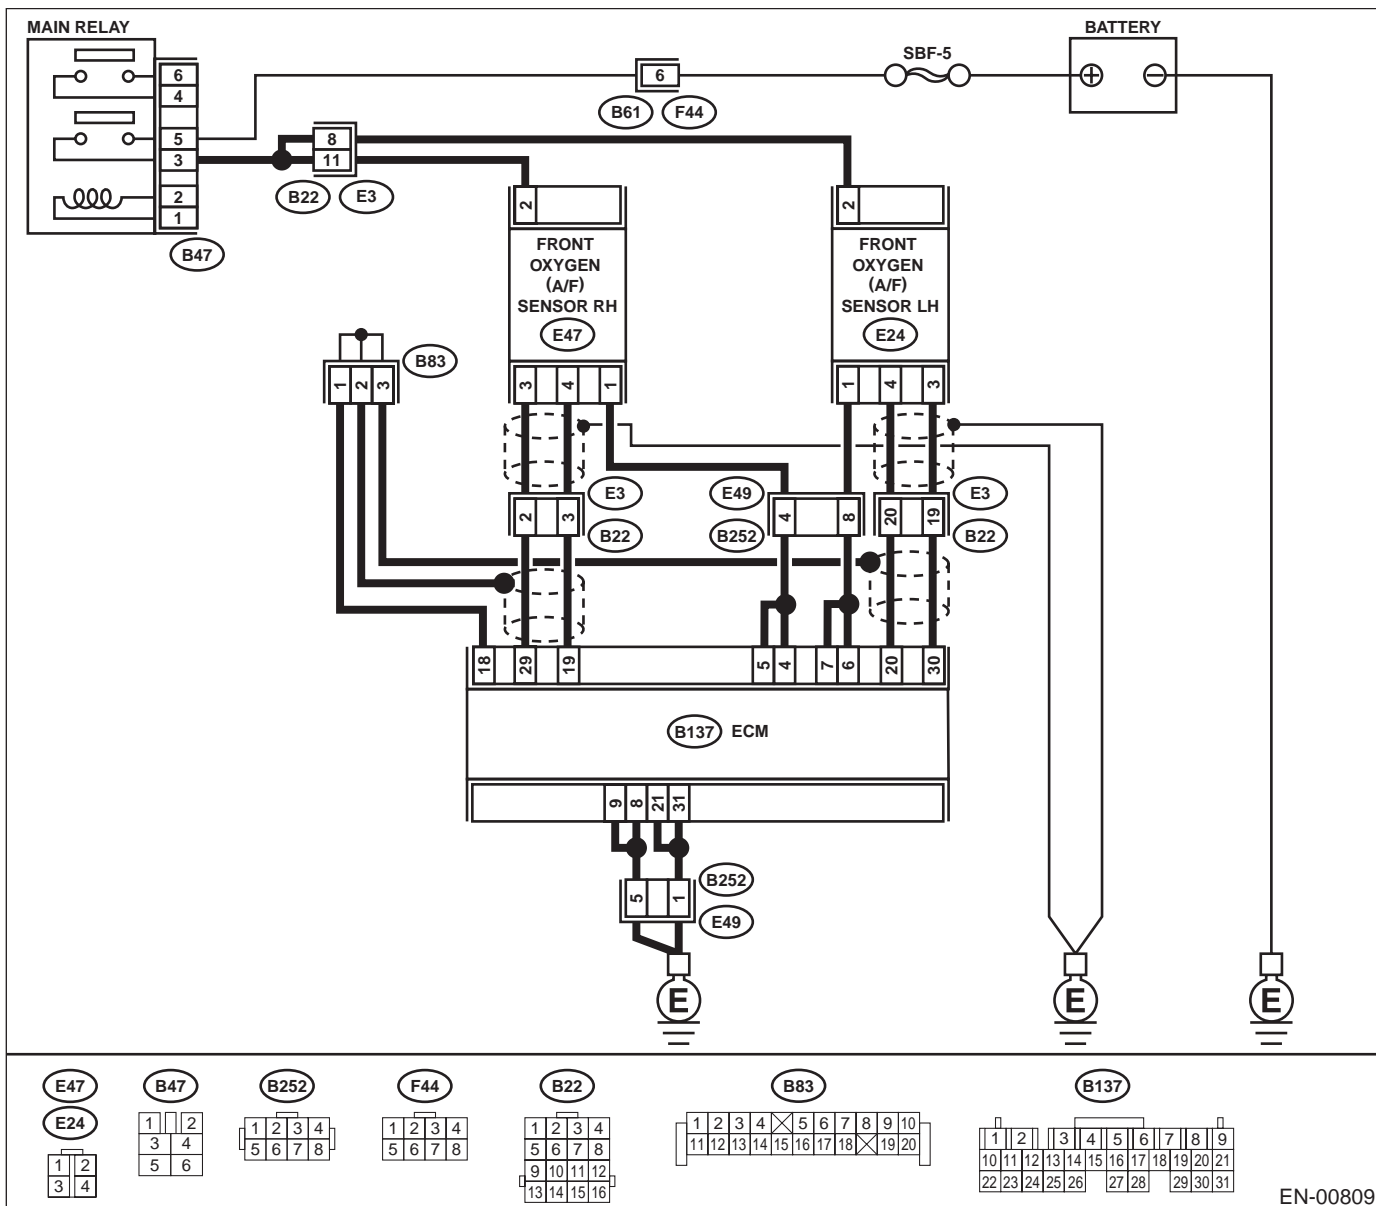

EN-00809

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0133.	Go to step 2.
2 CHECK EXHAUST SYSTEM. NOTE: Check the following items. <ul style="list-style-type: none"> • Loose installation of front portion of exhaust pipe onto cylinder heads • Loose connection between front exhaust pipe and front catalytic converter (RH side) • Damage of exhaust pipe resulting in a hole Is there a fault in exhaust system?	There is a malfunction.	Repair exhaust system.	Replace front oxygen (A/F) sensor. <Ref. to FU(H6DO)-43, Front Oxygen (A/F) Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)


Y: DTC P0134 — O2 SENSOR CIRCUIT NO ACTIVITY DETECTED (BANK 1 SENSOR 1) —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

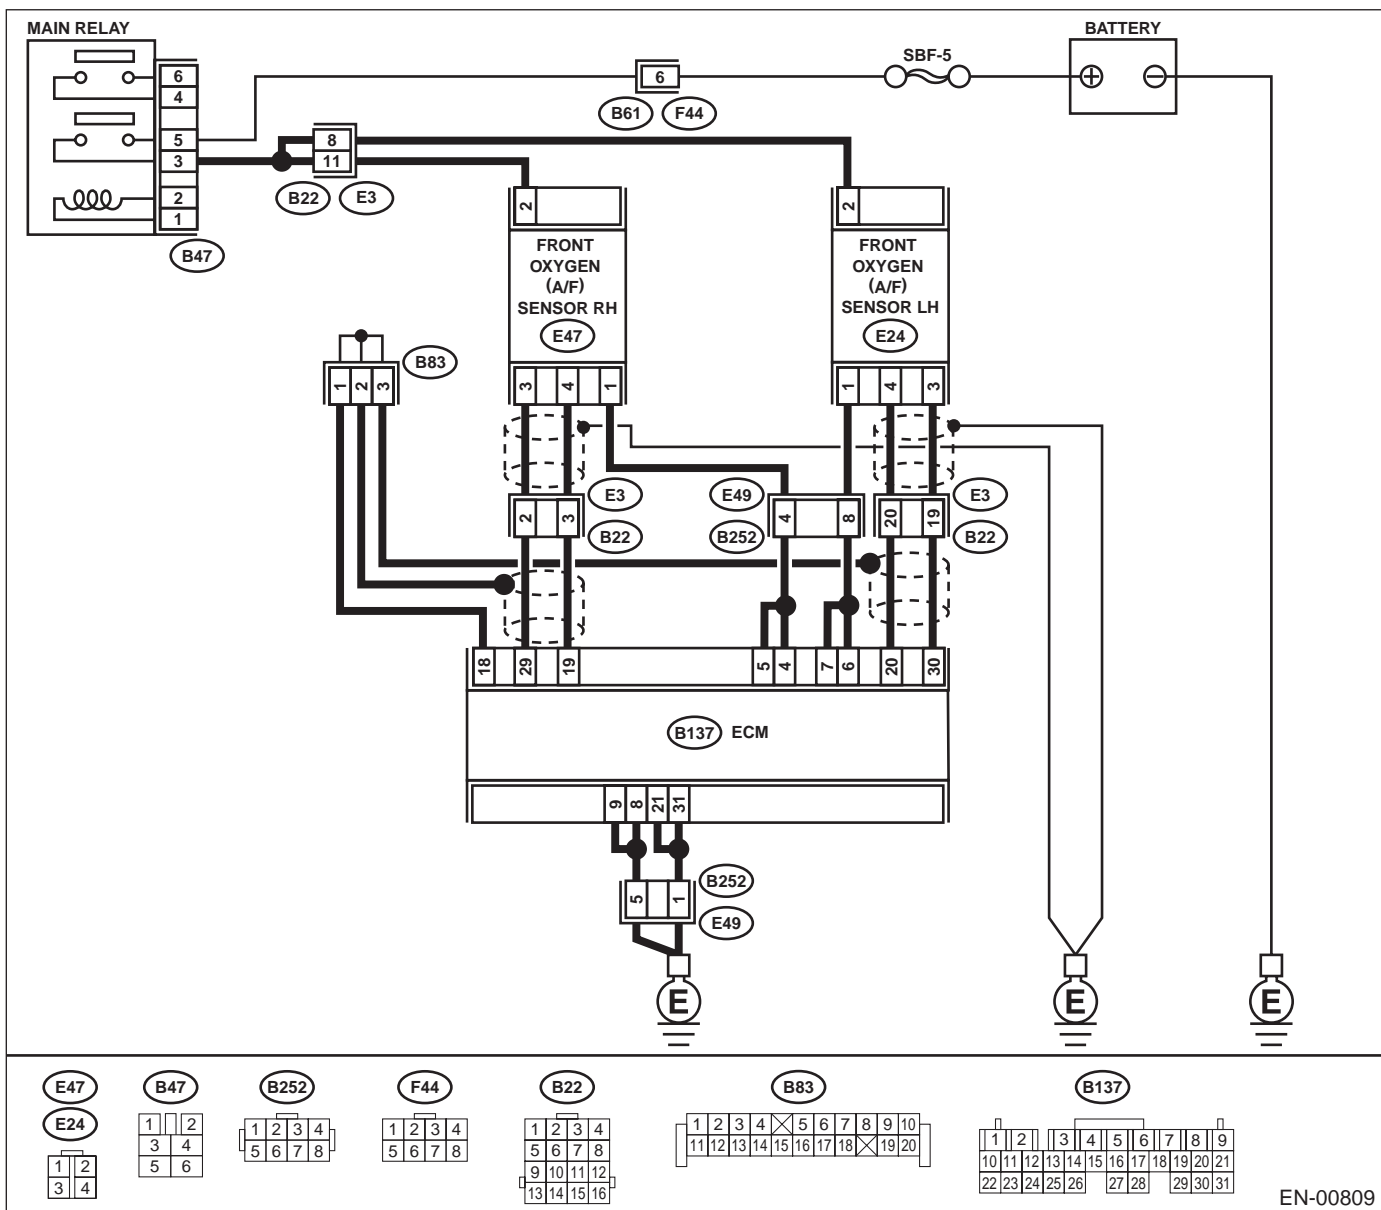

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1</p> <p>CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.</p> <p>1) Turn ignition switch to OFF. 2) Disconnect connectors from ECM and front oxygen (A/F) sensor connector. 3) Measure resistance of harness between ECM and front oxygen (A/F) sensor connector.</p> <p>Connector & terminal (B137) No. 19 — (E47) No. 4:</p> <p>Is the measured value less than the specified value?</p>	1 Ω	Go to step 2.	Repair harness and connector. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Open circuit in harness between ECM and front oxygen (A/F) sensor connector • Poor contact in front oxygen (A/F) sensor connector • Poor contact in ECM connector
<p>2</p> <p>CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.</p> <p>Measure resistance of harness between ECM and front oxygen (A/F) sensor connector.</p> <p>Connector & terminal (B137) No. 29 — (E47) No. 3:</p> <p>Is the measured value less than the specified value?</p>	1 Ω	Go to step 3.	Repair harness and connector. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Open circuit in harness between ECM and front oxygen (A/F) sensor connector • Poor contact in front oxygen (A/F) sensor connector • Poor contact in ECM connector
<p>3</p> <p>CHECK POOR CONTACT.</p> <p>Check poor contact in front oxygen (A/F) sensor connector. Is there poor contact in front oxygen (A/F) sensor connector?</p>	There is poor contact.	Repair poor contact in front oxygen (A/F) sensor connector.	Replace front oxygen (A/F) sensor. <Ref. to FU(H6DO)-43, Front Oxygen (A/F) Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Z: DTC P0137 — O2 SENSOR CIRCUIT LOW VOLTAGE (BANK 1 SENSOR 2) —

NOTE:

For diagnostic procedure, refer to DTC P0138.

<Ref. to EN(H6DO)-166, DTC P0138 — O2 SENSOR CIRCUIT HIGH VOLTAGE (BANK 1 SENSOR 2) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

AA: DTC P0138 — O2 SENSOR CIRCUIT HIGH VOLTAGE (BANK 1 SENSOR 2) —


DTC DETECTING CONDITION:

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>

WIRING DIAGRAM:

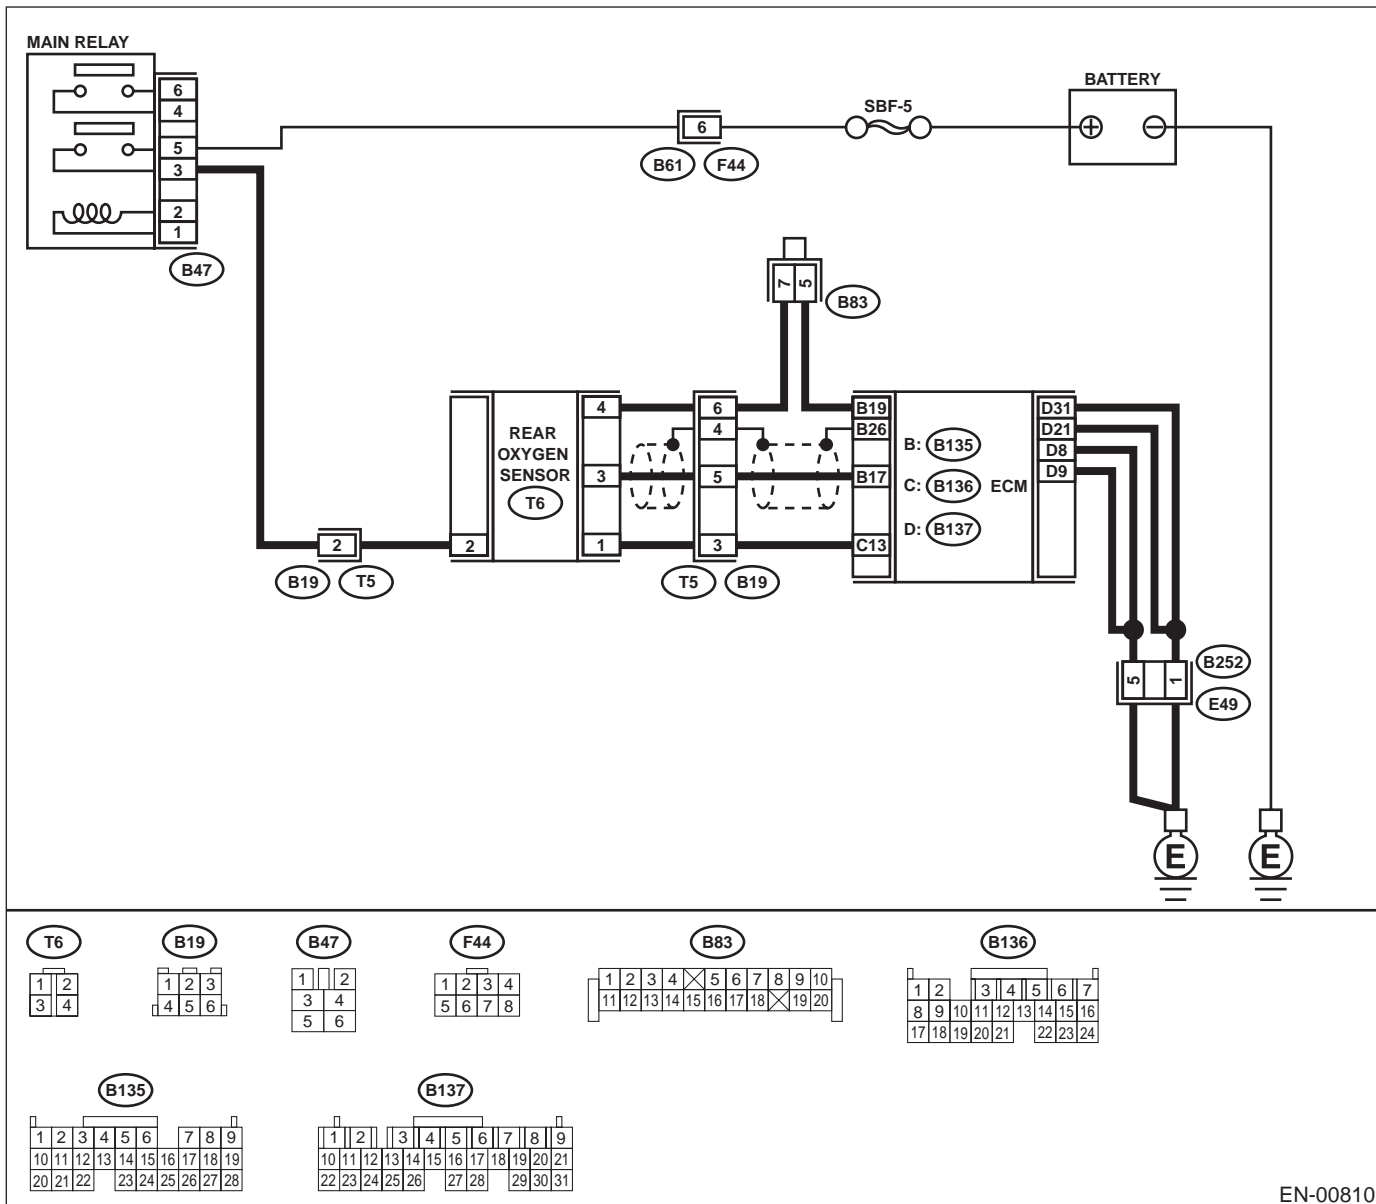

EN-00810

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC is displayed?	Another DTC is displayed.	Check the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).>	Go to step 2.
2 CHECK REAR OXYGEN SENSOR DATA. 1) Warm-up the engine until engine coolant temperature is above 70°C (158°F), and keep the engine speed at 2,000 rpm to 3,000 rpm for two minutes. 2) Read data of rear oxygen sensor signal using Subaru Select Monitor or OBD-II general scan tool. Does the value fluctuate? NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.> • OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	Value fluctuates.	Go to step 6.	Go to step 3.
3 CHECK REAR OXYGEN SENSOR DATA. Read data of rear oxygen sensor signal using Subaru Select Monitor or OBD-II General Scan Tool. Is the measured value within the specified range?	Output maximum value 0.49 V or more and output minimum value 0.25 V or less.	Go to step 4.	Replace rear oxygen sensor. <Ref. to FU(H6DO)-45, Rear Oxygen Sensor.>
4 CHECK HARNESS BETWEEN ECM AND REAR OXYGEN SENSOR CONNECTOR. 1) Turn ignition switch to OFF. 2) Disconnect connectors from ECM and rear oxygen sensor. 3) Measure resistance of harness between ECM and rear oxygen sensor connector. Connector & terminal (B135) No. 19 — (T6) No. 4: Does the measured value exceed the specified value?	3 Ω	Repair open circuit in harness between ECM and rear oxygen sensor connector.	Go to step 5.
5 CHECK HARNESS BETWEEN REAR OXYGEN SENSOR AND ECM CONNECTOR. 1) Turn ignition switch to OFF. 2) Disconnect connector from rear oxygen sensor. 3) Turn ignition switch to ON. 4) Measure voltage between rear oxygen sensor harness connector and engine ground or chassis ground. Connector & terminal (T6) No. 3 (+) — Engine ground (-): Does the measured value exceed the specified value?	0.2 V	Replace rear oxygen sensor. <Ref. to FU(H6DO)-45, Rear Oxygen Sensor.>	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between rear oxygen sensor and ECM connector • Poor contact in rear oxygen sensor connector • Poor contact in ECM connector

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
6 CHECK EXHAUST SYSTEM. Check exhaust system parts. NOTE: Check the following items. <ul style="list-style-type: none">• Loose installation of portions• Damage (crack, hole etc.) of parts• Looseness and ill fitting of parts between front oxygen (A/F) sensor and rear oxygen sensor Is there a fault in exhaust system?	There is a trouble.	Repair or replace faulty parts.	Replace rear oxygen sensor. <Ref. to FU(H6DO)-45, Rear Oxygen Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

MEMO:

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

AB:DTC P0139 — O2 SENSOR CIRCUIT SLOW RESPONSE (BANK 1 SENSOR 2) —


• DTC DETECTING CONDITION:

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>

• WIRING DIAGRAM:

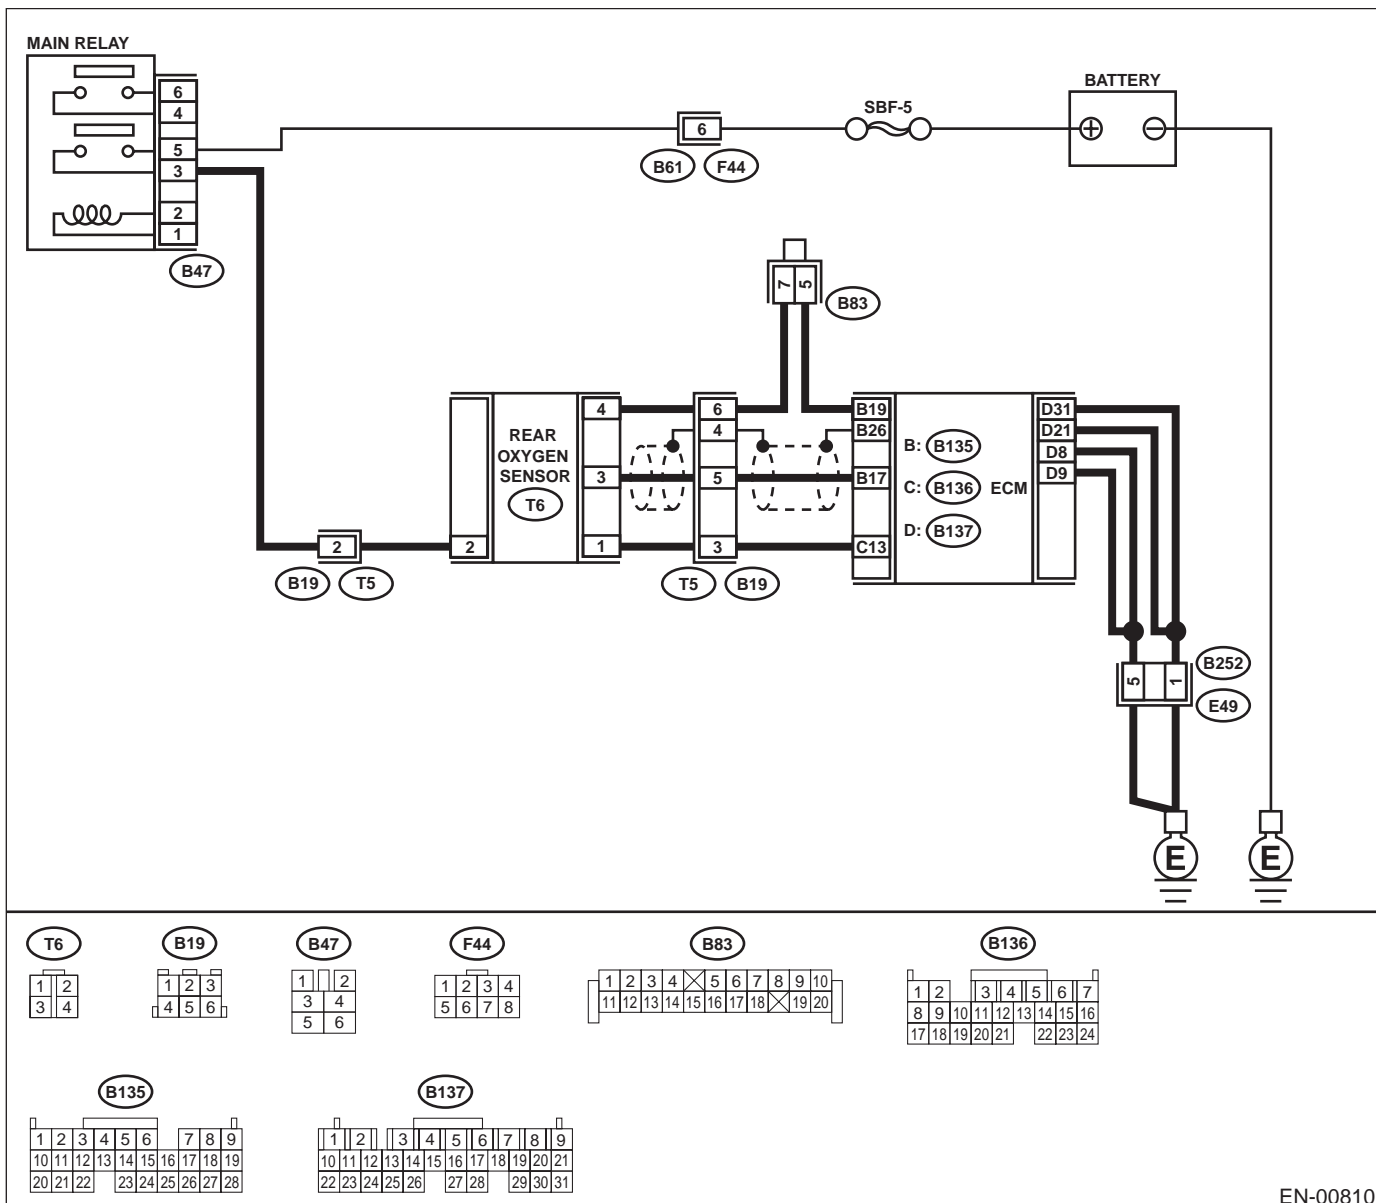

EN-00810

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0139.	Replace rear oxygen sensor. <Ref. to FU(H6DO)-45, Rear Oxygen Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


AC:DTC P0150 — O2 SENSOR CIRCUIT (BANK 2 SENSOR 1) —

- DTC DETECTING CONDITION:
 - Immediately at fault recognition

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• WIRING DIAGRAM:

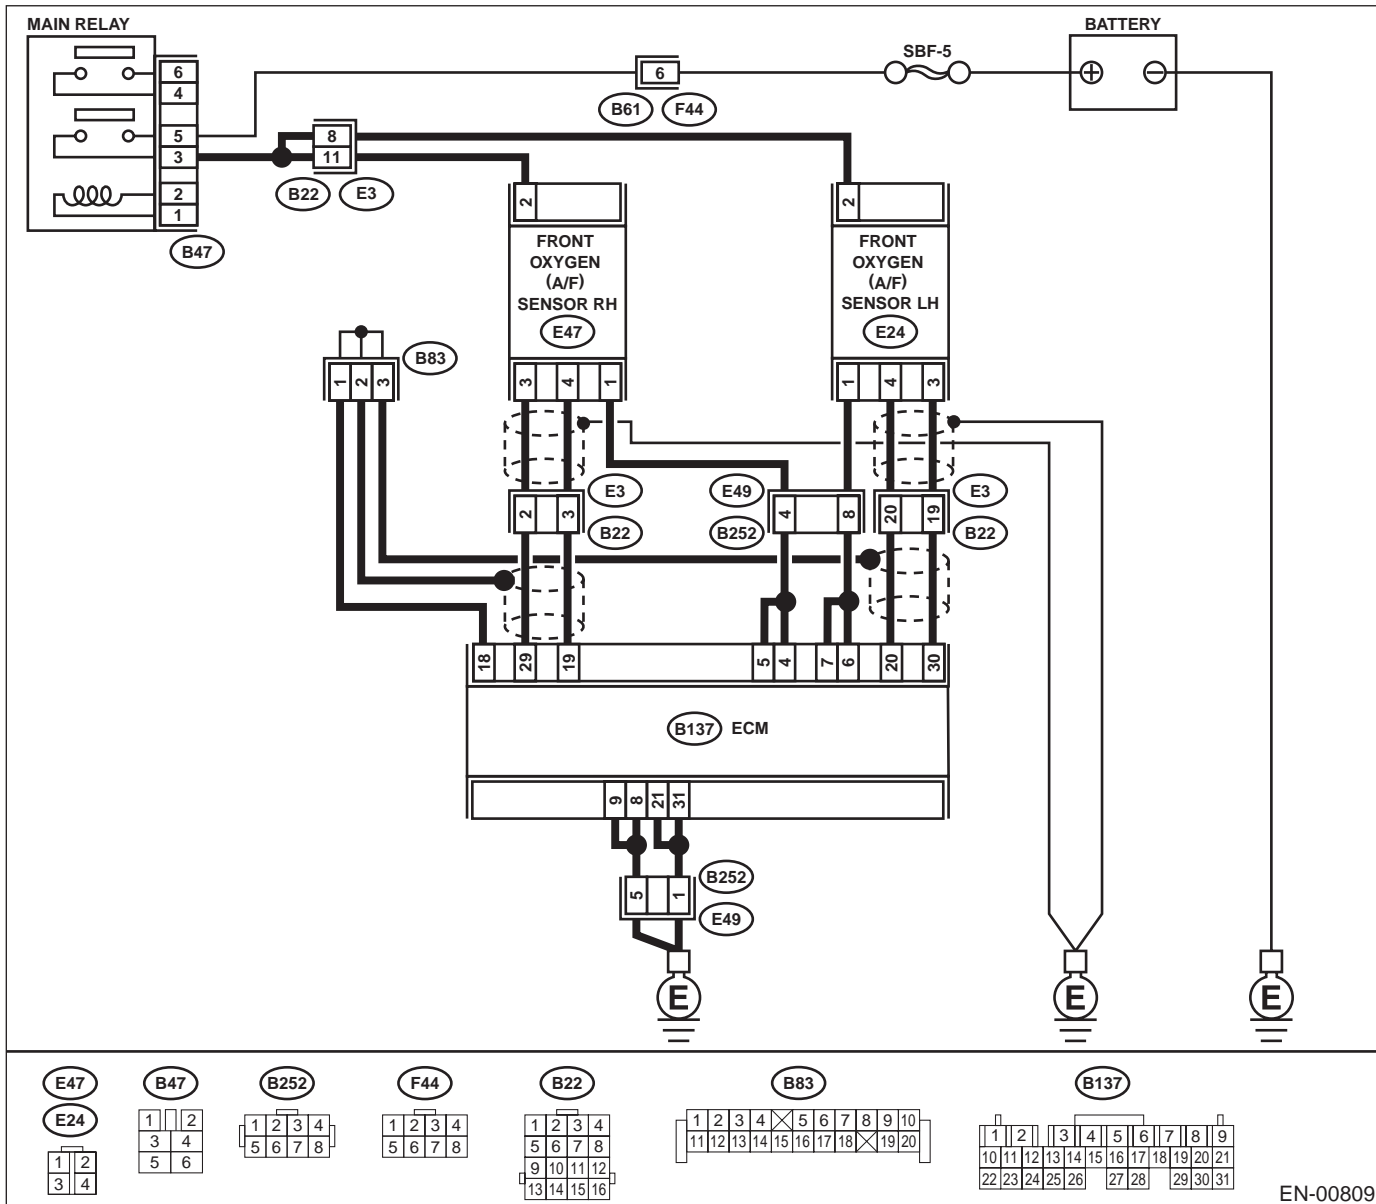

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR. 1) Turn ignition switch to OFF. 2) Disconnect connector from ECM. 3) Measure resistance of harness between ECM connector and chassis ground. Connector & terminal (B137) No. 20 — Chassis ground: Does the measured value exceed the specified value?	10 Ω	Go to step 2.	Repair ground short circuit in harness between ECM and front oxygen (A/F) sensor connector.
2 CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR. Measure resistance of harness between ECM connector and chassis ground. Connector & terminal (B137) No. 30 — Chassis ground: Does the measured value exceed the specified value?	10 Ω	Go to step 3.	Repair ground short circuit in harness between ECM and front oxygen (A/F) sensor connector.
3 CHECK OUTPUT SIGNAL FOR ECM. 1) Connect connector to ECM. 2) Turn ignition switch to ON. 3) Measure voltage between ECM connector and chassis ground. Connector & terminal (B137) No. 20 (+) — Chassis ground (-): Does the measured value exceed the specified value?	4.5 V	Go to step 4.	Go to step 5.
4 CHECK OUTPUT SIGNAL FOR ECM. Measure voltage between ECM connector and chassis ground. Connector & terminal (B137) No. 20 (+) — Chassis ground (-): Does the measured value exceed the specified value?	10 V	Repair battery short circuit in harness between ECM and front oxygen (A/F) sensor connector. After repair, replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>	Repair poor contact in ECM connector.
5 CHECK OUTPUT SIGNAL FOR ECM. Measure voltage between ECM connector and chassis ground. Connector & terminal (B137) No. 30 (+) — Chassis ground (-): Does the measured value exceed the specified value?	4.95 V	Go to step 6.	Replace front oxygen (A/F) sensor. <Ref. to FU(H6DO)-43, Front Oxygen (A/F) Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
6 CHECK OUTPUT SIGNAL FOR ECM. Measure voltage between ECM connector and chassis ground. <i>Connector & terminal</i> <i>(B137) No. 30 (+) — Chassis ground (-):</i> Does the measured value exceed the specified value?	10 V	Repair battery short circuit in harness between ECM and front oxygen (A/F) sensor connector. After repair, replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>	Repair poor contact in ECM connector.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

MEMO:

EN(H6DO)-175

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

AD:DTC P0153 — O2 SENSOR CIRCUIT SLOW RESPONSE (BANK 2 SENSOR 1) —


• **DTC DETECTING CONDITION:**

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

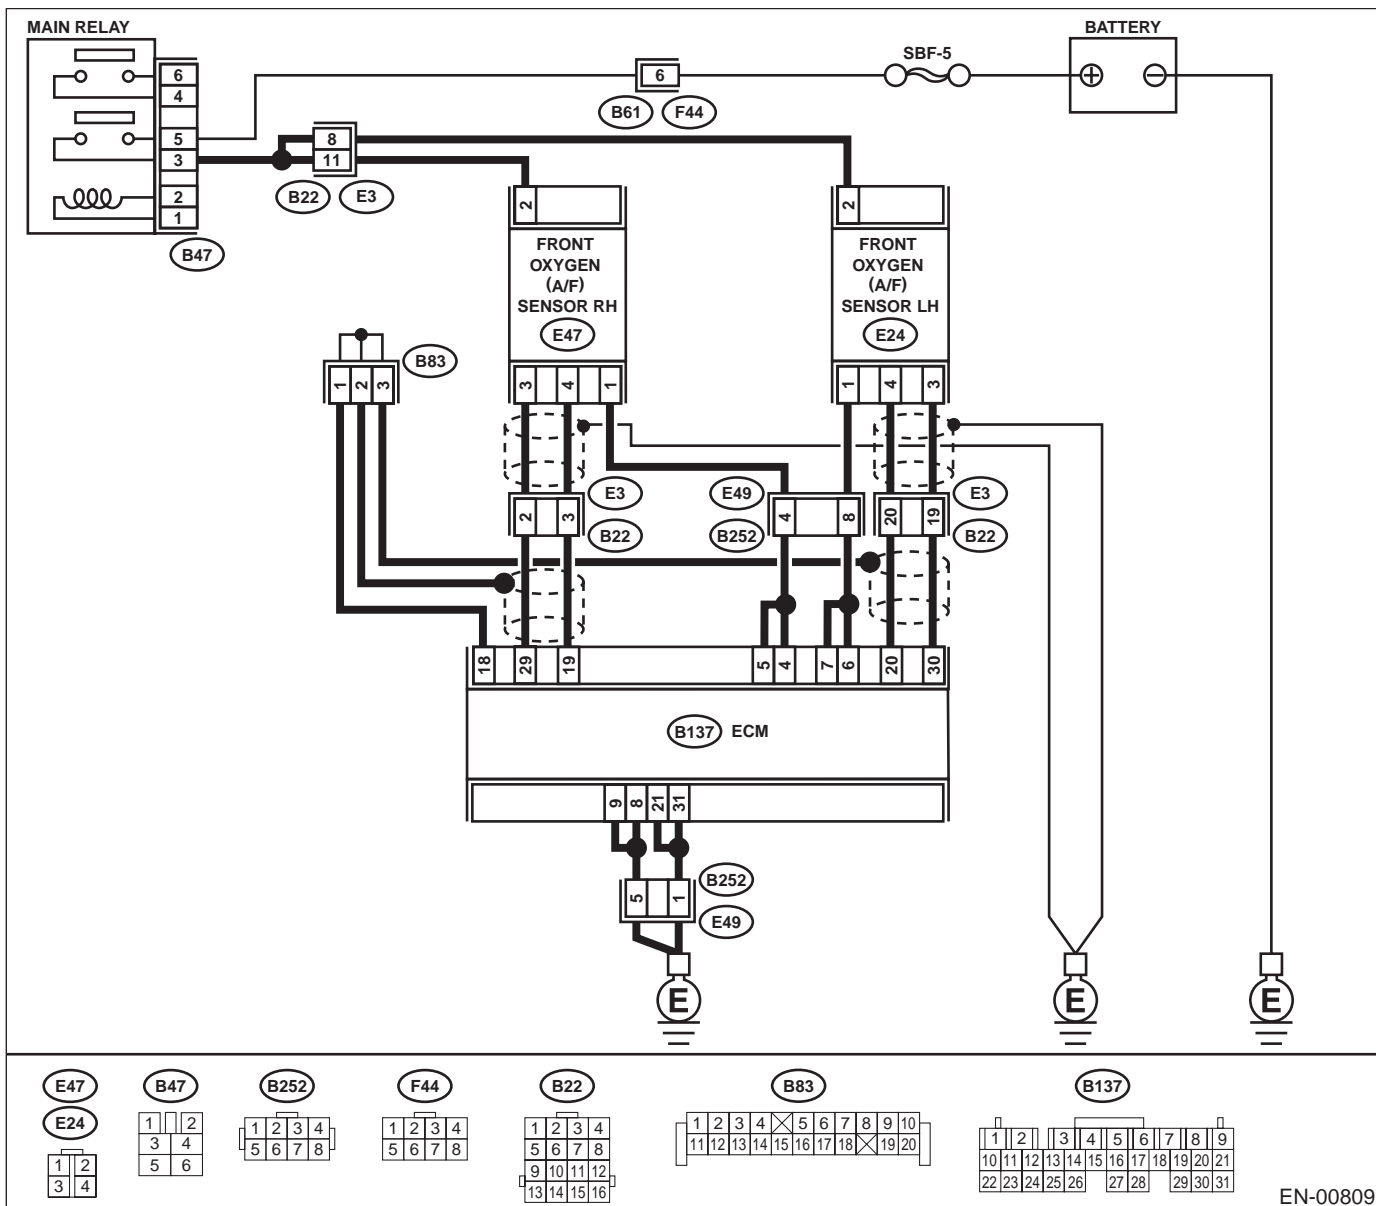

EN-00809

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0153.	Go to step 2.
2 CHECK EXHAUST SYSTEM. NOTE: Check the following items. <ul style="list-style-type: none"> • Loose installation of front portion of exhaust pipe onto cylinder heads • Loose connection between front exhaust pipe and front catalytic converter (RH side) • Damage of exhaust pipe resulting in a hole Is there a fault in exhaust system?	There is a trouble.	Repair exhaust system.	Replace front oxygen (A/F) sensor. <Ref. to FU(H6DO)-43, Front Oxygen (A/F) Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)


AE:DTC P0154 — O2 SENSOR CIRCUIT NO ACTIVITY DETECTED (BANK 2 SENSOR 1) —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

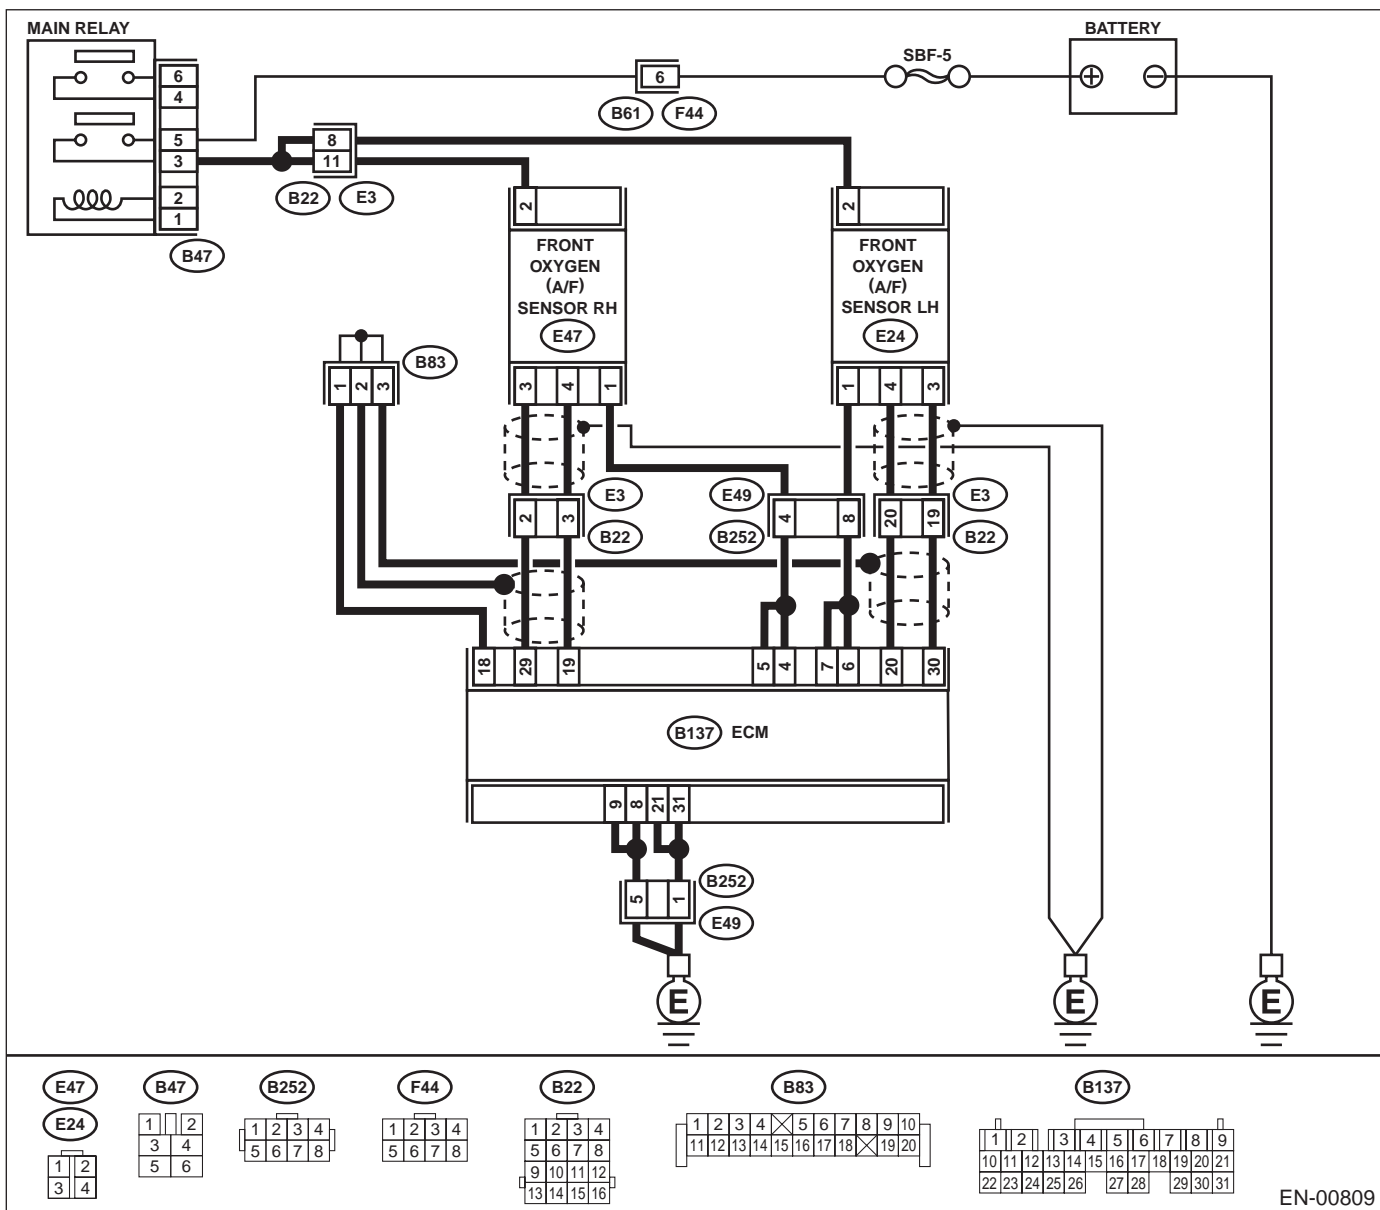

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1</p> <p>CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.</p> <p>1) Turn ignition switch to OFF. 2) Disconnect connectors from ECM and front oxygen (A/F) sensor connector. 3) Measure resistance of harness between ECM and front oxygen (A/F) sensor connector.</p> <p>Connector & terminal (B137) No. 20 — (E24) No. 4:</p> <p>Is the measured value less than the specified value?</p>	1 Ω	Go to step 2.	<p>Repair harness and connector.</p> <p>NOTE: In this case, repair the following:</p> <ul style="list-style-type: none"> • Open circuit in harness between ECM and front oxygen (A/F) sensor connector • Poor contact in front oxygen (A/F) sensor connector • Poor contact in ECM connector
<p>2</p> <p>CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.</p> <p>Measure resistance of harness between ECM and front oxygen (A/F) sensor connector.</p> <p>Connector & terminal (B137) No. 30 — (E24) No. 3:</p> <p>Is the measured value less than the specified value?</p>	1 Ω	Go to step 3.	<p>Repair harness and connector.</p> <p>NOTE: In this case, repair the following:</p> <ul style="list-style-type: none"> • Open circuit in harness between ECM and front oxygen (A/F) sensor connector • Poor contact in front oxygen (A/F) sensor connector • Poor contact in ECM connector
<p>3</p> <p>CHECK POOR CONTACT.</p> <p>Check poor contact in front oxygen (A/F) sensor connector.</p> <p>Is there poor contact in front oxygen (A/F) sensor connector?</p>	There is poor contact.	Repair poor contact in front oxygen (A/F) sensor connector.	<p>Replace front oxygen (A/F) sensor. <Ref. to FU(H6DO)-43, Front Oxygen (A/F) Sensor.></p>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

AF:DTC P0171 — SYSTEM TOO LEAN (BANK 1) —

NOTE:

For the diagnostic procedure, refer to DTC P0172. <Ref. to EN(H6DO)-180, DTC P0172 — SYSTEM TOO RICH (BANK 1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

AG:DTC P0172 — SYSTEM TOO RICH (BANK 1) —

• **DTC DETECTING CONDITION:**

- Two consecutive driving cycles with fault

• **TROUBLE SYMPTOM:**

- Erroneous idling
- Engine stalls.
- Poor driving performance

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).>	Go to step 2.
2 CHECK EXHAUST SYSTEM. Are there holes or loose bolts on exhaust system?	Holes or loose bolts are found.	Repair exhaust system.	Go to step 3.
3 CHECK AIR INTAKE SYSTEM. Are there holes, loose bolts or disconnection of hose on air intake system?	Holes, loose bolts or disconnection of hose is found.	Repair air intake system.	Go to step 4.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>4 CHECK FUEL PRESSURE.</p> <p>Warning:</p> <ul style="list-style-type: none"> • Place “NO FIRE” signs near the working area. • Be careful not to spill fuel on the floor. <ol style="list-style-type: none"> 1) Lower fuel pressure. <ol style="list-style-type: none"> 1) Disconnect connector from fuel pump relay. 2) Start the engine and run it until it stalls. 3) After the engine stalls, crank it for five more seconds. 4) Turn ignition switch to OFF. 2) Connect connector to fuel pump relay. 3) Disconnect fuel delivery hose from fuel filter, and connect fuel pressure gauge. 4) Install fuel filler cap. 5) Start the engine and idle while gear position is neutral. 6) Measure fuel pressure while disconnecting pressure regulator vacuum hose from intake manifold. Is the measured value within the specified range? <p>Warning: Before removing fuel pressure gauge, lower fuel pressure.</p> <p>NOTE: If fuel pressure does not increase, squeeze fuel return hose 2 to 3 times, then measure fuel pressure again.</p>	284 — 314 kPa (2.9 — 3.2 kg/cm ² , 41 — 46 psi)	Go to step 5.	Repair the following items. Fuel pressure too high <ul style="list-style-type: none"> • Clogged fuel return line or bent hose Fuel pressure too low <ul style="list-style-type: none"> • Improper fuel pump discharge • Clogged fuel supply line
<p>5 CHECK FUEL PRESSURE.</p> <p>After connecting pressure regulator vacuum hose, measure fuel pressure. Is the measured value within the specified range?</p> <p>Warning: Before removing fuel pressure gauge, lower fuel pressure.</p> <p>NOTE:</p> <ul style="list-style-type: none"> • If fuel pressure does not increase, squeeze fuel return hose 2 to 3 times, then measure fuel pressure again. • If out of specification as measured at this step, check or replace pressure regulator and pressure regulator vacuum hose. 	206 — 235 kPa (2.1 — 2.4 kg/cm ² , 30 — 34 psi)	Go to step 6.	Repair the following items. Fuel pressure too high <ul style="list-style-type: none"> • Faulty pressure regulator • Clogged fuel return line or bent hose Fuel pressure too low <ul style="list-style-type: none"> • Faulty pressure regulator • Improper fuel pump discharge • Clogged fuel supply line
<p>6 CHECK FUEL INJECTOR.</p> <ol style="list-style-type: none"> 1) Turn ignition switch to OFF. 2) Remove right bank fuel injector. <Ref. to FU(H6DO)-39, REMOVAL, Fuel Injector.> 3) Check fuel injector Is fuel injector clogged? 	Fuel injector is clogged.	Replace fuel injector. <Ref. to FU(H6DO)-39, Fuel Injector.>	Go to step 7.
<p>7 CHECK FUEL INJECTOR.</p> <p>Measure resistance between terminals of fuel injector.</p> <p>Terminals No. 1 — No. 2</p> <p>Is the measured value within the specified range?</p>	5 — 20 Ω	Go to step 8.	Replace fuel injector. <Ref. to FU(H6DO)-39, Fuel Injector.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>8 CHECK ENGINE COOLANT TEMPERATURE SENSOR.</p> <p>1) Start the engine and warm-up completely. 2) Read data of engine coolant temperature sensor signal using Subaru Select Monitor or OBD-II general scan tool. Does the measured value exceed the specified value?</p> <p>NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.> • OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.</p>	75°C (167°F)	Go to step 9 .	Replace engine coolant temperature sensor. <Ref. to FU(H6DO)-29, Engine Coolant Temperature Sensor.>
<p>9 CHECK INTAKE MANIFOLD PRESSURE SENSOR.</p> <p>1) Start the engine and warm-up engine until coolant temperature is greater than 75°C (167°F). 2) Place the shift lever in neutral position. 3) Turn A/C switch to OFF. 4) Turn all accessory switches to OFF. 5) Read data of intake manifold pressure sensor signal using Subaru Select Monitor or OBD-II general scan tool. Is the measured value within the specified range?</p> <p>NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.> • OBD-II general scan tool For detailed operation procedure, refer to the OBD-II General Scan Tool Instruction Manual.</p>	Ignition ON 73.3 — 106.6 kPa (550 — 800 mmHg, 21.65 — 31.50 inHg), Idling 24.0 — 41.3 kPa (180 — 310 mmHg, 7.09 — 12.20 inHg)	Go to step 10 .	Replace intake manifold pressure sensor. <Ref. to FU(H6DO)-34, Intake Manifold Pressure Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>10 CHECK INTAKE AIR TEMPERATURE SENSOR.</p> <p>1) Start the engine and warm-up engine until coolant temperature is greater than 75°C (167°F).</p> <p>2) Place the shift lever in neutral position.</p> <p>3) Turn A/C switch to OFF.</p> <p>4) Turn all accessory switches to OFF.</p> <p>5) Open front hood.</p> <p>6) Measure ambient temperature.</p> <p>7) Read data of intake manifold pressure sensor signal using Subaru Select Monitor or OBD-II general scan tool.</p> <p>Is value within the specified range when ambient temperature is subtracted from intake air temperature greater than -10°C (14°F) and less than 50°C (122°F)?</p> <p>NOTE:</p> <ul style="list-style-type: none"> • Subaru Select Monitor <p>For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE".</p> <p><Ref. to EN(H6DO)-38, Subaru Select Monitor.></p> <ul style="list-style-type: none"> • OBD-II general scan tool <p>For detailed operation procedure, refer to the OBD-II General Scan Tool Instruction Manual.</p>	<p>-10 — 50°C (14 — 122°F)</p>	<p>Contact with SOA (distributor) service.</p> <p>NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.</p>	<p>Check intake air temperature sensor. <Ref. to FU(H6DO)-35, Intake Air Temperature Sensor.></p>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

AH:DTC P0174 — SYSTEM TOO LEAN (BANK 2) —

NOTE:

For the diagnostic procedure, refer to DTC P0175. <Ref. to EN(H6DO)-184, DTC P0175 — SYSTEM TOO RICH (BANK 2) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

AI: DTC P0175 — SYSTEM TOO RICH (BANK 2) —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Erroneous idling
 - Engine stalls.
 - Poor driving performance

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).>	Go to step 2.
2 CHECK EXHAUST SYSTEM. Are there holes or loose bolts on exhaust system?	Holes or loose bolts are found.	Repair exhaust system.	Go to step 3.
3 CHECK AIR INTAKE SYSTEM. Are there holes, loose bolts or disconnection of hose on air intake system?	Holes, loose bolts or disconnection of hose is found.	Repair air intake system.	Go to step 4.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>4 CHECK FUEL PRESSURE.</p> <p>Warning:</p> <ul style="list-style-type: none"> • Place “NO FIRE” signs near the working area. • Be careful not to spill fuel on the floor. <ol style="list-style-type: none"> 1) Lower fuel pressure. <ol style="list-style-type: none"> 1) Disconnect connector from fuel pump relay. 2) Start the engine and run it until it stalls. 3) After the engine stalls, crank it for five more seconds. 4) Turn ignition switch to OFF. 2) Connect connector to fuel pump relay. 3) Disconnect fuel delivery hose from fuel filter, and connect fuel pressure gauge. 4) Install fuel filler cap. 5) Start the engine and idle while gear position is neutral. 6) Measure fuel pressure while disconnecting pressure regulator vacuum hose from intake manifold. Is the measured value within the specified range? <p>Warning: Before removing fuel pressure gauge, lower fuel pressure.</p> <p>NOTE: If fuel pressure does not increase, squeeze fuel return hose 2 to 3 times, then measure fuel pressure again.</p>	<p>284 — 314 kPa (2.9 — 3.2 kg/cm², 41 — 46 psi)</p>	<p>Go to step 5.</p>	<p>Repair the following items.</p> <p>Fuel pressure too high</p> <ul style="list-style-type: none"> • Clogged fuel return line or bent hose <p>Fuel pressure too low</p> <ul style="list-style-type: none"> • Improper fuel pump discharge • Clogged fuel supply line
<p>5 CHECK FUEL PRESSURE.</p> <p>After connecting pressure regulator vacuum hose, measure fuel pressure. Is the measured value within the specified range?</p> <p>Warning: Before removing fuel pressure gauge, lower fuel pressure.</p> <p>NOTE:</p> <ul style="list-style-type: none"> • If fuel pressure does not increase, squeeze fuel return hose 2 to 3 times, then measure fuel pressure again. • If out of specification as measured at this step, check or replace pressure regulator and pressure regulator vacuum hose. 	<p>206 — 235 kPa (2.1 — 2.4 kg/cm², 30 — 34 psi)</p>	<p>Go to step 6.</p>	<p>Repair the following items.</p> <p>Fuel pressure too high</p> <ul style="list-style-type: none"> • Faulty pressure regulator • Clogged fuel return line or bent hose <p>Fuel pressure too low</p> <ul style="list-style-type: none"> • Faulty pressure regulator • Improper fuel pump discharge • Clogged fuel supply line
<p>6 CHECK FUEL INJECTOR.</p> <ol style="list-style-type: none"> 1) Turn ignition switch to OFF. 2) Remove left bank fuel injector. <Ref. to FU(H6DO)-39, REMOVAL, Fuel Injector.> 3) Check fuel injector. Is fuel injector clogged? 	<p>Fuel injector is clogged.</p>	<p>Replace fuel injector. <Ref. to FU(H6DO)-39, Fuel Injector.></p>	<p>Go to step 7.</p>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>7 CHECK FUEL INJECTOR. Measure resistance between terminals of fuel injector. Terminals No. 1 — No. 2 Is the measured value within the specified range?</p>	5 — 20 Ω	Go to step 8 .	Replace fuel injector. <Ref. to FU(H6DO)-39, Fuel Injector.>
<p>8 CHECK ENGINE COOLANT TEMPERATURE SENSOR. 1) Start the engine and warm-up completely. 2) Read data of engine coolant temperature sensor signal using Subaru Select Monitor or OBD-II general scan tool. Does the measured value exceed the specified value? NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.> • OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.</p>	75°C (167°F)	Go to step 9 .	Replace engine coolant temperature sensor. <Ref. to FU(H6DO)-29, Engine Coolant Temperature Sensor.>
<p>9 CHECK INTAKE MANIFOLD PRESSURE SENSOR. 1) Start the engine and warm-up engine until coolant temperature is greater than 75°C (167°F). 2) Place the shift lever in neutral position. 3) Turn A/C switch to OFF. 4) Turn all accessory switches to OFF. 5) Read data of intake manifold pressure sensor signal using Subaru Select Monitor or OBD-II general scan tool. Is the measured value within the specified range? NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.> • OBD-II general scan tool For detailed operation procedure, refer to the OBD-II General Scan Tool Instruction Manual.</p>	Ignition ON 73.3 — 106.6 kPa (550 — 800 mmHg, 21.65 — 31.50 inHg), Idling 24.0 — 41.3 kPa (180 — 310 mmHg, 7.09 — 12.20 inHg)	Go to step 10 .	Replace intake manifold pressure sensor. <Ref. to FU(H6DO)-34, Intake Manifold Pressure Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

10	Step	Value	Yes	No
	<p>CHECK INTAKE AIR TEMPERATURE SENSOR.</p> <ol style="list-style-type: none"> 1) Start the engine and warm-up engine until coolant temperature is greater than 75°C (167°F). 2) Place the shift lever in neutral position. 3) Turn A/C switch to OFF. 4) Turn all accessory switches to OFF. 5) Open front hood. 6) Measure ambient temperature. 7) Read data of intake manifold pressure sensor signal using Subaru Select Monitor or OBD-II general scan tool. <p>Is value the specified range when ambient temperature is subtracted from intake air temperature?</p> <p>NOTE:</p> <ul style="list-style-type: none"> • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.> • OBD-II general scan tool For detailed operation procedure, refer to the OBD-II General Scan Tool Instruction Manual. 	<p align="center">-10 — 50°C (14 — 122°F)</p>	<p>Contact with SOA (distributor) service.</p> <p>NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.</p>	<p>Check intake air temperature sensor. <Ref. to FU(H6DO)-35, Intake Air Temperature Sensor.></p>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
 ENGINE (DIAGNOSTICS)


AJ:DTC P0181 — FUEL TEMPERATURE SENSOR “A” CIRCUIT RANGE/PERFORMANCE —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

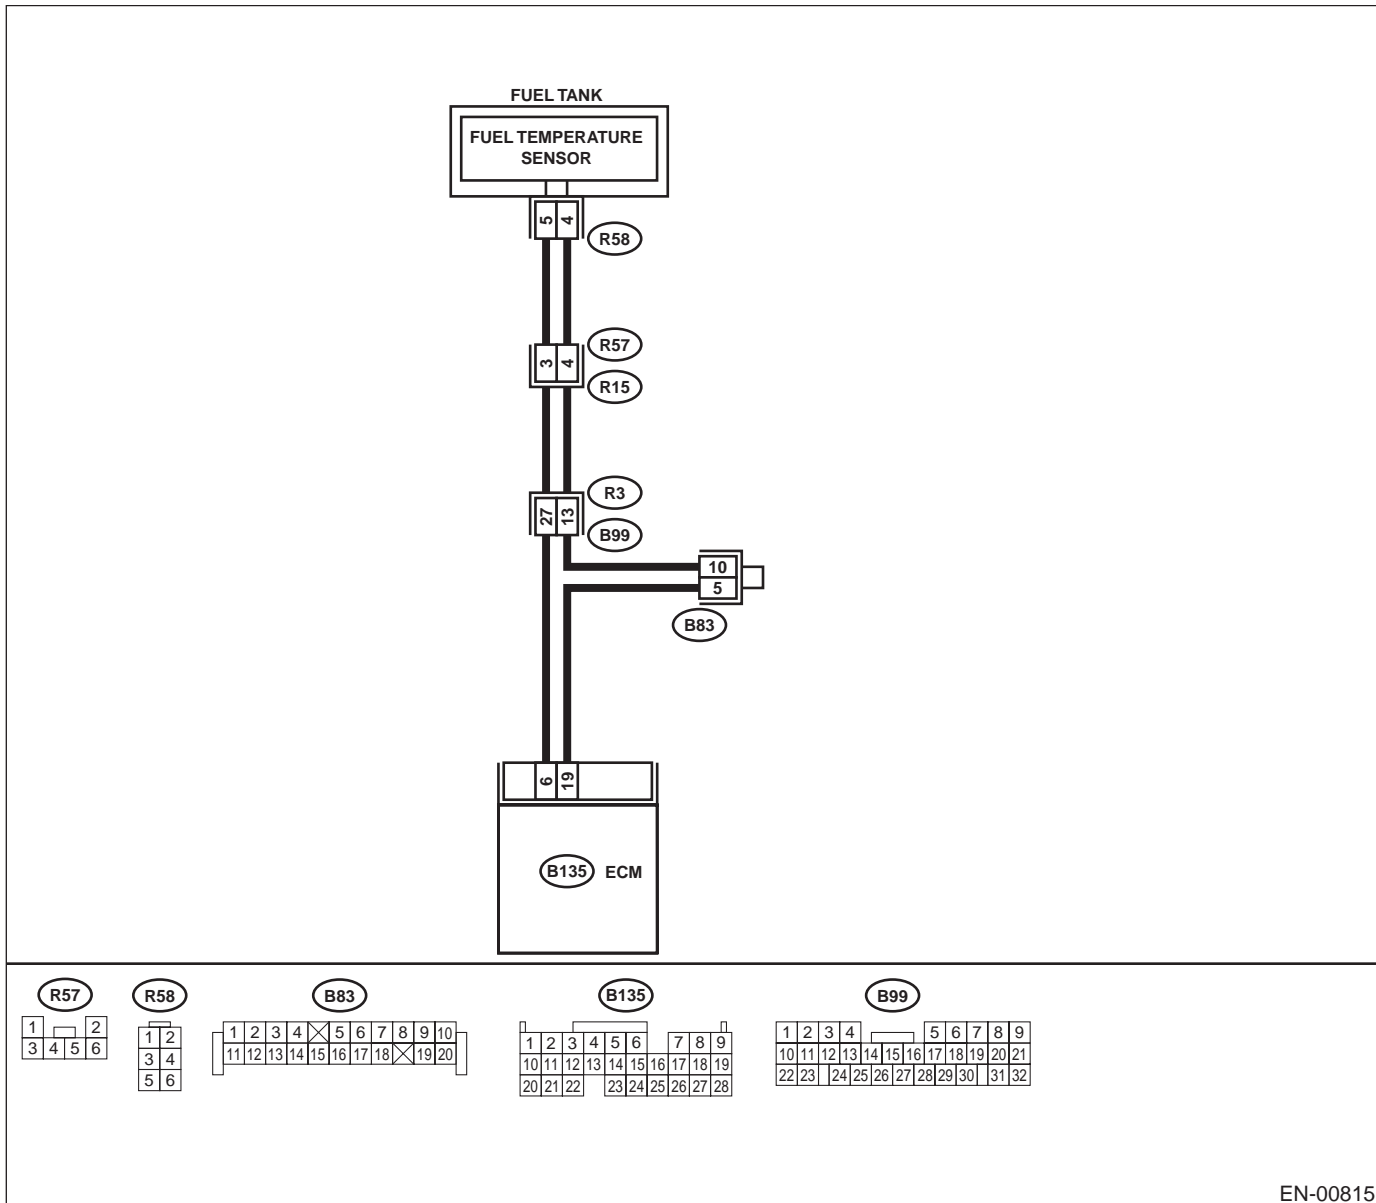

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0181.	Replace fuel temperature sensor. <Ref. to EC(H6DO)-12, Fuel Temperature Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

AK:DTC P0182 — FUEL TEMPERATURE SENSOR “A” CIRCUIT LOW INPUT —


• **DTC DETECTING CONDITION:**

- Immediately at fault recognition

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

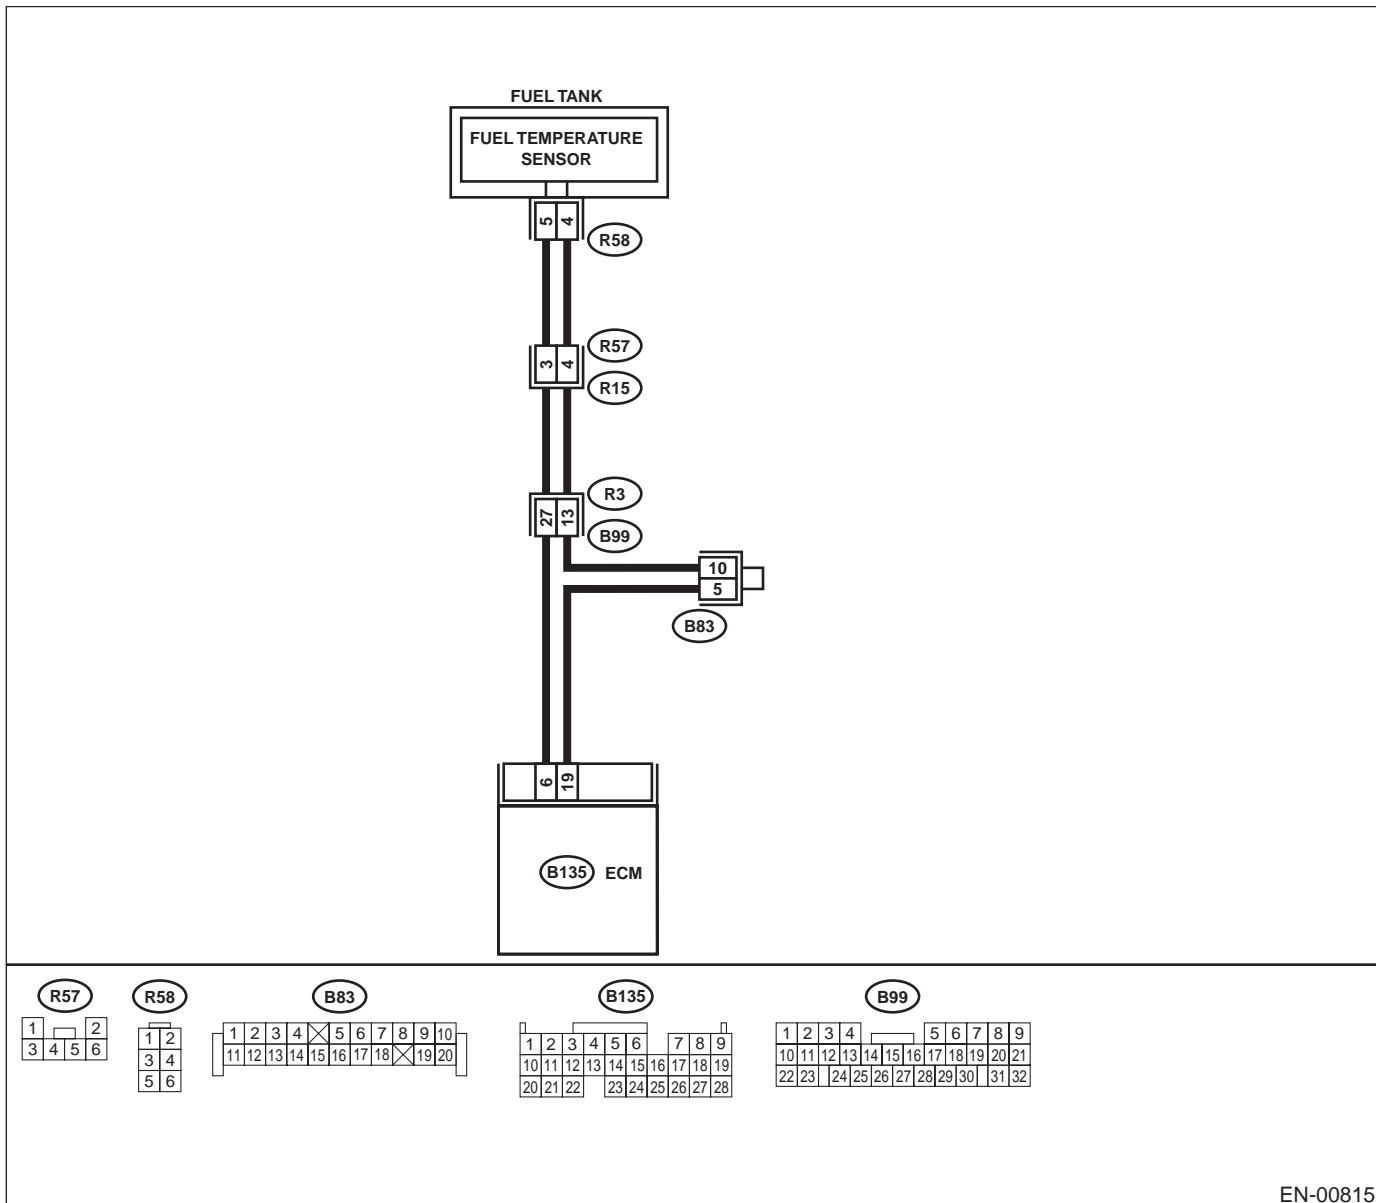

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1</p> <p>CHECK CURRENT DATA.</p> <p>1) Start engine. 2) Read data of fuel temperature sensor signal using Subaru Select Monitor or OBD-II general scan tool. Does the measured value exceed the specified value?</p> <p>NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.> • OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.</p>	120°C (248°F)	Go to step 2.	Even if MIL lights up, the circuit has returned to a normal condition at this time.
<p>2</p> <p>CHECK CURRENT DATA.</p> <p>1) Turn ignition switch to OFF. 2) Remove access hole lid. 3) Disconnect connector from fuel pump. 4) Turn ignition switch to ON. 5) Read data of fuel temperature sensor signal using Subaru Select Monitor or the OBD-II general scan tool. Is the measured value less than the specified value?</p> <p>NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.> • OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.</p>	-40°C (-40°F)	Replace fuel temperature sensor. <Ref. to EC(H6DO)-12, Fuel Temperature Sensor.>	Repair ground short circuit in harness between fuel pump and ECM connector.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

AL:DTC P0183 — FUEL TEMPERATURE SENSOR “A” CIRCUIT HIGH INPUT —


• **DTC DETECTING CONDITION:**

- Immediately at fault recognition

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

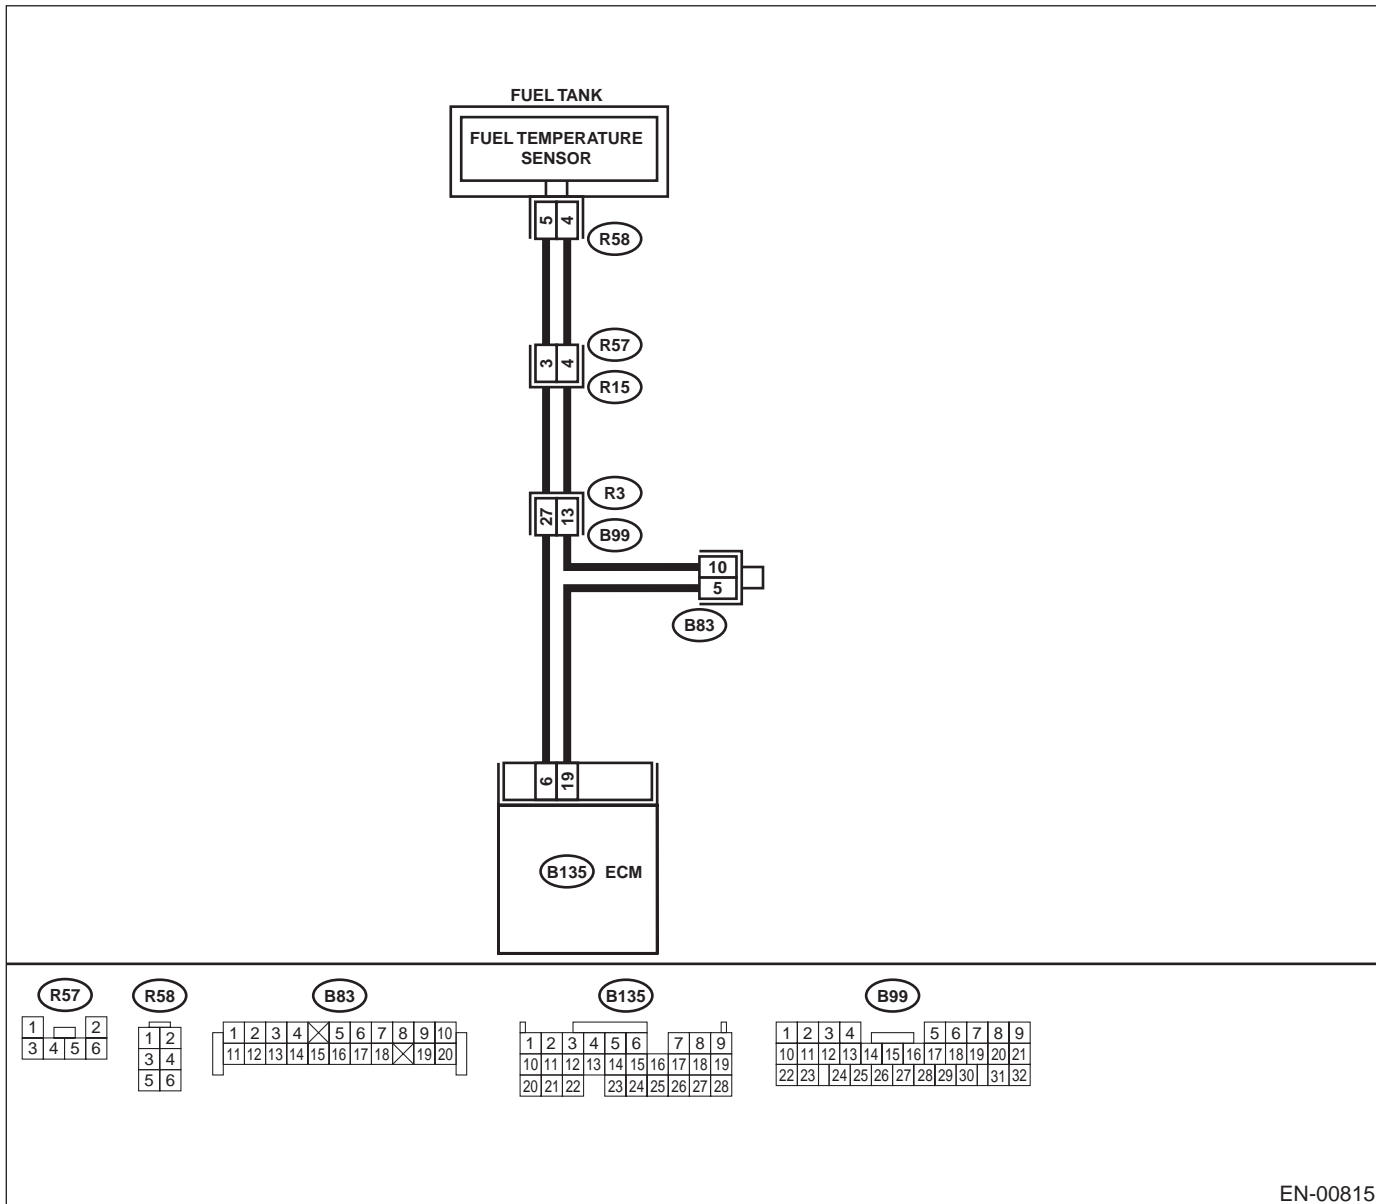

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1</p> <p>CHECK CURRENT DATA.</p> <p>1) Start engine. 2) Read data of fuel temperature sensor signal using Subaru Select Monitor or OBD-II general scan tool. Is the measured value less than the specified value?</p> <p>NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.> • OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.</p>	-40°C (-40°F)	Go to step 2.	<p>Repair poor contact.</p> <p>NOTE: In this case, repair the following:</p> <ul style="list-style-type: none"> • Poor contact in fuel pump connector • Poor contact in ECM connector • Poor contact in coupling connectors • Poor contact in joint connector
<p>2</p> <p>CHECK HARNESS BETWEEN FUEL TEMPERATURE SENSOR AND ECM CONNECTOR.</p> <p>1) Turn ignition switch to OFF. 2) Remove access hole lid. 3) Disconnect connector from fuel pump. 4) Measure voltage between fuel pump connector and chassis ground.</p> <p>Connector & terminal (R58) No. 5 (+) — Chassis ground (-): Does the measured value exceed the specified value?</p>	10 V	Repair battery short circuit in harness between ECM and fuel pump connector.	Go to step 3.
<p>3</p> <p>CHECK HARNESS BETWEEN FUEL TEMPERATURE SENSOR AND ECM CONNECTOR.</p> <p>1) Turn ignition switch to ON. 2) Measure voltage between fuel pump connector and chassis ground.</p> <p>Connector & terminal (R58) No. 5 (+) — Chassis ground (-): Does the measured value exceed the specified value?</p>	10 V	Repair battery short circuit in harness between ECM and fuel pump connector.	Go to step 4.
<p>4</p> <p>CHECK HARNESS BETWEEN FUEL TEMPERATURE SENSOR AND ECM CONNECTOR.</p> <p>Measure voltage between fuel pump connector and chassis ground.</p> <p>Connector & terminal (R58) No. 5 (+) — Chassis ground (-): Does the measured value exceed the specified value?</p>	4 V	Go to step 5.	<p>Repair harness and connector.</p> <p>NOTE: In this case, repair the following:</p> <ul style="list-style-type: none"> • Open circuit in harness between ECM and fuel pump connector • Poor contact in fuel pump connector • Poor contact in ECM connector • Poor contact in coupling connectors

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>5</p> <p>CHECK HARNESS BETWEEN FUEL TEMPERATURE SENSOR AND ECM CONNECTOR.</p> <p>1) Turn ignition switch to OFF.</p> <p>2) Measure resistance of harness between fuel pump connector and chassis ground.</p> <p>Connector & terminal (R58) No. 4 — Chassis ground:</p> <p>Is the measured value less than the specified value?</p>	5 Ω	<p>Replace fuel temperature sensor.</p> <p><Ref. to EC(H6DO)-12, Fuel Temperature Sensor.></p>	<p>Repair harness and connector.</p> <p>NOTE: In this case, repair the following:</p> <ul style="list-style-type: none"> • Open circuit in harness between ECM and fuel pump connector • Poor contact in fuel pump connector • Poor contact in ECM connector • Poor contact in coupling connectors • Poor contact in joint connector

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

MEMO:

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

AM:DTC P0230 — FUEL PUMP PRIMARY CIRCUIT —


• **DTC DETECTING CONDITION:**

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, Inspection Mode.>.

• **WIRING DIAGRAM:**

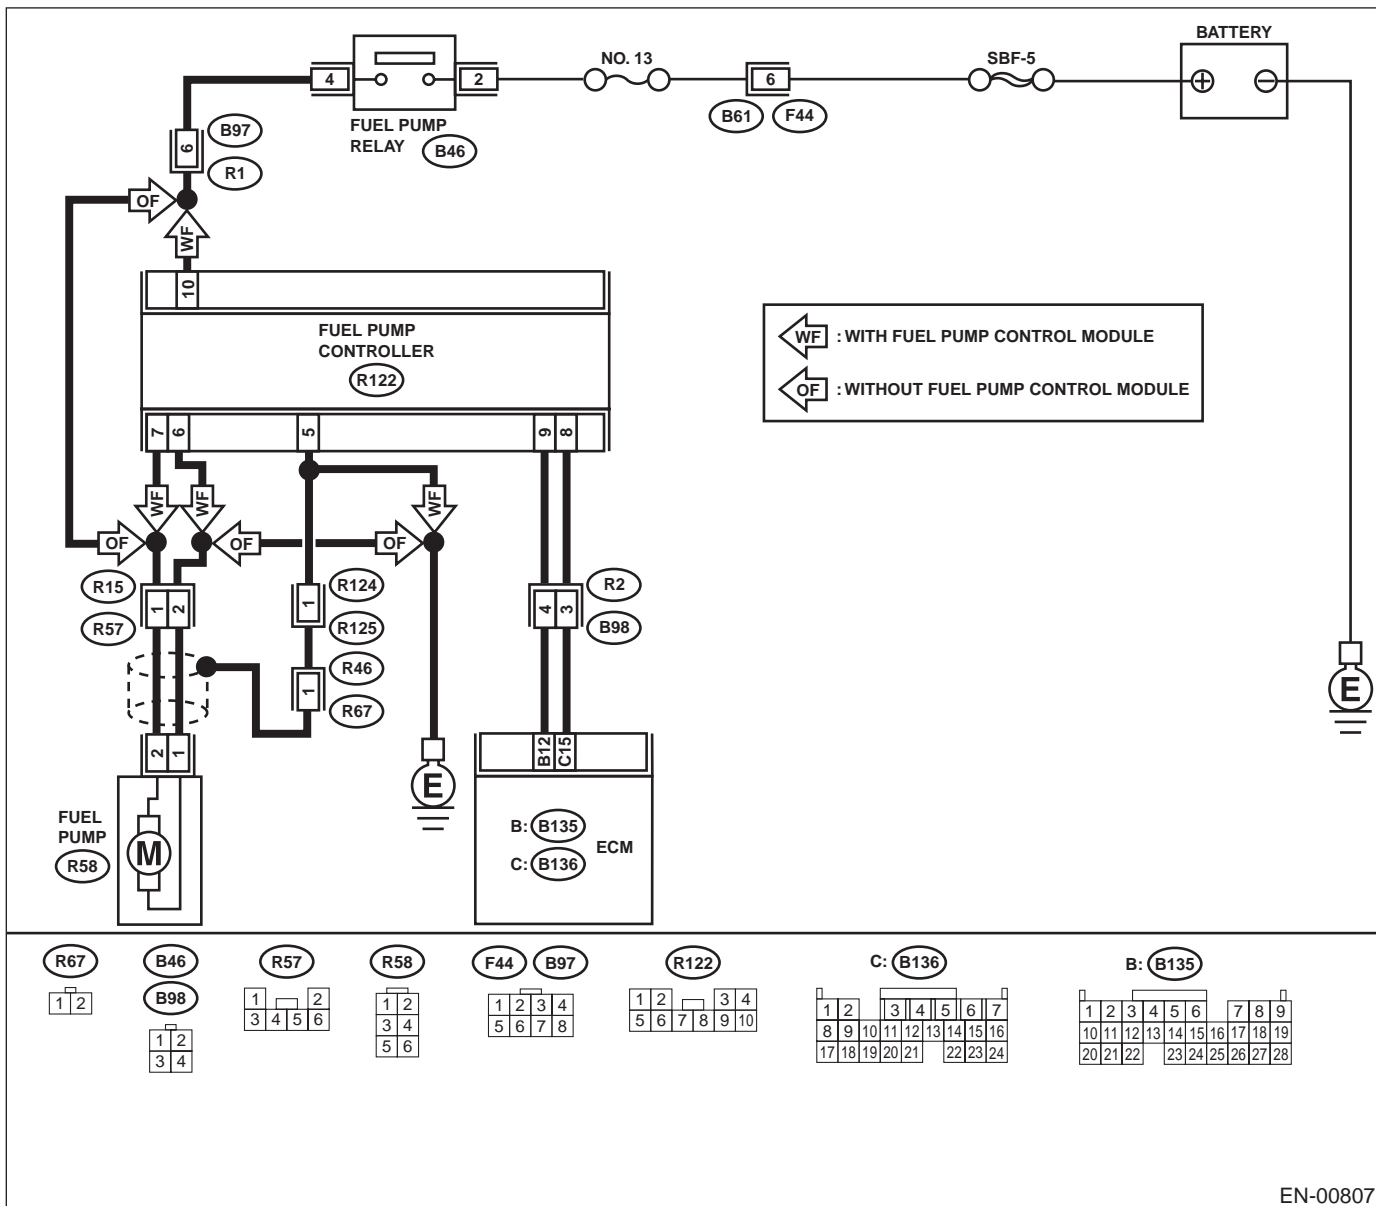

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1</p> <p>CHECK POWER SUPPLY CIRCUIT TO FUEL PUMP CONTROLLER.</p> <p>1) Turn ignition switch to OFF. 2) Disconnect connector from fuel pump controller. 3) Turn ignition switch to ON. 4) Measure voltage between fuel pump controller and chassis ground.</p> <p>Connector & terminal (R122) No. 10 (+) — Chassis ground (-):</p> <p>Does the measured value exceed the specified value?</p>	10 V	Go to step 2.	<p>Repair power supply circuit.</p> <p>NOTE: In this case, repair the following:</p> <ul style="list-style-type: none"> • Open or ground short circuit in harness between fuel pump relay and fuel pump controller. • Poor contact in fuel pump controller connector. • Poor contact in fuel pump relay connector.
<p>2</p> <p>CHECK GROUND CIRCUIT OF FUEL PUMP CONTROLLER.</p> <p>1) Turn ignition switch to OFF. 2) Measure resistance of harness between fuel pump controller and chassis ground.</p> <p>Connector & terminal (R122) No. 5 — Chassis ground:</p> <p>Is the measured value less than the specified value?</p>	5 Ω	Go to step 3.	<p>Repair harness and connector.</p> <p>NOTE: In this case, repair the following:</p> <ul style="list-style-type: none"> • Open circuit between fuel pump controller and chassis ground. • Poor contact in fuel pump controller connector.
<p>3</p> <p>CHECK HARNESS BETWEEN FUEL PUMP CONTROLLER AND FUEL PUMP CONNECTOR.</p> <p>1) Disconnect connector from fuel pump. 2) Measure resistance of harness between fuel pump controller and fuel pump connector.</p> <p>Connector & terminal (R122) No. 7 — (R58) No. 2: (R122) No. 6 — (R58) No. 1:</p> <p>Is the measured value less than the specified value?</p>	1 Ω	Go to step 4.	<p>Repair open circuit between fuel pump controller and fuel pump.</p>
<p>4</p> <p>CHECK HARNESS BETWEEN FUEL PUMP CONTROLLER AND FUEL PUMP CONNECTOR.</p> <p>Measure resistance of harness between fuel pump controller and chassis ground.</p> <p>Connector & terminal (R122) No. 7 — Chassis ground: (R122) No. 6 — Chassis ground:</p> <p>Does the measured value exceed the specified value?</p>	1 MΩ	Go to step 5.	<p>Repair ground short circuit between fuel pump controller and fuel pump.</p>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
5 CHECK HARNESS BETWEEN FUEL PUMP CONTROLLER AND ECM CONNECTOR. 1) Turn ignition switch to OFF. 2) Disconnect connector from ECM. 3) Measure resistance of harness between fuel pump controller and ECM connector. Connector & terminal (R122) No. 9 — (B135) No. 12: (R122) No. 8 — (B136) No. 15: Is the measured value less than the specified value?	1 Ω	Go to step 6.	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit between fuel pump controller and ECM. • Poor contact in fuel pump controller and ECM connector.
6 CHECK HARNESS BETWEEN FUEL PUMP CONTROLLER AND ECM CONNECTOR. Measure resistance of harness between fuel pump controller and chassis ground. Connector & terminal (R122) No. 9 — Chassis ground: (R122) No. 8 — Chassis ground: Does the measured value exceed the specified value?	1 MΩ	Go to step 7.	Repair ground short circuit between fuel pump controller and ECM.
7 CHECK POOR CONTACT. Check poor contact in ECM and fuel pump controller connector. Is there poor contact in ECM and fuel pump controller connector.	There is poor contact.	Repair poor contact in ECM and fuel pump controller.	Replace fuel pump controller. <Ref. to FU(H6DO)-49, Fuel Pump Controller.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

AN:DTC P0301 — CYLINDER 1 MISFIRE DETECTED —

NOTE:

For the diagnostic procedure, refer to DTC P0306. <Ref. to EN(H6DO)-200, DTC P0306 — CYLINDER 6 MISFIRE DETECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

AO:DTC P0302 — CYLINDER 2 MISFIRE DETECTED —

NOTE:

For the diagnostic procedure, refer to DTC P0306. <Ref. to EN(H6DO)-200, DTC P0306 — CYLINDER 6 MISFIRE DETECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

AP:DTC P0303 — CYLINDER 3 MISFIRE DETECTED —

NOTE:

For the diagnostic procedure, refer to DTC P0306. <Ref. to EN(H6DO)-200, DTC P0306 — CYLINDER 6 MISFIRE DETECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

AQ:DTC P0304 — CYLINDER 4 MISFIRE DETECTED —

NOTE:

For the diagnostic procedure, refer to DTC P0306. <Ref. to EN(H6DO)-200, DTC P0306 — CYLINDER 6 MISFIRE DETECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

AR:DTC P0305 — CYLINDER 5 MISFIRE DETECTED —

NOTE:

For the diagnostic procedure, refer to DTC P0306. <Ref. to EN(H6DO)-200, DTC P0306 — CYLINDER 6 MISFIRE DETECTED —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

AS:DTC P0306 — CYLINDER 6 MISFIRE DETECTED —

• DTC DETECTING CONDITION:

- Two consecutive driving cycles with fault
- Immediately at fault recognition (A misfire which could damage catalyst occurs.)


• TROUBLE SYMPTOM:

- Engine stalls.
- Erroneous idling
- Rough driving

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• WIRING DIAGRAM:

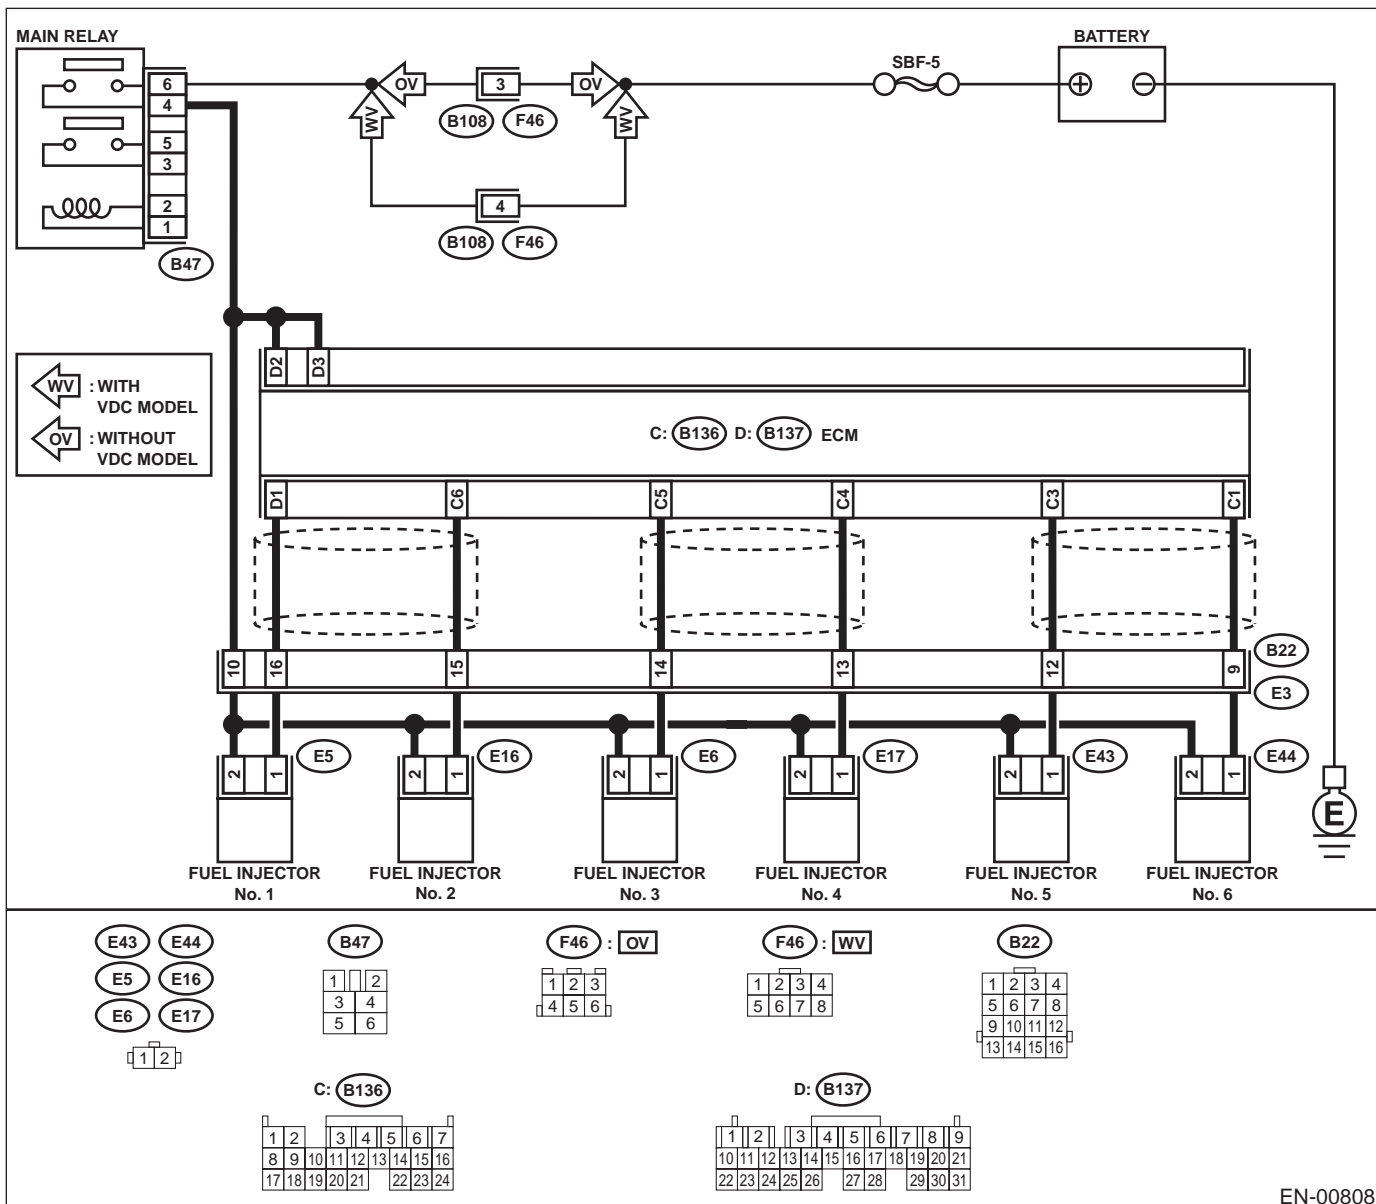

EN-00808

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0301, P0302, P0303, P0304, P0305 and P0306.	Go to step 2.
2 CHECK OUTPUT SIGNAL FROM ECM. 1) Turn ignition switch to ON. 2) Measure voltage between ECM connector and chassis ground on faulty cylinders. Connector & terminal #1 (B137) No. 1 (+) — Chassis ground (-): #2 (B136) No. 6 (+) — Chassis ground (-): #3 (B136) No. 5 (+) — Chassis ground (-): #4 (B136) No. 4 (+) — Chassis ground (-): #5 (B136) No. 3 (+) — Chassis ground (-): #6 (B136) No. 1 (+) — Chassis ground (-): Does the measured value exceed the specified value?	10 V	Go to step 7.	Go to step 3.
3 CHECK HARNESS BETWEEN FUEL INJECTOR AND ECM CONNECTOR. 1) Turn ignition switch to OFF. 2) Disconnect connector from fuel injector on faulty cylinders. 3) Measure voltage between ECM connector and engine ground on faulty cylinders. Connector & terminal #1 (E5) No. 1 — Engine ground: #2 (E16) No. 1 — Engine ground: #3 (E6) No. 1 — Engine ground: #4 (E17) No. 1 — Engine ground: #5 (E43) No. 1 — Engine ground: #6 (E44) No. 1 — Engine ground: Is the measured value less than the specified value?	10 Ω	Repair ground short circuit in harness between fuel injector and ECM connector.	Go to step 4.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>4 CHECK HARNESS BETWEEN FUEL INJECTOR AND ECM CONNECTOR. Measure resistance of harness connector between ECM connector and fuel injector on faulty cylinders.</p> <p>Connector & terminal #1 (B137) No. 1 — (E5) No. 1: #2 (B136) No. 6 — (E16) No. 1: #3 (B136) No. 5 — (E6) No. 1: #4 (B136) No. 4 — (E17) No. 1: #5 (B136) No. 3 — (E43) No. 1: #6 (B136) No. 1 — (E44) No. 1:</p> <p>Is the measured value less than the specified value?</p>	1 Ω	Go to step 5.	<p>Repair harness and connector.</p> <p>NOTE: In this case, repair the following:</p> <ul style="list-style-type: none"> • Open circuit in harness between ECM and fuel injector connector • Poor contact in coupling connector
<p>5 CHECK FUEL INJECTOR. Measure resistance between fuel injector terminals on faulty cylinder.</p> <p>Terminals No. 1 — No. 2:</p> <p>Is the measured value within the specified range?</p>	5 — 20 Ω	Go to step 6.	<p>Replace faulty fuel injector. <Ref. to FU(H6DO)-39, Fuel Injector.></p>
<p>6 CHECK POWER SUPPLY LINE. 1) Turn ignition switch to ON. 2) Measure voltage between fuel injector and engine ground on faulty cylinders.</p> <p>Connector & terminal #1 (E5) No. 2 (+) — Engine ground (-): #2 (E16) No. 2 (+) — Engine ground (-): #3 (E6) No. 2 (+) — Engine ground (-): #4 (E17) No. 2 (+) — Engine ground (-): #5 (E43) No. 2 (+) — Engine ground (-): #6 (E44) No. 2 (+) — Engine ground (-):</p> <p>Does the measured value exceed the specified value?</p>	10 V	Repair poor contact in all connectors in fuel injector circuit.	<p>Repair harness and connector.</p> <p>NOTE: In this case, repair the following:</p> <ul style="list-style-type: none"> • Open circuit in harness between main relay and fuel injector connector on faulty cylinders • Poor contact in coupling connector • Poor contact in main relay connector • Poor contact in fuel injector connector on faulty cylinders

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>7 CHECK HARNESS BETWEEN FUEL INJECTOR AND ECM CONNECTOR. 1) Turn ignition switch to OFF. 2) Disconnect connector from fuel injector on faulty cylinder. 3) Turn ignition switch to ON. 4) Measure voltage between ECM connector and chassis ground on faulty cylinders.</p> <p>Connector & terminal #1 (B137) No. 1 (+) — Chassis ground (-): #2 (B136) No. 6 (+) — Chassis ground (-): #3 (B136) No. 5 (+) — Chassis ground (-): #4 (B136) No. 4 (+) — Chassis ground (-): #5 (B136) No. 3 (+) — Chassis ground (-): #6 (B136) No. 1 (+) — Chassis ground (-):</p> <p>Does the measured value exceed the specified value?</p>	10 V	Repair battery short circuit in harness between ECM and fuel injector. After repair, replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>	Go to step 8.
<p>8 CHECK FUEL INJECTOR. 1) Turn ignition switch to OFF. 2) Measure resistance between fuel injector terminals on faulty cylinder.</p> <p>Terminals No. 1 — No. 2:</p> <p>Is the measured value less than the specified value?</p>	1 Ω	Replace faulty fuel injector <Ref. to FU(H6DO)-39, Fuel Injector.> and ECM <Ref. to FU(H6DO)-46, Engine Control Module.>.	Go to step 9.
<p>9 CHECK INSTALLATION OF CAMSHAFT POSITION SENSOR/CRANKSHAFT POSITION SENSOR. Is camshaft position sensor or crankshaft position sensor loosely installed?</p>	Loosely installed.	Tighten camshaft position sensor or crankshaft position sensor.	Go to step 10.
<p>10 CHECK CRANKSHAFT PLATE. Is crankshaft plate rusted or does it have broken teeth?</p>	Rusted or teeth is broken.	Replace crankshaft plate.	Go to step 11.
<p>11 CHECK INSTALLATION CONDITION OF TIMING CHAIN. Turn crankshaft using ST, and align alignment mark on crankshaft sprocket with alignment mark. ST 18252AA000 Is timing chain dislocated from its proper position?</p>	Dislocated from proper position.	Repair installation condition of timing chain. <Ref. to ME(H6DO)-41, Timing Chain Assembly.>	Go to step 12.
<p>12 CHECK FUEL LEVEL. Is the fuel meter indication lower than the "Lower" level?</p>	The indication is lower.	Replenish fuel so fuel meter indication is higher than the "Lower" level. After replenishing fuel, Go to step 13.	Go to step 13.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
13 CHECK STATUS OF CHECK ENGINE MALFUNCTION INDICATOR LAMP (MIL). 1) Clear memory using Subaru Select Monitor. <Ref. to EN(H6DO)-59, Clear Memory Mode.> 2) Start engine, and drive the vehicle more than 10 minutes. Is the MIL coming on or blinking?	Comes on or blinking.	Go to step 15.	Go to step 14.
14 CHECK CAUSE OF MISFIRE DIAGNOSED. Was the cause of misfire diagnosed when the engine is running?	Diagnosed.	Finish diagnostics operation, if the engine has no abnormality.	Repair poor contact. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Poor contact in ignition coil connector • Poor contact in fuel injector connector on faulty cylinders • Poor contact in ECM connector • Poor contact in coupling connector
15 CHECK AIR INTAKE SYSTEM. Is there a fault in air intake system?	There is a malfunction.	Repair air intake system. NOTE: Check the following items: <ul style="list-style-type: none"> • Are there air leaks or air suction caused by loose or dislocated nuts and bolts? • Are there cracks or any disconnection of hoses? 	Go to step 16.
16 CHECK MISFIRE SYMPTOM. 1) Turn ignition switch to ON. 2) Read diagnostic trouble code (DTC) using the Subaru Select Monitor or OBD-II general scan tool. <ul style="list-style-type: none"> • Subaru Select Monitor <Ref. to EN(H6DO)-38, Subaru Select Monitor.> • OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Operation Manual. Does the Subaru Select Monitor or OBD-II general scan tool indicate only one DTC?	Only one DTC is indicated.	Go to step 22.	Go to step 17.
17 CHECK DIAGNOSTIC TROUBLE CODE (DTC) ON DISPLAY. Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0301 and P0302?	Indicated.	Go to step 23.	Go to step 18.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
18 CHECK DIAGNOSTIC TROUBLE CODE (DTC) ON DISPLAY. Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0303 and P0304?	Indicated.	Go to step 24 .	Go to step 19 .
19 CHECK DIAGNOSTIC TROUBLE CODE (DTC) ON DISPLAY. Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0305 and P0306?	Indicated.	Go to step 25 .	Go to step 20 .
20 CHECK DIAGNOSTIC TROUBLE CODE (DTC) ON DISPLAY. Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0301, P0303 and P0305?	Indicated.	Go to step 26 .	Go to step 21 .
21 CHECK DIAGNOSTIC TROUBLE CODE (DTC) ON DISPLAY. Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0302, P0304 and P0306?	Indicated.	Go to step 27 .	Go to step 28 .
22 ONLY ONE CYLINDER Is there a fault in that cylinder?	There is a malfunction.	Repair or replace faulty parts. NOTE: Check the following items. • Spark plug • Fuel injector • Compression ratio	Inspect DTC P0171, P0172, P0174 or P0175 using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).>
23 GROUP OF #1 AND #2 CYLINDERS Are there faults in #1 and #2 cylinders?	There is a malfunction.	Repair or replace faulty parts. NOTE: • Check the following items. Spark plugs Fuel injectors Ignition coil Compression ratio • If no abnormality is discovered, check for "IGNITION CONTROL SYSTEM" of #1 and #2 cylinders side. <Ref. to EN(H6DO)-84, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>	Inspect DTC P0171, P0172, P0174 or P0175 using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
24 GROUP OF #3 AND #4 CYLINDERS Are there faults in #3 and #4 cylinders?	There is a malfunction.	Repair or replace faulty parts. NOTE: • Check the following items. Spark plugs Fuel injectors Ignition coil • If no abnormality is discovered, check for "17. D: IGNITION CONTROL SYSTEM" of #3 and #4 cylinders side. <Ref. to EN(H6DO)-84, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>	Inspect DTC P0171, P0172, P0174 or P0175 using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).>
25 GROUP OF #5 AND #6 CYLINDERS Are there faults in #5 and #6 cylinders?	There is a malfunction.	Repair or replace faulty parts. NOTE: • Check the following items: Spark plugs, fuel injector, ignition coil and compression ratio • If no abnormality is discovered, check for "17. IGNITION CONTROL SYSTEM" of #5 and #6 cylinders side. <Ref. to EN(H6DO)-84, IGNITION CONTROL SYSTEM, Diagnostics for Engine Starting Failure.>	Inspect DTC P0171, P0172, P0174 or P0175 using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).>
26 GROUP OF #1, #3 AND #5 CYLINDERS Are there faults in #1, #3 and #5 cylinders?	There is a malfunction.	Repair or replace faulty parts. NOTE: Check the following items. • Spark plugs • Fuel injectors • Skipping timing chain	Inspect DTC P0171, P0172, P0174 or P0175 using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
27 GROUP OF #2, #4 AND #6 CYLINDERS Are there faults in #2, #4 and #6 cylinders?	There is a malfunction.	Repair or replace faulty parts. NOTE: Check the following items. <ul style="list-style-type: none"> • Spark plugs • Fuel injectors • Compression ratio • Skipping timing chain 	Inspect DTC P0171, P0172, P0174 or P0175 using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).>
28 CYLINDER AT RANDOM Is the engine idle unstable?	Engine idle is unstable.	Inspect DTC P0171, P0172, P0174 or P0175 using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).>	Repair or replace faulty parts. NOTE: Check the following items. <ul style="list-style-type: none"> • Spark plugs • Fuel injectors • Compression ratio

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


AT:DTC P0327 — KNOCK SENSOR 1 CIRCUIT LOW INPUT (BANK 1 OR SINGLE SENSOR) —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
 - Poor driving performance
 - Knocking occurs.

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

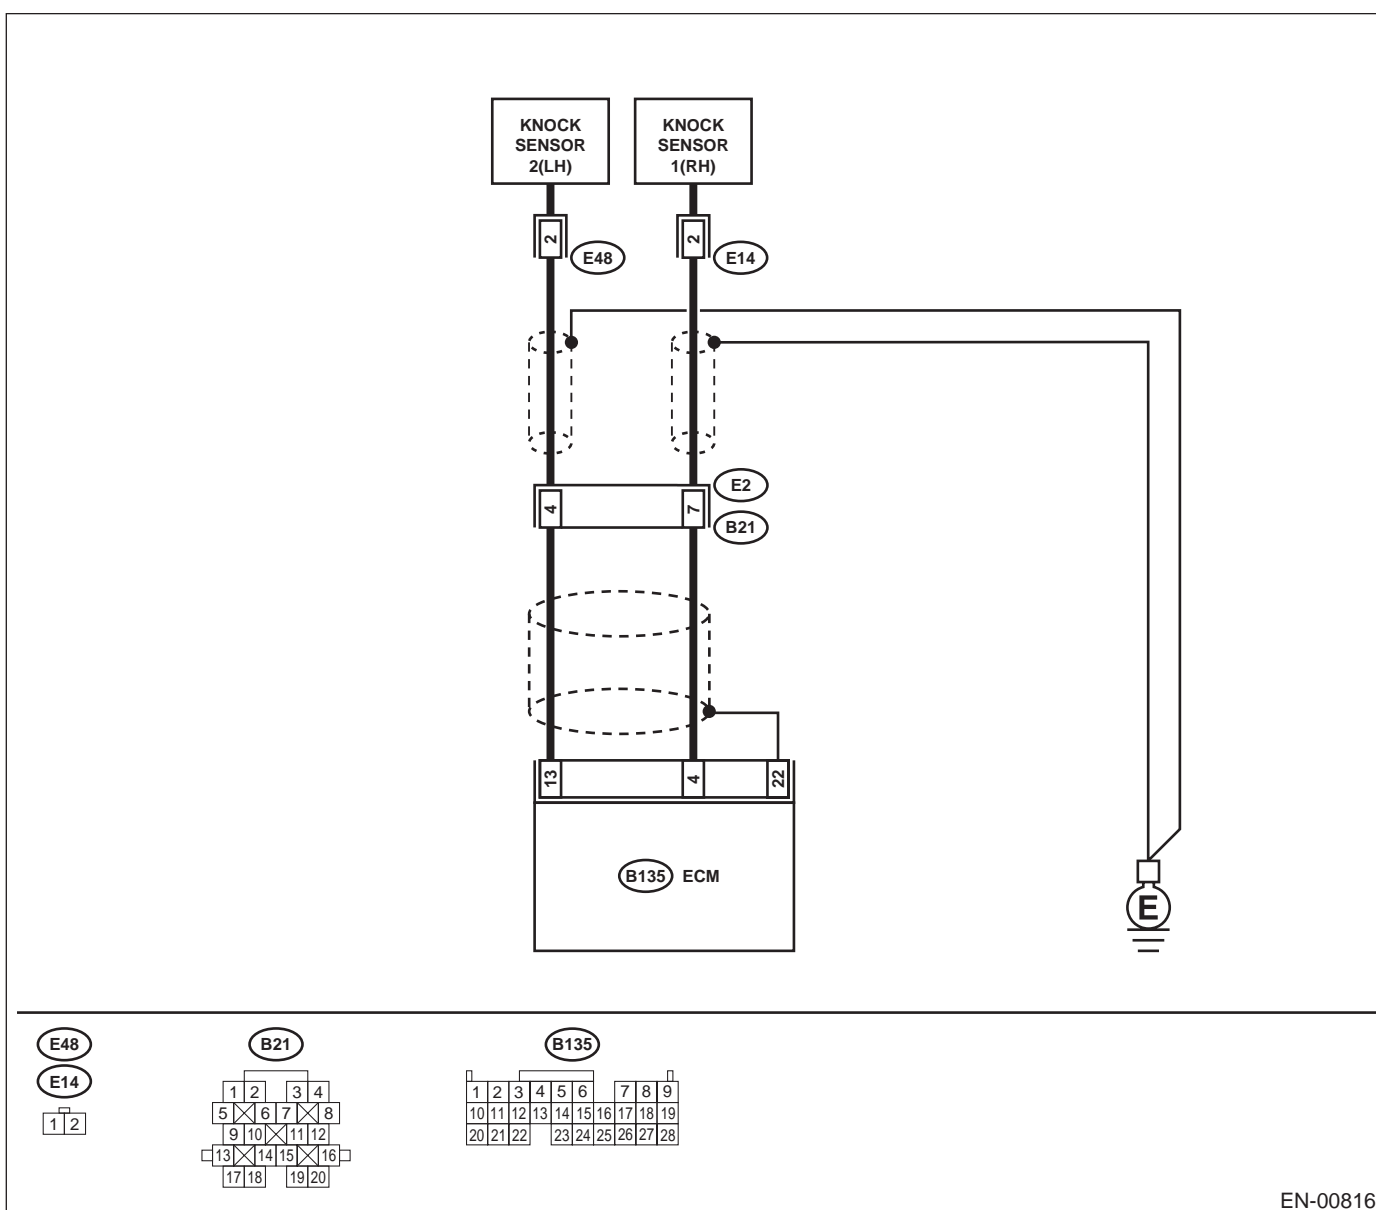

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK HARNESS BETWEEN KNOCK SENSOR 1 AND ECM CONNECTOR. 1) Turn ignition switch to OFF. 2) Disconnect connector from ECM. 3) Measure resistance between ECM harness connector and chassis ground. Connector & terminal (B135) No. 4 — Chassis ground: Does the measured value exceed the specified value?	700 k Ω	Go to step 2.	Repair harness and connector. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Open circuit in harness between knock sensor 1 (RH) and ECM connector • Poor contact in knock sensor 1 (RH) connector • Poor contact in coupling connector
2 CHECK KNOCK SENSOR 1 (RH). 1) Disconnect connector from knock sensor 1 (RH). 2) Measure resistance between knock sensor connector terminal and engine ground. Terminal No. 2 — Engine ground: Does the measured value exceed the specified value?	700 k Ω	Go to step 3.	Repair harness and connector. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Open circuit in harness between knock sensor 1 (RH) and ECM connector • Poor contact in knock sensor 1 (RH) connector • Poor contact in coupling connector
3 CHECK CONDITION OF KNOCK SENSOR 1 (RH) INSTALLATION. Is the knock sensor 1 (RH) installation bolt tightened securely?	Tightened securely.	Replace knock sensor 1 (RH). <Ref. to FU(H6DO)-32, Knock Sensor.>	Tighten knock sensor 1 (RH) installation bolt securely.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)


AU:DTC P0328 — KNOCK SENSOR 1 CIRCUIT HIGH INPUT (BANK 1 OR SINGLE SENSOR) —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
 - Poor driving performance
 - Knocking occurs.

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

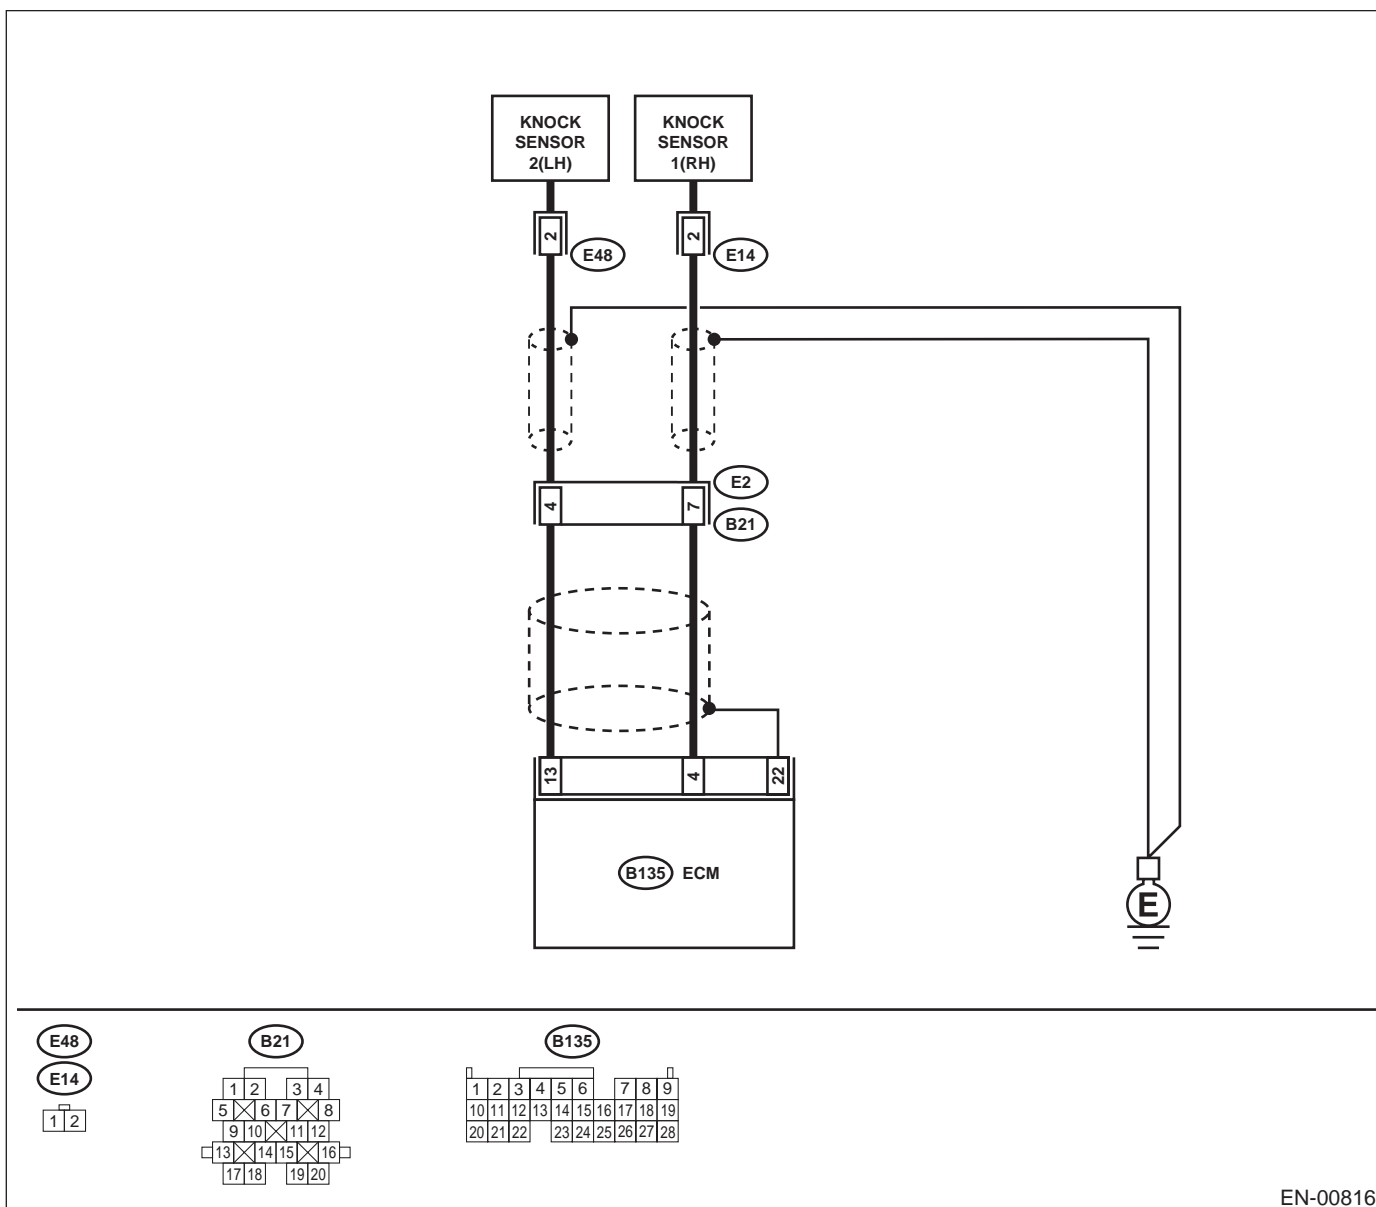

EN-00816

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1 CHECK HARNESS BETWEEN KNOCK SENSOR 1 (RH) AND ECM CONNECTOR. Measure resistance of harness between ECM connector and chassis ground. Connector & terminal (B135) No. 4 — Chassis ground: Is the measured value less than the specified value?</p>	400 kΩ	Go to step 2.	Go to step 3.
<p>2 CHECK KNOCK SENSOR 1 (RH). 1) Disconnect connector from knock sensor 1 (RH). 2) Measure resistance between knock sensor connector terminal and engine ground. Terminal No. 2 — Engine ground: Is the measured value less than the specified value?</p>	400 kΩ	Replace knock sensor 1 (RH). <Ref. to FU(H6DO)-32, Knock Sensor.>	Repair ground short circuit in harness between knock sensor 1 (RH) connector and ECM connector. NOTE: The harness between both connectors is shielded. Repair short circuit of harness together with shield.
<p>3 CHECK INPUT SIGNAL FOR ECM. 1) Connect connectors to ECM and knock sensor 1 (RH). 2) Turn ignition switch to ON. 3) Measure voltage between ECM and chassis ground. Connector & terminal (B135) No. 4 (+) — Chassis ground (-): Does the measured value exceed the specified value?</p>	2 V	Even if MIL lights up, the circuit has returned to a normal condition at this time. (However, the possibility of poor contact still remains.) NOTE: In this case, repair the following: • Poor contact in knock sensor 1 (RH) connector • Poor contact in ECM connector • Poor contact in coupling connector	Repair poor contact in ECM connector.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


AV:DTC P0332 — KNOCK SENSOR 2 CIRCUIT LOW INPUT (BANK 2) —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
 - Poor driving performance
 - Knocking occurs.

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

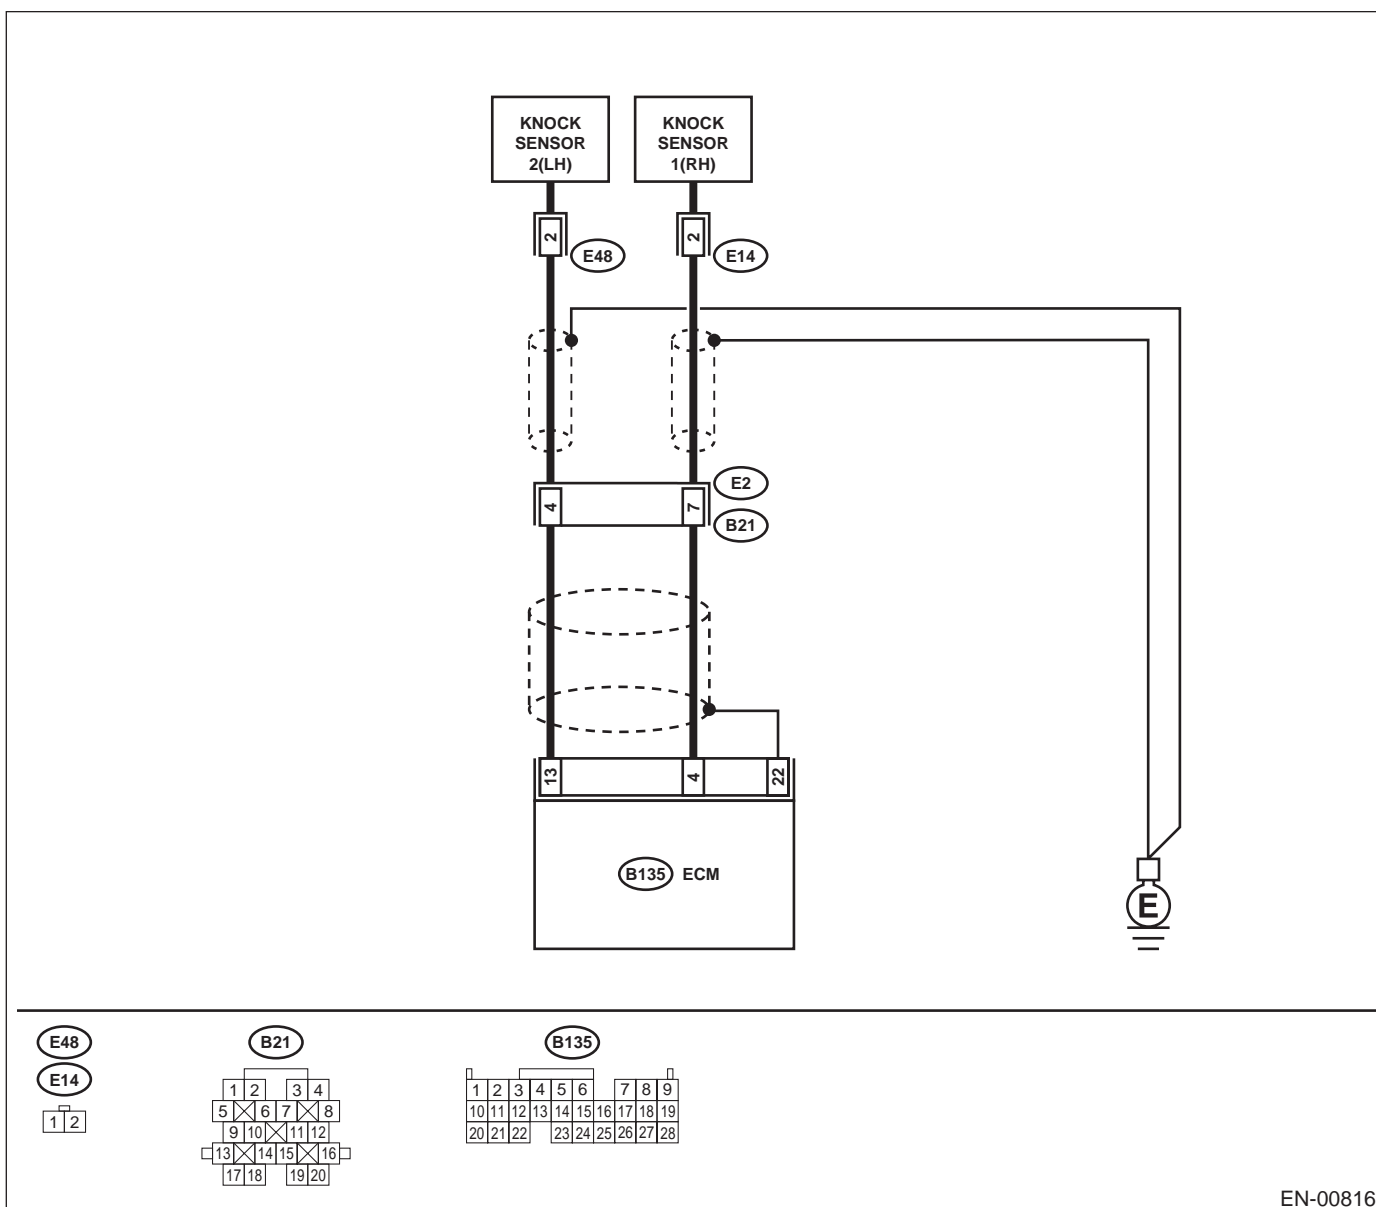

EN-00816

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK HARNESS BETWEEN KNOCK SENSOR 2 (LH) AND ECM CONNECTOR. 1) Turn ignition switch to OFF. 2) Disconnect connector from ECM. 3) Measure resistance between ECM harness connector and chassis ground. Connector & terminal (B135) No. 13 — Chassis ground: Does the measured value exceed the specified value?	700 k Ω	Go to step 2.	Repair harness and connector. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Open circuit in harness between knock sensor 2 (LH) and ECM connector • Poor contact in knock sensor 2 (LH) connector • Poor contact in coupling connector
2 CHECK KNOCK SENSOR 2 (LH). 1) Disconnect connector from knock sensor 2 (LH). 2) Measure resistance between knock sensor 2 (LH) connector terminal and engine ground. Terminal No. 2 — Engine ground: Does the measured value exceed the specified value?	700 k Ω	Go to step 3.	Repair harness and connector. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Open circuit in harness between knock sensor 2 (LH) and ECM connector • Poor contact in knock sensor 2 (LH) connector • Poor contact in coupling connector
3 CHECK CONDITION OF KNOCK SENSOR 2 (LH) INSTALLATION. Is the knock sensor 2 (LH) installation bolt tightened securely?	Tightened securely.	Replace knock sensor 2 (LH). <Ref. to FU(H6DO)-32, Knock Sensor.>	Tighten knock sensor 2 (LH) installation bolt securely.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


AW:DTC P0333 — KNOCK SENSOR 2 CIRCUIT HIGH INPUT (BANK 2) —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
 - Poor driving performance
 - Knocking occurs.

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

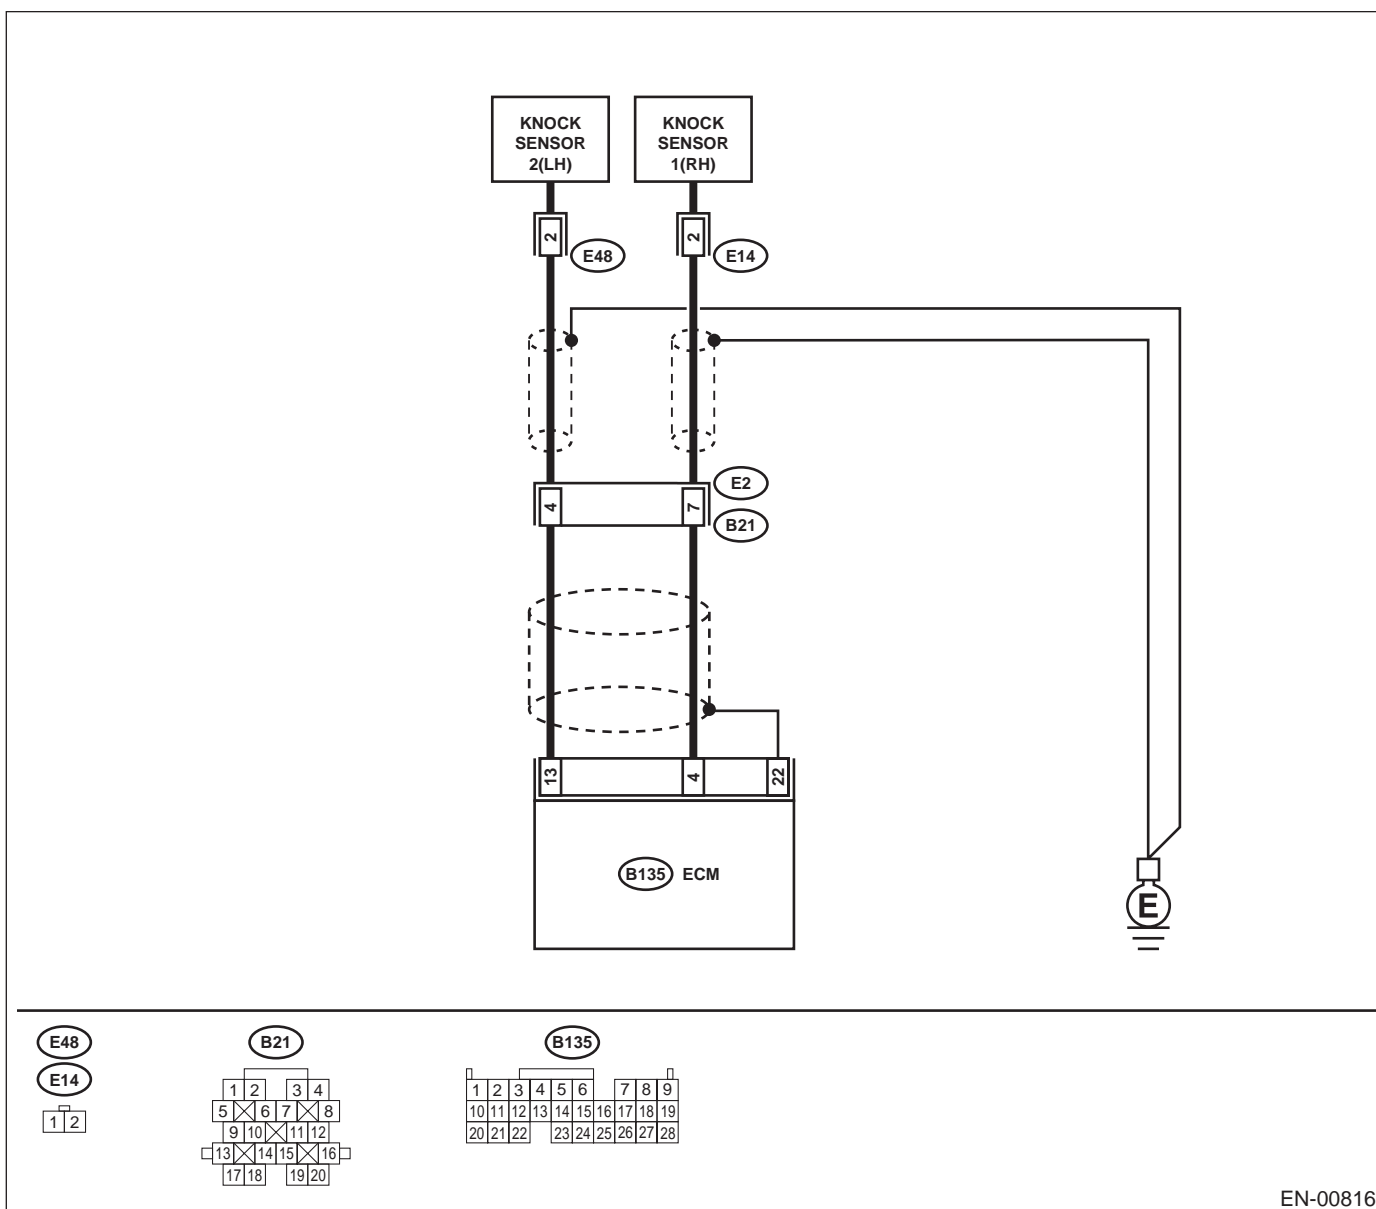

EN-00816

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1 CHECK HARNESS BETWEEN KNOCK SENSOR 2 (LH) AND ECM CONNECTOR. Measure resistance of harness between ECM connector and chassis ground. Connector & terminal (B135) No. 13 — Chassis ground: Is the measured value less than the specified value?</p>	400 kΩ	Go to step 2.	Go to step 3.
<p>2 CHECK KNOCK SENSOR 2 (LH). 1) Disconnect connector from knock sensor 2 (LH). 2) Measure resistance between knock sensor 2 (LH) connector terminal and engine ground. Terminal No. 2 — Engine ground: Is the measured value less than the specified value?</p>	400 kΩ	Replace knock sensor 2 (LH). <Ref. to FU(H6DO)-32, Knock Sensor.>	Repair ground short circuit in harness between knock sensor 2 (LH) connector and ECM connector. NOTE: The harness between both connectors is shielded. Repair short circuit of harness together with shield.
<p>3 CHECK INPUT SIGNAL FOR ECM. 1) Connect connectors to ECM and knock sensor 2 (LH). 2) Turn ignition switch to ON. 3) Measure voltage between ECM and chassis ground. Connector & terminal (B135) No. 13 (+) — Chassis ground (-): Does the measured value exceed the specified value?</p>	2 V	Even if MIL lights up, the circuit has returned to a normal condition at this time. (However, the possibility of poor contact still remains.) NOTE: In this case, repair the following: • Poor contact in knock sensor connector 2 (LH) • Poor contact in ECM connector • Poor contact in coupling connector	Repair poor contact in ECM connector.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)


AX:DTC P0335 — CRANKSHAFT POSITION SENSOR “A” CIRCUIT —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
 - Engine stalls.
 - Failure of engine to start

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

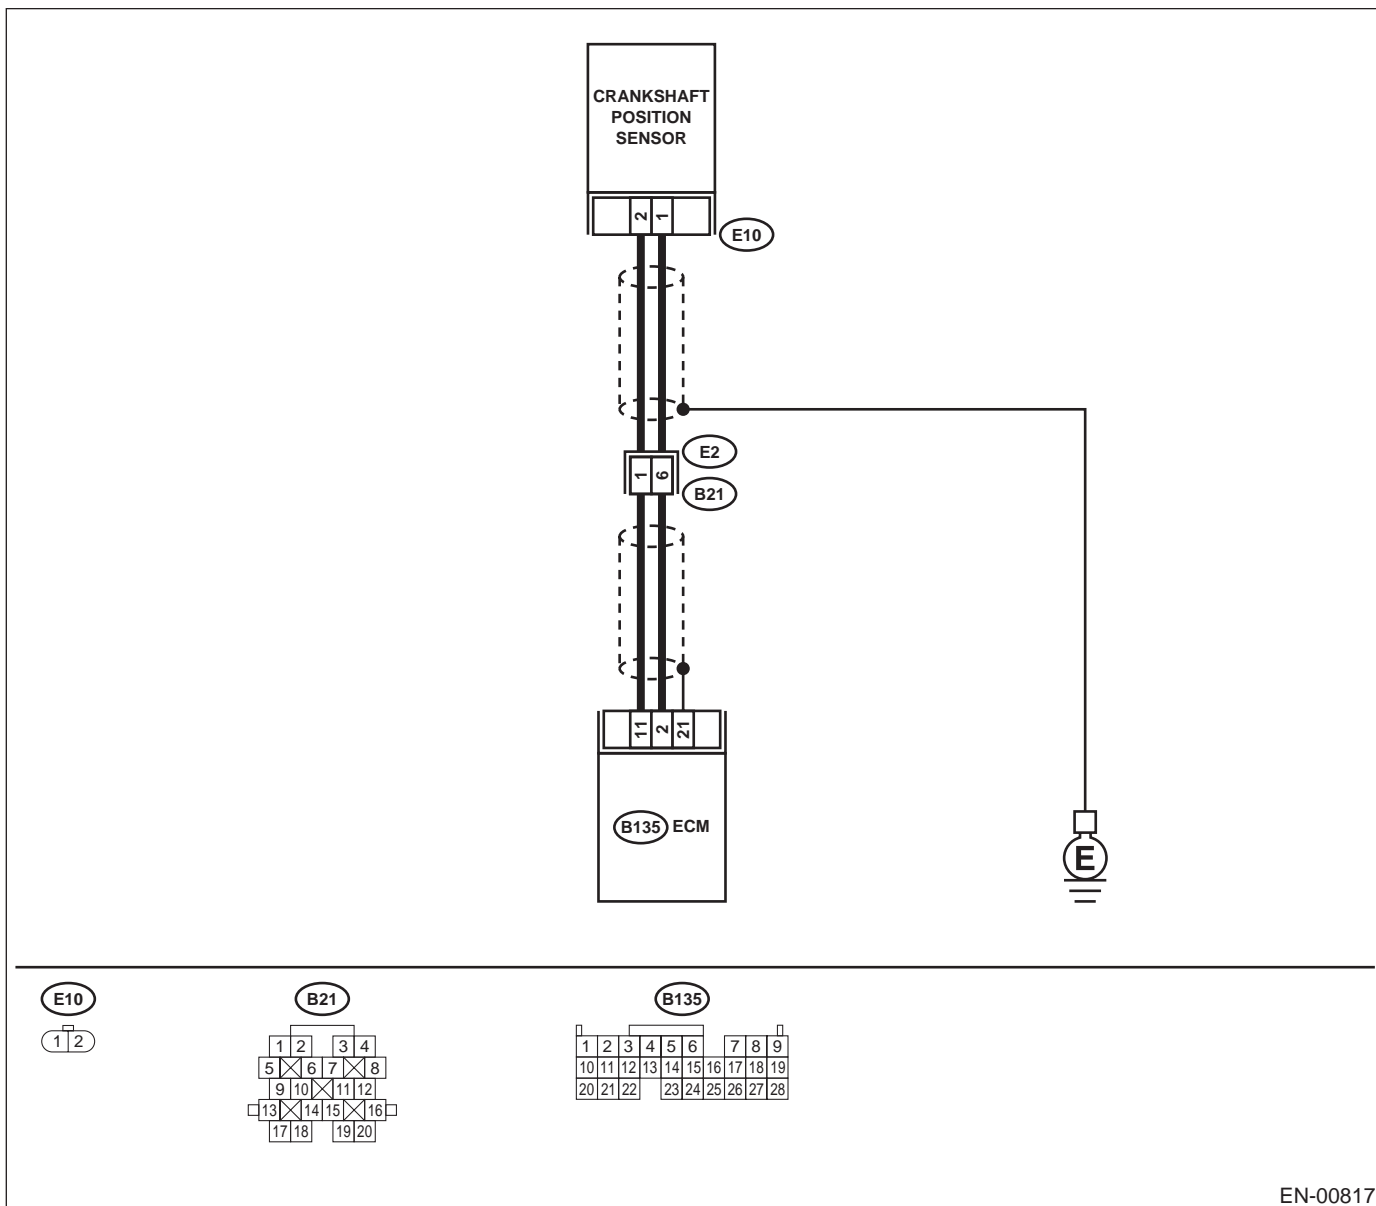

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK HARNESS BETWEEN CRANKSHAFT POSITION SENSOR AND ECM. 1) Turn ignition switch to OFF. 2) Disconnect connector from ECM. 3) Measure resistance between crankshaft position sensor and ECM. Connector & terminal (E10) No. 1 — (B135) No. 2: (E10) No. 2 — (B135) No. 11: Is the measured value less than the specified value?	1 Ω	Go to step 2.	Repair open circuit between crankshaft position sensor and ECM.
2 CHECK HARNESS BETWEEN CRANKSHAFT POSITION SENSOR AND ECM. Measure resistance between crankshaft position sensor and engine ground. Connector & terminal (E10) No. 1 — Engine ground: (E10) No. 2 — Engine ground: Does the measured value exceed the specified value?	1 MΩ	Go to step 3.	Repair ground short circuit between crankshaft position sensor and ECM.
3 CHECK CONDITION OF CRANKSHAFT POSITION SENSOR. Is the crankshaft position sensor installation bolt tightened securely?	Tightened securely.	Go to step 4.	Tighten crankshaft position sensor installation bolt securely.
4 CHECK CRANKSHAFT POSITION SENSOR. 1) Turn ignition switch to OFF. 2) Remove crankshaft position sensor. 3) Measure resistance between connector terminals of crankshaft position sensor. Terminals No. 1 — No. 2: Is the measured value within the specified range?	800 — 1300 kΩ	Go to step 5.	Replace crankshaft position sensor. <Ref. to FU(H6DO)-30, REMOVAL, Crankshaft Position Sensor.>
5 CHECK POOR CONTACT. Check poor contact in ECM connector. Is there poor contact in ECM connector?	There is poor contact.	Repair poor contact in ECM connector.	Replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>


DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

AY:DTC P0336 — CRANKSHAFT POSITION SENSOR “A” CIRCUIT RANGE/ PERFORMANCE —

- **DTC DETECTING CONDITION:**
 - Tow consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Engine stalls.
 - Failure of engine to start

CAUTION:
After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

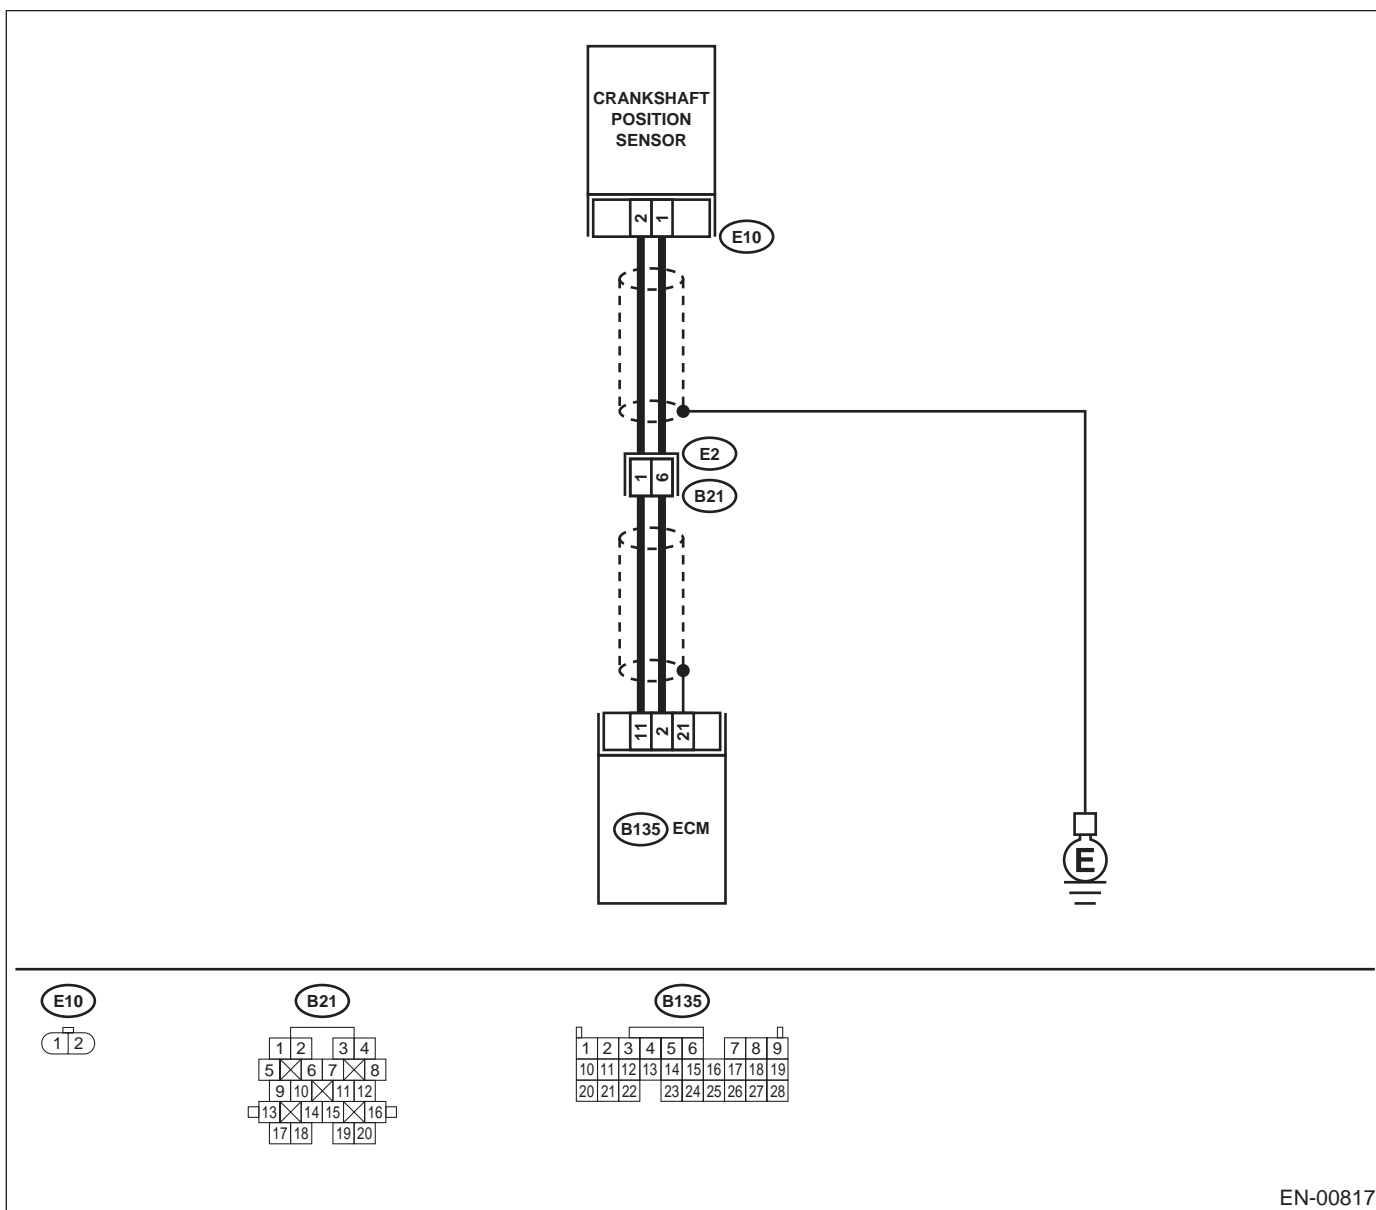

EN-00817

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect DTC P0335 using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).>	Go to step 2 .
2 CHECK CONDITION OF CRANKSHAFT POSITION SENSOR. Turn ignition switch to OFF. Is the crankshaft position sensor installation bolt tightened securely?	Tightened securely.	Go to step 3 .	Tighten crankshaft position sensor installation bolt securely.
3 CHECK CRANKSHAFT PLATE. Are crankshaft plate teeth cracked or damaged?	Cracked or damaged.	Replace crankshaft plate.	Go to step 4 .
4 CHECK INSTALLATION CONDITION OF TIMING CHAIN. Turn crankshaft using ST, and align alignment mark on crankshaft sprocket with alignment mark on cylinder block. ST 18252AA000 CRANKSHAFT SOCKET Is timing chain dislocated from its proper position?	Dislocated from proper position.	Repair installation condition of timing chain. <Ref. to ME(H6DO)-41, Timing Chain Assembly.>	Replace crankshaft position sensor. <Ref. to FU(H6DO)-30, Crankshaft Position Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


AZ:DTC P0340 — CAMSHAFT POSITION SENSOR “A” CIRCUIT (BANK 1 OR SINGLE SENSOR) —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
 - Engine stalls.
 - Failure of engine to start

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

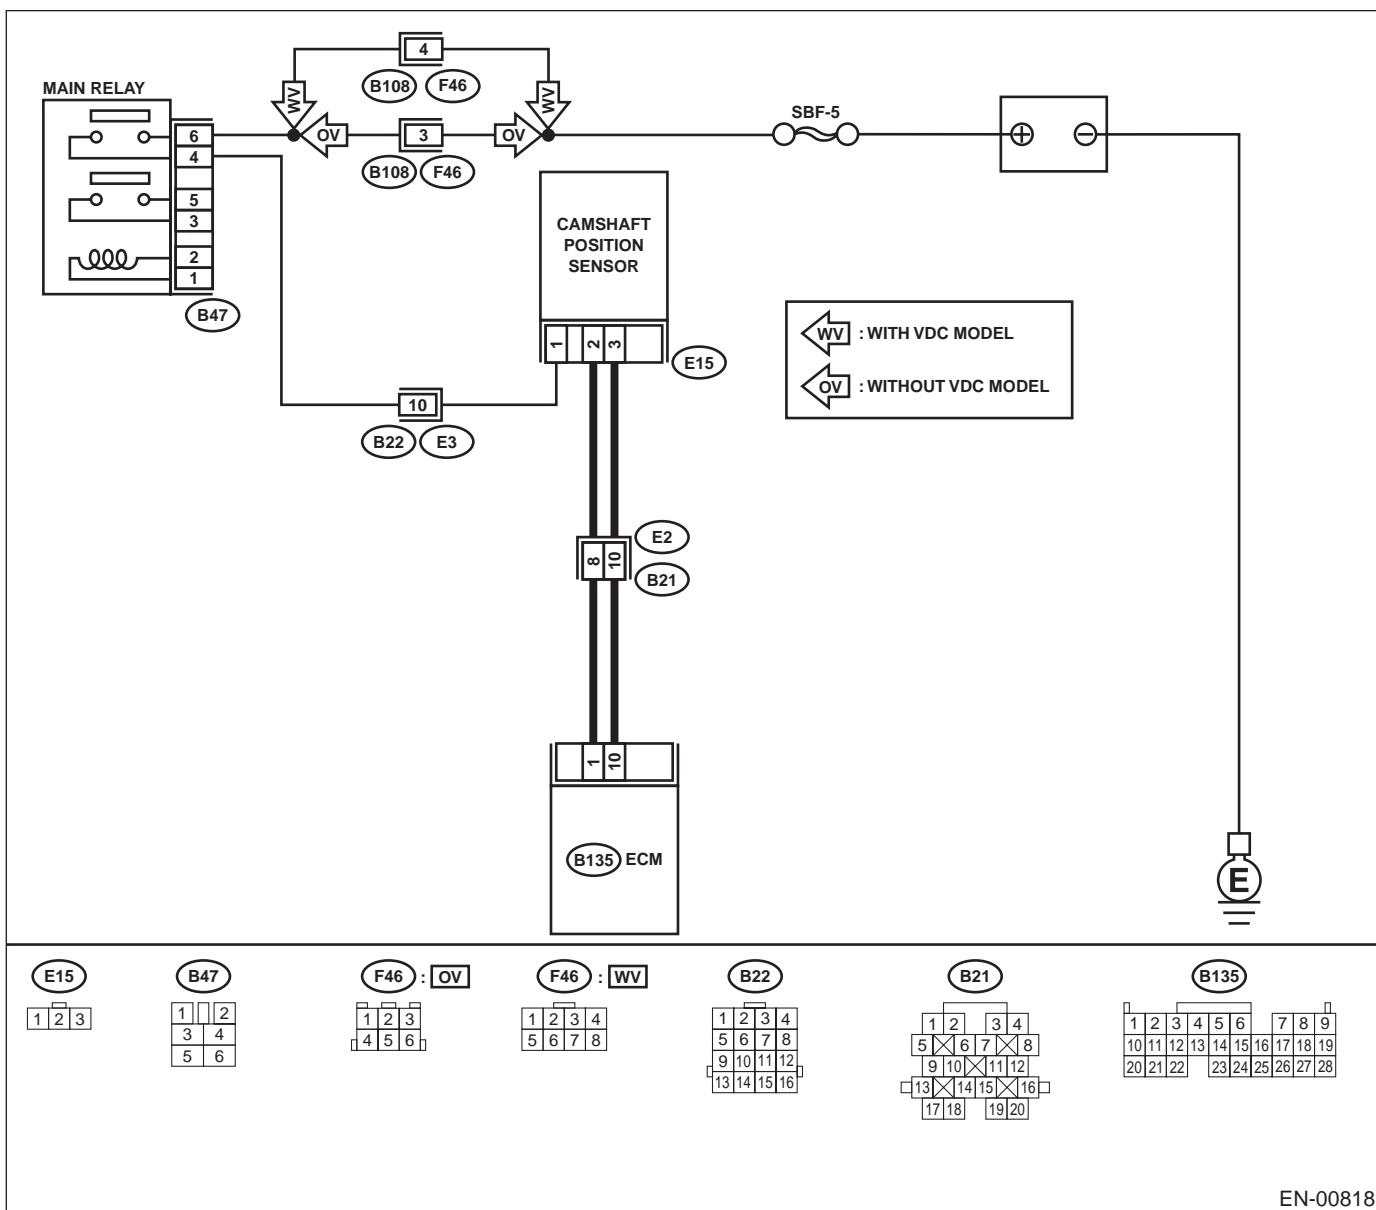

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK POWER SUPPLY TO CAMSHAFT POSITION SENSOR. 1) Turn ignition switch to OFF. 2) Disconnect connector from camshaft position sensor. 3) Measure voltage between camshaft position sensor and engine ground. Connector & terminal (E15) No. 1 (+) — Engine ground (-): Does the measured value exceed the specified value?	10V	Repair ground short circuit between main relay connector and camshaft position sensor connector.	Go to step 2.
2 CHECK POWER SUPPLY TO CAMSHAFT POSITION SENSOR. 1) Turn ignition switch to ON. 2) Measure voltage between camshaft position sensor and engine ground. Connector & terminal (E15) No. 1 (+) — Engine ground (-): Does the measured value exceed the specified value?	10V	Go to step 3.	Repair open or ground short circuit between main relay connector and camshaft position sensor connector.
3 CHECK HARNESS BETWEEN CAMSHAFT POSITION SENSOR AND ECM. 1) Turn ignition switch to OFF. 2) Disconnect connector from ECM. 3) Measure resistance between camshaft position sensor and ECM. Connector & terminal (E15) No. 2 — (B135) No. 1: (E15) No. 3 — (B135) No. 10: Is the measured value less than the specified value?	1 Ω	Go to step 4.	Repair open circuit between camshaft position sensor and ECM.
4 CHECK HARNESS BETWEEN CAMSHAFT POSITION SENSOR AND ECM. Measure resistance between camshaft position sensor and engine ground. Connector & terminal (E15) No. 2 — Engine ground: (E15) No. 3 — Engine ground: Does the measured value exceed the specified value?	1 MΩ	Go to step 5.	Repair ground short circuit between camshaft position sensor and ECM.
5 CHECK CONDITION OF CAMSHAFT POSITION SENSOR. Is the camshaft position sensor installation bolt tightened securely?	Tightened securely.	Go to step 6.	Tighten camshaft position sensor installation bolt securely.
6 CHECK CAMSHAFT POSITION SENSOR. Check camshaft position sensor wave form. <Ref. to EN(H6DO)-30, WAVEFORM, MEASUREMENT, Engine Control Module (ECM) I/O Signal.> Is any abnormality found in waveform?	Normal waveform.	Go to step 7.	Replace camshaft position sensor. <Ref. to FU(H6DO)-31, Camshaft Position Sensor.>
7 CHECK POOR CONTACT. Check poor contact in ECM connector. Is there poor contact in ECM connector?	There is poor contact.	Repair poor contact in ECM connector.	Replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


BA:DTC P0341 — CAMSHAFT POSITION SENSOR “A” CIRCUIT RANGE/PERFORMANCE (BANK 1 OR SINGLE SENSOR) —

- **DTC DETECTING CONDITION:**
 - Tow consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Engine stalls.
 - Failure of engine to start

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>

• **WIRING DIAGRAM:**

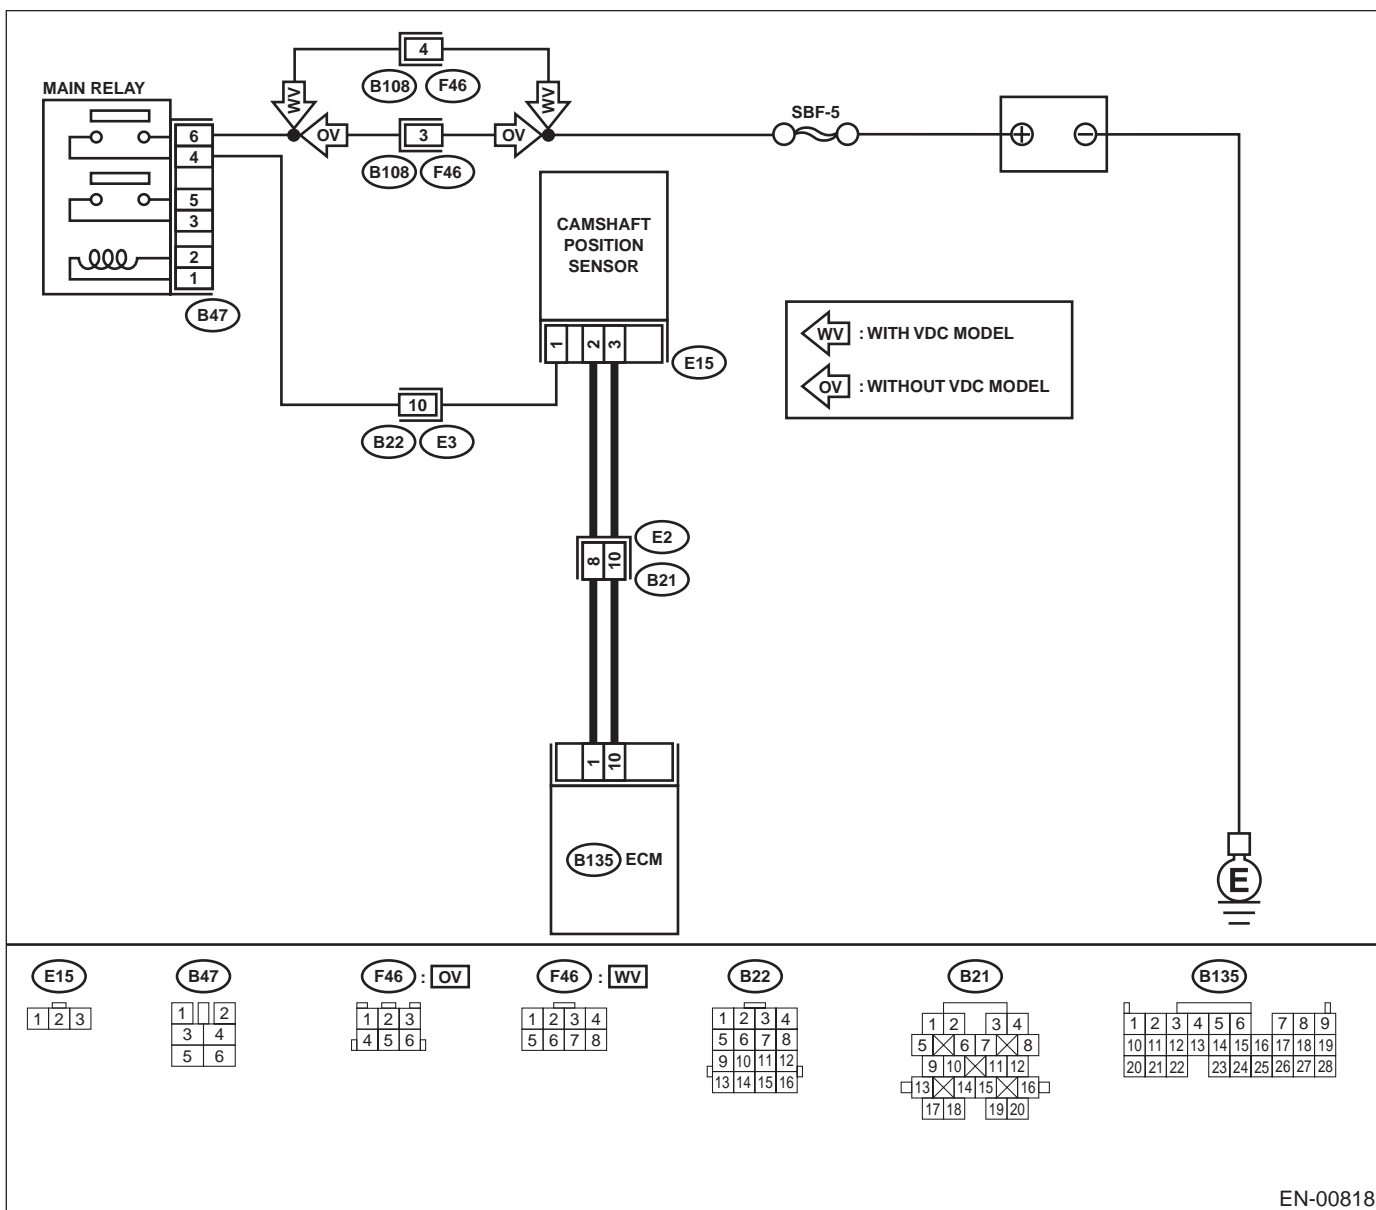

EN-00818

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect DTC P0340 using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).>	Go to step 2.
2 CHECK CONDITION OF CAMSHAFT POSITION SENSOR. Is the camshaft position sensor installation bolt tightened securely?	Tightened securely.	Go to step 3.	Tighten camshaft position sensor installation bolt securely.
3 CHECK CAMSHAFT SPROCKET. Remove front chain cover. <Ref. to ME(H6DO)-39, Front Chain Cover.> Are camshaft sprocket teeth cracked or damaged?	Cracked or damaged.	Replace camshaft sprocket. <Ref. to ME(H6DO)-46, Camshaft Sprocket.>	Go to step 4.
4 CHECK INSTALLATION CONDITION OF TIMING CHAIN. Turn camshaft using ST, and align alignment mark on camshaft sprocket with alignment mark. ST 18231AA000 CAMSHAFT SPROCKET WRENCH Is timing belt dislocated from its proper position?	Dislocated from proper position.	Repair installation condition of timing chain. <Ref. to ME(H6DO)-41, Timing Chain Assembly.>	Replace camshaft position sensor. <Ref. to FU(H6DO)-31, Camshaft Position Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

BB:DTC P0400 — EXHAUST GAS RECIRCULATION FLOW —

• **DTC DETECTING CONDITION:**

- Two consecutive driving cycles with fault


• **TROUBLE SYMPTOM:**

- Poor driving performance on low engine speed
- Erroneous idling
- Poor driving performance.

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

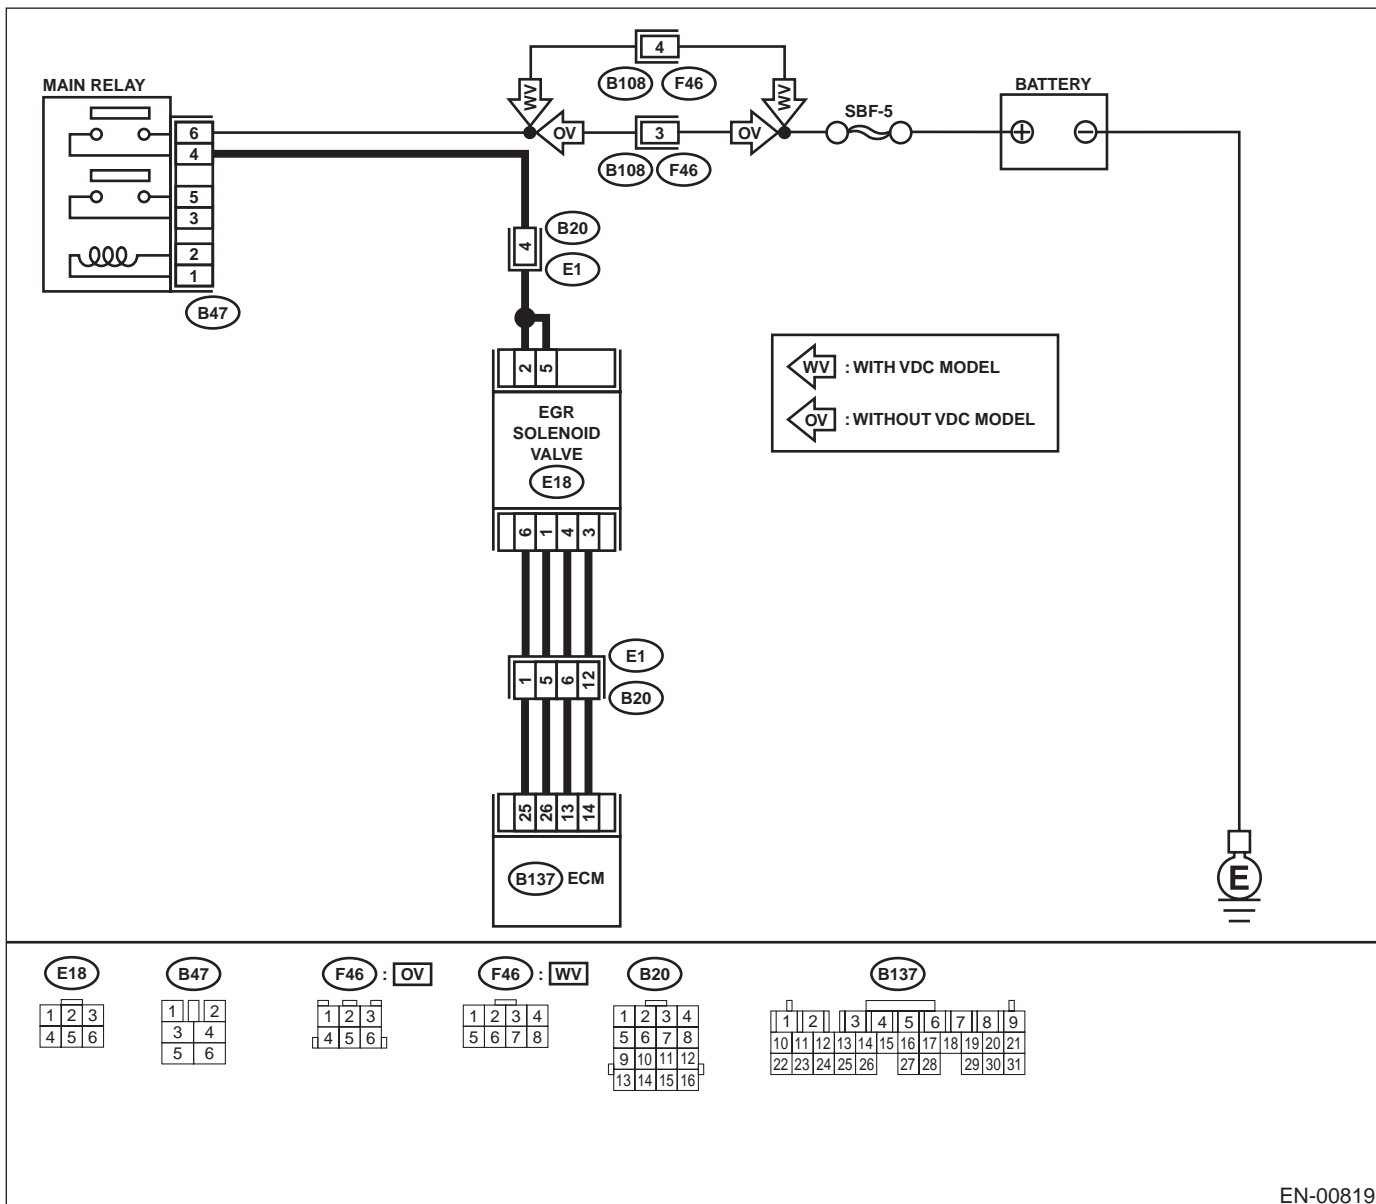

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).>	Go to step 2.
2 CHECK CURRENT DATA. 1) Start engine. 2) Rear the data of intake manifold absolute pressure signal using Subaru Select Monitor or OBD-II general scan tool. Does the measured value exceed the specified value? NOTE: • Subaru Select Monitor <Ref. to EN(H6DO)-38, Subaru Select Monitor.> • OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	53.3 kPa (400 mmHg, 15.75 inHg)	Check if EGR valve, intake manifold pressure sensor and throttle body are securely installed.	Go to step 3.
3 CHECK POWER SUPPLY TO EGR SOLENOID VALVE. 1) Disconnect connector from EGR solenoid valve. 2) Turn ignition switch to ON. 3) Measure voltage between EGR solenoid valve and engine ground. Connector & terminal (E18) No. 2 — Engine ground: (E18) No. 5 — Engine ground: Does the measured value exceed the specified value?	10 V	Go to step 4.	Repair open circuit in harness between main relay and EGR solenoid valve connector.
4 CHECK EGR SOLENOID VALVE. Measure resistance between EGR solenoid valve terminals. NOTE: Make sure there are no foreign objects caught between EGR solenoid valve and valve seat. Terminals No. 1 — No. 2: No. 3 — No. 2: No. 4 — No. 5: No. 6 — No. 5: Is the measured value within the specified range?	20 — 30 Ω	Go to step 5.	Replace EGR solenoid valve. <Ref. to EC(H6DO)-10, EGR Valve.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
5 CHECK OUTPUT SIGNAL FROM ECM. 1) Turn ignition switch to OFF. 2) Connect connectors to ECM and EGR solenoid valve. 3) Turn ignition switch to ON. 4) Measure voltage between ECM and chassis ground. Connector & terminal (B137) No. 25 — Chassis ground: (B137) No. 26 — Chassis ground: (B137) No. 13 — Chassis ground: (B137) No. 14 — Chassis ground: Does the measured value fluctuate within the specified range?	0 — 10 V	Repair poor contact in ECM connector.	Go to step 6.
6 CHECK HARNESS BETWEEN EGR SOLENOID VALVE AND ECM CONNECTOR. 1) Turn ignition switch to OFF. 2) Disconnect connectors from EGR solenoid valve and ECM. 3) Measure resistance of harness between EGR solenoid valve and ECM connector. Connector & terminal (B137) No. 25 — (E18) No. 6: (B137) No. 26 — (E18) No. 1: (B137) No. 13 — (E18) No. 4: (B137) No. 14 — (E18) No. 3: Is the measured value less than the specified value?	1 Ω	Go to step 7.	Repair open circuit in harness between ECM and EGR solenoid valve connector.
7 CHECK HARNESS BETWEEN EGR SOLENOID VALVE AND ECM CONNECTOR. Measure resistance of harness between EGR solenoid valve and chassis ground. Connector & terminal (B137) No. 25 — Chassis ground: (B137) No. 26 — Chassis ground: (B137) No. 13 — Chassis ground: (B137) No. 14 — Chassis ground: Does the measured value exceed the specified value?	1 MΩ	Go to step 8.	Repair short circuit in harness between main relay and EGR solenoid valve connector.
8 CHECK POOR CONTACT. Check poor contact in ECM and EGR solenoid valve connector. Is there poor contact in ECM and EGR solenoid valve connector?	There is poor contact.	Repair poor contact in ECM and EGR solenoid valve connector.	Even if MIL lights up, the circuit has returned to a normal condition at this time.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

MEMO:

EN(H6DO)-227

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)


BC:DTC P0420 — CATALYST SYSTEM EFFICIENCY BELOW THRESHOLD (BANK 1) —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Engine stalls.
 - Idle mixture is out of specifications.

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>

• **WIRING DIAGRAM:**

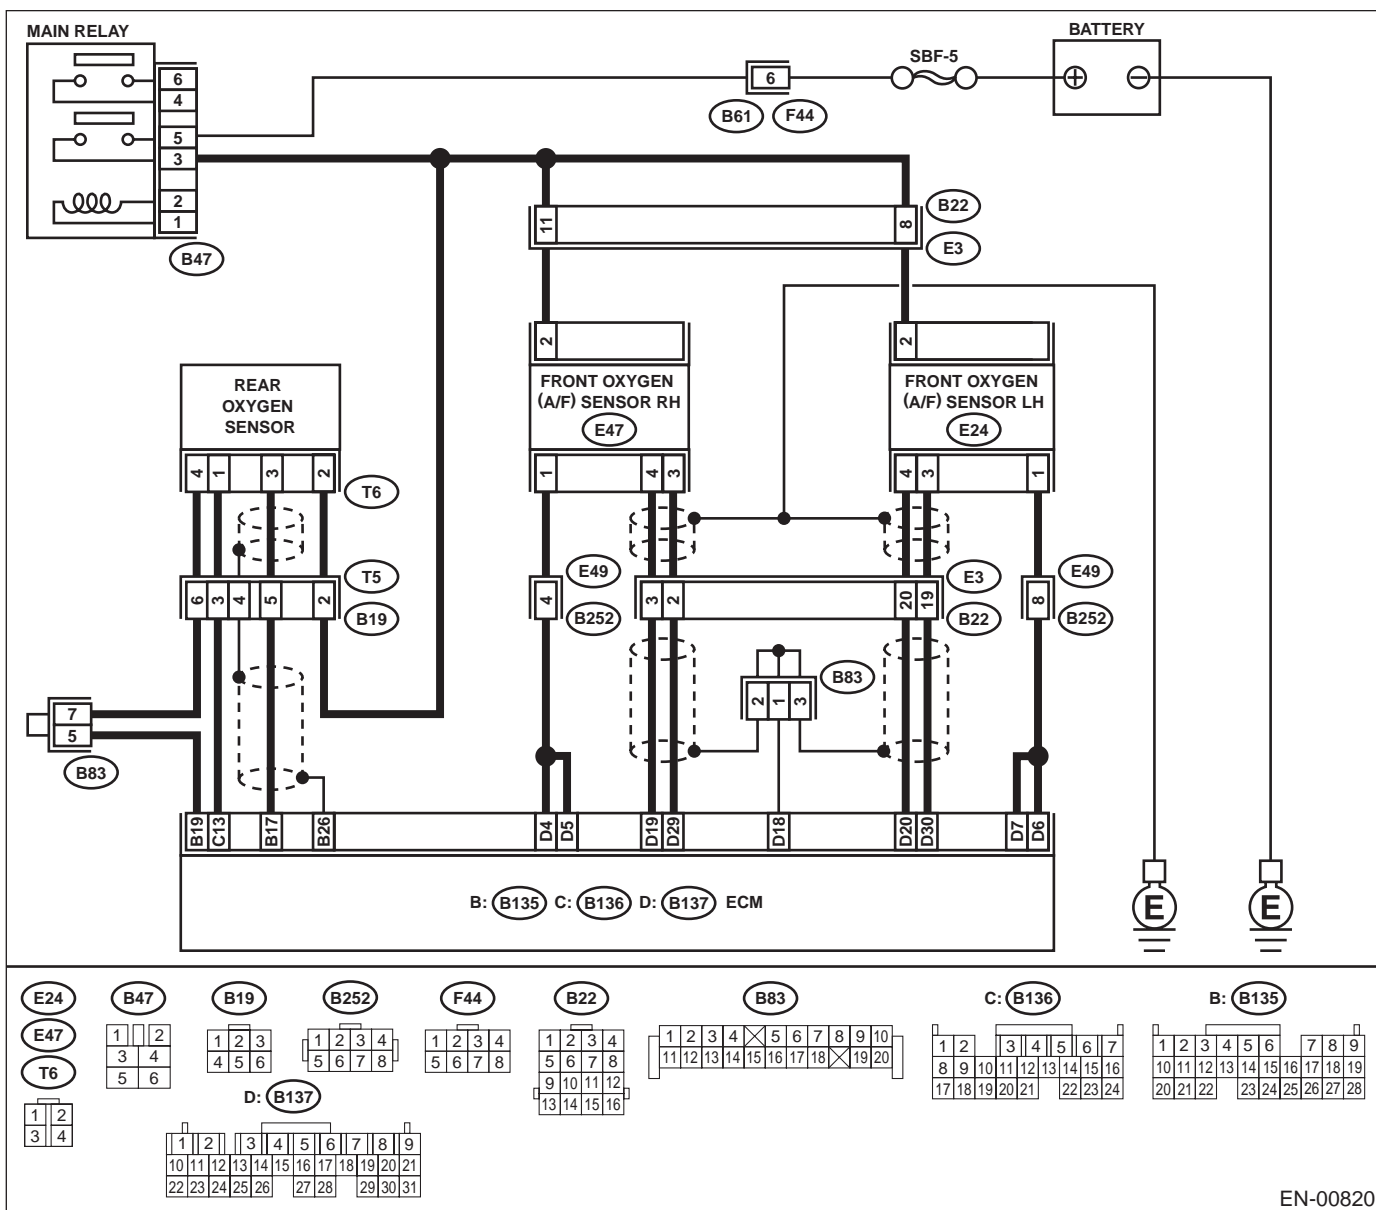

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0420.	Go to step 2.
2 CHECK EXHAUST SYSTEM. Check for gas leaks or air suction caused by loose or dislocated nuts and bolts, and open hole at exhaust pipes. NOTE: Check the following positions. <ul style="list-style-type: none"> • Between cylinder head and front exhaust pipe • Between front exhaust pipe and front catalytic converter • Between front catalytic converter and rear catalytic converter Is there a fault in exhaust system?	There is a malfunction.	Repair or replace exhaust system.	Go to step 3.
3 CHECK REAR CATALYTIC CONVERTER. Separate rear catalytic converter from rear exhaust pipe. Is there damage at rear face of rear catalyst?	There is damage.	Replace front catalytic converter <Ref. to EC(H6DO)-3, Front Catalytic Converter.> and rear catalytic converter <Ref. to EC(H6DO)-6, Rear Catalytic Converter.>.	Go to step 4.
4 CHECK FRONT CATALYTIC CONVERTER. Remove front catalytic converter. Is there damage at rear face or front face of front catalyst?	There is damage.	Replace front catalytic converter. <Ref. to EC(H6DO)-3, Front Catalytic Converter.>	Contact with SOA (distributor) service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

BD:DTC P0442 — EVAPORATIVE EMISSION CONTROL SYSTEM LEAK DETECTED (SMALL LEAK) —

• **DTC DETECTING CONDITION:**

- Two consecutive driving cycles with fault

• **TROUBLE SYMPTOM:**

- Gasoline smell
- There is a hole of more than 1.0 mm (0.04 in) dia. in evaporation system or fuel tank.


CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

• WIRING DIAGRAM:

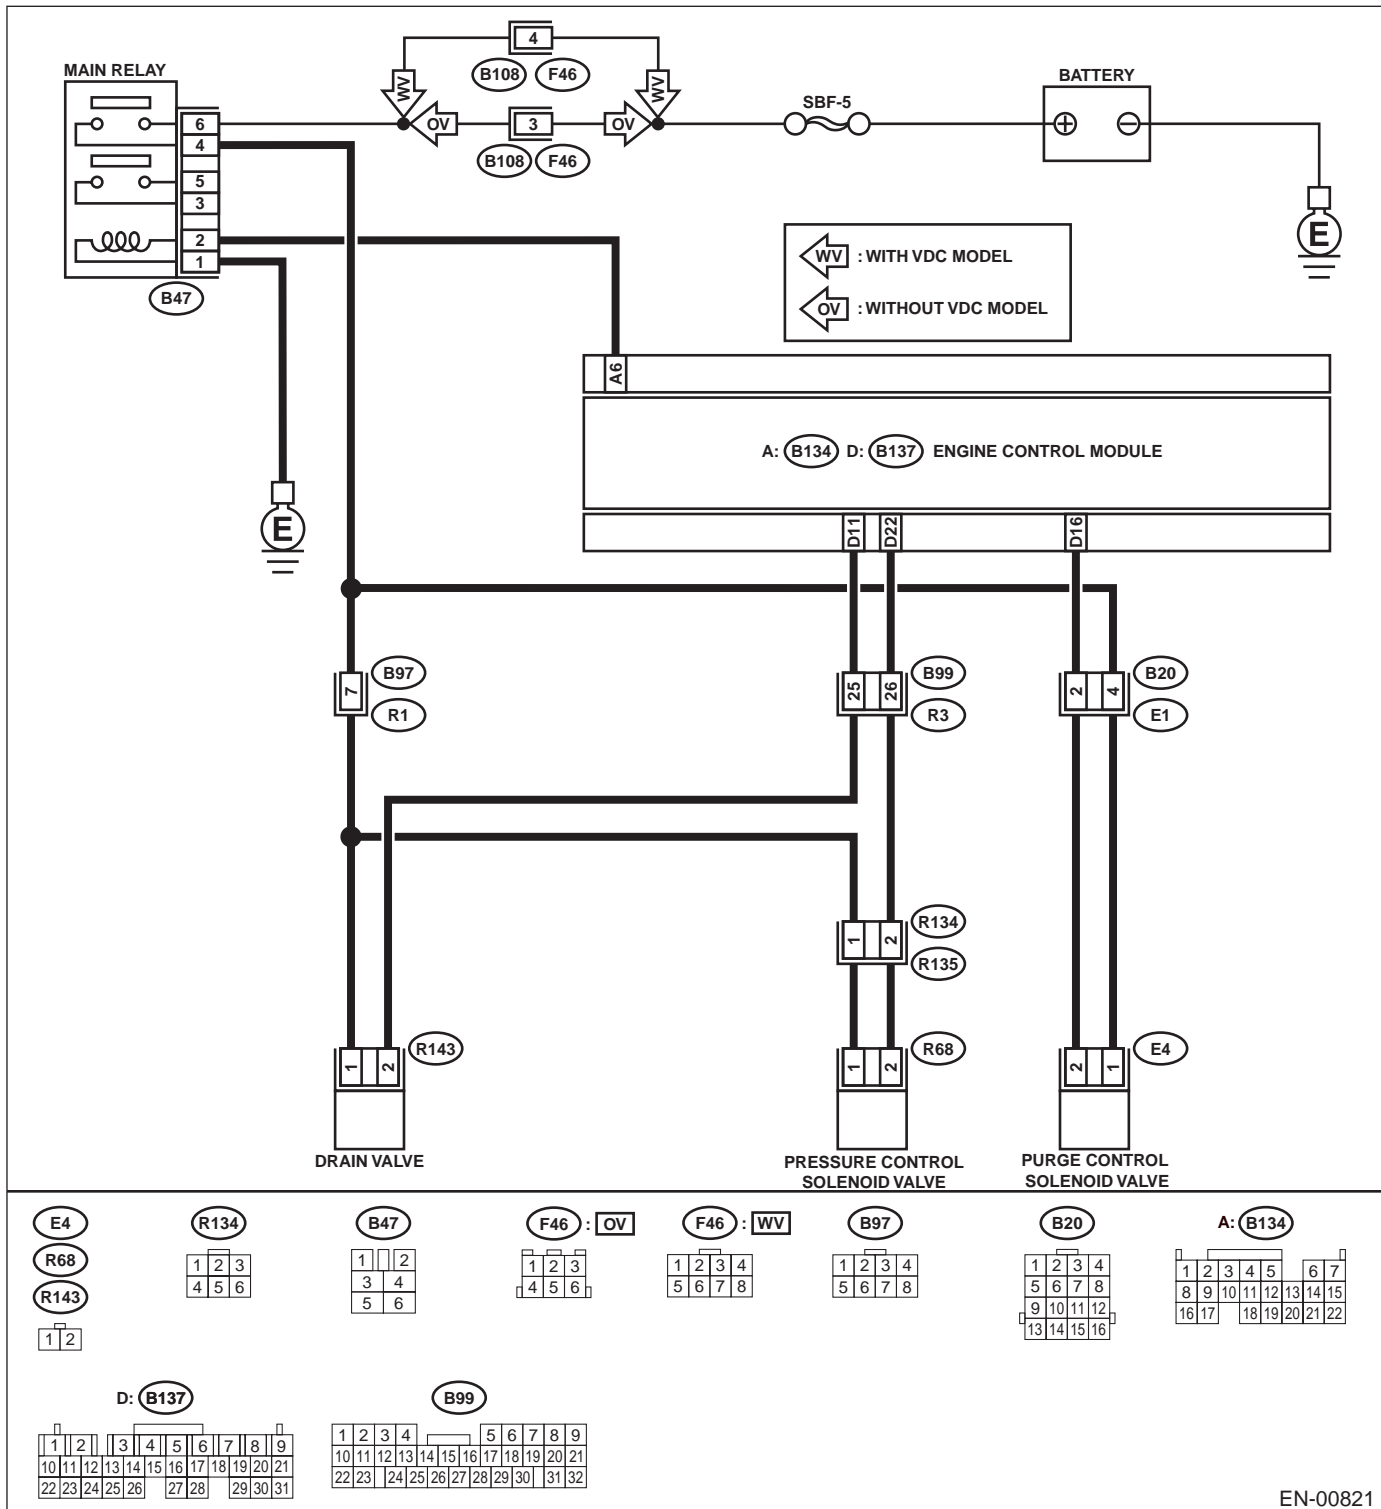

EN-00821

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).>	Go to step 2.
2 CHECK FUEL FILLER CAP. 1) Turn ignition switch to OFF. 2) Check the fuel filler cap. NOTE: The DTC code is stored in memory if fuel filler cap is or was loose or if the cap chain was caught while tightening. Is the fuel filler cap tightened securely?	Tightened securely.	Go to step 3.	Tighten fuel filler cap securely.
3 CHECK FUEL FILLER PIPE PACKING. Is there any damage to the seal between fuel filler cap and fuel filler pipe?	There is a malfunction.	Repair or replace fuel filler cap and fuel filler pipe. <Ref. to FU(H6DO)-61, Fuel Filler Pipe.>	Go to step 4.
4 CHECK DRAIN VALVE. 1) Connect test mode connector. 2) Turn ignition switch to ON. 3) Operate drain valve. NOTE: Drain valve operation can also be executed using Subaru Select Monitor. For the procedure, refer to "Compulsory Valve Operation Check Mode". <Ref. to EN(H6DO)-60, Compulsory Valve Operation Check Mode.> Does drain valve produce operating sound?	Operating sound produced.	Go to step 5.	Replace drain valve. <Ref. to EC(H6DO)-20, Drain Valve.>
5 CHECK PURGE CONTROL SOLENOID VALVE. Operate purge control solenoid valve. NOTE: Purge control solenoid valve operation can also be executed using Subaru Select Monitor. For the procedure, refer to "Compulsory Valve Operation Check Mode". <Ref. to EN(H6DO)-60, Compulsory Valve Operation Check Mode.> Does purge control solenoid valve produce operating sound?	Operating sound produced.	Go to step 6.	Replace purge control solenoid valve. <Ref. to EC(H6DO)-8, Purge Control Solenoid Valve.>
6 CHECK PRESSURE CONTROL SOLENOID VALVE. Operate pressure control solenoid valve. NOTE: Pressure control solenoid valve operation can also be executed using Subaru Select Monitor. For the procedure, refer to "Compulsory Valve Operation Check Mode". <Ref. to EN(H6DO)-60, Compulsory Valve Operation Check Mode.> Does pressure control solenoid valve produce operating sound?	Operating sound produced.	Go to step 7.	Replace pressure control solenoid valve. <Ref. to EC(H6DO)-16, Pressure Control Solenoid Valve.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
7 CHECK EVAPORATIVE EMISSION CONTROL SYSTEM LINE. Turn ignition switch to OFF. Is there a hole of more than 1.0 mm (0.04 in) dia. on evaporation line?	There is a hole.	Repair or replace evaporation line. <Ref. to FU(H6DO)-78, Fuel Delivery, Return and Evaporation Lines.>	Go to step 8 .
8 CHECK CANISTER. Is canister damaged or is there a hole of more than 1.0 mm (0.04 in) dia. in it?	Damaged or there is a hole.	Repair or replace canister. <Ref. to EC(H6DO)-7, Canister.>	Go to step 9 .
9 CHECK FUEL TANK. Remove fuel tank. <Ref. to FU(H6DO)-53, Fuel Tank.> Is fuel tank damaged or is there a hole of more than 1.0 mm (0.04 in) dia. in it?	Damaged or there is a hole.	Repair or replace fuel tank. <Ref. to FU(H6DO)-53, Fuel Tank.>	Go to step 10 .
10 CHECK ANY OTHER MECHANICAL TROUBLE IN EVAPORATIVE EMISSION CONTROL SYSTEM. Are there holes of more than 1.0 mm (0.04 in) dia., cracks, clogging or disconnections of hoses or pipes in evaporative emission control system?	There is a malfunction on hose or pipe.	Repair or replace hoses or pipes.	Contact with SOA (distributor) service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


BE:DTC P0447 — EVAPORATIVE EMISSION CONTROL SYSTEM VENT CONTROL CIRCUIT OPEN —

- DTC DETECTING CONDITION:
 - Immediately at fault recognition

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

- WIRING DIAGRAM:

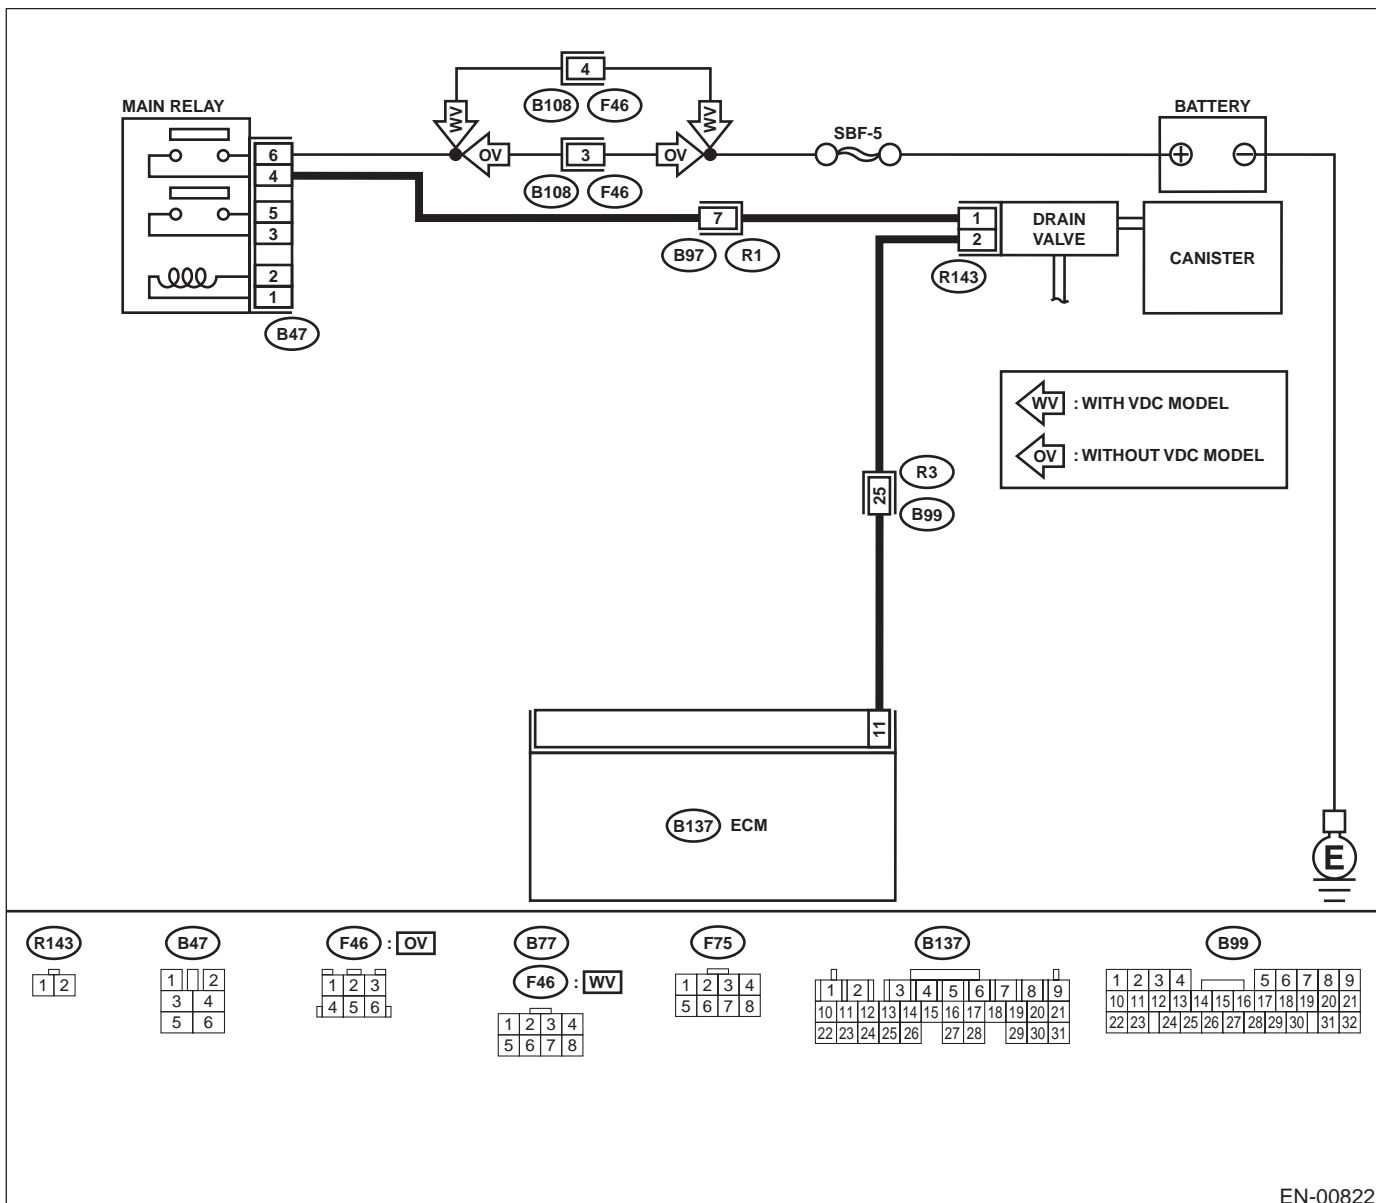

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1 CHECK OUTPUT SIGNAL FROM ECM. 1) Turn ignition switch to ON. 2) Measure voltage between ECM and chassis ground. Connector & terminal (B137) No. 11 (+) — Chassis ground (-): Does the measured value exceed the specified value?</p>	10 V	Go to step 2.	Go to step 3.
<p>2 CHECK POOR CONTACT. Check poor contact in ECM connector. Is there poor contact in ECM connector?</p>	There is poor contact.	Repair poor contact in ECM connector.	Even if MIL lights up, the circuit has returned to a normal condition at this time. (However, the possibility of poor contact still remains.) NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Poor contact in drain valve connector • Poor contact in ECM connector • Poor contact in coupling connectors
<p>3 CHECK HARNESS BETWEEN DRAIN VALVE AND ECM CONNECTOR. 1) Turn ignition switch to OFF. 2) Disconnect connectors from drain valve and ECM. 3) Measure resistance of harness between drain valve connector and chassis ground. Connector & terminal (R143) No. 2 — Chassis ground: Is the measured value less than the specified value?</p>	10 Ω	Repair ground short circuit in harness between ECM and drain valve connector.	Go to step 4.
<p>4 CHECK HARNESS BETWEEN DRAIN VALVE AND ECM CONNECTOR. Measure resistance of harness between ECM and drain valve connector. Connector & terminal (B137) No. 11 — (R143) No. 2: Is the measured value less than the specified value?</p>	1 Ω	Go to step 5.	Repair harness and connector. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Open circuit in harness between ECM and drain valve connector • Poor contact in coupling connectors
<p>5 CHECK DRAIN VALVE. Measure resistance between drain valve terminals. Terminals No. 1 — No. 2: Is the measured value within the specified range?</p>	10 — 100 Ω	Go to step 6.	Replace drain valve. <Ref. to EC(H6DO)-20, Drain Valve.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>6 CHECK POWER SUPPLY TO DRAIN VALVE. 1) Turn ignition switch to ON. 2) Measure voltage between drain valve and chassis ground. Connector & terminal (R143) No. 1 (+) — Chassis ground (-): Does the measured value exceed the specified value?</p>	10 V	Go to step 7.	Repair harness and connector. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Open circuit in harness between main relay and drain valve • Poor contact in coupling connectors • Poor contact in main relay connector
<p>7 CHECK POOR CONTACT. Check poor contact in drain valve connector. Is there poor contact in drain valve connector?</p>	There is poor contact.	Repair poor contact in drain valve connector.	Contact with SOA (distributor) service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

MEMO:

EN(H6DO)-237

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


BF:DTC P0448 — EVAPORATIVE EMISSION CONTROL SYSTEM VENT CONTROL CIRCUIT SHORTED —

- DTC DETECTING CONDITION:
 - Immediately at fault recognition

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

- WIRING DIAGRAM:

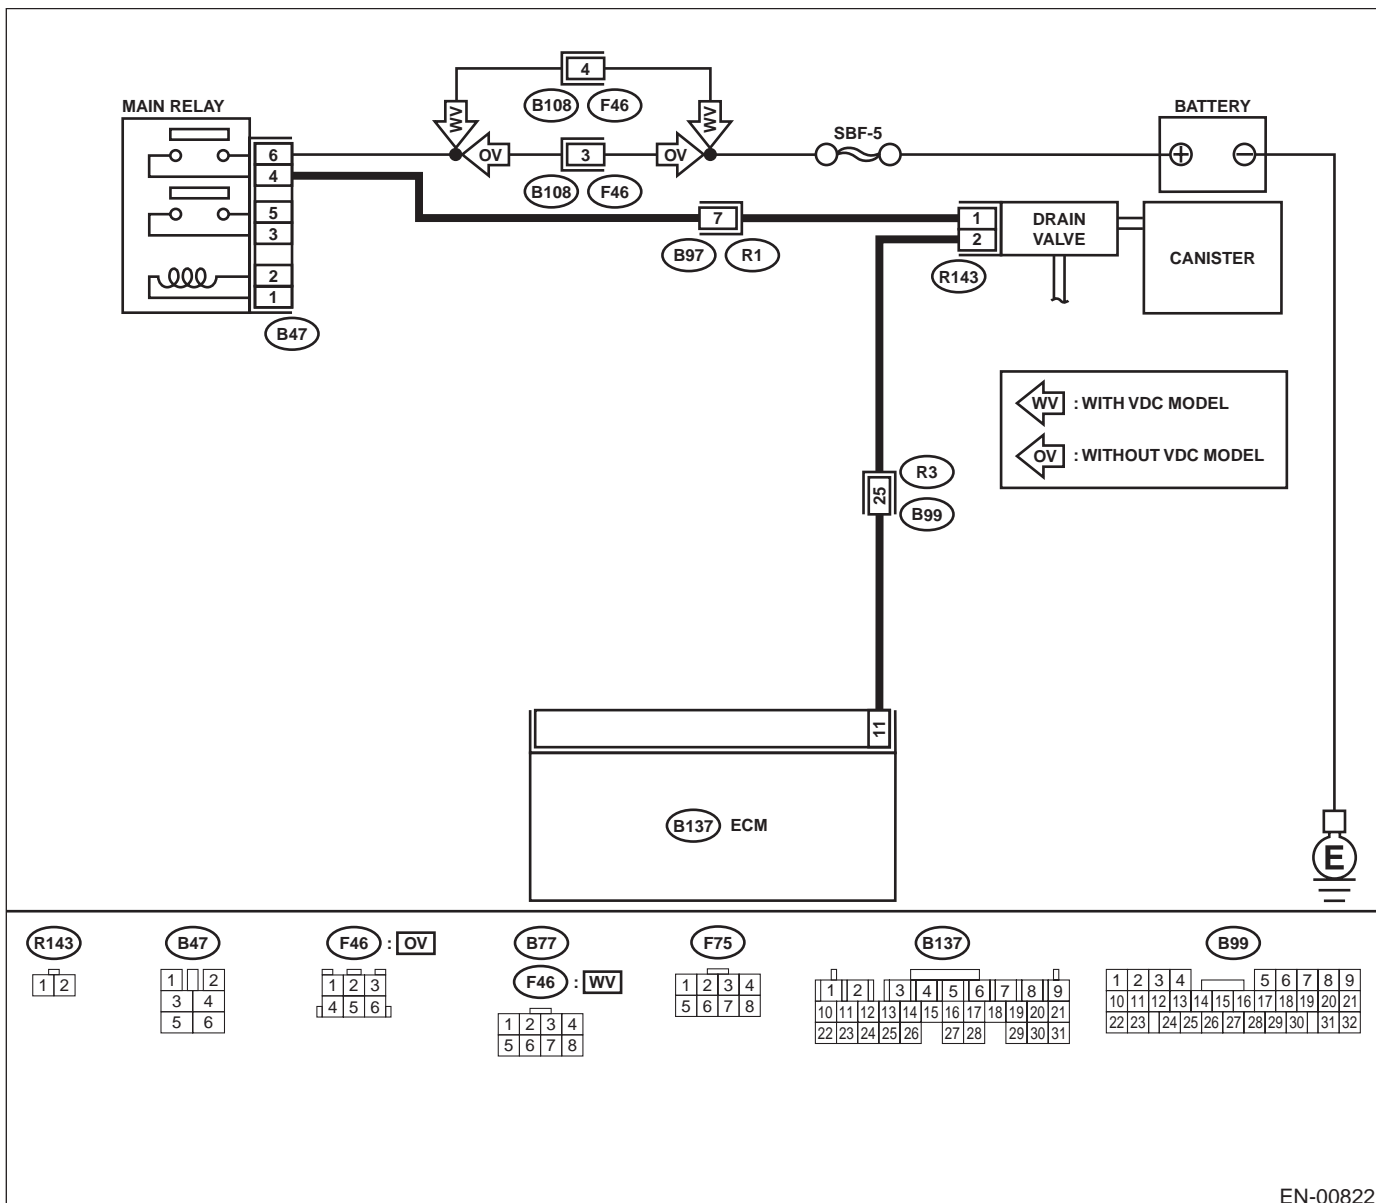

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1 CHECK OUTPUT SIGNAL FROM ECM. 1) Turn ignition switch to OFF. 2) Connect test mode connector. 3) Turn ignition switch to ON. 4) While operating drain valve, measure voltage between ECM and chassis ground.</p> <p>NOTE: Drain valve operation can be executed using Subaru Select Monitor. For procedure, refer to "Compulsory Valve Operation Check Mode".<Ref. to EN(H6DO)-60, Compulsory Valve Operation Check Mode.></p> <p>Connector & terminal (B137) No. 11 (+) — Chassis ground (-): Does the measured value fluctuate within the specified range?</p>	0 — 10 V	Go to step 2.	Even if MIL lights up, the circuit has returned to a normal condition at this time. In this case, repair poor contact in ECM connector.
<p>2 CHECK OUTPUT SIGNAL FROM ECM. 1) Turn ignition switch to ON. 2) Measure voltage between ECM and chassis ground.</p> <p>Connector & terminal (B137) No. 11 (+) — Chassis ground (-): Does the measured value exceed the specified value?</p>	10 V	Go to step 4.	Go to step 3.
<p>3 CHECK POOR CONTACT. Check poor contact in ECM connector. Is there poor contact in ECM connector?</p>	There is poor contact.	Repair poor contact in ECM connector.	Replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>
<p>4 CHECK HARNESS BETWEEN DRAIN VALVE AND ECM CONNECTOR. 1) Turn ignition switch to OFF. 2) Disconnect connector from drain valve. 3) Turn ignition switch to ON. 4) Measure voltage between ECM and chassis ground.</p> <p>Connector & terminal (B137) No. 11 (+) — Chassis ground (-): Does the measured value exceed the specified value?</p>	10 V	Repair battery short circuit in harness between ECM and drain valve connector. After repair, replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>	Go to step 5.
<p>5 CHECK DRAIN VALVE. 1) Turn ignition switch to OFF. 2) Measure resistance between drain valve terminals.</p> <p>Terminals No. 1 — No. 2: Is the measured value less than the specified value?</p>	1 Ω	Replace drain valve <Ref. to EC(H6DO)-20, Drain Valve.> and ECM <Ref. to FU(H6DO)-46, Engine Control Module.>	Go to step 6.
<p>6 CHECK POOR CONTACT. Check poor contact in ECM connector. Is there poor contact in ECM connector?</p>	There is poor contact.	Repair poor contact in ECM connector.	Replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)


BG:DTC P0451 — EVAPORATIVE EMISSION CONTROL SYSTEM PRESSURE SENSOR RANGE/PERFORMANCE —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

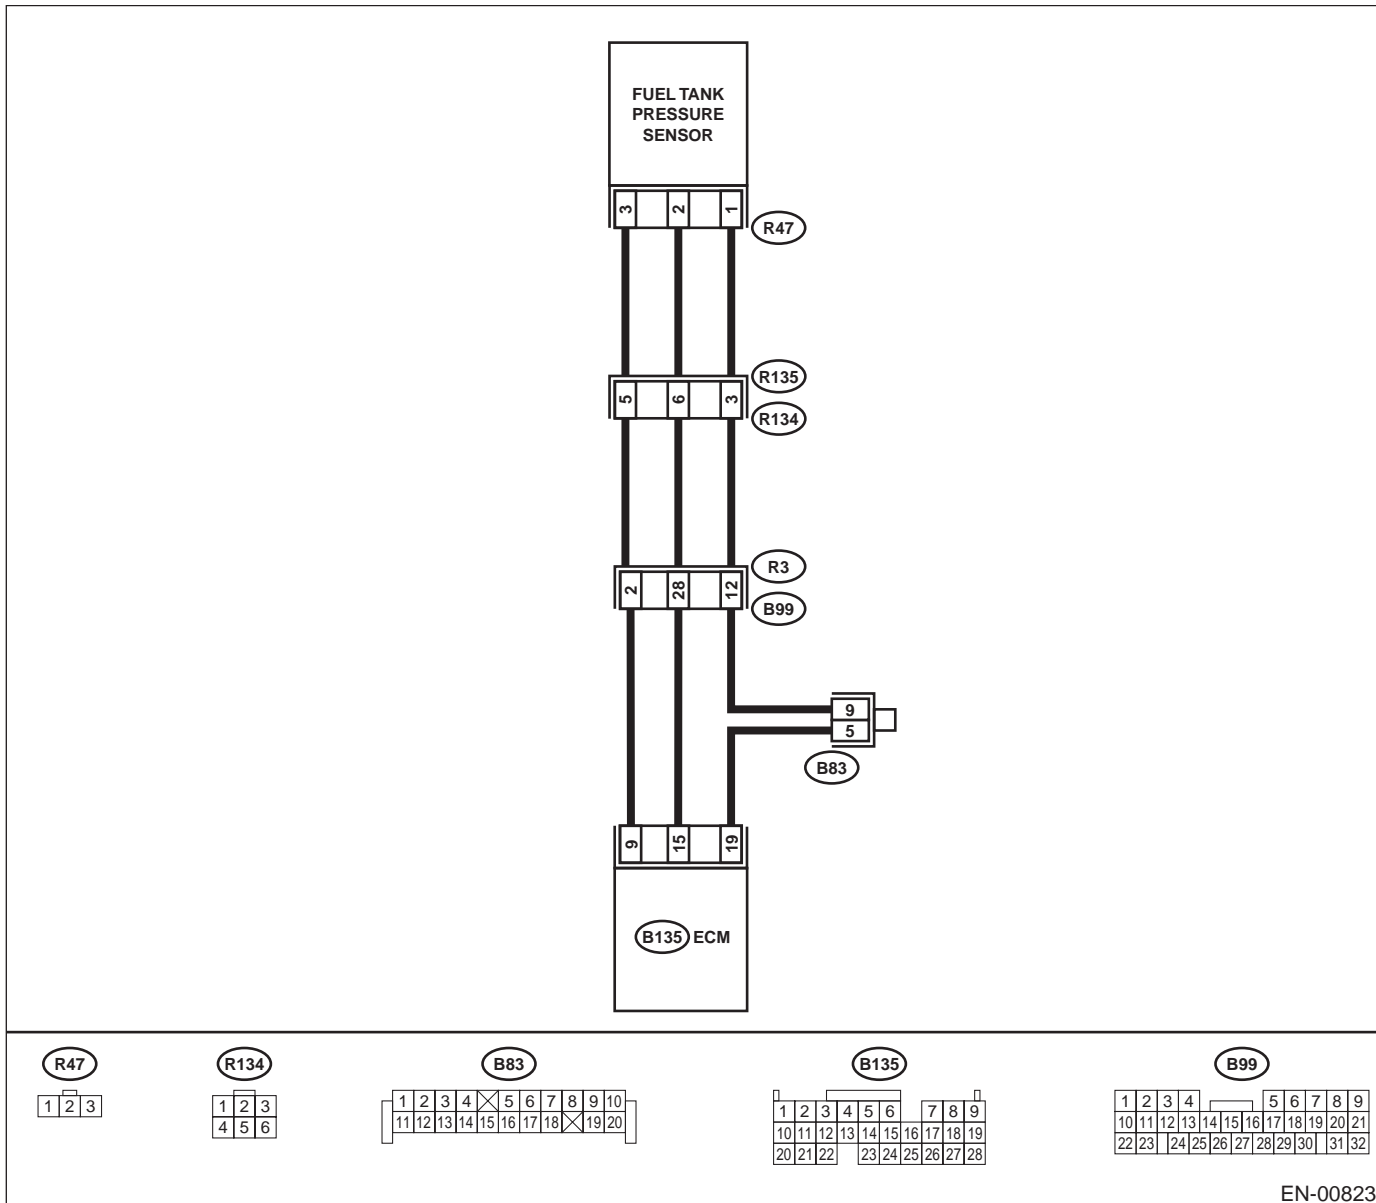

EN-00823

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).>	Go to step 2.
2 CHECK FUEL FILLER CAP. 1) Turn ignition switch to OFF. 2) Open the fuel flap. Is the fuel filler cap tightened securely?	Tightened securely.	Go to step 3.	Tighten fuel filler cap securely.
3 CHECK PRESSURE/VACUUM LINE. NOTE: Check the following items. • Disconnection, leakage and clogging of the vacuum hoses and pipes between fuel tank pressure sensor and fuel tank • Disconnection, leakage and clogging of air ventilation hoses and pipes between fuel filler pipe and fuel tank Is there a fault in pressure/vacuum line?	There is a malfunction.	Repair or replace hoses and pipes.	Replace fuel tank pressure sensor. <Ref. to EC(H6DO)-14, Fuel Tank Pressure Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)


BH:DTC P0452 — EVAPORATIVE EMISSION CONTROL SYSTEM PRESSURE SENSOR LOW INPUT —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

- **WIRING DIAGRAM:**

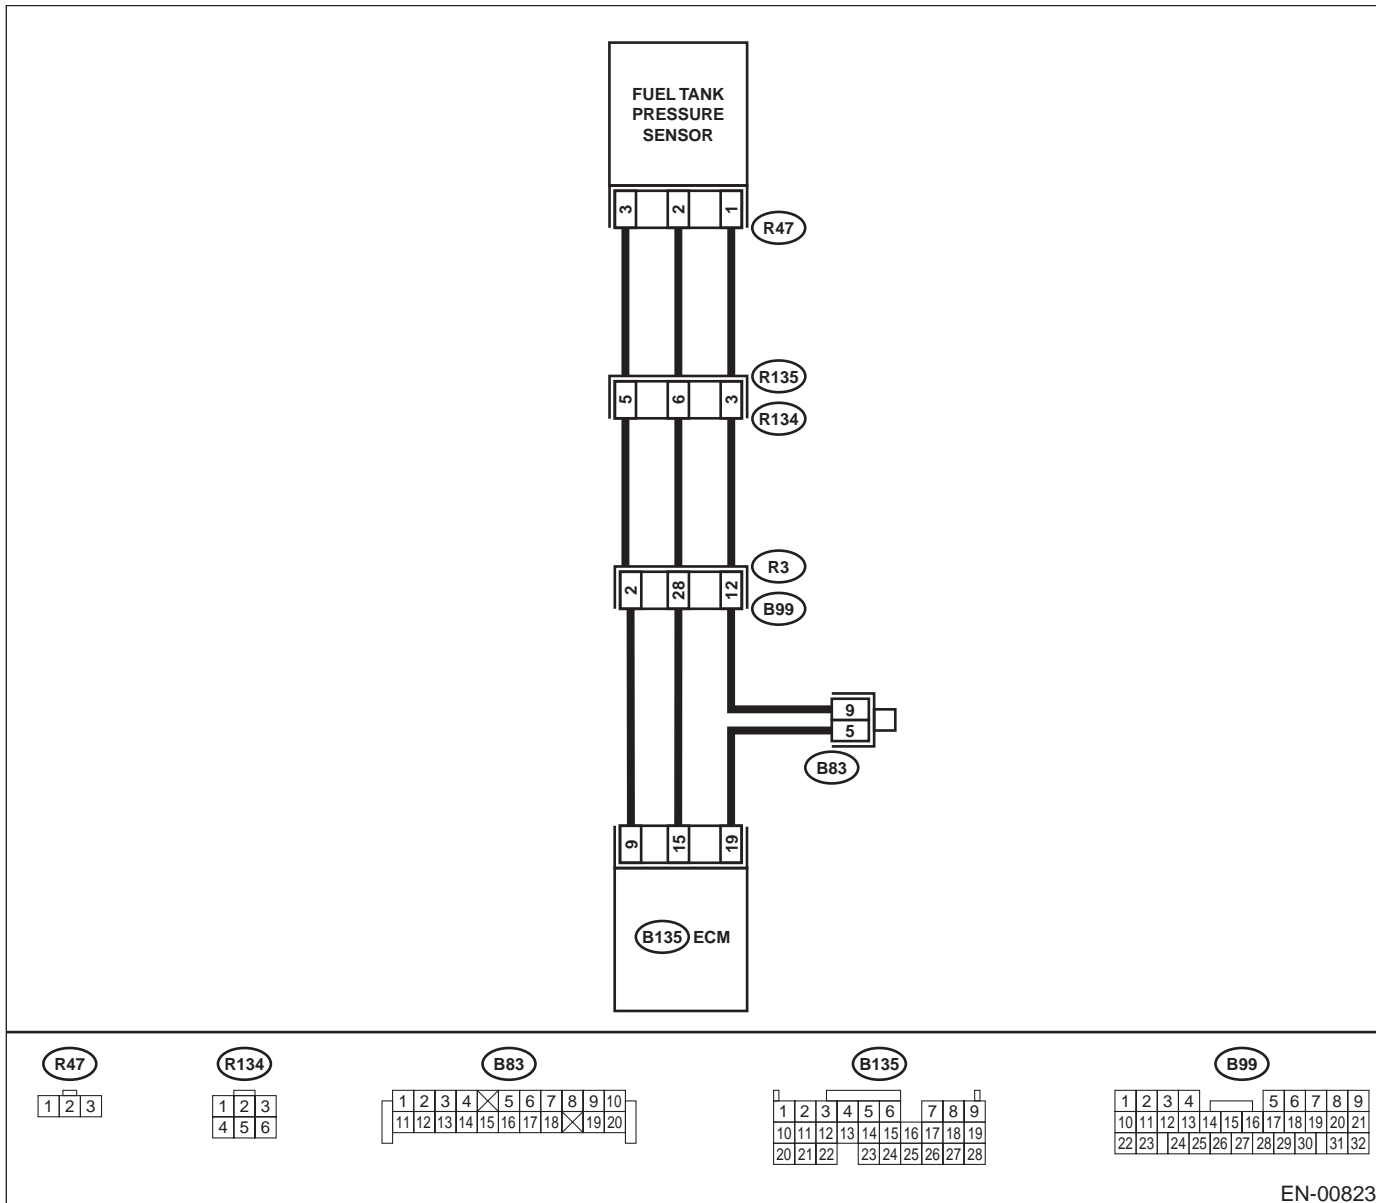

EN-00823

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1 CHECK CURRENT DATA. 1) Turn ignition switch to OFF. 2) Remove fuel filler cap. 3) Install fuel filler cap. 4) Turn ignition switch to ON. 5) Read the data of fuel tank pressure sensor signal using Subaru Select Monitor or the OBD-II general scan tool. Is the measured value less than the specified value?</p> <p>NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.> • OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.</p>	-2.8 kPa (-21.0 mmHg, -0.827 inHg)	Go to step 2.	Even if MIL lights up, the circuit has returned to a normal condition at this time.
<p>2 CHECK POWER SUPPLY TO FUEL TANK PRESSURE SENSOR. Measure voltage between ECM connector and chassis ground. Connector & terminal (B135) No. 9 (+) — Chassis ground (-): Does the measured value exceed the specified value?</p>	4.5 V	Go to step 4.	Go to step 3.
<p>3 CHECK POWER SUPPLY TO FUEL TANK PRESSURE SENSOR. Measure voltage between ECM connector and chassis ground. Connector & terminal (B135) No. 9 (+) — Chassis ground (-): Does the voltage change more than the specified value by shaking harness and connector of ECM while monitoring the value with voltage meter?</p>	4.5 V	Repair poor contact in ECM connector.	Contact with SOA (distributor) service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.
<p>4 CHECK INPUT SIGNAL FOR ECM. Measure voltage between ECM and chassis ground. Connector & terminal (B135) No. 15 (+) — Chassis ground (-): Is the measured value less than the specified value?</p>	0.2 V	Go to step 6.	Go to step 5.
<p>5 CHECK INPUT SIGNAL FOR ECM. (USING SUBARU SELECT MONITOR.) Read data of fuel tank pressure sensor signal using Subaru Select Monitor. Does the value change more than the specified value by shaking harness and connector of ECM while monitoring the value with Subaru Select Monitor?</p> <p>NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.></p>	-2.8 kPa (-21.0 mmHg, -0.827 inHg)	Repair poor contact in ECM connector.	Go to step 6.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>6 CHECK HARNESS BETWEEN ECM AND COUPLING CONNECTOR IN REAR WIRING HARNESS. 1) Turn ignition switch to OFF. 2) Remove rear seat cushion (Sedan) or move rear seat cushion (Wagon). 3) Separate rear wiring harness and fuel tank cord. 4) Turn ignition switch to ON. 5) Measure voltage between rear wiring harness connector and chassis ground.</p> <p>Connector & terminal (R134) No. 5 (+) — Chassis ground (-): Does the measured value exceed the specified value?</p>	4.5 V	Go to step 7.	Repair harness and connector. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Open circuit in harness between ECM and rear wiring harness connector • Poor contact in coupling connector
<p>7 CHECK HARNESS BETWEEN ECM AND COUPLING CONNECTOR IN REAR WIRING HARNESS. 1) Turn ignition switch to OFF. 2) Disconnect connector from ECM. 3) Measure resistance of harness between ECM and rear wiring harness connector.</p> <p>Connector & terminal (B135) No. 19 — (R134) No. 3: Is the measured value less than the specified value?</p>	1 Ω	Go to step 8.	Repair harness and connector. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Open circuit in harness between ECM and rear wiring harness connector • Poor contact in coupling connector • Poor contact in joint connector
<p>8 CHECK HARNESS BETWEEN ECM AND COUPLING CONNECTOR IN REAR WIRING HARNESS. Measure resistance of harness between rear wiring harness connector and chassis ground.</p> <p>Connector & terminal (R134) No. 3 — Chassis ground: Does the measured value exceed the specified value?</p>	1 MΩ	Go to step 9.	Repair ground short circuit in harness between ECM and rear wiring harness connector.
<p>9 CHECK FUEL TANK CORD. 1) Disconnect connector from fuel tank pressure sensor. 2) Measure resistance of fuel tank cord.</p> <p>Connector & terminal (R135) No. 5 — (R47) No. 3: Is the measured value less than the specified value?</p>	1 Ω	Go to step 10.	Repair open circuit in fuel tank cord.
<p>10 CHECK FUEL TANK CORD. Measure resistance of fuel tank cord.</p> <p>Connector & terminal (R135) No. 3 — (R47) No. 1: Is the measured value less than the specified value?</p>	1 Ω	Go to step 11.	Repair open circuit in fuel tank cord.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
11 CHECK FUEL TANK CORD. Measure resistance of harness between fuel tank pressure sensor connector and chassis ground. Connector & terminal (R47) No. 2 — Chassis ground: Does the measured value exceed the specified value?	1 MΩ	Go to step 12.	Repair ground short circuit in fuel tank cord.
12 CHECK POOR CONTACT. Check poor contact in fuel tank pressure sensor connector. Is there poor contact in fuel tank pressure sensor connector?	There is poor contact.	Repair poor contact in fuel tank pressure sensor connector.	Replace fuel tank pressure sensor. <Ref. to EC(H6DO)-14, Fuel Tank Pressure Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


BI: DTC P0453 — EVAPORATIVE EMISSION CONTROL SYSTEM PRESSURE SENSOR HIGH INPUT —

- DTC DETECTING CONDITION:
 - Immediately at fault recognition

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

- WIRING DIAGRAM:

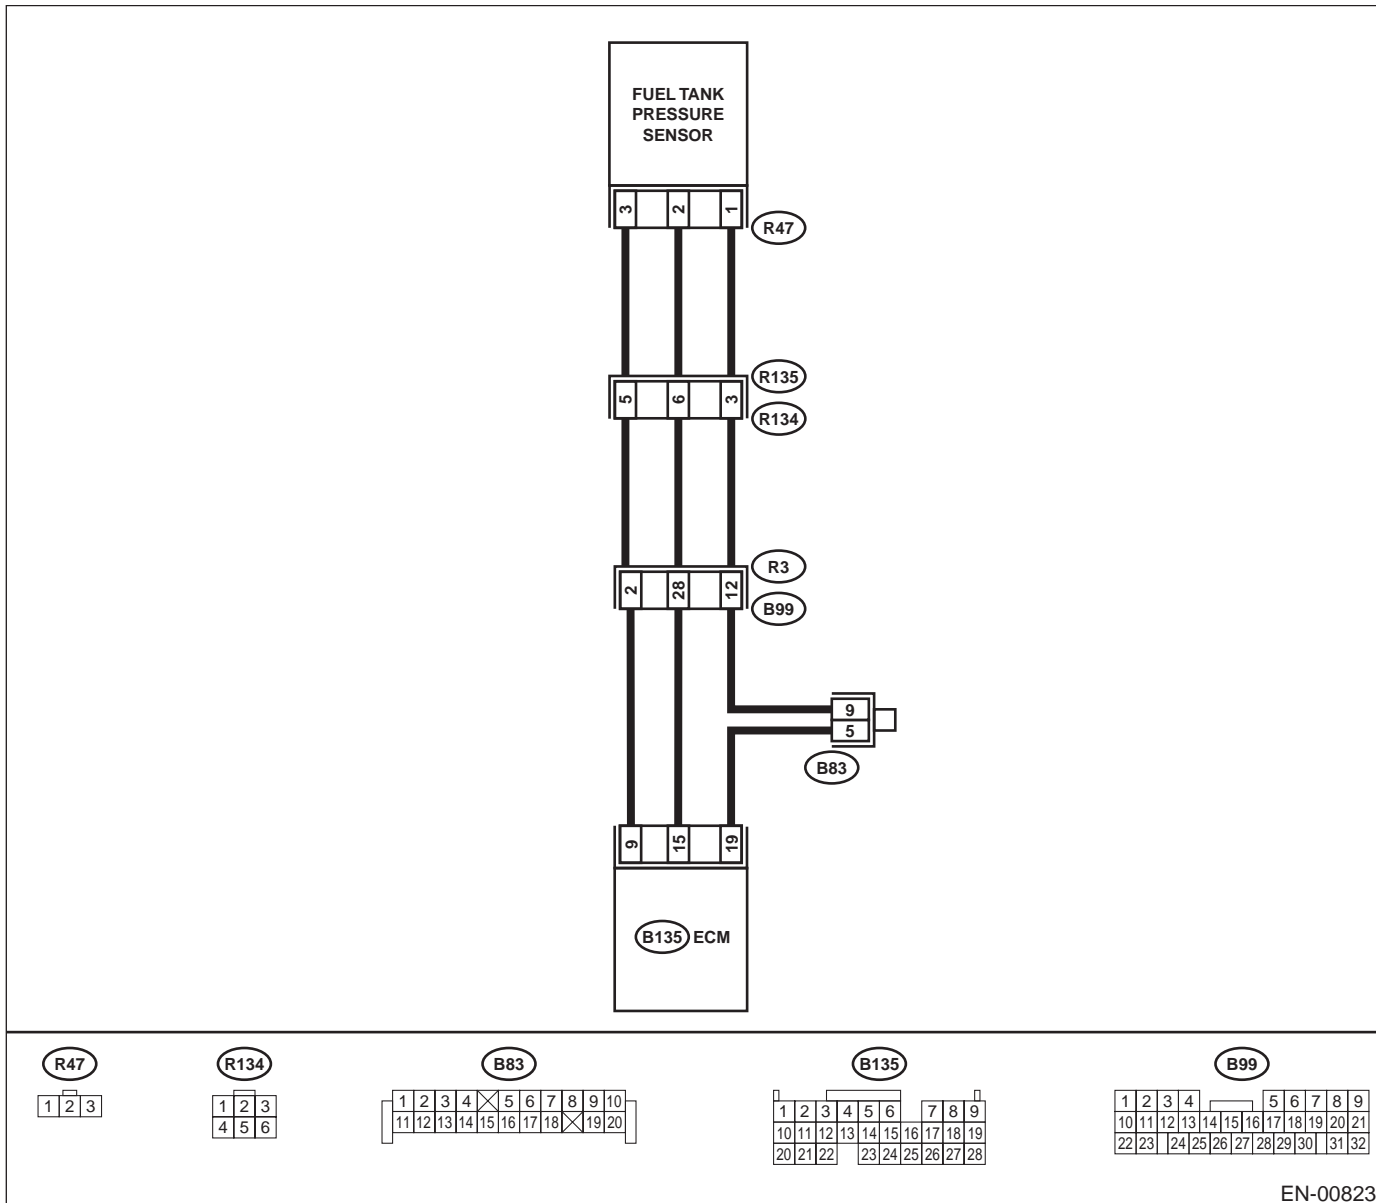

EN-00823

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1 CHECK CURRENT DATA. 1) Turn ignition switch to OFF. 2) Remove fuel filler cap. 3) Install fuel filler cap. 4) Turn ignition switch to ON. 5) Read data of fuel tank pressure sensor signal using Subaru Select Monitor or OBD-II general scan tool. Does the measured value exceed the specified value?</p> <p>NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.> • OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.</p>	2.8 kPa (21.0 mmHg, 0.827 inHg)	Go to step 12.	Go to step 2.
<p>2 CHECK POWER SUPPLY TO FUEL TANK PRESSURE SENSOR. Measure voltage between ECM connector and chassis ground. Connector & terminal (B135) No. 9 (+) — Chassis ground (-): Does the measured value exceed the specified value?</p>	4.5 V	Go to step 4.	Go to step 3.
<p>3 CHECK POWER SUPPLY TO FUEL TANK PRESSURE SENSOR. Measure voltage between ECM connector and chassis ground. Connector & terminal (B135) No. 9 (+) — Chassis ground (-): Does the voltage change exceed the specified value by shaking harness and connector of ECM while monitoring the value with voltage meter?</p>	4.5 V	Repair poor contact in ECM connector.	Replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>
<p>4 CHECK INPUT SIGNAL FOR ECM. Measure voltage between ECM and chassis ground. Connector & terminal (B135) No. 15 (+) — Chassis ground (-): Is the measured value less than the specified value?</p>	0.2 V	Go to step 6.	Go to step 5.
<p>5 CHECK INPUT SIGNAL FOR ECM. (USING SUBARU SELECT MONITOR.) Read data of fuel tank pressure sensor signal using Subaru Select Monitor. Does the voltage change exceed the specified value by shaking harness and connector of ECM while monitoring the value with Subaru Select Monitor?</p> <p>NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.></p>	-2.8 kPa (-21.0 mmHg, -0.827 inHg)	Repair poor contact in ECM connector.	Go to step 6.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>6 CHECK HARNESS BETWEEN ECM AND COUPLING CONNECTOR IN REAR WIRING HARNESS.</p> <p>1) Turn ignition switch to OFF. 2) Remove rear seat cushion (Sedan) or move rear seat cushion (Wagon). 3) Separate rear wiring harness and fuel tank cord. 4) Turn ignition switch to ON. 5) Measure voltage between rear wiring harness connector and chassis ground.</p> <p>Connector & terminal (R134) No. 5 (+) — Chassis ground (-): Does the measured value exceed the specified value?</p>	4.5 V	Go to step 7.	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and rear wiring harness connector • Poor contact in coupling connector
<p>7 CHECK HARNESS BETWEEN ECM AND COUPLING CONNECTOR IN REAR WIRING HARNESS.</p> <p>1) Turn ignition switch to OFF. 2) Disconnect connector from ECM. 3) Measure resistance of harness between ECM and rear wiring harness connector.</p> <p>Connector & terminal (B135) No. 15 — (R134) No. 6: Is the measured value less than the specified value?</p>	1 Ω	Go to step 8.	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and rear wiring harness connector • Poor contact in coupling connector
<p>8 CHECK HARNESS BETWEEN ECM AND COUPLING CONNECTOR IN REAR WIRING HARNESS.</p> <p>Measure resistance of harness between rear wiring harness connector and chassis ground.</p> <p>Connector & terminal (B135) No. 19 — (R135) No. 3: Is the measured value less than the specified value?</p>	1 Ω	Go to step 9.	Repair ground short circuit in harness between ECM and rear wiring harness connector.
<p>9 CHECK FUEL TANK CORD.</p> <p>1) Disconnect connector from fuel tank pressure sensor. 2) Measure resistance of fuel tank cord.</p> <p>Connector & terminal (R135) No. 6 — (R47) No. 2: Is the measured value less than the specified value?</p>	1 Ω	Go to step 10.	Repair open circuit in fuel tank cord.
<p>10 CHECK FUEL TANK CORD.</p> <p>Measure resistance of fuel tank cord.</p> <p>Connector & terminal (R135) No. 3 — (R47) No. 1: Is the measured value less than the specified value?</p>	1 Ω	Go to step 11.	Repair open circuit in fuel tank cord.
<p>11 CHECK POOR CONTACT.</p> <p>Check poor contact in fuel tank pressure sensor connector. Is there poor contact in fuel tank pressure sensor connector?</p>	There is poor contact.	Repair poor contact in fuel tank pressure sensor connector.	Replace fuel tank pressure sensor. <Ref. to EC(H6DO)-14, Fuel Tank Pressure Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

12	Step	Value	Yes	No
	<p>CHECK HARNESS BETWEEN ECM AND FUEL TANK PRESSURE SENSOR CONNECTOR.</p> <ol style="list-style-type: none"> 1) Turn ignition switch to OFF. 2) Disconnect connector from fuel tank pressure sensor. 3) Turn ignition switch to ON. 4) Read data of fuel tank pressure sensor signal using Subaru Select Monitor or the OBD-II general scan tool. <p>Does the measured value exceed the specified value?</p> <p>NOTE:</p> <ul style="list-style-type: none"> • Subaru Select Monitor <p>For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.></p> <ul style="list-style-type: none"> • OBD-II general scan tool <p>For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.</p>	<p>2.8 kPa (21.0 mmHg, 0.827 inHg)</p>	<p>Repair battery short circuit in harness between ECM and fuel tank pressure sensor connector.</p>	<p>Replace fuel tank pressure sensor. <Ref. to EC(H6DO)-14, Fuel Tank Pressure Sensor.></p>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

BJ:DTC P0456 — EVAPORATIVE EMISSION CONTROL SYSTEM LEAK DETECTED (VERY SMALL LEAK) —

• **DTC DETECTING CONDITION:**

- Two consecutive driving cycles with fault

• **TROUBLE SYMPTOM:**

- Gasoline smell
- There is a hole of more than 0.5 mm (0.020 in) dia. in evaporation system or fuel tank.


CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

• WIRING DIAGRAM:

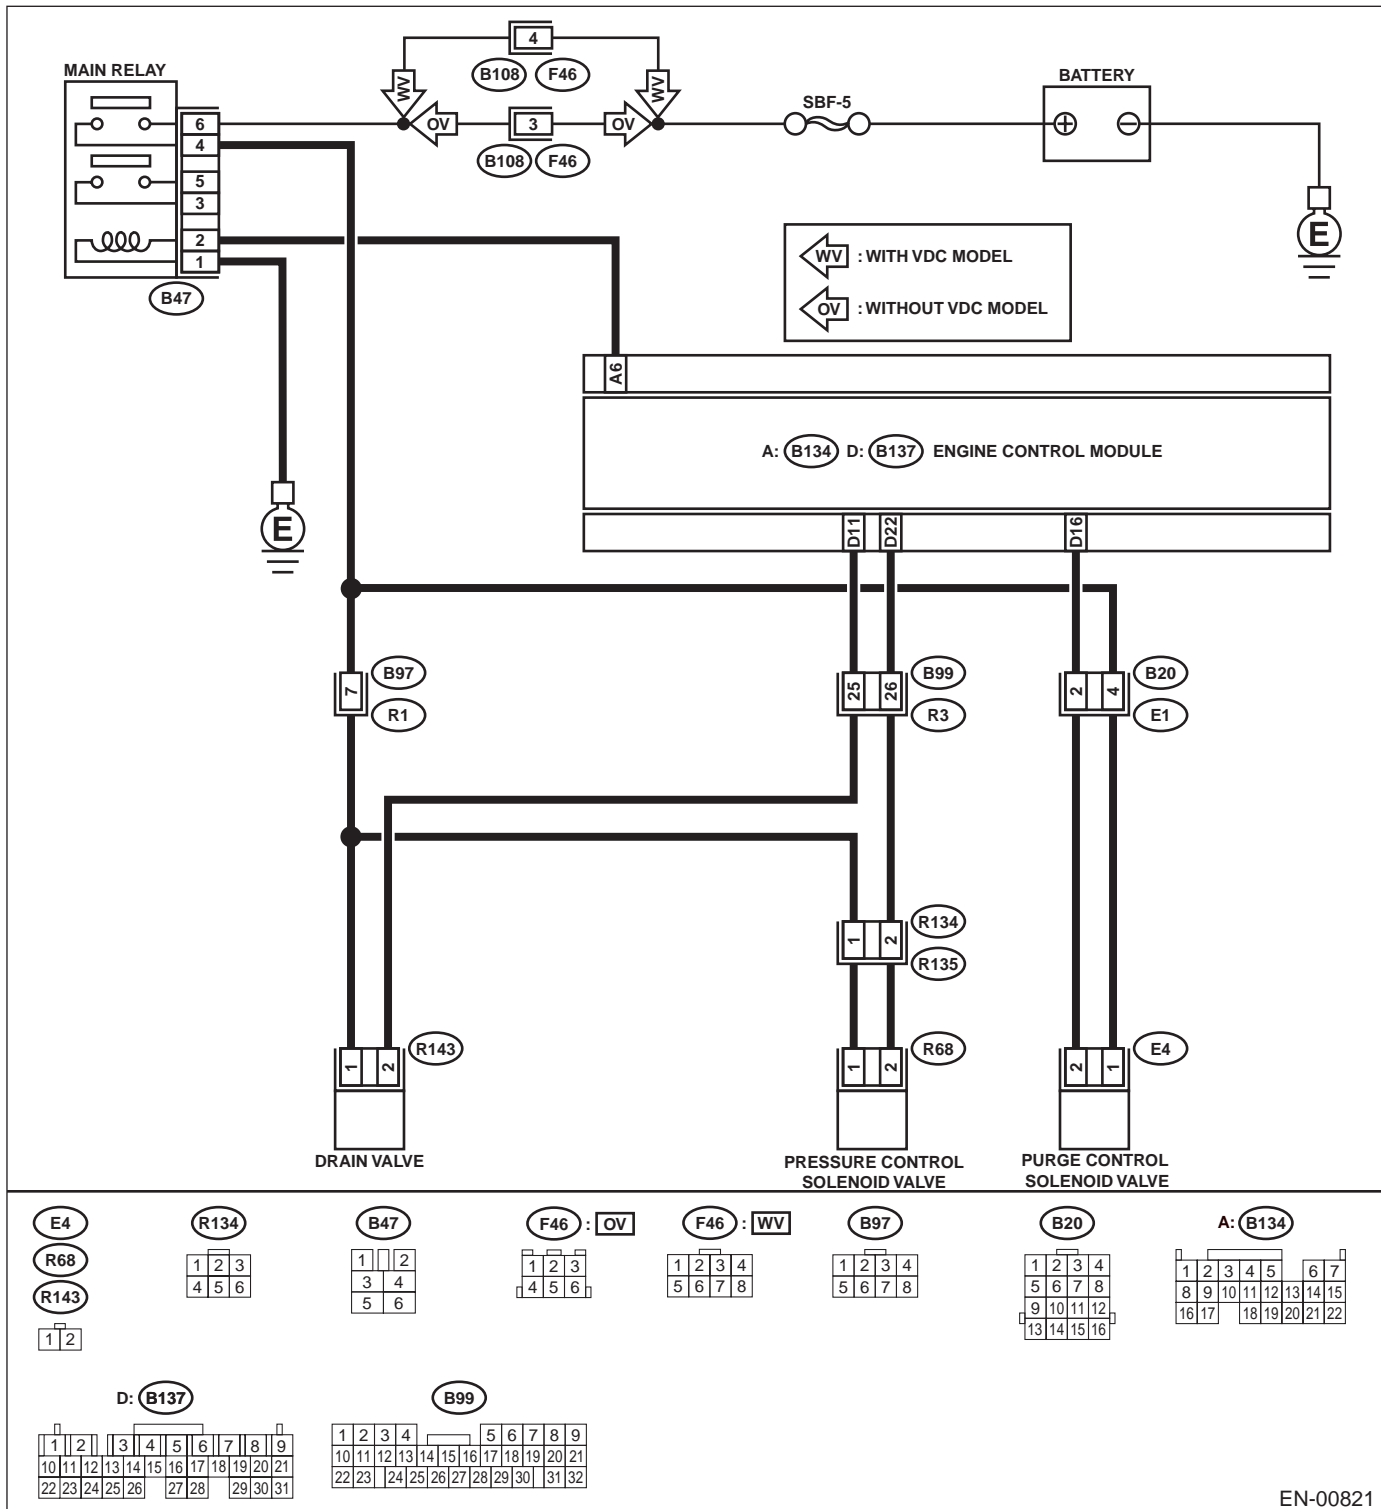

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).>	Go to step 2.
2 CHECK FUEL FILLER CAP. 1) Turn ignition switch to OFF. 2) Check the fuel filler cap. NOTE: The DTC code is stored in memory if fuel filler cap is or was loose or if the cap chain was caught while tightening. Is the fuel filler cap tightened securely?	Tightened securely.	Go to step 3.	Tighten fuel filler cap securely.
3 CHECK FUEL FILLER PIPE PACKING. Is there any damage to the seal between fuel filler cap and fuel filler pipe?	There is damage.	Repair or replace fuel filler cap and fuel filler pipe. <Ref. to FU(H6DO)-61, Fuel Filler Pipe.>	Go to step 4.
4 CHECK DRAIN VALVE. 1) Connect test mode connector. 2) Turn ignition switch to ON. 3) Operate drain valve. NOTE: Drain valve operation can also be executed using Subaru Select Monitor. For the procedure, refer to "Compulsory Valve Operation Check Mode". <Ref. to EN(H6DO)-60, Compulsory Valve Operation Check Mode.> Does drain valve produce operating sound?	Operating sound produced.	Go to step 5.	Replace drain valve. <Ref. to EC(H6DO)-20, Drain Valve.>
5 CHECK PURGE CONTROL SOLENOID VALVE. Operate purge control solenoid valve. NOTE: Purge control solenoid valve operation can also be executed using Subaru Select Monitor. For the procedure, refer to "Compulsory Valve Operation Check Mode". <Ref. to EN(H6DO)-60, Compulsory Valve Operation Check Mode.> Does purge control solenoid valve produce operating sound?	Operating sound produced.	Go to step 6.	Replace purge control solenoid valve. <Ref. to EC(H6DO)-8, Purge Control Solenoid Valve.>
6 CHECK PRESSURE CONTROL SOLENOID VALVE. Operate pressure control solenoid valve. NOTE: Pressure control solenoid valve operation can also be executed using Subaru Select Monitor. For the procedure, refer to "Compulsory Valve Operation Check Mode". <Ref. to EN(H6DO)-60, Compulsory Valve Operation Check Mode.> Does pressure control solenoid valve produce operating sound?	Operating sound produced.	Go to step 7.	Replace pressure control solenoid valve. <Ref. to EC(H6DO)-16, Pressure Control Solenoid Valve.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
7 CHECK EVAPORATIVE EMISSION CONTROL SYSTEM LINE. Turn ignition switch to OFF. Is there a hole of more than 0.5 mm (0.020 in) dia. on evaporation line?	Hole is found.	Repair or replace evaporation line. <Ref. to FU(H6DO)-78, Fuel Delivery, Return and Evaporation Lines.>	Go to step 8 .
8 CHECK CANISTER. Is canister damaged or is there a hole of more than 0.5 mm (0.020 in) dia. in it?	Damage or hole is found.	Repair or replace canister. <Ref. to EC(H6DO)-7, Canister.>	Go to step 9 .
9 CHECK FUEL TANK. Remove fuel tank. <Ref. to FU(H6DO)-53, Fuel Tank.> Is fuel tank damaged or is there a hole of more than 0.5 mm (0.020 in) dia. in it?	Damage or hole is found.	Repair or replace fuel tank. <Ref. to FU(H6DO)-53, Fuel Tank.>	Go to step 10 .
10 CHECK ANY OTHER MECHANICAL TROUBLE IN EVAPORATIVE EMISSION CONTROL SYSTEM. Are there holes of more than 0.5 mm (0.020 in) dia., cracks, clogging or disconnections of hoses or pipes in evaporative emission control system?	There is a malfunction on hose or pipe.	Repair or replace hoses or pipes.	Contact with SOA (distributor) service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

BK:DTC P0457 — EVAPORATIVE EMISSION CONTROL SYSTEM LEAK DETECTED (FUEL CAP LOOSE/OFF) —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Gasoline smell
 - Fuel filler cap loose or missing


CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

• WIRING DIAGRAM:

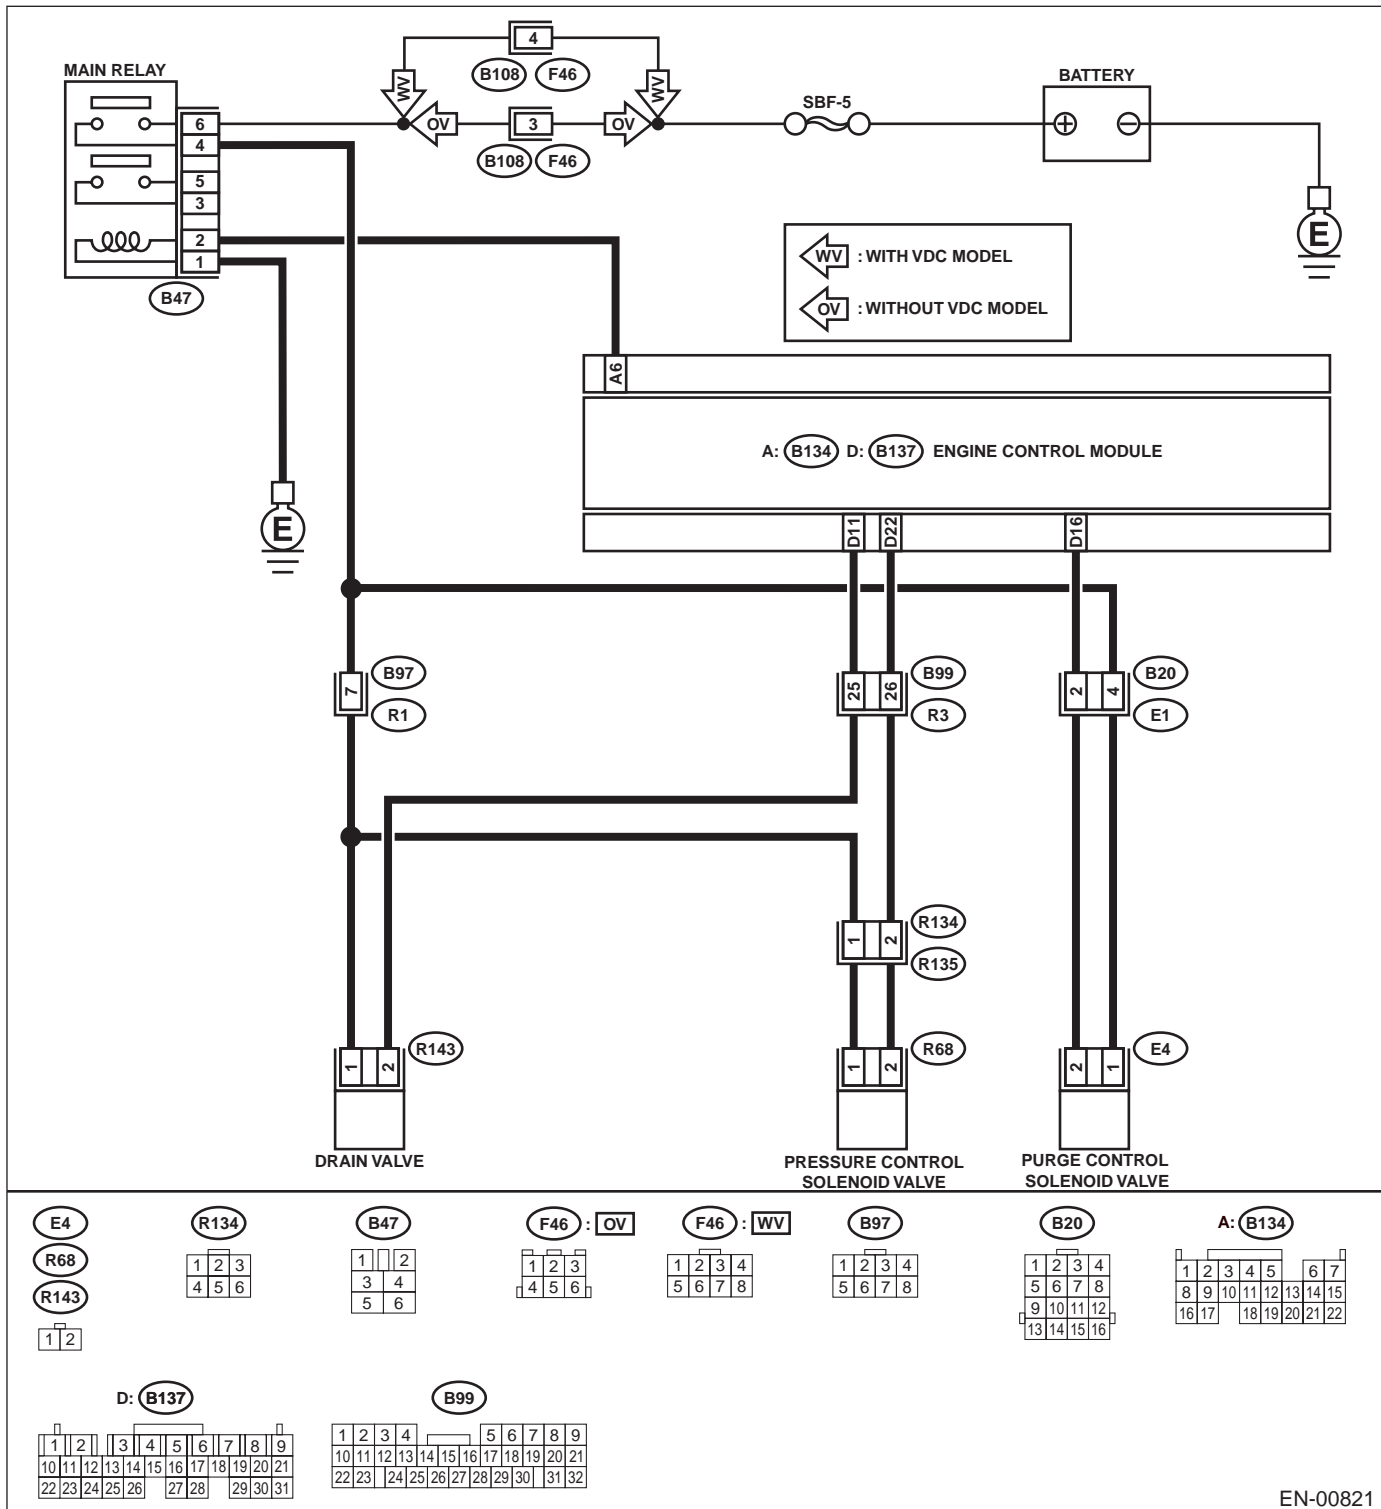

EN-00821

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).>	Go to step 2.
2 CHECK FUEL FILLER CAP. 1) Turn ignition switch to OFF. 2) Check the fuel filler cap. NOTE: The DTC code is stored in memory if fuel filler cap is or was loose or if the cap chain was caught while tightening. Is the fuel filler cap tightened securely?	Tightened securely.	Go to step 3.	Tighten fuel filler cap securely.
3 CHECK FUEL FILLER PIPE PACKING. Is there any damage to the seal between fuel filler cap and fuel filler pipe?	There is damage.	Repair or replace fuel filler cap and fuel filler pipe. <Ref. to FU(H6DO)-61, Fuel Filler Pipe.>	Go to step 4.
4 CHECK DRAIN VALVE. 1) Connect test mode connector. 2) Turn ignition switch to ON. 3) Operate drain valve. NOTE: Drain valve operation can also be executed using Subaru Select Monitor. For the procedure, refer to "Compulsory Valve Operation Check Mode". <Ref. to EN(H6DO)-60, Compulsory Valve Operation Check Mode.> Does drain valve produce operating sound?	Operating sound produced.	Go to step 5.	Replace drain valve. <Ref. to EC(H6DO)-20, Drain Valve.>
5 CHECK PURGE CONTROL SOLENOID VALVE. Operate purge control solenoid valve. NOTE: Purge control solenoid valve operation can also be executed using Subaru Select Monitor. For the procedure, refer to "Compulsory Valve Operation Check Mode". <Ref. to EN(H6DO)-60, Compulsory Valve Operation Check Mode.> Does purge control solenoid valve produce operating sound?	Operating sound produced.	Go to step 6.	Replace purge control solenoid valve. <Ref. to EC(H6DO)-8, Purge Control Solenoid Valve.>
6 CHECK PRESSURE CONTROL SOLENOID VALVE. Operate pressure control solenoid valve. NOTE: Pressure control solenoid valve operation can also be executed using Subaru Select Monitor. For the procedure, refer to "Compulsory Valve Operation Check Mode". <Ref. to EN(H6DO)-60, Compulsory Valve Operation Check Mode.> Does pressure control solenoid valve produce operating sound?	Operating sound produced.	Go to step 7.	Replace pressure control solenoid valve. <Ref. to EC(H6DO)-16, Pressure Control Solenoid Valve.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
7 CHECK EVAPORATIVE EMISSION CONTROL SYSTEM LINE. Turn ignition switch to OFF. Is there a hole of more than 0.5 mm (0.020 in) dia. on fuel line?	Hole is found.	Repair or replace fuel line. <Ref. to FU(H6DO)-78, Fuel Delivery, Return and Evaporation Lines.>	Go to step 8 .
8 CHECK CANISTER. Is canister damaged or is there a hole of more than 0.5 mm (0.020 in) dia. in it?	Damage or hole is found.	Repair or replace canister. <Ref. to EC(H6DO)-7, Canister.>	Go to step 9 .
9 CHECK FUEL TANK. Remove fuel tank. <Ref. to FU(H6DO)-53, Fuel Tank.> Is fuel tank damaged or is there a hole of more than 0.5 mm (0.020 in) dia. in it?	Damage or hole is found.	Repair or replace fuel tank. <Ref. to FU(H6DO)-53, Fuel Tank.>	Go to step 10 .
10 CHECK ANY OTHER MECHANICAL TROUBLE IN EVAPORATIVE EMISSION CONTROL SYSTEM. Are there holes of more than 0.5 mm (0.020 in) dia., cracks, clogging or disconnections of hoses or pipes in evaporative emission control system?	There is a non-standard condition in hose or pipe.	Repair or replace hoses or pipes.	Contact with SOA (distributor) service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


BL:DTC P0458 — EVAPORATIVE EMISSION CONTROL SYSTEM PURGE CONTROL VALVE CIRCUIT LOW —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Erroneous idling

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

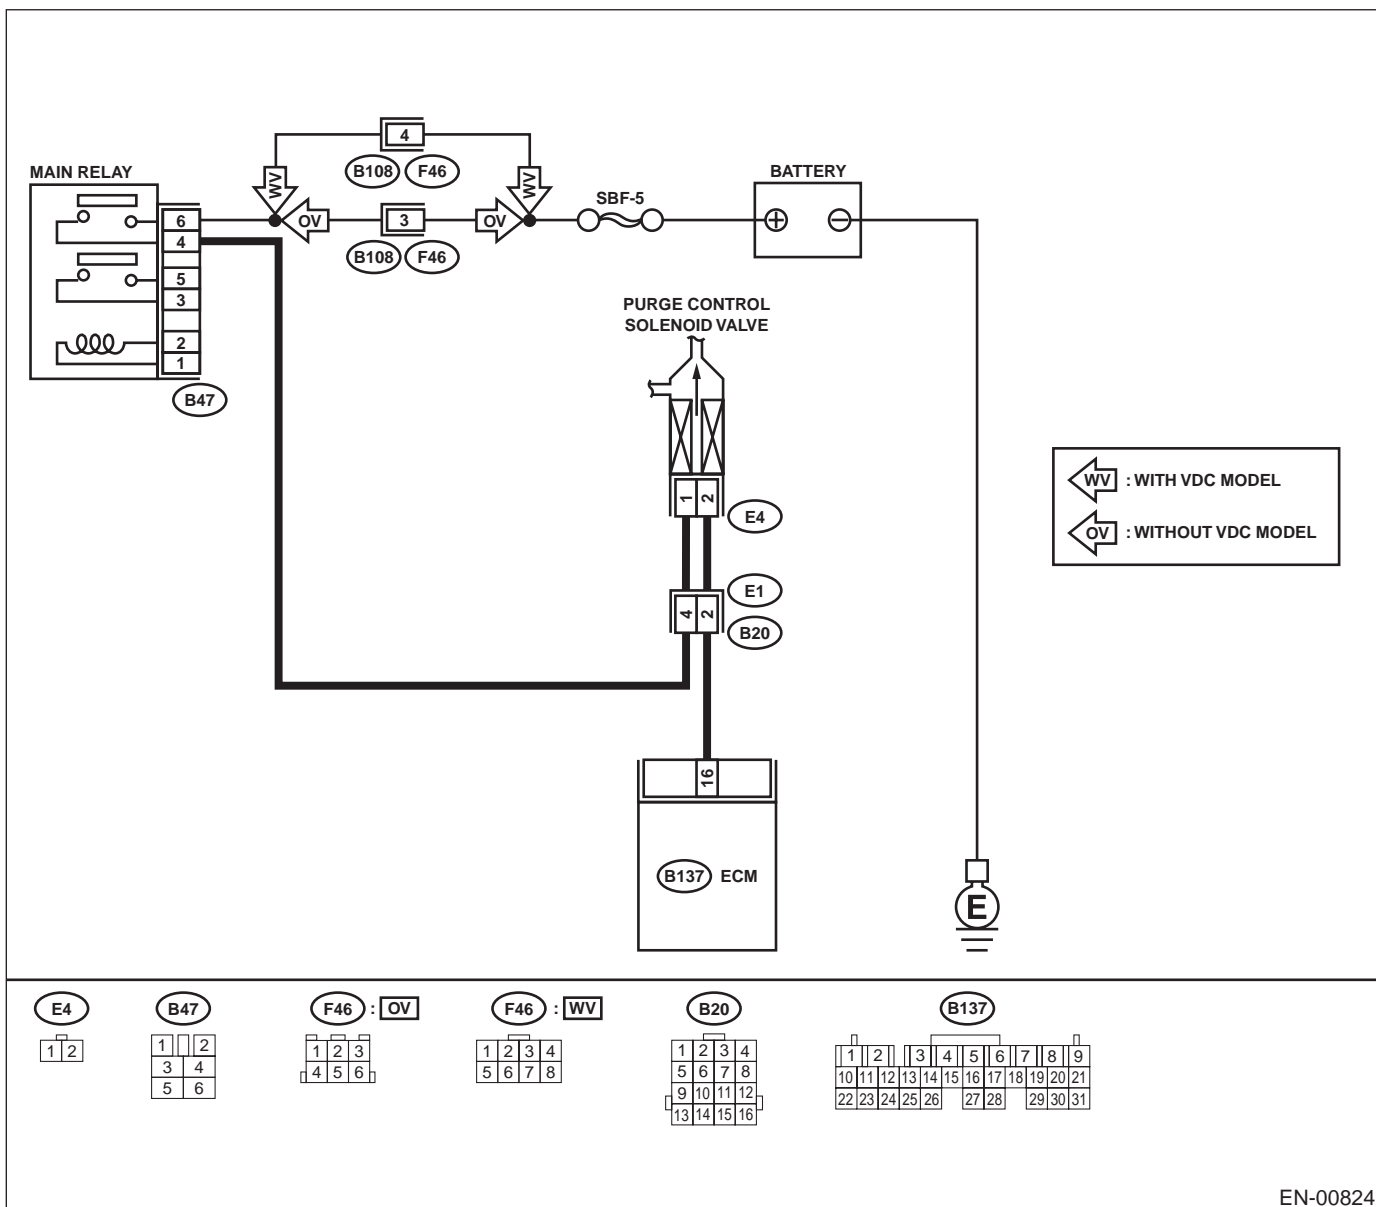

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1</p> <p>CHECK OUTPUT SIGNAL FROM ECM.</p> <p>1) Turn ignition switch to ON. 2) Measure voltage between ECM and chassis ground.</p> <p>Connector & terminal (B137) No. 16 (+) — Chassis ground (-):</p> <p>Does the measured value exceed the specified value?</p>	10 V	<p>Even if MIL lights up, the circuit has returned to a normal condition at this time. Contact with SOA (distributor) service.</p> <p>NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.</p>	Go to step 2.
<p>2</p> <p>CHECK HARNESS BETWEEN PURGE CONTROL SOLENOID VALVE AND ECM CONNECTOR.</p> <p>1) Turn ignition switch to OFF. 2) Disconnect connectors from purge control solenoid valve and ECM. 3) Measure resistance of harness between purge control solenoid valve connector and engine ground.</p> <p>Connector & terminal (E4) No. 2 — Engine ground:</p> <p>Is the measured value less than the specified value?</p>	10 Ω	Repair ground short circuit in harness between ECM and purge control solenoid valve connector.	Go to step 3.
<p>3</p> <p>CHECK HARNESS BETWEEN PURGE CONTROL SOLENOID VALVE AND ECM CONNECTOR.</p> <p>Measure resistance of harness between ECM and purge control solenoid valve of harness connector.</p> <p>Connector & terminal (B137) No. 16 — (E4) No. 2:</p> <p>Is the measured value less than the specified value?</p>	1 Ω	Go to step 4.	<p>Repair open circuit in harness between ECM and purge control solenoid valve connector.</p> <p>NOTE: In this case, repair the following:</p> <ul style="list-style-type: none"> • Open circuit in harness between ECM and purge control solenoid valve connector • Poor contact in coupling connector
<p>4</p> <p>CHECK PURGE CONTROL SOLENOID VALVE.</p> <p>1) Remove purge control solenoid valve. 2) Measure resistance between purge control solenoid valve terminals.</p> <p>Terminals No. 1 — No. 2:</p> <p>Is the measured value within the specified range?</p>	10 — 100 Ω	Go to step 5.	Replace purge control solenoid valve. <Ref. to EC(H6DO)-8, Purge Control Solenoid Valve.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
5 CHECK POWER SUPPLY TO PURGE CONTROL SOLENOID VALVE. 1) Turn ignition switch to ON. 2) Measure voltage between purge control solenoid valve and engine ground. Connector & terminal (E4) No. 1 (+) — Engine ground (-): Does the measured value exceed the specified value?	10 V	Go to step 6.	Repair open circuit in harness between main relay and purge control solenoid valve connector.
6 CHECK POOR CONTACT. Check poor contact in purge control solenoid valve connector. Is there poor contact in purge control solenoid valve connector?	There is poor contact.	Repair poor contact in purge control solenoid valve connector.	Contact with SOA (distributor) service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

MEMO:

EN(H6DO)-261

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


BM:DTC P0459 — EVAPORATIVE EMISSION CONTROL SYSTEM PURGE CONTROL VALVE CIRCUIT HIGH —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Erroneous idling

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

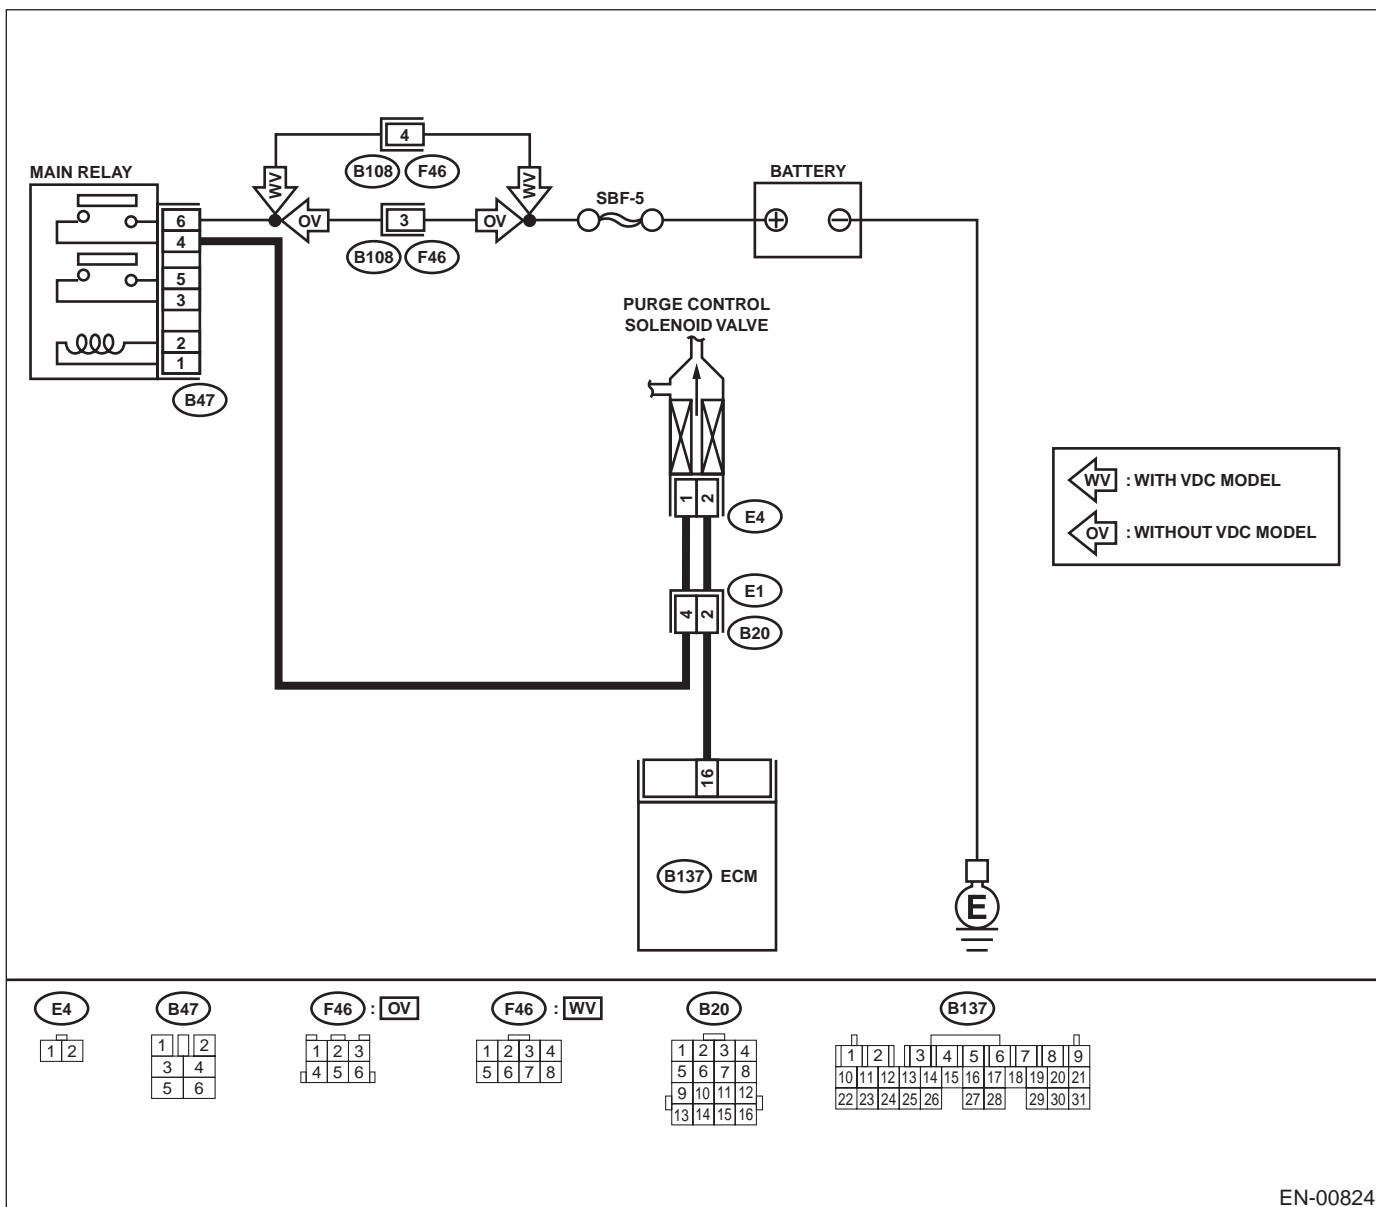

EN-00824

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1 CHECK OUTPUT SIGNAL FROM ECM. 1) Turn ignition switch to OFF. 2) Connect test mode connector. 3) Turn ignition switch to ON. 4) While operating purge control solenoid valve, measure voltage between ECM and chassis ground.</p> <p>NOTE: Purge control solenoid valve operation can be executed using Subaru Select Monitor. For procedure, refer to "Compulsory Valve Operation Check Mode". <Ref. to EN(H6DO)-60, Compulsory Valve Operation Check Mode.></p> <p>Connector & terminal (B137) No. 16 (+) — Chassis ground (-): Does the measured value change within the specified range?</p>	0 — 10 V	Go to step 2.	Even if MIL lights up, the circuit has returned to a normal condition at this time. In this case, repair poor contact in ECM connector.
<p>2 CHECK OUTPUT SIGNAL FROM ECM. 1) Turn ignition switch to ON. 2) Measure voltage between ECM and chassis ground.</p> <p>Connector & terminal (B137) No. 16 (+) — Chassis ground (-): Is the measured value within the specified range?</p>	10 V	Go to step 4.	Go to step 3.
<p>3 CHECK POOR CONTACT. Check poor contact in ECM connector. Is there poor contact in ECM connector?</p>	There is poor contact.	Repair poor contact in ECM connector.	Replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>
<p>4 CHECK HARNESS BETWEEN PURGE CONTROL SOLENOID VALVE AND ECM CONNECTOR. 1) Turn ignition switch to OFF. 2) Disconnect connector from purge control solenoid valve. 3) Turn ignition switch to ON. 4) Measure voltage between ECM and chassis ground.</p> <p>Connector & terminal (B137) No. 16 (+) — Chassis ground (-): Does the measured value exceed the specified value?</p>	10 V	Repair battery short circuit in harness between ECM and purge control solenoid valve connector. After repair, replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>	Go to step 5.
<p>5 CHECK PURGE CONTROL SOLENOID VALVE. 1) Turn ignition switch to OFF. 2) Measure resistance between purge control solenoid valve terminals.</p> <p>Terminals No. 1 — No. 2: Is the measured value less than the specified value?</p>	1 Ω	Replace purge control solenoid valve <Ref. to EC(H6DO)-8, Purge Control Solenoid Valve.> and ECM <Ref. to FU(H6DO)-46, Engine Control Module.>	Go to step 6.
<p>6 CHECK POOR CONTACT. Check poor contact in ECM connector. Is there poor contact in ECM connector?</p>	There is poor contact.	Repair poor contact in ECM connector.	Replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

BN:DTC P0461 — FUEL LEVEL SENSOR CIRCUIT RANGE/PERFORMANCE —


• **DTC DETECTING CONDITION:**

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>

• **WIRING DIAGRAM:**

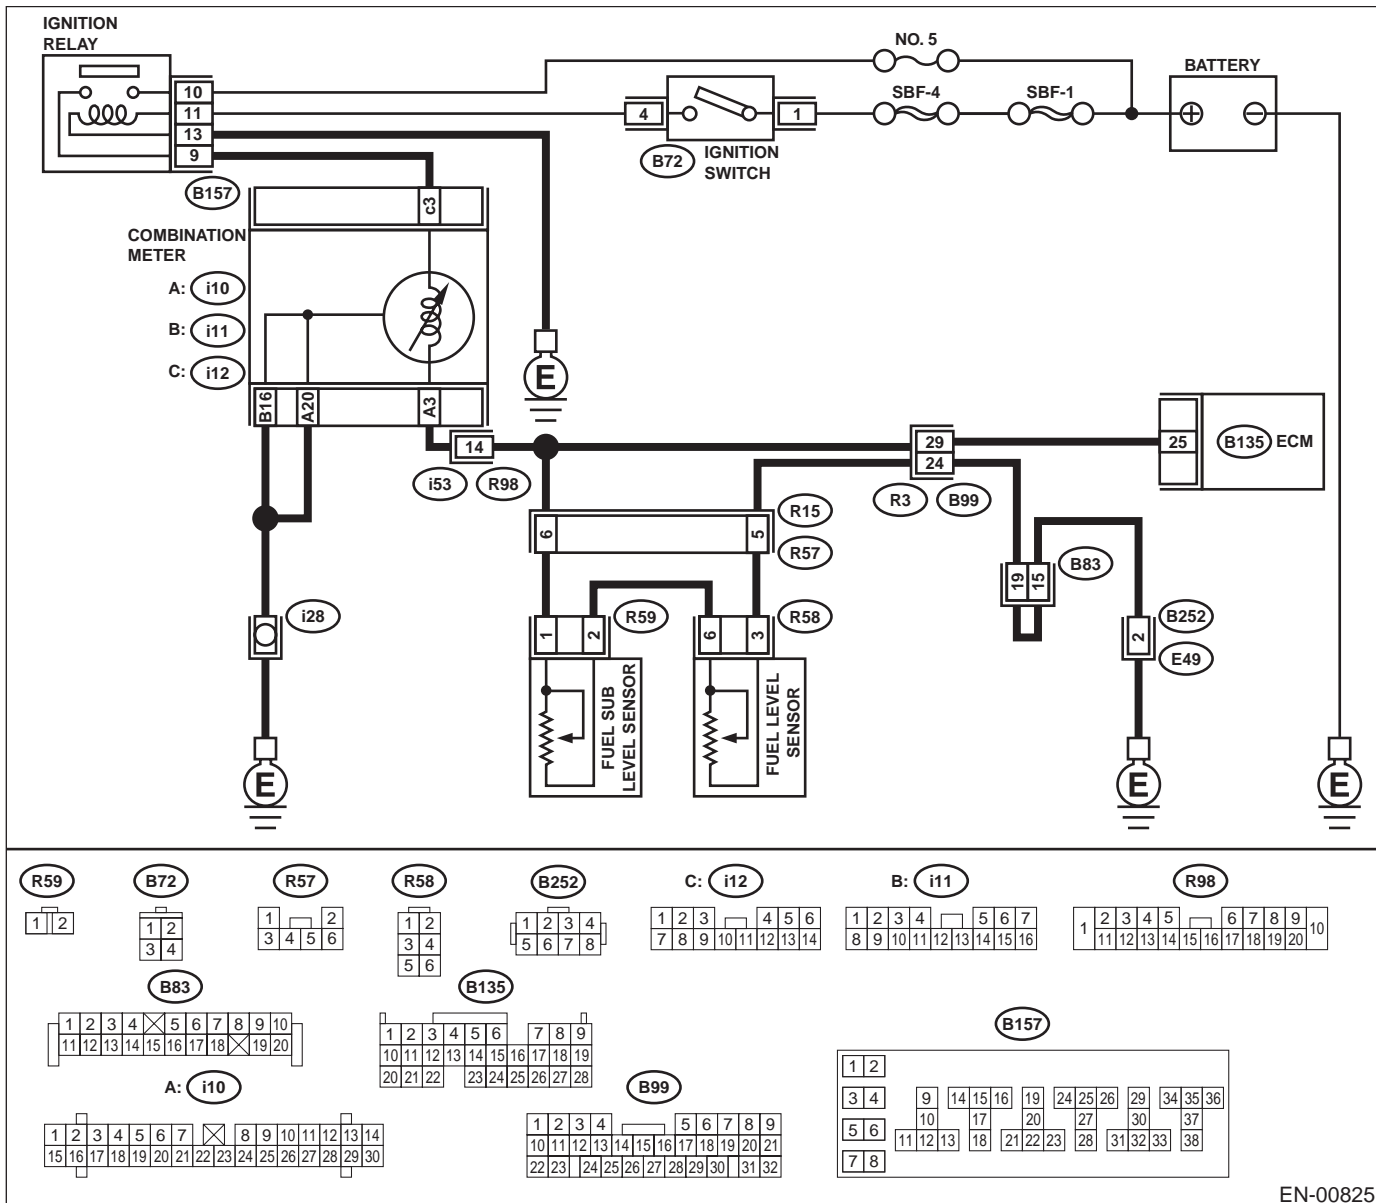

EN-00825

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect this trouble.	Replace fuel level sensor <Ref. to FU(H6DO)-72, Fuel Level Sensor.> and fuel sub level sensor <Ref. to FU(H6DO)-73, Fuel Sub Level Sensor.>.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

BO:DTC P0462 — FUEL LEVEL SENSOR CIRCUIT LOW INPUT —


DTC DETECTING CONDITION:

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>

WIRING DIAGRAM:

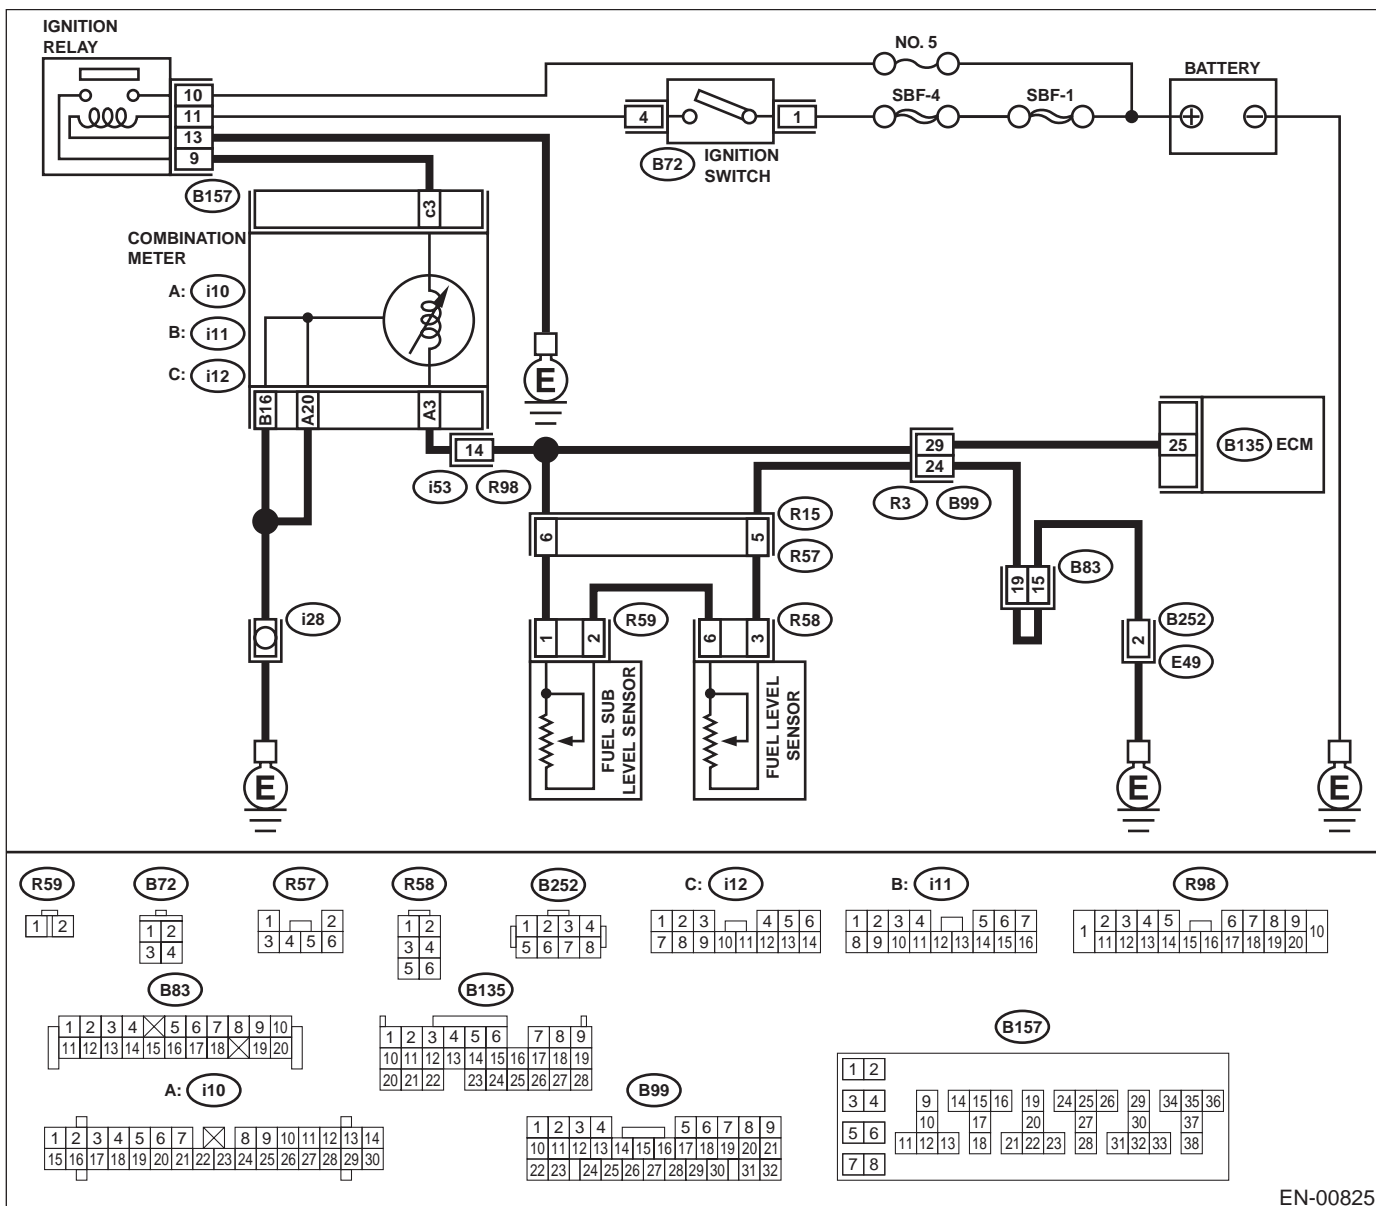

EN-00825

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK SPEEDOMETER AND TACHOMETER OPERATION IN COMBINATION METER. Does speedometer and tachometer operate normally?	Operates properly.	Go to step 2.	Repair or replace combination meter. <Ref. to IDI-12, Combination Meter Assembly.>
2 CHECK INPUT SIGNAL FOR ECM. 1) Turn ignition switch to ON. (Engine OFF) 2) Measure voltage between ECM connector and chassis ground. Connector & terminal (B135) No. 25 (+) — Chassis ground (-): Is the measured value less than the specified value?	0.12 V	Go to step 4.	Go to step 3.
3 CHECK INPUT SIGNAL FOR ECM. (USING SUBARU SELECT MONITOR.) Read data of fuel level sensor signal using Subaru Select Monitor. Does the value change less than the specified value by shaking harness and connector of ECM while monitoring the value with Subaru Select Monitor? NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.>	0.12 V	Repair poor contact in ECM connector.	Even if MIL lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector may be the cause. NOTE: In this case, repair the following: • Poor contact in combination meter connector • Poor contact in ECM connector • Poor contact in coupling connectors
4 CHECK INPUT VOLTAGE OF ECM. 1) Turn ignition switch to OFF. 2) Separate fuel tank cord connector (R57) and rear wiring harness connector (R15). 3) Turn ignition switch to ON. 4) Measure voltage of harness between ECM connector and chassis ground. Connector & terminal (B135) No. 25 (+) — Chassis ground (-): Does the measured value exceed the specified value?	0.12 V	Go to step 5.	Go to step 7.
5 CHECK HARNESS BETWEEN ECM AND COMBINATION METER. 1) Turn ignition switch to OFF. 2) Disconnect connector from connector (i10) and ECM connector. 3) Measure resistance between ECM and chassis ground. Connector & terminal (B135) No. 25 — Chassis ground: Does the measured value exceed the specified value?	1 MΩ	Go to step 6.	Repair ground short circuit in harness between ECM and combination meter connector.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>6 CHECK HARNESS BETWEEN ECM AND COMBINATION METER. Measure resistance between ECM and combination meter connector. Connector & terminal (B135) No. 25 — (i10) No. 3: Is the measured value less than the specified value?</p>	10 Ω	Repair or replace combination meter. <Ref. to IDI-12, Combination Meter Assembly.>	Repair open circuit between ECM and combination meter connector. NOTE: In this case, repair the following: Poor contact in coupling connector
<p>7 CHECK FUEL TANK CORD. 1) Turn ignition switch to OFF. 2) Disconnect connector from fuel sub level sensor. 3) Measure resistance between fuel sub level sensor and chassis ground. Connector & terminal (R59) No. 1 — Chassis ground: Does the measured value exceed the specified value?</p>	1 MΩ	Go to step 8.	Repair ground short circuit in fuel tank cord.
<p>8 CHECK FUEL TANK CORD. 1) Disconnect connector from fuel pump assembly. 2) Measure resistance between fuel pump assembly and chassis ground. Connector & terminal (R59) No. 2 — Chassis ground: Does the measured value exceed the specified value?</p>	1 MΩ	Go to step 9.	Repair ground short circuit in fuel tank cord.
<p>9 CHECK FUEL LEVEL SENSOR. Warning: During work procedures, if fuel tank is more than 3/4 full, be careful because fuel may spill. 1) Remove fuel pump assembly. <Ref. to FU(H6DO)-69, Fuel Pump.> 2) Measure resistance between fuel level sensor and terminals with its float set to the full position. Terminals No. 3 — No. 6: Is the measured value within the specified range?</p>	0.5 — 2.5 Ω	Go to step 10.	Replace fuel level sensor.
<p>10 CHECK FUEL SUB LEVEL SENSOR. Warning: During work procedures, if fuel tank is more than 3/4 full, be careful because fuel may spill. 1) Remove fuel sub level sensor. <Ref. to FU(H6DO)-73, Fuel Sub Level Sensor.> 2) Measure resistance between fuel sub level sensor and terminals with its float set to the full position. Terminals No. 1 — No. 2: Is the measured value within the specified range?</p>	0.5 — 2.5 Ω	Repair poor contact in harness between ECM and combination meter connector.	Replace fuel sub level sensor.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

MEMO:

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

BP:DTC P0463 — FUEL LEVEL SENSOR CIRCUIT HIGH INPUT —


DTC DETECTING CONDITION:

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>

WIRING DIAGRAM:

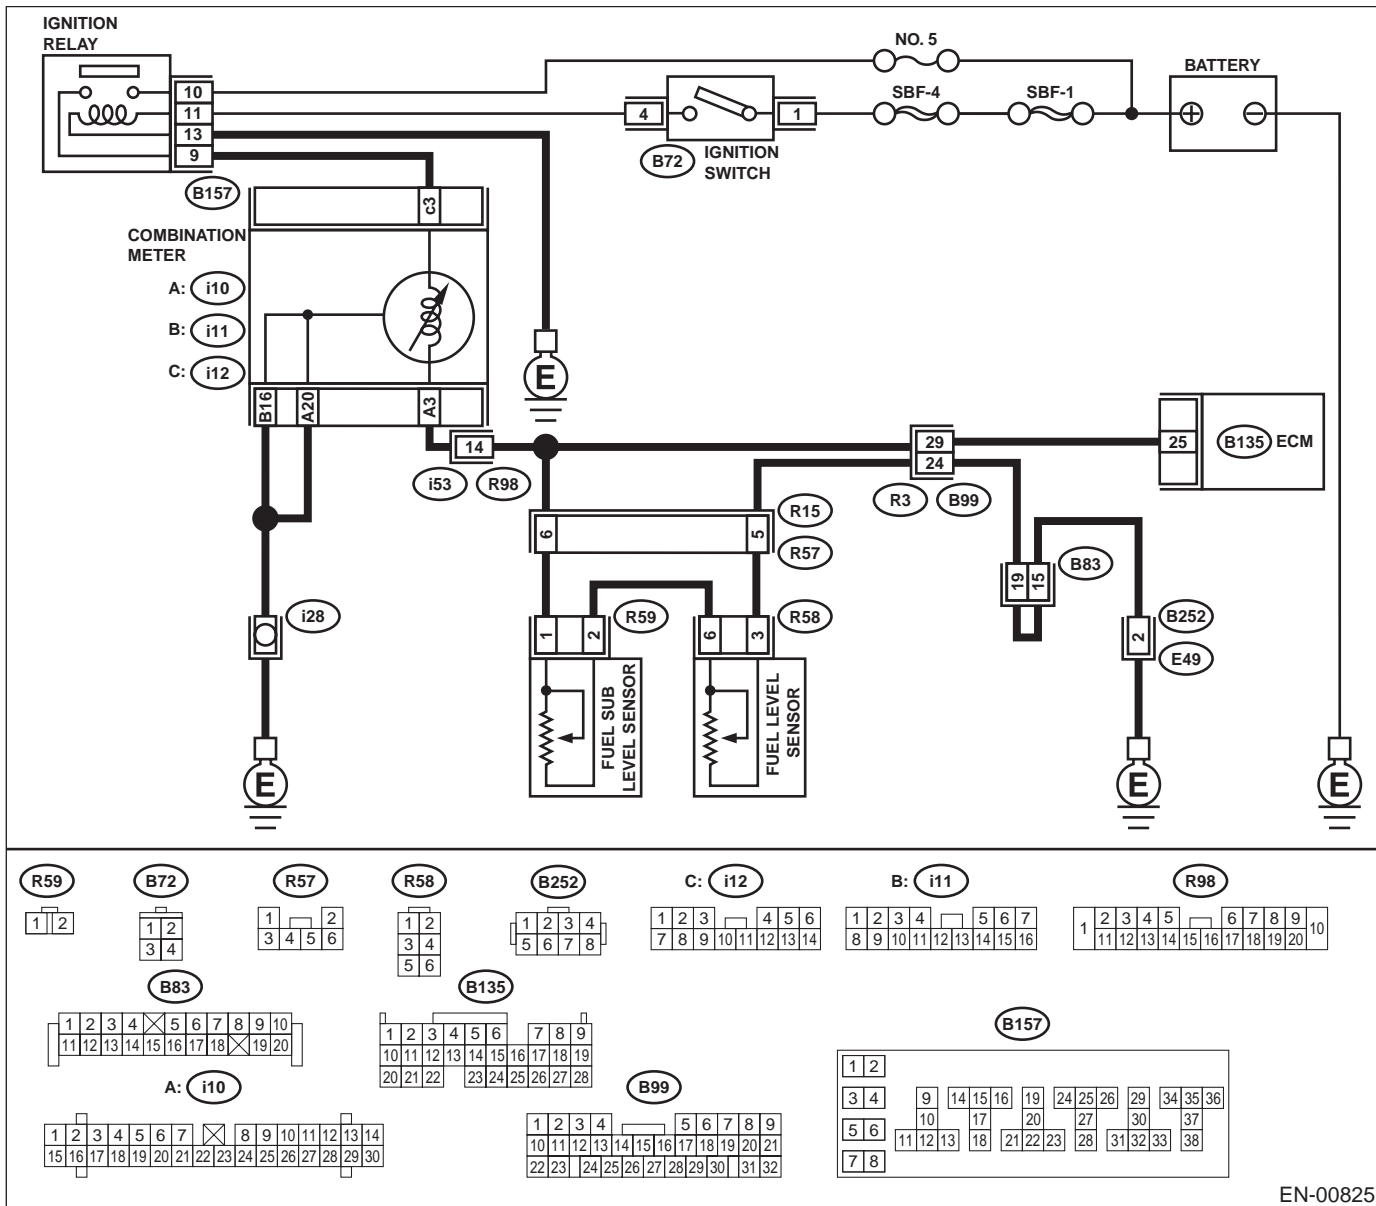

EN-00825

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK SPEEDOMETER AND TACHOMETER OPERATION IN COMBINATION METER. Does speedometer and tachometer operate normally?	Operates properly.	Go to step 2.	Repair or replace combination meter. <Ref. to IDI-12, Combination Meter Assembly.>
2 CHECK INPUT SIGNAL FOR ECM. 1) Turn ignition switch to ON. (Engine OFF) 2) Measure voltage between ECM connector and chassis ground. Connector & terminal (B135) No. 25 (+) — Chassis ground (-): Does the measured value exceed the specified value?	4.75 V	Go to step 3.	Even if MIL lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector may be the cause. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Poor contact in fuel pump connector • Poor contact in coupling connector
3 CHECK INPUT VOLTAGE OF ECM. 1) Turn ignition switch to OFF. 2) Disconnect combination meter connector (i10) and ECM connector. 3) Turn ignition switch to ON. 4) Measure voltage of harness between ECM and chassis ground. Connector & terminal (B135) No. 25 (+) — Chassis ground (-): Does the measured value exceed the specified value?	4.75 V	Go to step 4.	Repair battery short circuit between ECM and combination meter connector.
4 CHECK HARNESS BETWEEN ECM AND FUEL TANK CORD. 1) Turn ignition switch to OFF. 2) Separate fuel tank cord connector (R57) and rear wiring harness connector (R15). 3) Measure resistance between ECM and fuel tank cord. Connector & terminal (B135) No. 25 — (R15) No. 6: Is the measured value less than the specified value?	5 Ω	Go to step 5.	Repair open circuit between ECM and fuel tank cord.
5 CHECK HARNESS BETWEEN FUEL TANK CORD AND CHASSIS GROUND. Measure resistance between fuel tank cord and chassis ground. Connector & terminal (R15) No. 5 — Chassis ground: Is the measured value less than the specified value?	5 Ω	Go to step 6.	Repair open circuit between fuel tank cord and chassis ground. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Poor contact in coupling connectors

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
6 CHECK FUEL TANK CORD. 1) Disconnect connector from fuel level sensor. 2) Measure resistance between fuel level sensor and coupling connector. Connector & terminal (R57) No. 5 — (R58) No. 3: Is the measured value less than the specified value?	10 Ω	Go to step 7.	Repair open circuit between coupling connector and fuel level sensor.
7 CHECK FUEL TANK CORD. 1) Disconnect connector from fuel sub level sensor. 2) Measure resistance between fuel level sensor and fuel sub level sensor. Connector & terminal (R58) No. 6 — (R59) No. 2: Is the measured value less than the specified value?	10 Ω	Go to step 8.	Repair open circuit between fuel level sensor and fuel sub level sensor.
8 CHECK FUEL TANK CORD. Measure resistance between fuel sub level sensor and coupling connector. Connector & terminal (R57) No. 6 — (R59) No. 1: Is the measured value less than the specified value?	10 Ω	Go to step 9.	Repair open circuit between coupling connector and fuel sub level sensor.
9 CHECK FUEL LEVEL SENSOR. Warning: During work procedures, if fuel tank is more than 3/4 full, be careful because fuel may spill. 1) Remove fuel pump assembly. <Ref. to FU(H6DO)-69, Fuel Pump.> 2) While moving fuel level sensor float up and down, measure resistance between fuel level sensor terminals. Terminals No. 3 — No. 6: Does the measured value exceed the specified value?	54.5 Ω	Replace fuel level sensor. <Ref. to FU(H6DO)-72, Fuel Level Sensor.>	Go to step 10.
10 CHECK FUEL SUB LEVEL SENSOR. Warning: During work procedures, if fuel tank is more than 3/4 full, be careful because fuel may spill. 1) Remove fuel sub level sensor. <Ref. to FU(H6DO)-73, Fuel Sub Level Sensor.> 2) While moving fuel sub level sensor float up and down, measure resistance between fuel sub level sensor terminals. Terminals No. 1 — No. 2: Does the measured value exceed the specified value?	41.5 Ω	Replace fuel sub level sensor. <Ref. to FU(H6DO)-73, Fuel Sub Level Sensor.>	Replace combination meter. <Ref. to IDI-12, Combination Meter Assembly.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

MEMO:

EN(H6DO)-273

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

BQ:DTC P0464 — FUEL LEVEL SENSOR CIRCUIT INTERMITTENT—


DTC DETECTING CONDITION:

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>

WIRING DIAGRAM:

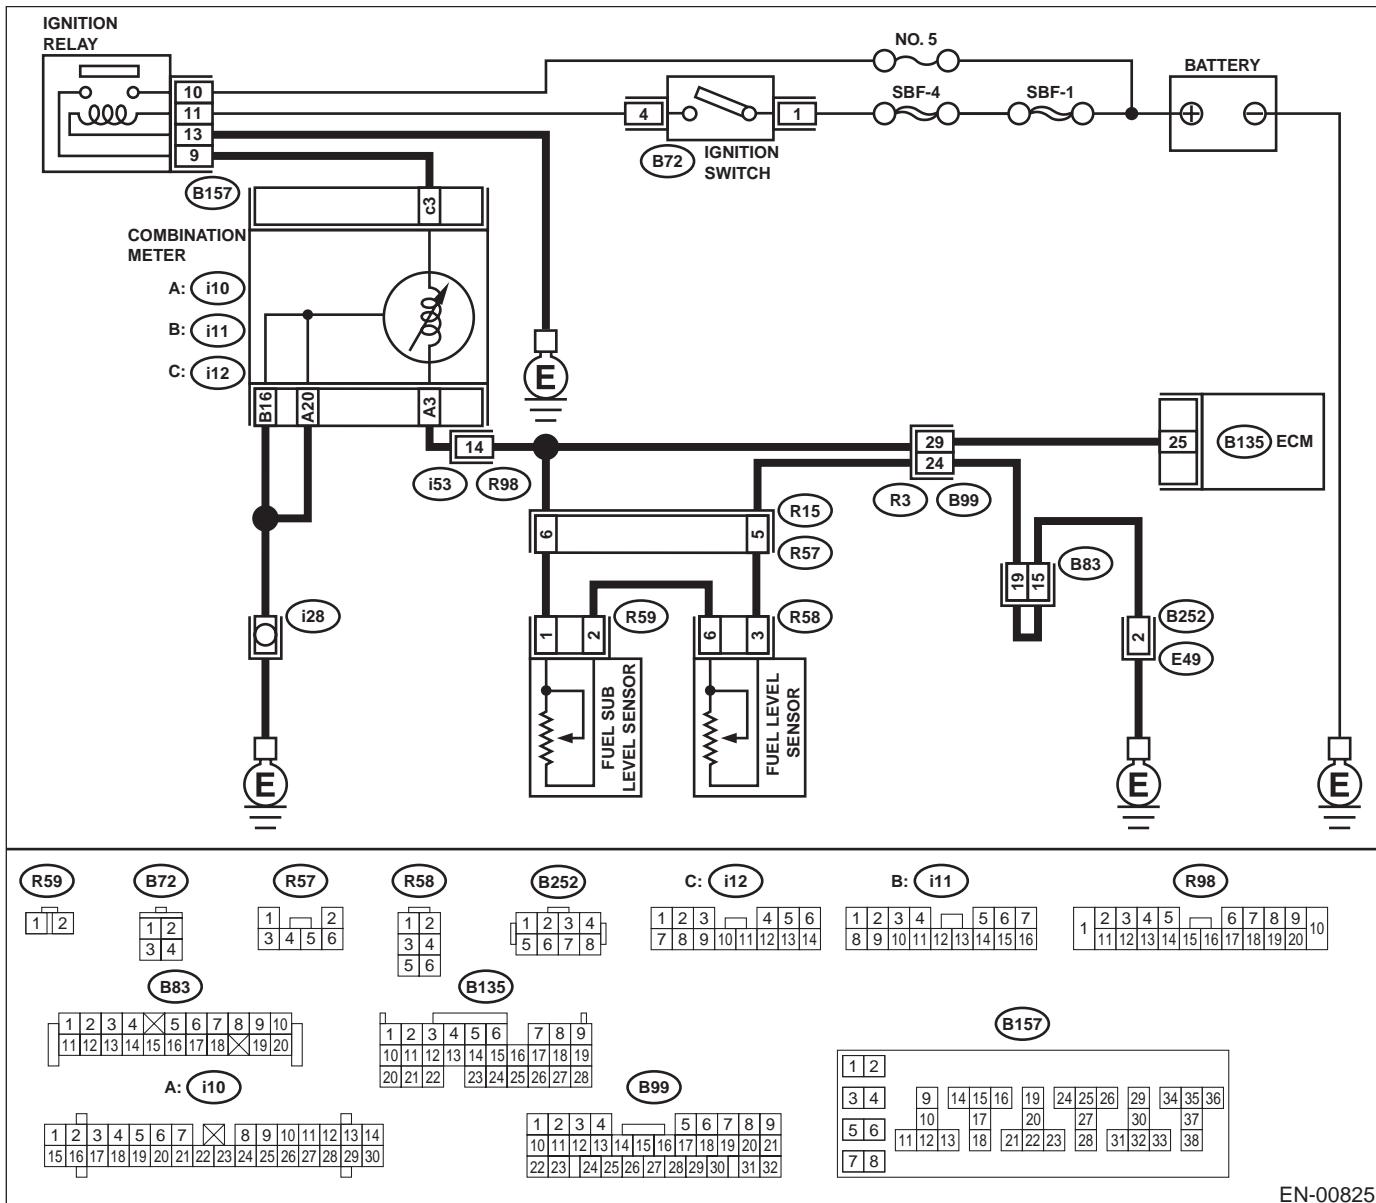

EN-00825

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).>	Go to step 2.
2 CHECK FUEL LEVEL SENSOR. 1) Remove fuel pump assembly. <Ref. to FU(H6DO)-69, Fuel Pump.> 2) While moving fuel level sensor float up and down, make sure that the resistance between fuel level sensor terminals changes smoothly. Terminals No. 3 — No. 6: Does the resistance change smoothly?	Changes smoothly.	Go to step 3.	Replace fuel level sensor. <Ref. to FU(H6DO)-72, Fuel Level Sensor.>
3 CHECK FUEL SUB LEVEL SENSOR. Warning: During work procedures, if fuel tank is more than 3/4 full, be careful because fuel may spill. 1) Remove fuel sub level sensor. <Ref. to FU(H6DO)-73, Fuel Sub Level Sensor.> 2) While moving fuel sub level sensor float up and down, make sure that the resistance between fuel level sensor terminals changes smoothly. Terminals No. 1 — No. 2: Does the resistance change smoothly?	Changes smoothly.	Repair poor contact in ECM, combination meter and coupling connectors.	Replace fuel sub level sensor. <Ref. to FU(H6DO)-73, Fuel Sub Level Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

BR:DTC P0483 — COOLING FAN RATIONALITY CHECK —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Occurrence of noise
 - Overheating

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.


NOTE:

If the vehicle, with the engine idling, is placed very close to a wall or another vehicle, preventing normal cooling function, the OBD system may detect malfunction.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

• WIRING DIAGRAM:

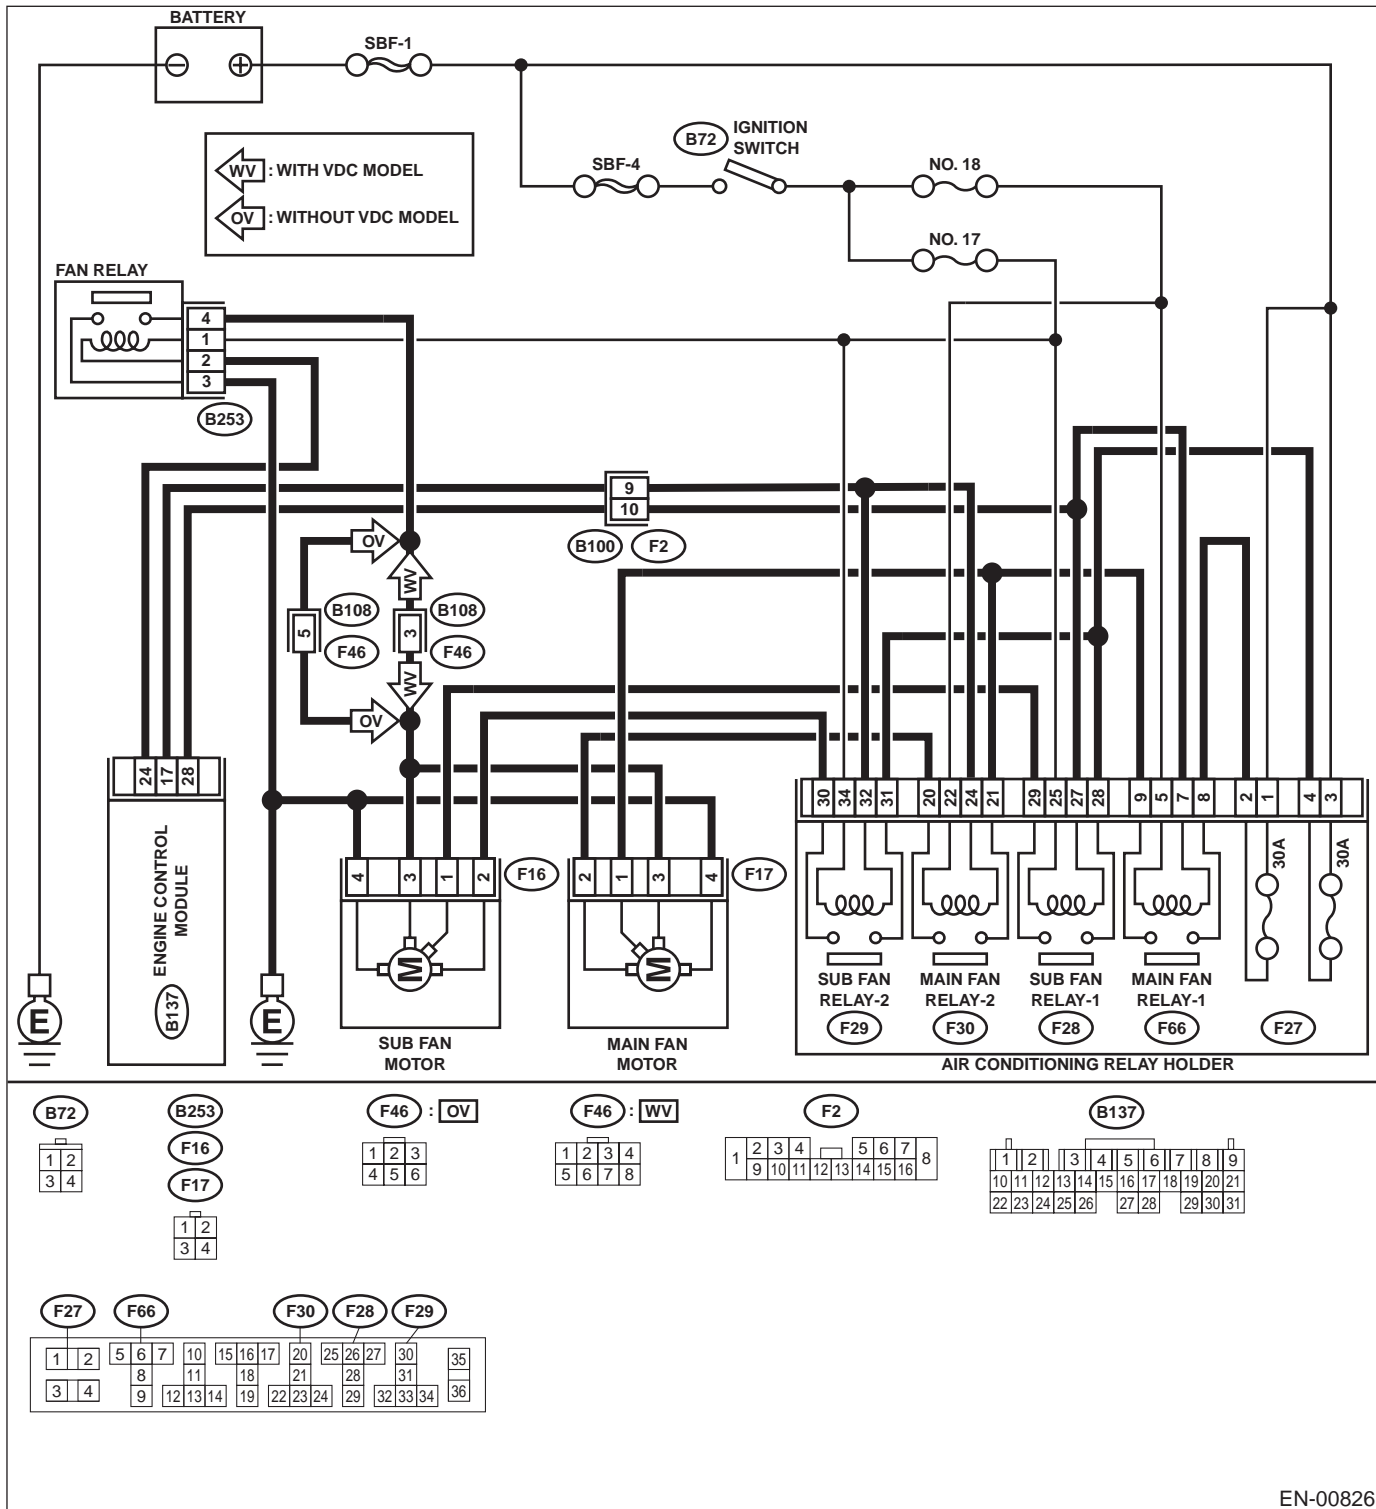

EN-00826

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).>	Check radiator fan and fan motor. <Ref. to CO(H6DO)-7, INSPECTION, Radiator Main Fan System.> and <Ref. to CO(H6DO)-15, INSPECTION, Radiator Sub Fan System.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

BS:DTC P0502 — VEHICLE SPEED SENSOR CIRCUIT LOW INPUT —

NOTE:

For the diagnostic procedure, refer to DTC P0503. <Ref. to EN(H6DO)-280, DTC P0503 — VEHICLE SPEED SENSOR INTERMITTENT/ERRATIC/HIGH —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

BT:DTC P0503 — VEHICLE SPEED SENSOR INTERMITTENT/ERRATIC/HIGH —


• **DTC DETECTING CONDITION:**

- Immediately at fault recognition

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>

• **WIRING DIAGRAM:**
WITH VDC MODEL

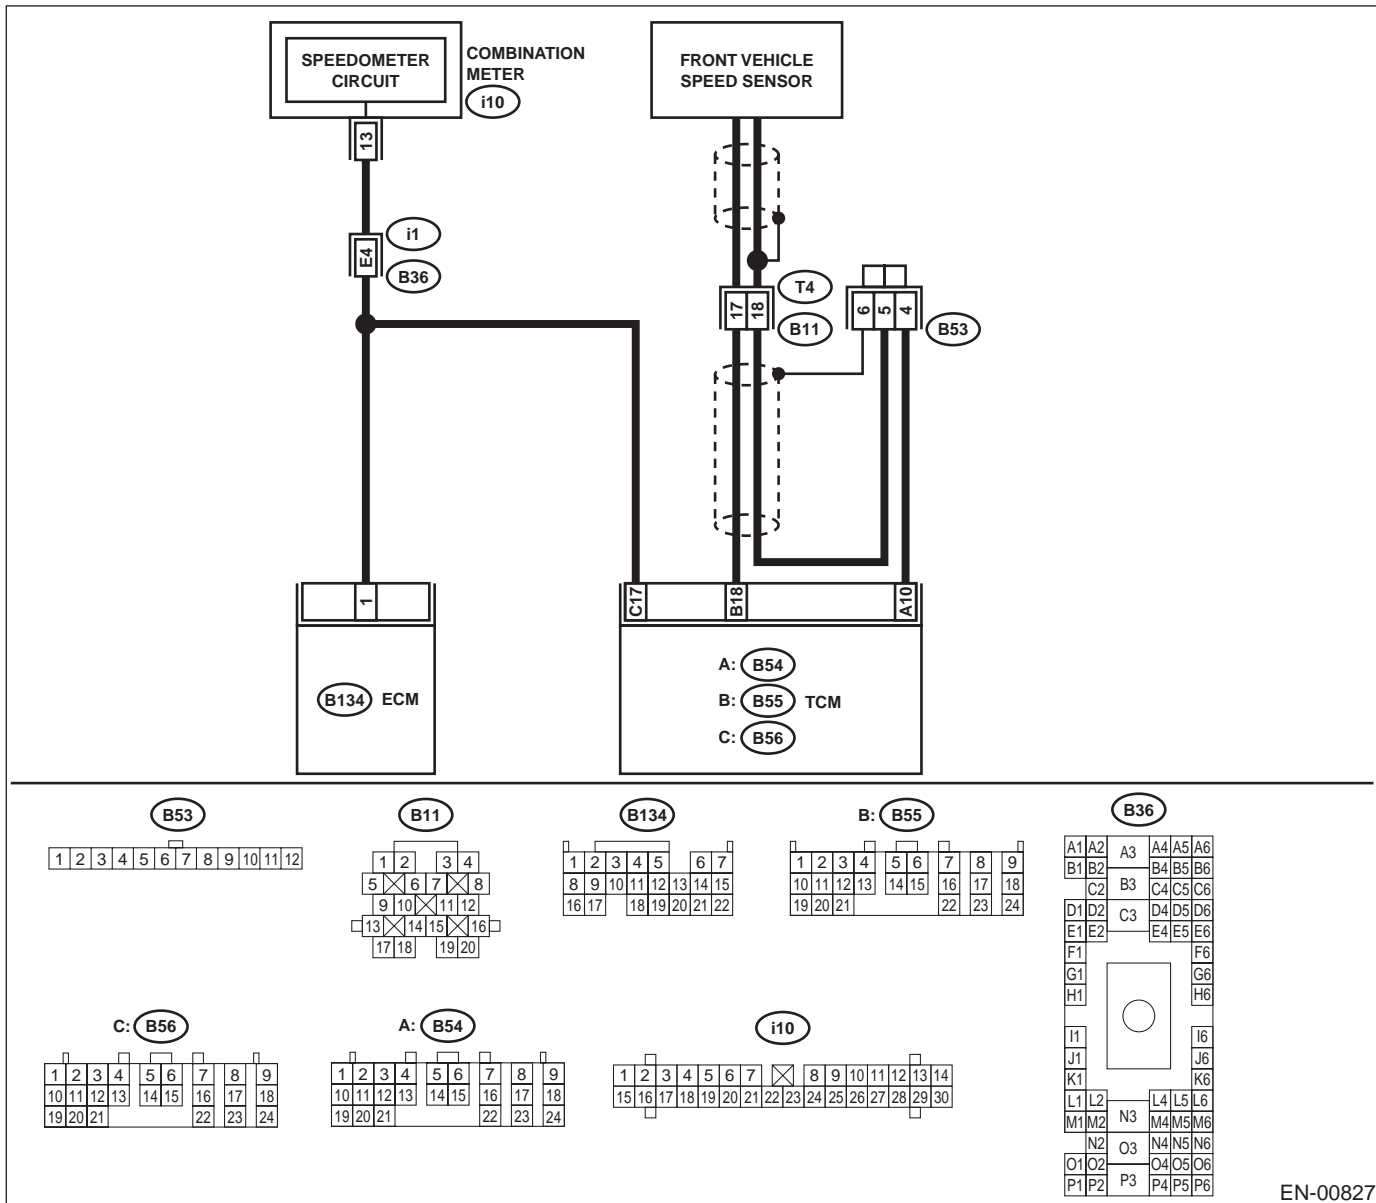


EN-00827

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

WITHOUT VDC MODEL

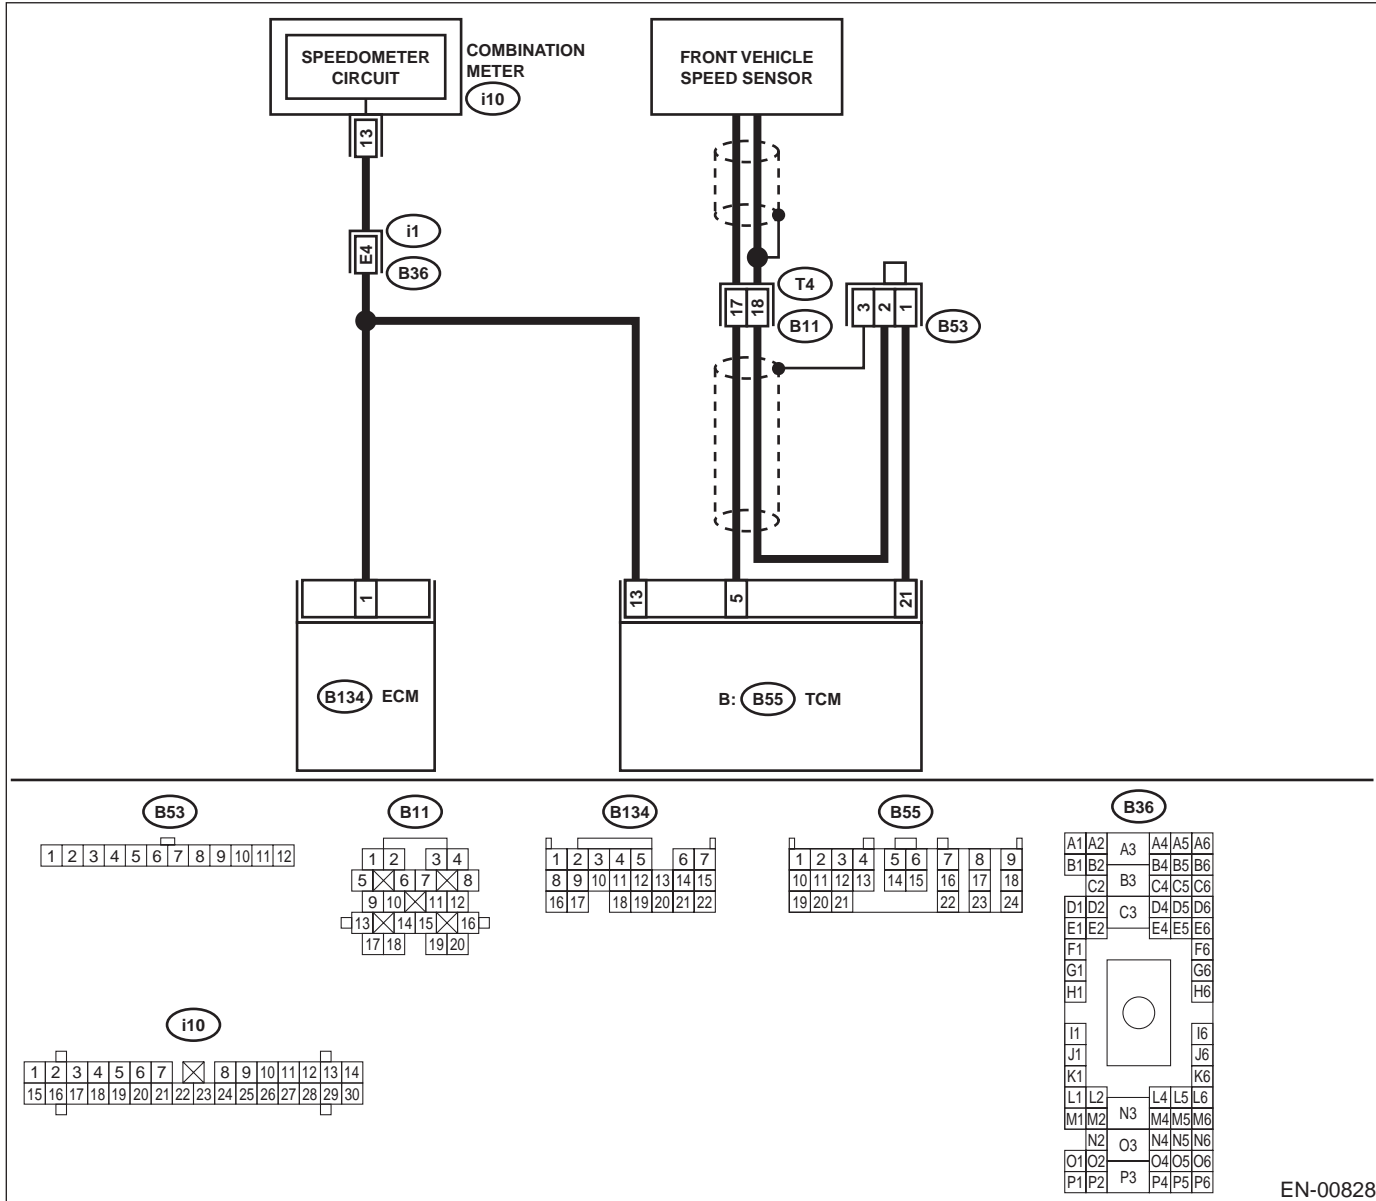

EN-00828

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK DTC P0720 ON DISPLAY. Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0720?	DTC P0720 is indicated.	Check front vehicle speed sensor signal circuit. <Ref. to AT-58, DTC 33 FRONT VEHICLE SPEED SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>	Go to step 2.
2 CHECK SPEEDOMETER OPERATION IN COMBINATION METER. Does speedometer operate normally?	Operates properly.	Go to step 3.	Check speedometer and vehicle speed sensor. <Ref. to IDI-14, Speedometer.>, <Ref. to AT-54, Front Vehicle Speed Sensor.>, <Ref. to AT-58, Rear Vehicle Speed Sensor.> and <Ref. to AT-59, Torque Converter Turbine Speed Sensor.>
3 CHECK HARNESS BETWEEN ECM AND COMBINATION METER CONNECTOR. 1) Turn ignition switch to OFF. 2) Disconnect connector from combination meter. 3) Measure resistance between ECM and combination meter. Connector & terminal (B134) No. 1 — (i10) No. 13: Is the measured value less than the specified value?	10 Ω	Repair poor contact in ECM connector.	Repair harness and connector. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Open circuit in harness between ECM and combination meter connector • Poor contact in ECM connector • Poor contact in combination meter connector • Poor contact in coupling connector

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

MEMO:

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


BU:DTC P0506 — IDLE CONTROL SYSTEM RPM LOWER THAN EXPECTED —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Engine is difficult to start.
 - Engine does not start.
 - Erroneous idling
 - Engine stalls.

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

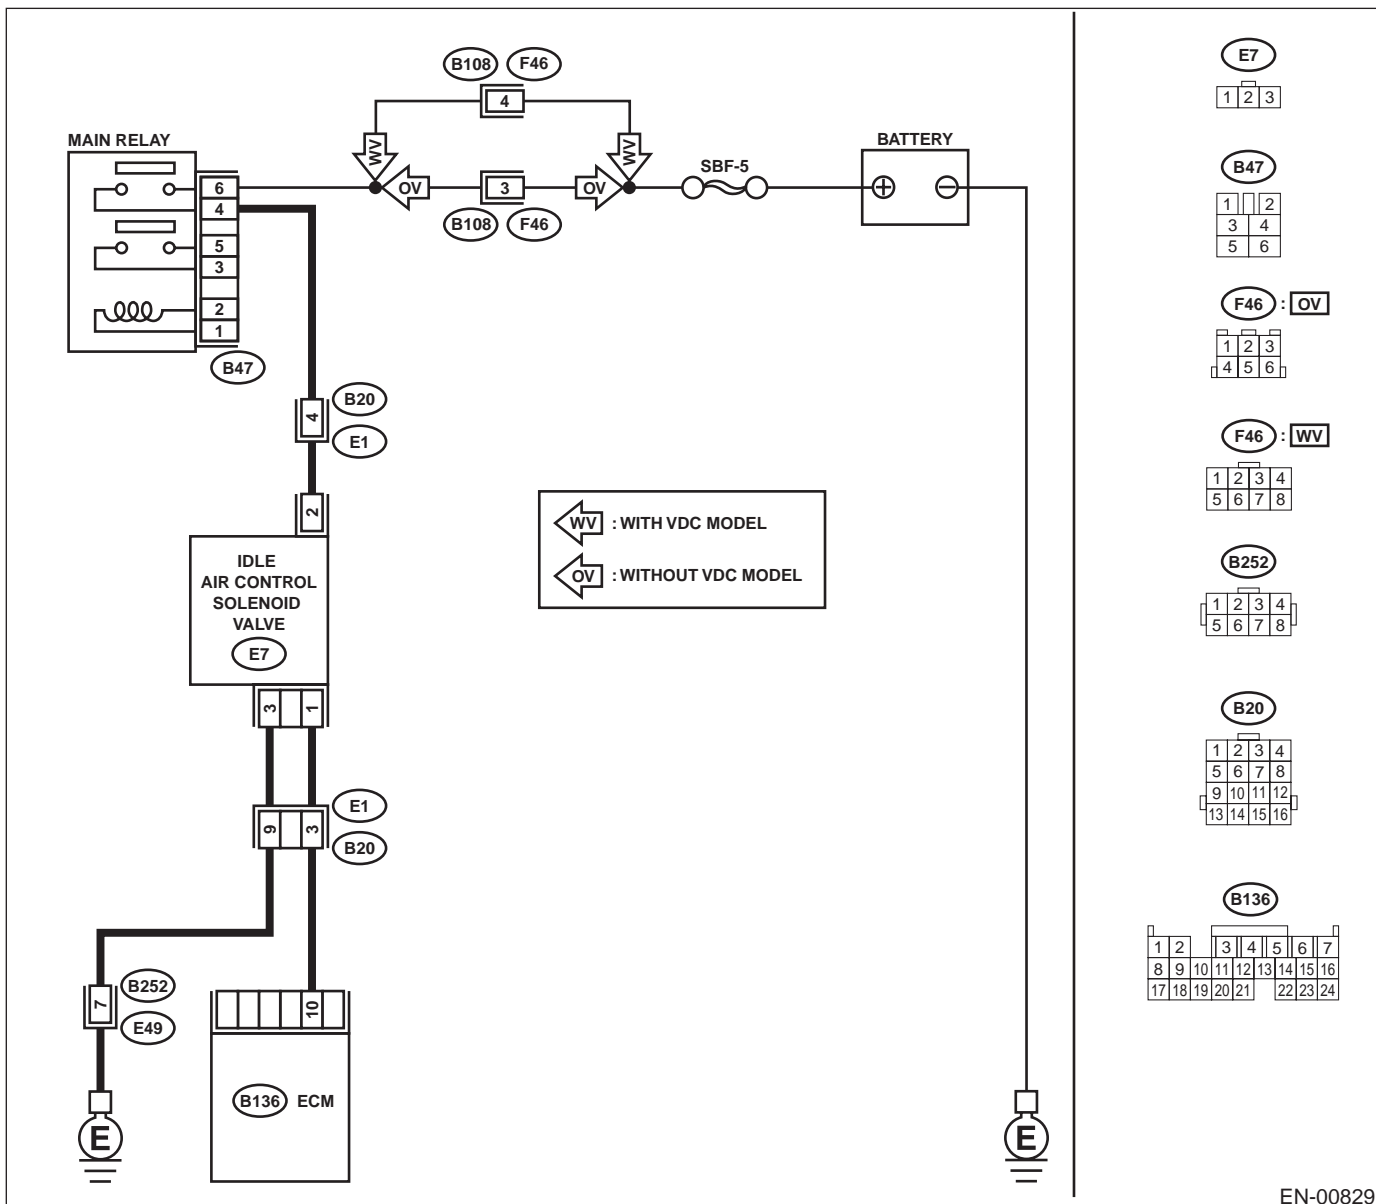

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0506.	Go to step 2.
2 CHECK AIR BY-PASS LINE. 1) Turn ignition switch to OFF. 2) Remove idle air control solenoid valve from throttle body. <Ref. to FU(H6DO)-36, Idle Air Control Solenoid Valve.> 3) Remove throttle body from intake manifold. <Ref. to FU(H6DO)-16, Throttle Body.> 4) Using an air gun, force air into idle air control solenoid valve installation area. Confirm that forced air subsequently escapes from throttle body interior. Does air flow out?	Air flows out.	Replace idle air control solenoid valve. <Ref. to FU(H6DO)-36, Idle Air Control Solenoid Valve.>	Replace throttle body. <Ref. to FU(H6DO)-16, Throttle Body.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


BV:DTC P0507 — IDLE CONTROL SYSTEM RPM HIGHER THAN EXPECTED —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Engine does not return to normal idle speed.

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

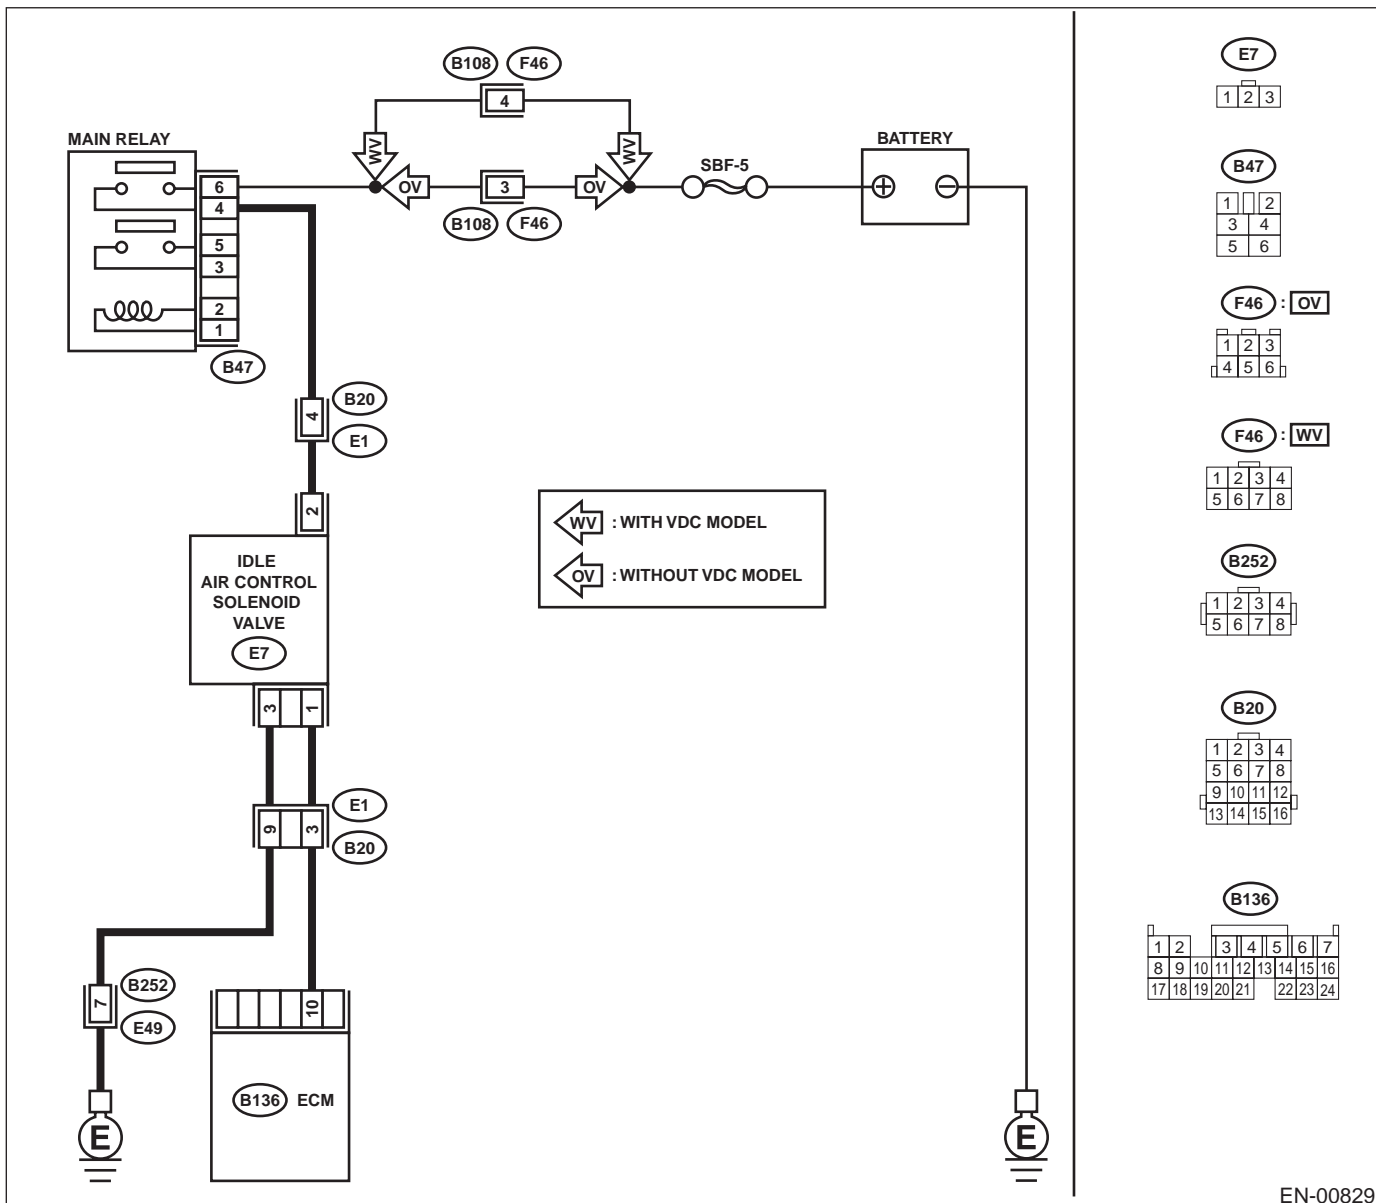

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P0507.	Go to step 2.
2 CHECK AIR INTAKE SYSTEM. 1) Turn ignition switch to ON. 2) Start engine, and idle it. 3) Check the following items. •Loose installation of intake manifold, idle air control solenoid valve and throttle body •Cracks of intake manifold gasket, idle air control solenoid valve gasket and throttle body gasket •Disconnections of vacuum hoses Is there a fault in air intake system?	There is a fault.	Repair air suction and leaks.	Go to step 3.
3 CHECK THROTTLE CABLE. Does throttle cable have play for adjustment?	Throttle cable has a play.	Go to step 4.	Adjust throttle cable. <Ref. to SP(H6DO)-7, Accelerator Control Cable.>
4 CHECK AIR BY-PASS LINE. 1) Turn ignition switch to OFF. 2) Remove idle air control solenoid valve from throttle body. <Ref. to FU(H6DO)-36, Idle Air Control Solenoid Valve.> 3) Confirm that there are no foreign particles in by-pass air line. Are foreign particles in by-pass air line?	Foreign particles are in by-pass air line.	Remove foreign particles from by-pass air line.	Replace idle air control solenoid valve. <Ref. to FU(H6DO)-36, Idle Air Control Solenoid Valve.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


BW:DTC P0508 — IDLE CONTROL SYSTEM CIRCUIT LOW —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
 - Erroneous idling
 - Engine stalls.
 - Engine breathing

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

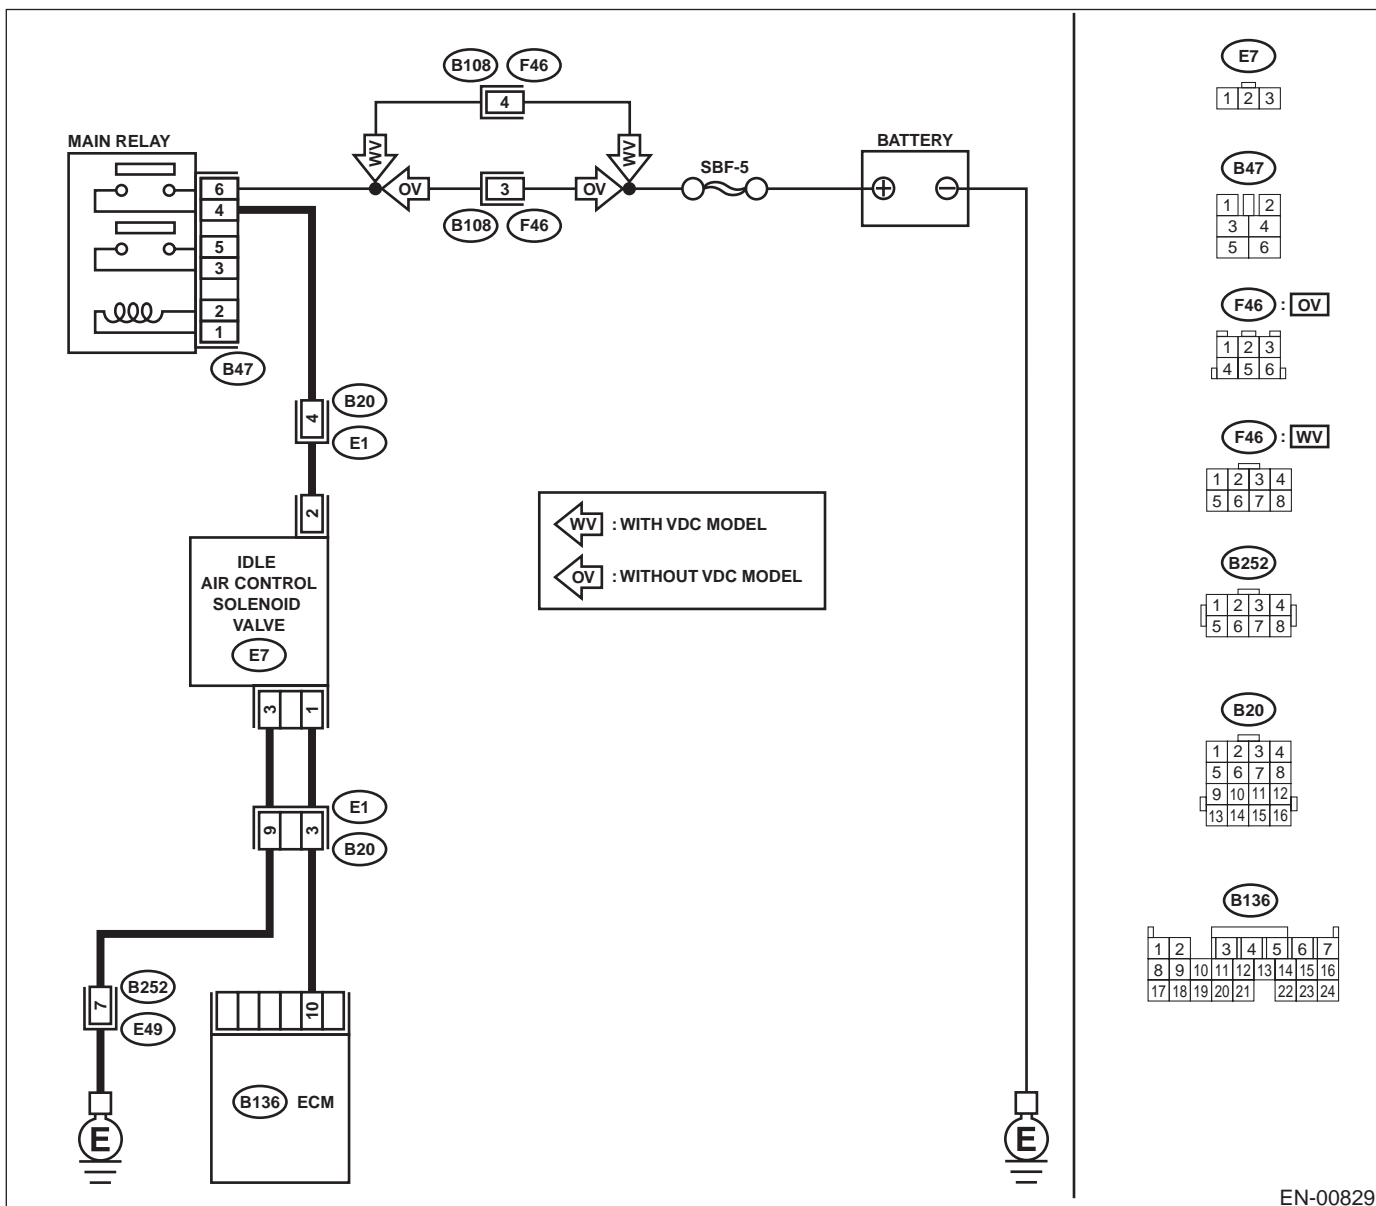

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1 CHECK OUTPUT SIGNAL FROM ECM. 1) Turn ignition switch to ON. 2) Measure voltage between ECM and chassis ground. Connector & terminal (B136) No. 10 (+) — Chassis ground (-): Does the measured value exceed the specified value?</p>	3 V	Repair poor contact in ECM connector.	Go to step 2.
<p>2 CHECK POWER SUPPLY TO IDLE AIR CONTROL SOLENOID VALVE. 1) Turn ignition switch to OFF. 2) Disconnect connector from idle air control solenoid valve. 3) Turn ignition switch to ON. 4) Measure voltage between idle air control solenoid valve and engine ground. Connector & terminal (E7) No. 2 (+) — Engine ground (-): Does the measured value exceed the specified value?</p>	10 V	Go to step 3.	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between idle air control solenoid valve and main relay connector • Poor contact in coupling connector
<p>3 CHECK HARNESS BETWEEN ECM AND IDLE AIR CONTROL SOLENOID VALVE CONNECTOR. 1) Turn ignition switch to OFF. 2) Disconnect connector from ECM. 3) Measure resistance of harness between ECM and idle air control solenoid valve connector. Connector & terminal (B136) No. 10 — (E7) No. 1: Is the measured value less than the specified value?</p>	1 Ω	Go to step 4.	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and idle air control solenoid valve connector • Poor contact in coupling connector
<p>4 CHECK HARNESS BETWEEN ECM AND IDLE AIR CONTROL SOLENOID VALVE CONNECTOR. Measure resistance of harness between ECM and chassis ground. Connector & terminal (B136) No. 10 — Chassis ground: Is the measured value less than the specified value?</p>	10 Ω	Repair ground short circuit in harness between ECM and idle air control solenoid valve connector.	Go to step 5.
<p>5 CHECK GROUND CIRCUIT OF IDLE AIR CONTROL SOLENOID VALVE. Measure resistance of harness between idle air control solenoid valve connector and engine ground. Connector & terminal (E7) No. 3 — Engine ground: Is the measured value less than the specified value?</p>	5 Ω	Go to step 6.	Repair open circuit in harness between idle air control solenoid valve connector and engine ground terminal.
<p>6 CHECK POOR CONTACT. Check poor contact in ECM and idle air control solenoid valve connectors. Is there poor contact in ECM and idle air control solenoid valve connectors?</p>	There is poor contact.	Repair poor contact in ECM and idle air control solenoid valve connectors.	Replace idle air control solenoid valve. <Ref. to FU(H6DO)-36, Idle Air Control Solenoid Valve.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


BX:DTC P0509 — IDLE CONTROL SYSTEM CIRCUIT HIGH —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
 - Erroneous idling
 - Engine stalls.
 - Engine breathing

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

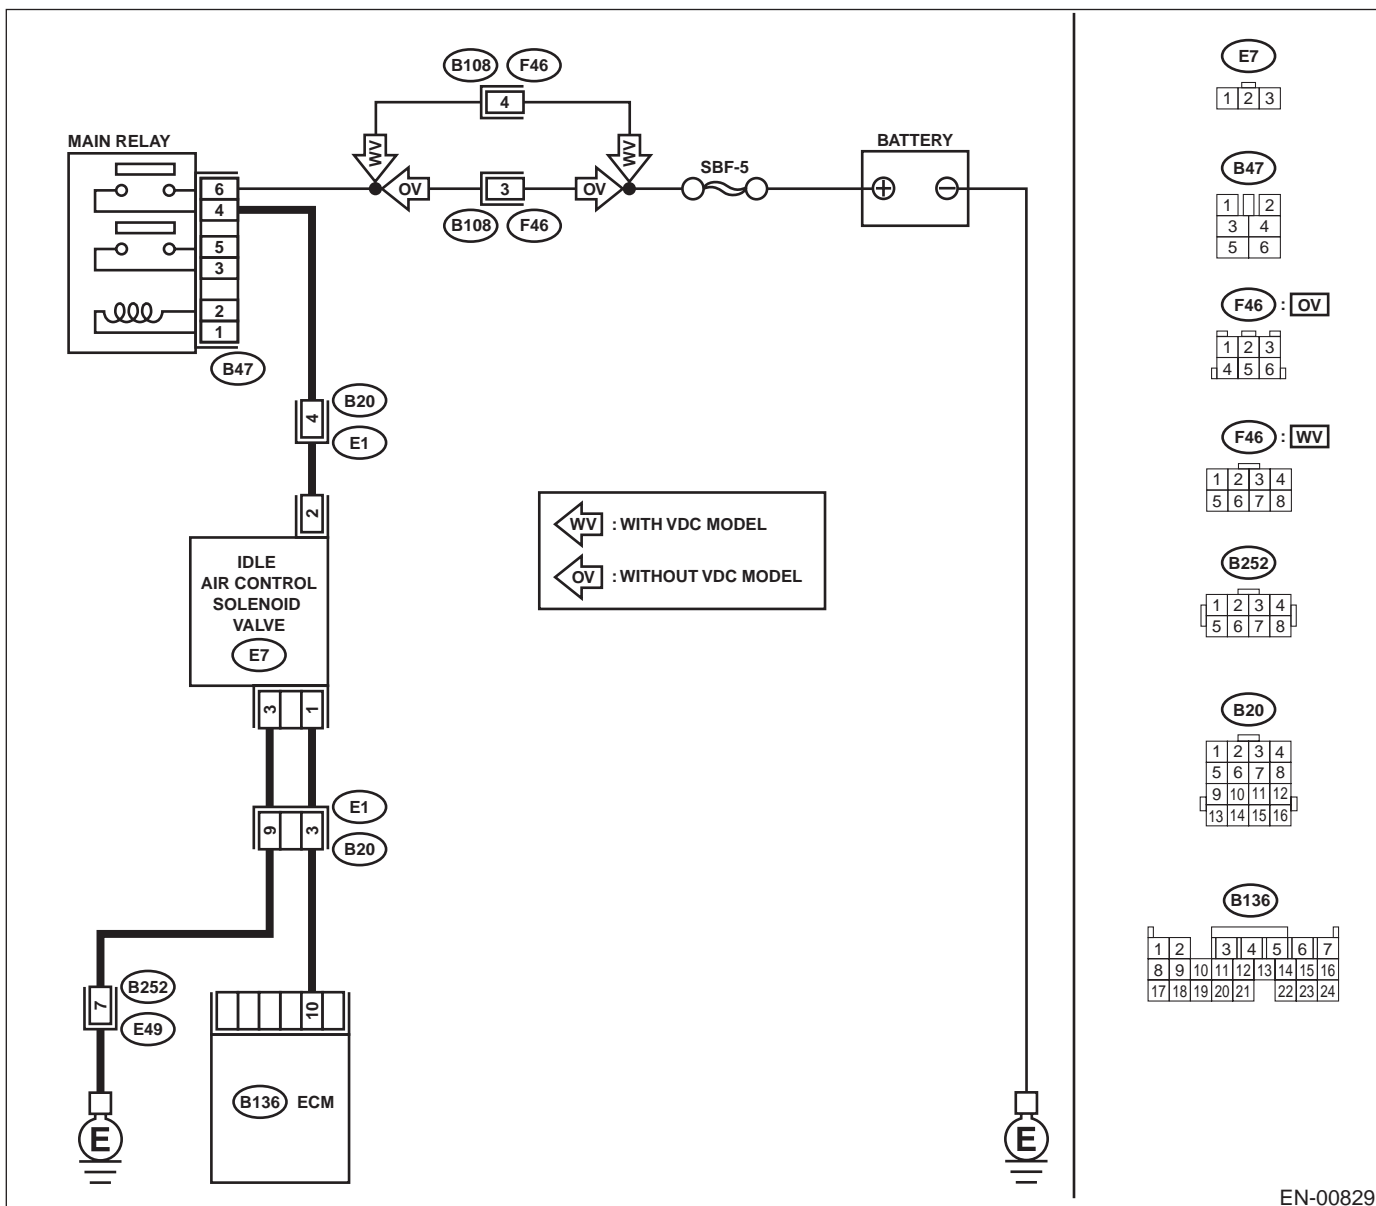

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK THROTTLE CABLE. Does throttle cable have play for adjustment?	Throttle cable has play for adjustment.	Go to step 2.	Adjust throttle cable. <Ref. to SP(H6DO)-7, Accelerator Control Cable.>
2 CHECK OUTPUT SIGNAL FROM ECM. 1) Turn ignition switch to ON. 2) Measure voltage between ECM and chassis ground. Connector & terminal (B136) No. 10 (+) — Chassis ground (-): Does the measured value exceed the specified value?	10 V	Go to step 3.	Go to step 4.
3 CHECK OUTPUT SIGNAL FROM ECM. 1) Turn ignition switch to OFF. 2) Disconnect connector from idle air control solenoid valve. 3) Turn ignition switch to ON. 4) Measure voltage between ECM and chassis ground. Connector & terminal (B136) No. 10 (+) — Chassis ground (-): Does the measured value exceed the specified value?	10 V	Repair battery short circuit in harness between ECM and idle air control solenoid valve connector. After repair, replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>	Replace idle air control solenoid valve <Ref. to FU(H6DO)-36, Idle Air Control Solenoid Valve.> and ECM <Ref. to FU(H6DO)-46, Engine Control Module.>
4 CHECK OUTPUT SIGNAL FROM ECM. Measure voltage between ECM and chassis ground. Connector & terminal (B136) No. 10 (+) — Chassis ground (-): Does the voltage change exceed the specified value by shaking harness and connector of ECM while monitoring the value with voltage meter?	10 V	Repair battery short circuit in harness between ECM and idle air control solenoid valve connector. After repair, replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>	Contact with SOA (distributor) service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

BY:DTC P0512 — STARTER REQUEST CIRCUIT —


- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Failure of engine to start

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC) ENGINE (DIAGNOSTICS)

• WIRING DIAGRAM:

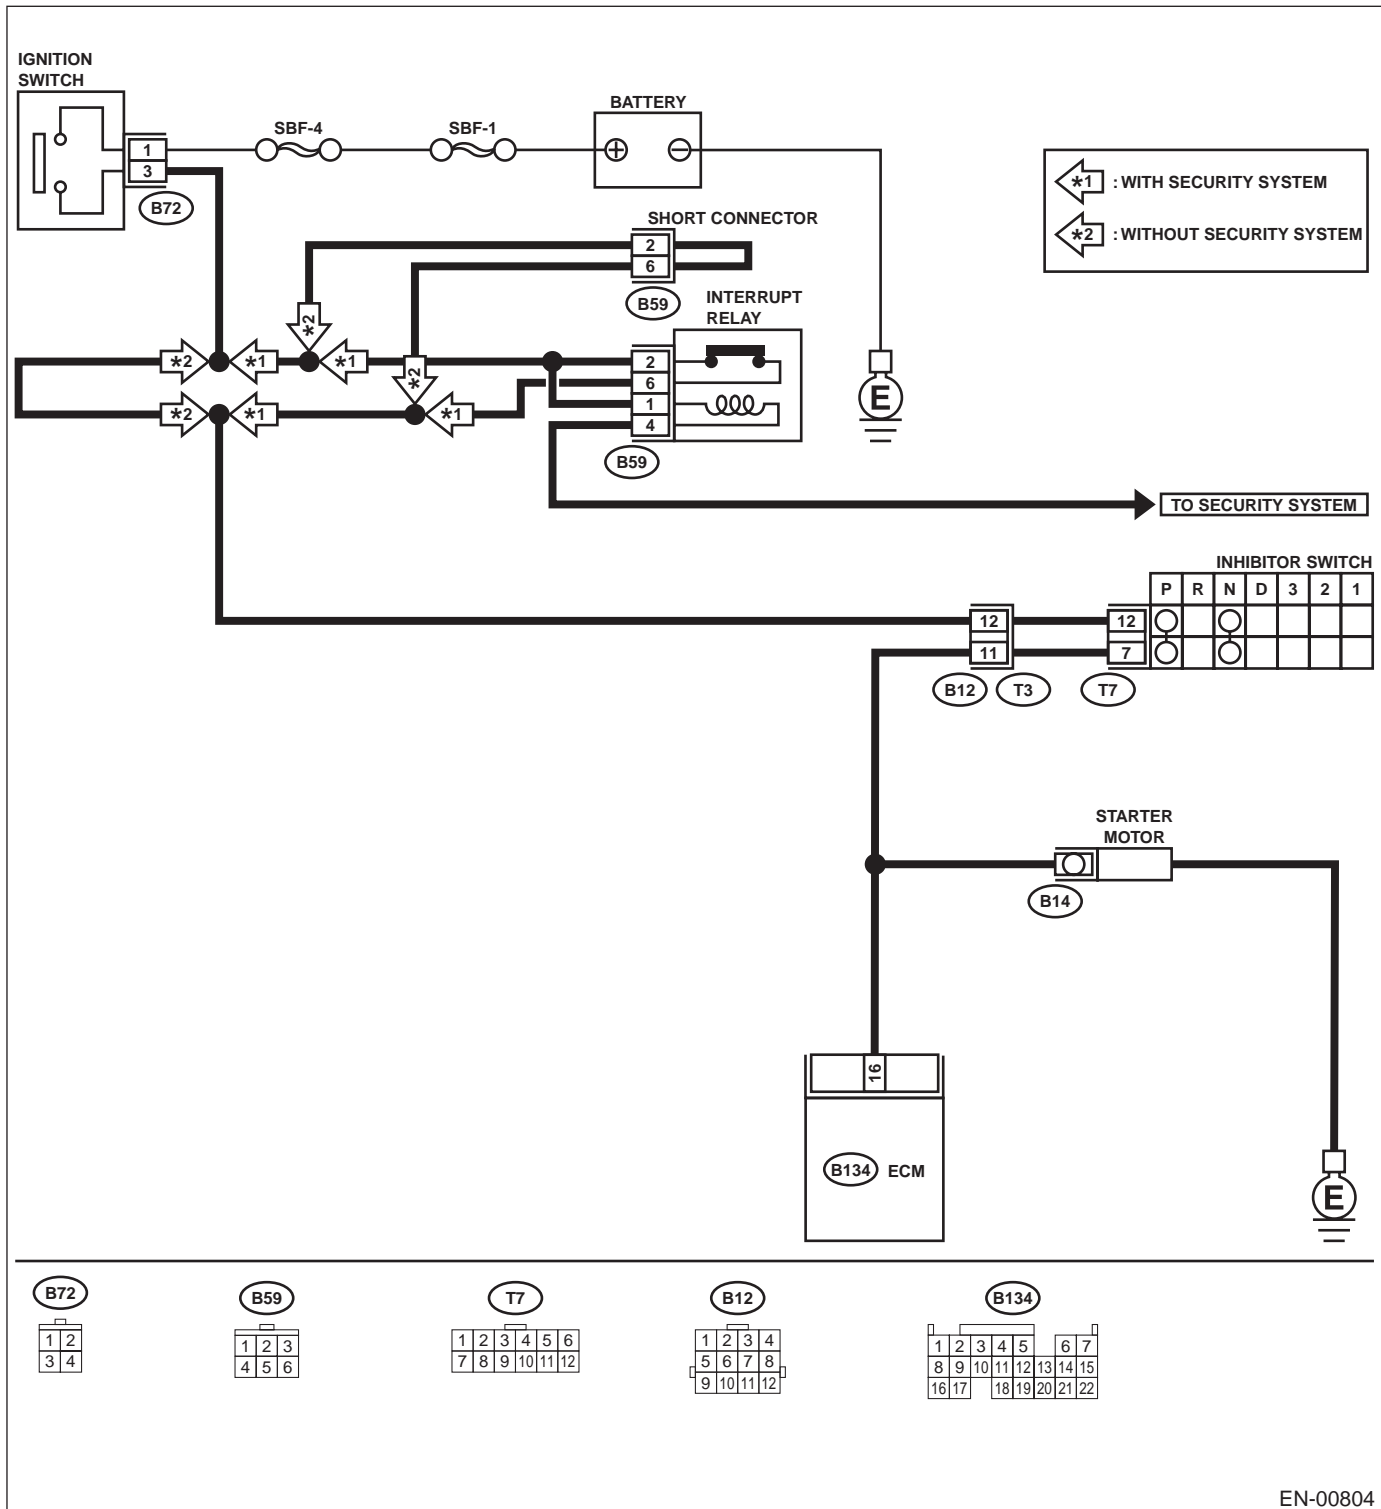

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK OPERATION OF STARTER MOTOR. NOTE: Place the inhibitor switch in each position. Does starter motor operate when ignition switch to "ON"?	Starter motor operates.	Repair battery short circuit in starter motor circuit.	Check starter motor circuit. <Ref. to EN(H6DO)-75, Diagnostics for Engine Starting Failure.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

MEMO:

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


BZ:DTC P0519 — IDLE AIR CONTROL CIRCUIT SYSTEM PERFORMACE —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
 - Engine does not return to normal idle speed.

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>

• **WIRING DIAGRAM:**

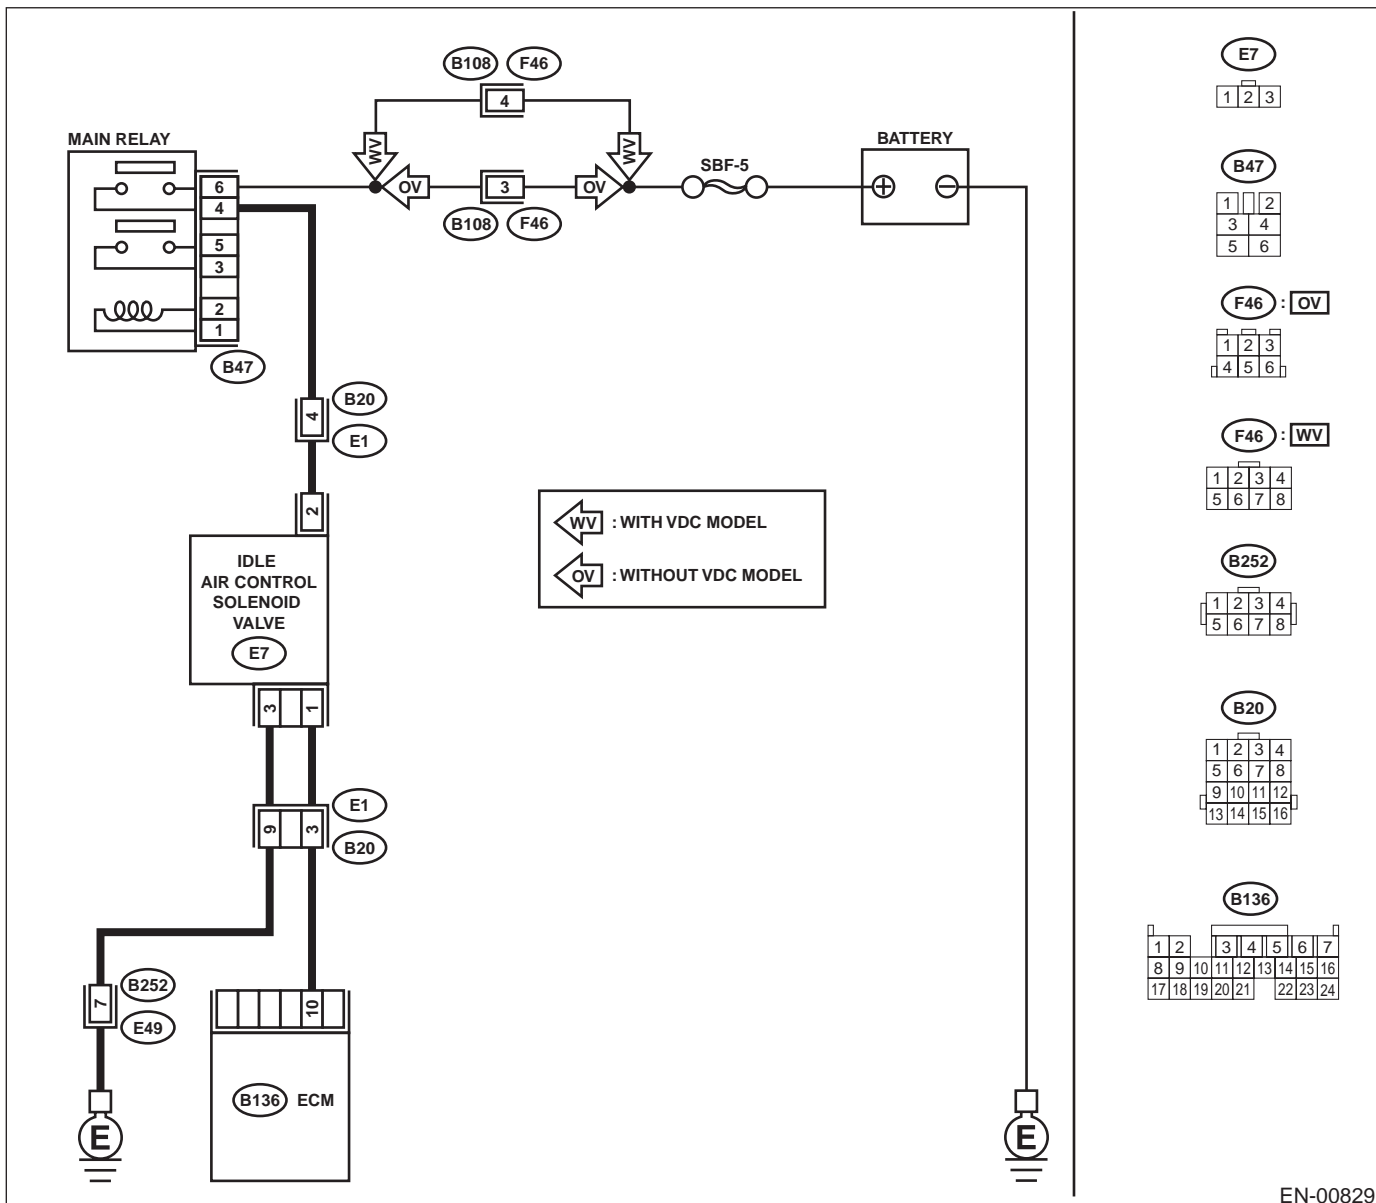

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).> NOTE: In this case, it is not necessary to inspect DTC P1507.	Go to step 2.
2 CHECK THROTTLE CABLE. Does throttle cable have play for adjustment?	Throttle cable has a play.	Go to step 3.	Adjust throttle cable. <Ref. to SP(H6DO)-7, Accelerator Control Cable.>
3 CHECK AIR INTAKE SYSTEM. 1) Turn ignition switch to ON. 2) Start engine, and idle it. 3) Check the following items. <ul style="list-style-type: none"> • Loose installation of intake manifold, idle air control solenoid valve and throttle body • Cracks of intake manifold gasket, idle air control solenoid valve gasket and throttle body gasket • Disconnections of vacuum hoses Is there a fault in air intake system?	There is a fault.	Repair air suction and leaks.	Replace idle air control solenoid valve. <Ref. to FU(H6DO)-36, Idle Air Control Solenoid Valve.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

CA:DTC P0558 — ALTERNATOR CIRCUIT LOW INPUT —

NOTE:

For the diagnostic procedure, refer to DTC P0559. <Ref. to EN(H6DO)-298, DTC P0559 — ALTERNATOR CIRCUIT HIGH INPUT —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>


CB:DTC P0559 — ALTERNATOR CIRCUIT HIGH INPUT —

- DTC DETECTING CONDITION:
 - Immediately at fault recognition

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

- WIRING DIAGRAM:

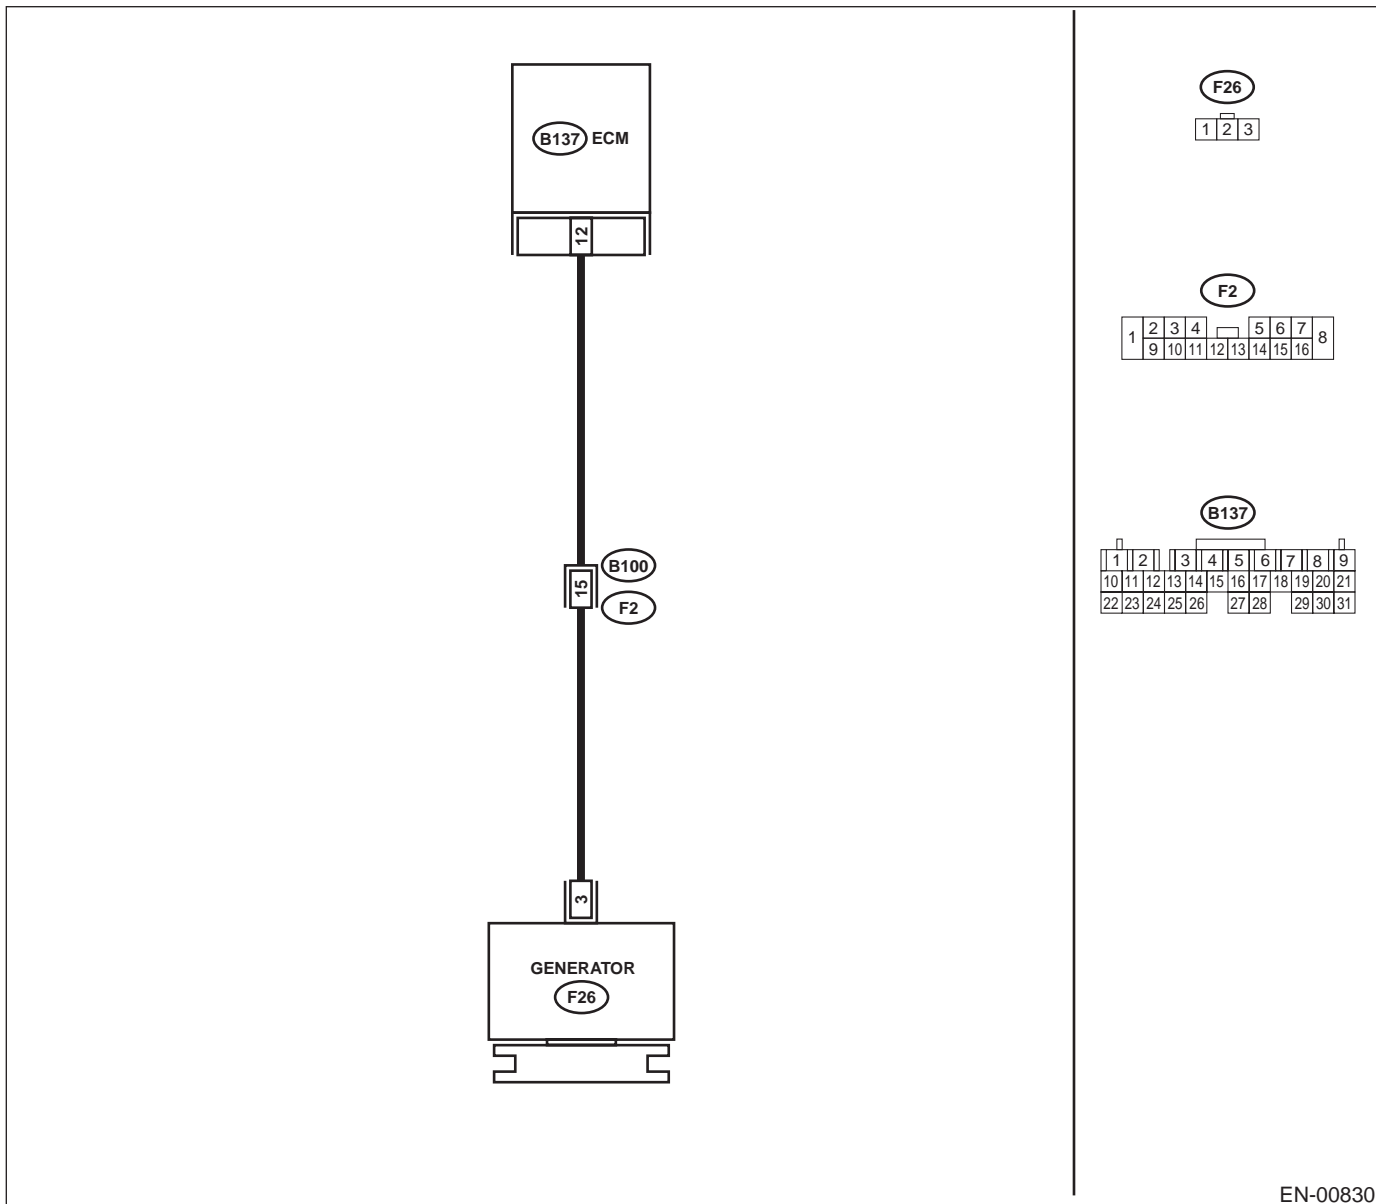

EN-00830

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1</p> <p>CHECK HARNESS BETWEEN GENERATOR AND ECM CONNECTOR.</p> <p>1) Turn ignition switch to OFF. 2) Disconnect the connectors from generator and ECM. 3) Measure the resistance of harness between generator connector and engine ground.</p> <p>Connector & terminal (F26) No. 3 — Engine ground:</p> <p>Does the measured value exceed the specified value?</p>	1 MΩ	Go to step 2.	Repair the short circuit in harness between ECM and generator connector.
<p>2</p> <p>CHECK HARNESS BETWEEN GENERATOR AND ECM CONNECTOR.</p> <p>Measure the resistance of harness between ECM and generator of harness connector.</p> <p>Connector & terminal (B137) No. 12 — (F26) No. 3:</p> <p>Is the measured value less than the specified value?</p>	1 Ω	Repair poor contact in connector.	<p>Repair the open circuit in harness between ECM and generator connector.</p> <p>NOTE: In this case, repair the following:</p> <ul style="list-style-type: none"> • Open circuit in harness between ECM and generator connector • Poor contact in coupling connector

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

CC:DTC P0565 — CRUISE CONTROL ON SIGNAL —


• **DTC DETECTING CONDITION:**

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

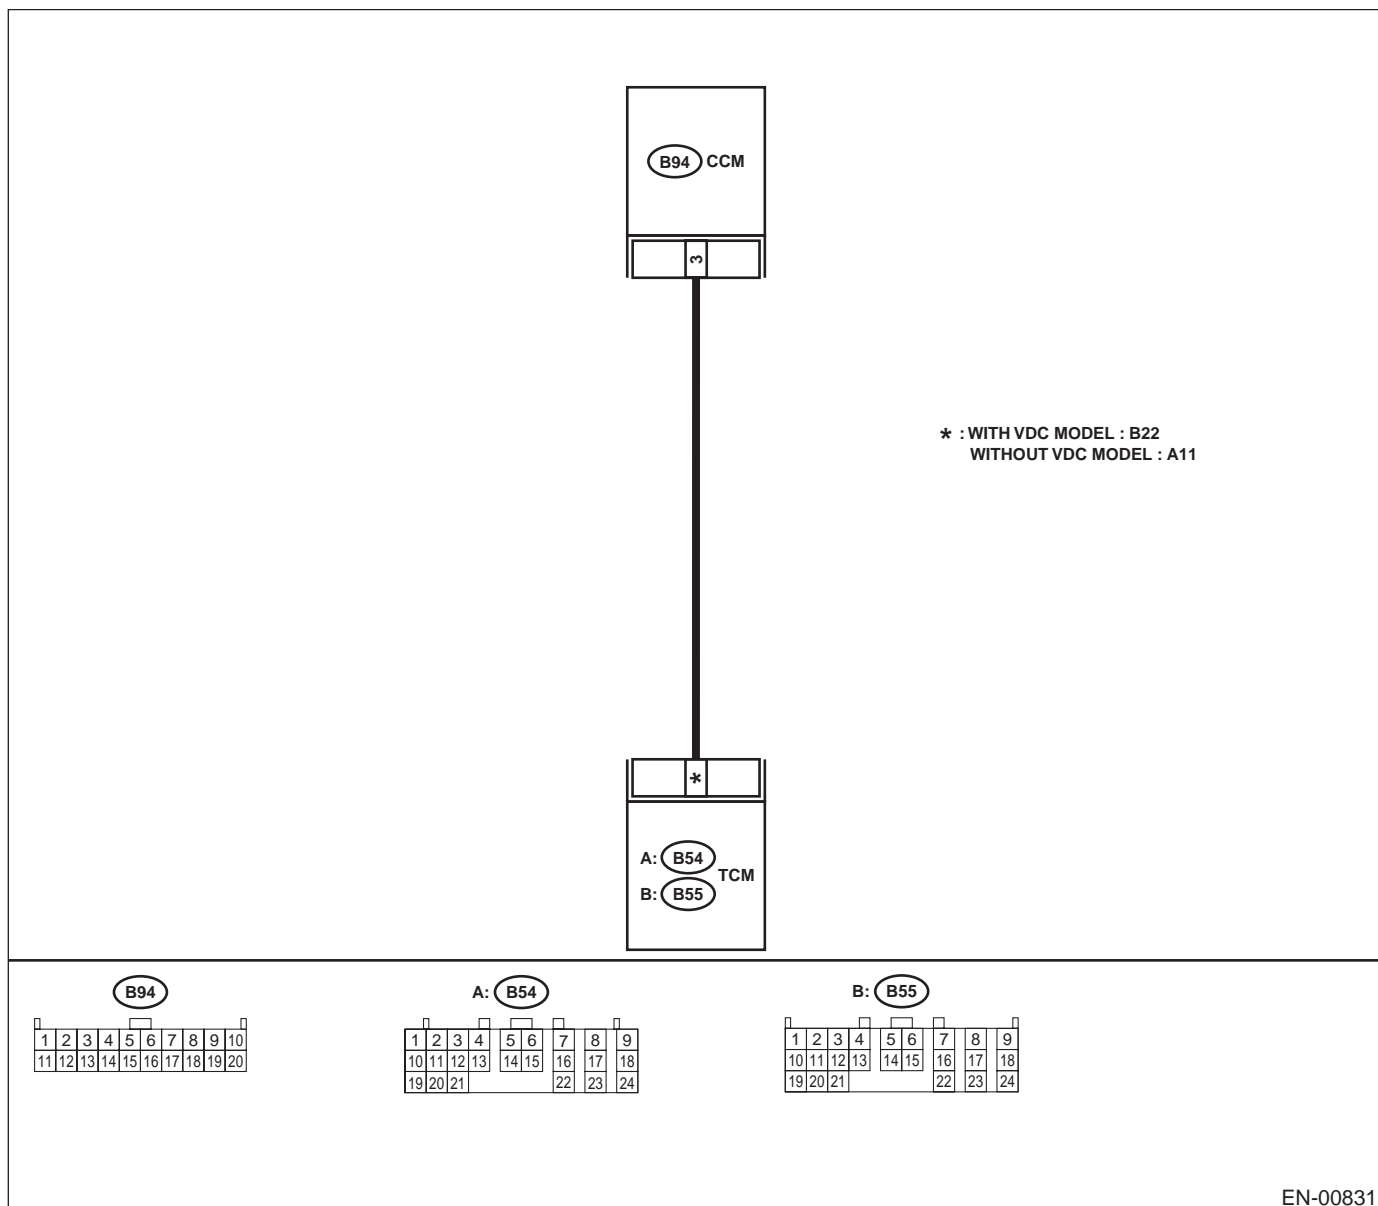

EN-00831

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1 CHECK HARNESS BETWEEN TCM AND CCM CONNECTOR.</p> <p>1) Turn ignition switch to OFF. 2) Disconnect connectors from TCM and CCM. 3) Measure resistance of harness between TCM and CCM connector.</p> <p>Connector & terminal WITH VDC MODEL: (B55) No. 22 — (B94) No. 3: WITHOUT VDC MODEL: (B54) No. 11 — (B94) No. 3:</p> <p>Is the measured value less than the specified value?</p>	1 Ω	Go to step 2.	Repair open circuit in harness between TCM and CCM connector.
<p>2 CHECK HARNESS BETWEEN TCM AND CCM CONNECTOR.</p> <p>Measure resistance of harness between TCM and chassis ground.</p> <p>Connector & terminal WITH VDC MODEL: (B55) No. 22 — Chassis ground: WITHOUT VDC MODEL: (B54) No. 11 — Chassis ground:</p> <p>Is the measured value less than the specified value?</p>	10 Ω	Repair short circuit in harness between TCM and CCM connector.	Go to step 3.
<p>3 CHECK INPUT SIGNAL FOR TCM.</p> <p>1) Connect connector to TCM and CCM. 2) Lift-up the vehicle or set the vehicle on free rollers.</p> <p>CAUTION: On AWD models, raise all wheels off ground.</p> <p>3) Start the engine. 4) Cruise control main switch to ON. 5) Move selector lever to "D" and slowly increase vehicle speed to 50 km/h (31 MPH). 6) Cruise control command switch to ON. 7) Measure voltage between TCM and chassis ground.</p> <p>Connector & terminal WITH VDC MODEL: (B55) No. 22 (+) — Chassis ground (-): WITHOUT VDC MODEL: (B54) No. 11 (+) — Chassis ground (-):</p> <p>Is the measured value less than the specified value?</p>	1 V	Go to step 4.	Check cruise control command switch circuit. <Ref. to CC-7, Cruise Control Command Switch.>
<p>4 CHECK POOR CONTACT.</p> <p>Check poor contact in TCM connector. Is there poor contact in TCM connector?</p>	There is poor contact.	Repair poor contact in TCM connector.	Replace TCM. <Ref. to AT-75, Transmission Control Module (TCM).>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


CD:DTC P0604 — INTERNAL CONTROL MODULE RANDOM ACCESS MEMORY (RAM) ERROR —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
 - Engine does not start.
 - Engine stalls.

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>

- **WIRING DIAGRAM:**

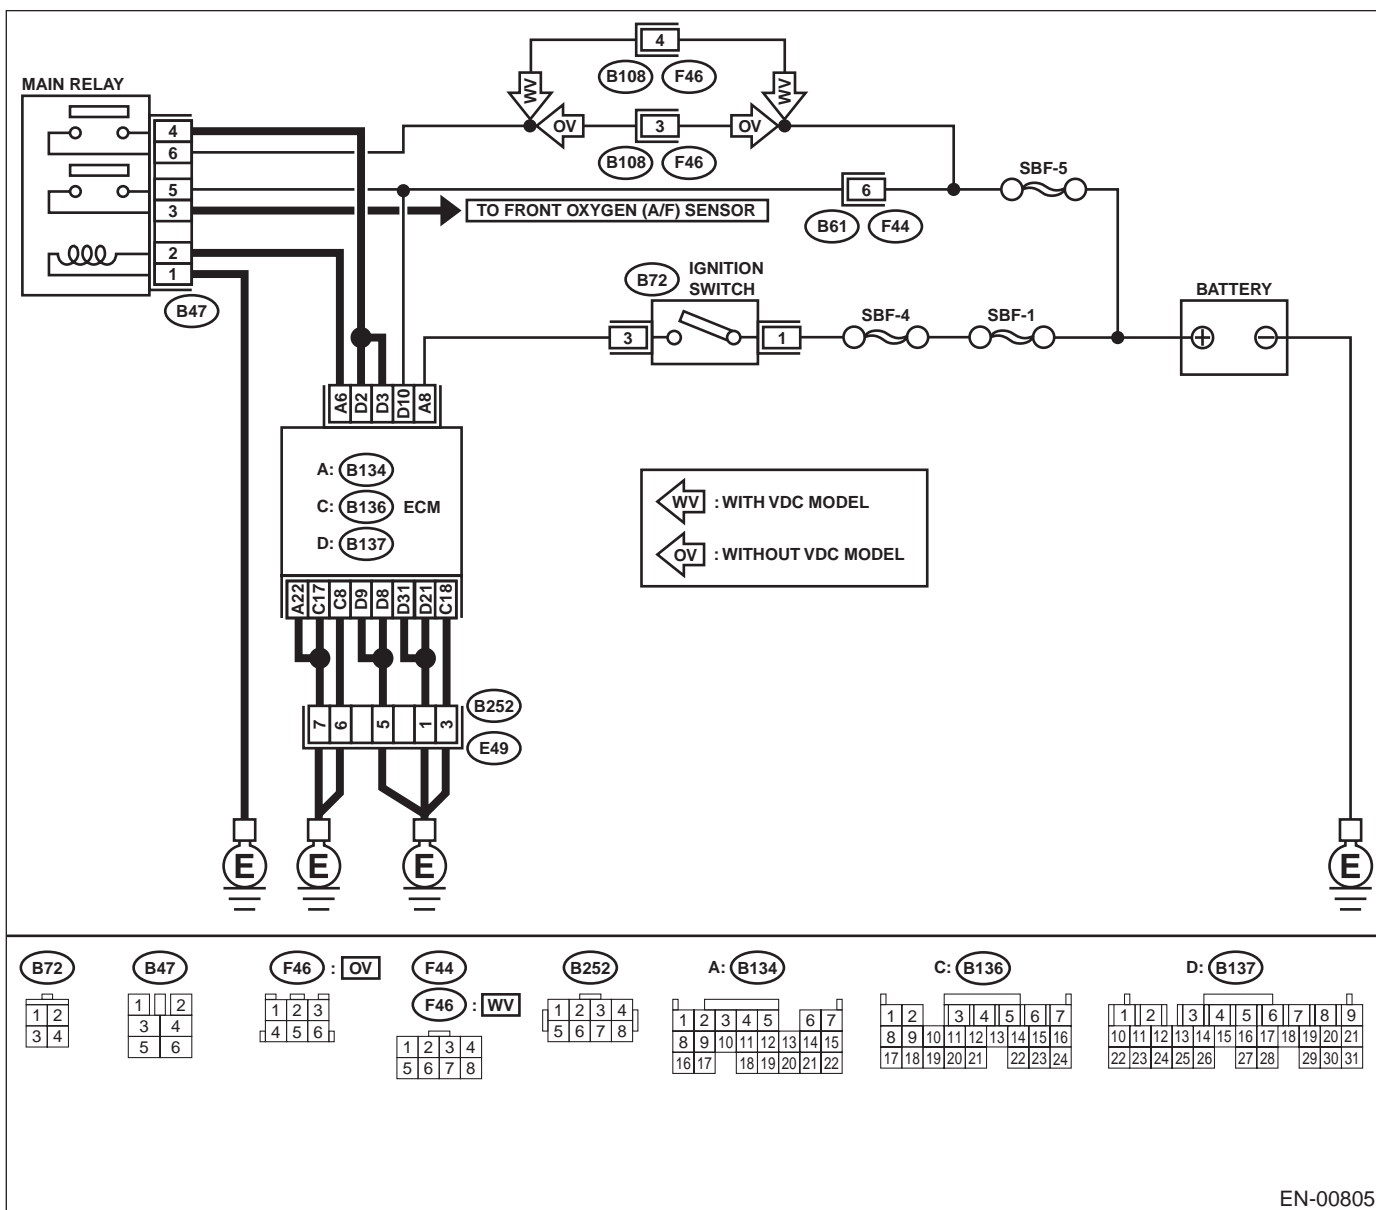

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0604?	DTC P0604 is indicated.	Replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>	It is not necessary to inspect DTC P0604.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


CE:DTC P0661 — INTAKE MANIFOLD TUNING VALVE CONTROL CIRCUIT LOW - BANK 1 —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Erroneous idling

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

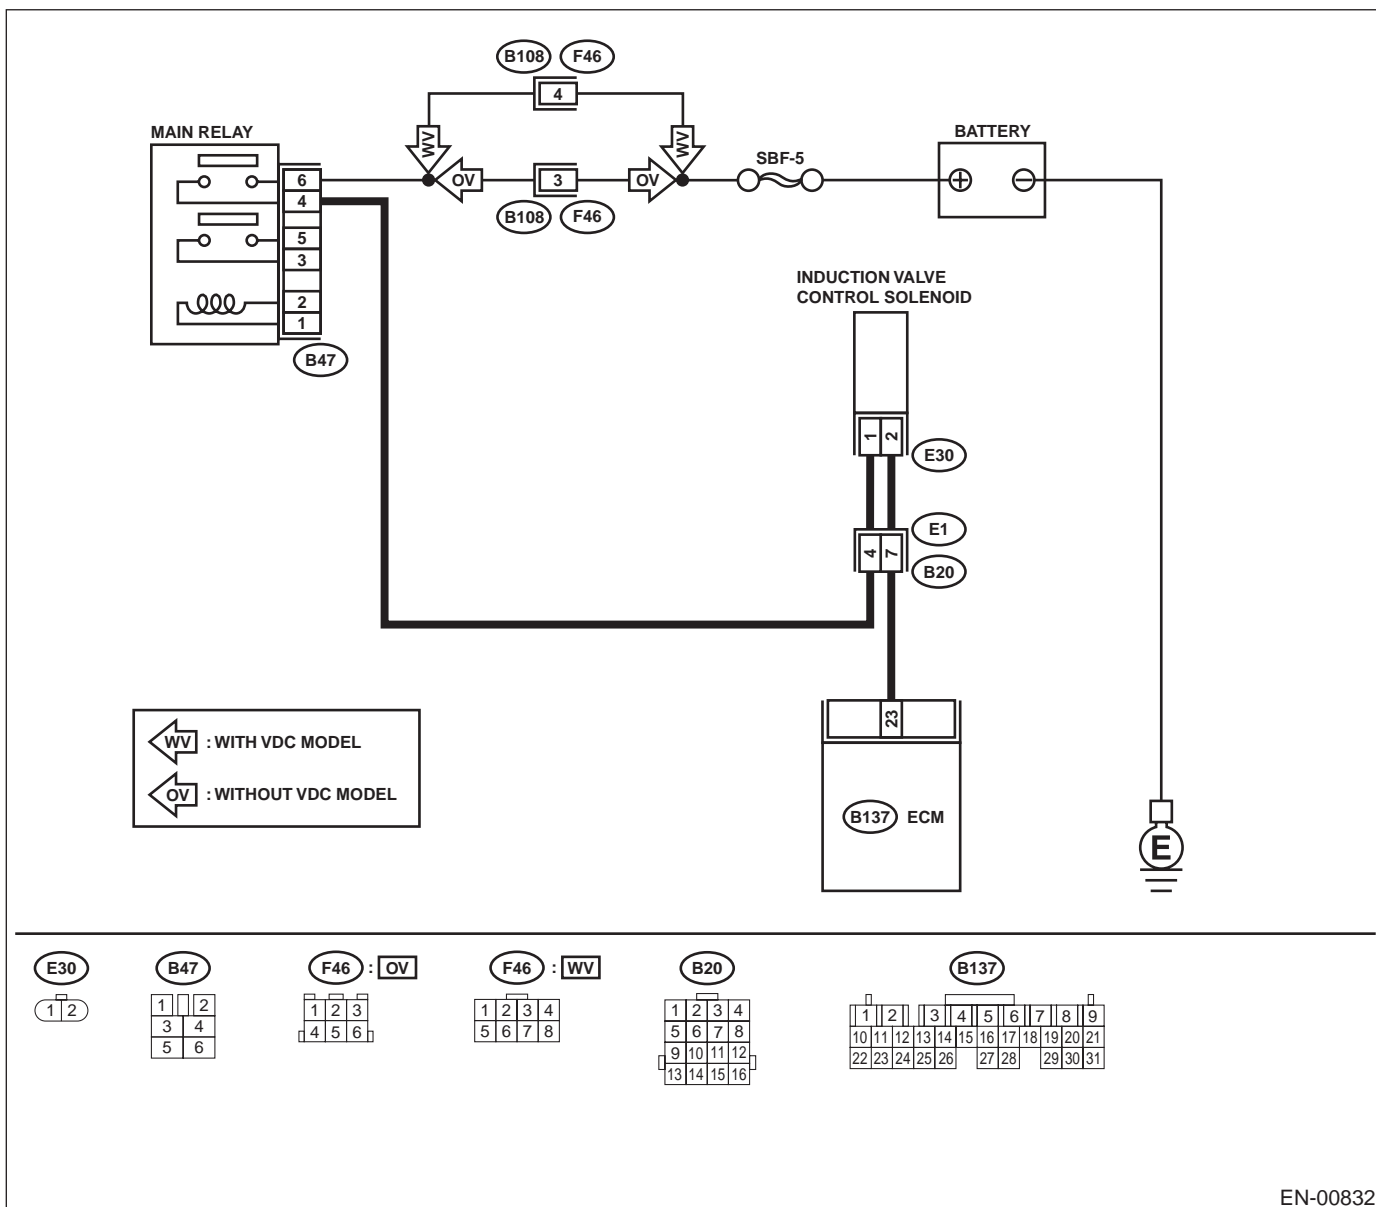

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1</p> <p>CHECK INPUT SIGNAL OF ECM.</p> <p>1) Turn ignition switch to ON. 2) Measure voltage between ECM and chassis ground.</p> <p>Connector & terminal (B137) No. 23 (+) — Chassis ground (-):</p> <p>Does the measured value exceed the specified value?</p>	10 V	<p>Even if MIL lights up, the circuit has returned to a normal condition at this time. Contact with SOA (distributor) service.</p> <p>NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.</p>	Go to step 2.
<p>2</p> <p>CHECK HARNESS BETWEEN INDUCTION CONTROL SOLENOID VALVE AND ECM CONNECTOR.</p> <p>1) Turn ignition switch to OFF. 2) Disconnect connectors from induction control solenoid valve and ECM. 3) Measure resistance of harness between induction control solenoid valve connector and engine ground.</p> <p>Connector & terminal (E30) No. 2 — Engine ground:</p> <p>Is the measured value less than the specified value?</p>	10 Ω	Repair ground short circuit in harness between ECM and induction control solenoid valve connector.	Go to step 3.
<p>3</p> <p>CHECK HARNESS BETWEEN INDUCTION CONTROL SOLENOID VALVE AND ECM CONNECTOR.</p> <p>Measure resistance of harness between ECM and induction control solenoid valve of harness connector.</p> <p>Connector & terminal (B137) No. 23 — (E30) No. 2:</p> <p>Is the measured value less than the specified value?</p>	1 Ω	Go to step 4.	<p>Repair open circuit in harness between ECM and induction control solenoid valve connector.</p> <p>NOTE: In this case, repair the following:</p> <ul style="list-style-type: none"> • Open circuit in harness between ECM and induction control solenoid valve connector • Poor contact in coupling connector
<p>4</p> <p>CHECK INDUCTION CONTROL SOLENOID VALVE.</p> <p>1) Remove induction control solenoid valve. 2) Measure resistance between induction control solenoid valve terminals.</p> <p>Terminals No. 1 — No. 2:</p> <p>Is the measured value within the specified range?</p>	37 — 44 Ω	Go to step 5.	Replace induction control solenoid valve. <Ref. to FU(H6DO)-38, Induction Valve Control Solenoid.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
5 CHECK POWER SUPPLY TO INDUCTION CONTROL SOLENOID VALVE. 1) Turn ignition switch to ON. 2) Measure voltage between induction control solenoid valve and engine ground. Connector & terminal (E30) No. 1 (+) — Engine ground (-): Is the measured value within the specified range?	10 V	Go to step 6.	Repair open circuit in harness between main relay and induction control solenoid valve connector.
6 CHECK POOR CONTACT. Check poor contact in induction control solenoid valve connector. Is there poor contact in induction control solenoid valve connector?	There is poor contact.	Repair poor contact in induction control solenoid valve connector.	Contact with SOA (distributor) service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

MEMO:

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


CF:DTC P0662 — INTAKE MANIFOLD TUNING VALVE CONTROL CIRCUIT HIGH - BANK 1 —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Erroneous idling

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

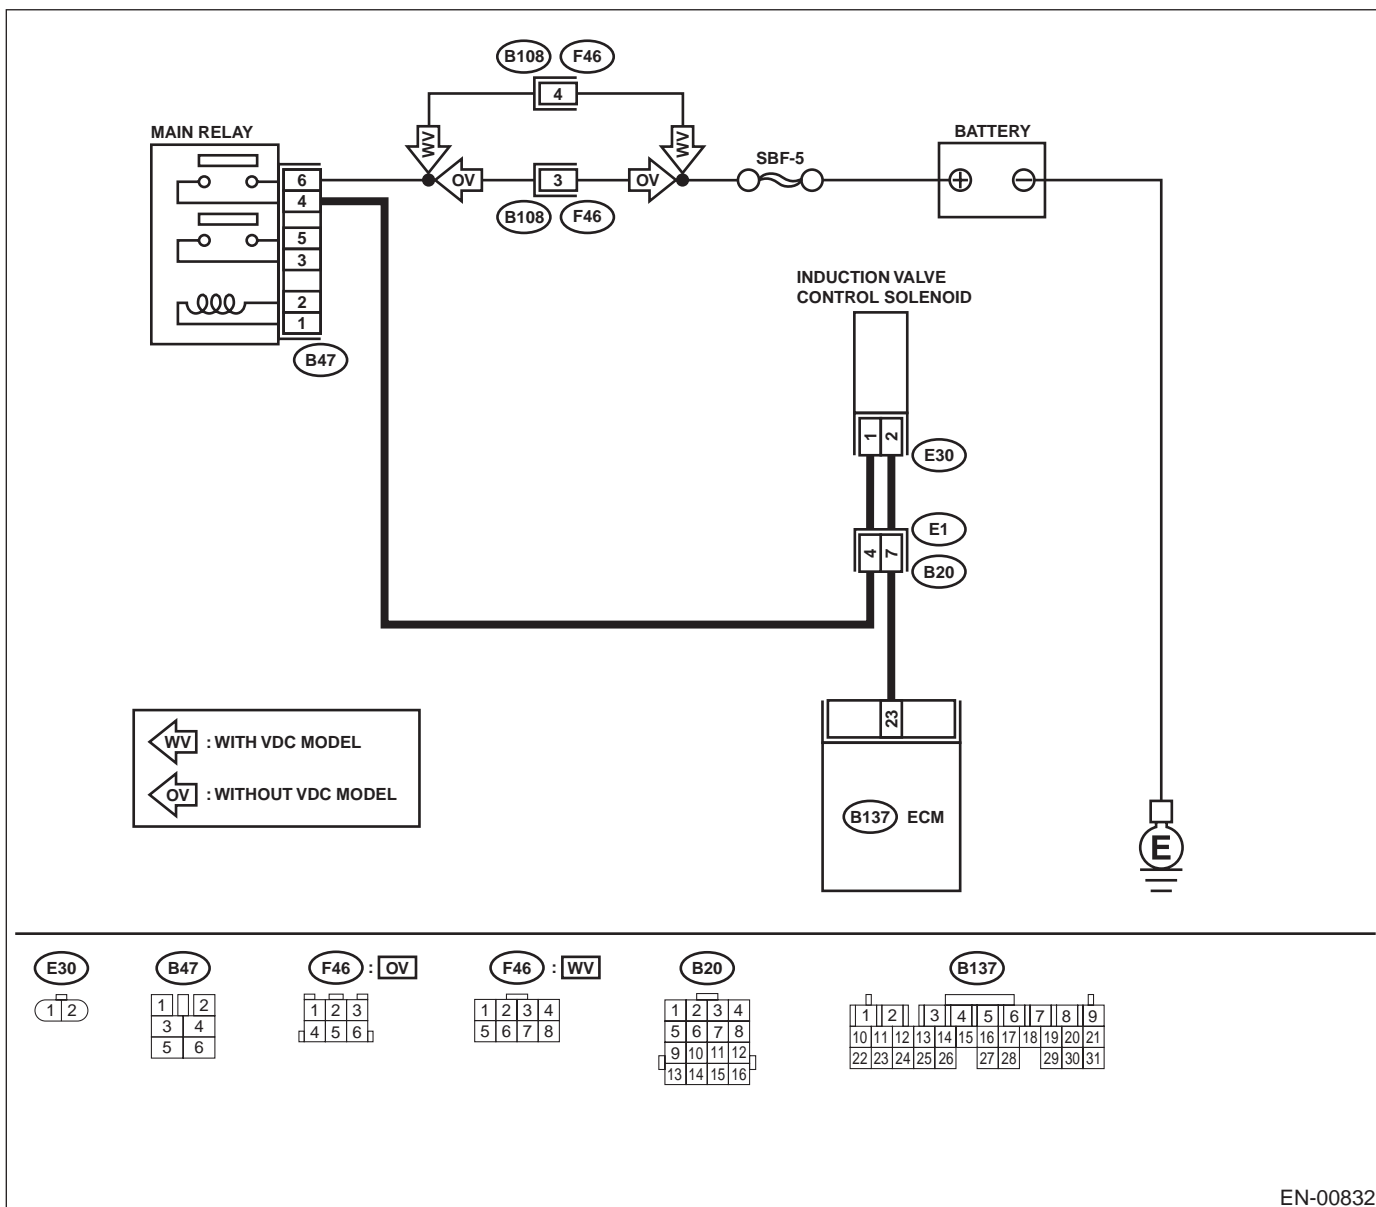

EN-00832

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK INPUT SIGNAL OF ECM. 1) Turn ignition switch to ON. 2) Measure voltage between ECM and chassis ground. Connector & terminal (B137) No. 23 (+) — Chassis ground (-): Does the measured value exceed the specified value?	10 V	Go to step 3.	Go to step 2.
2 CHECK POOR CONTACT. Check poor contact in ECM connector. Is there poor contact in ECM connector?	There is poor contact.	Repair poor contact in ECM connector.	Replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>
3 CHECK HARNESS BETWEEN INDUCTION CONTROL SOLENOID VALVE AND ECM CONNECTOR. 1) Turn ignition switch to OFF. 2) Disconnect connector from induction control solenoid valve. 3) Turn ignition switch to ON. 4) Measure voltage between ECM and chassis ground. Connector & terminal (B134) No. 23 (+) — Chassis ground (-): Does the measured value exceed the specified value?	10 V	Repair battery short circuit in harness between ECM and induction control solenoid valve connector. After repair, replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>	Go to step 4.
4 CHECK INDUCTION CONTROL SOLENOID VALVE. 1) Turn ignition switch to OFF. 2) Measure resistance between induction control solenoid valve terminals. Terminals No. 1 — No. 2: Is the measured value less than the specified value?	1 Ω	Replace induction control solenoid valve <Ref. to FU(H6DO)-38, Induction Valve Control Solenoid.> and ECM <Ref. to FU(H6DO)-46, Engine Control Module.>	Go to step 5.
5 CHECK POOR CONTACT. Check poor contact in ECM connector. Is there poor contact in ECM connector?	There is poor contact.	Repair poor contact in ECM connector.	Replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

CG:DTC P0691 — COOLING FAN 1 CONTROL CIRCUIT LOW —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Radiator fan does not operate properly.
 - Overheating


CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

• WIRING DIAGRAM:

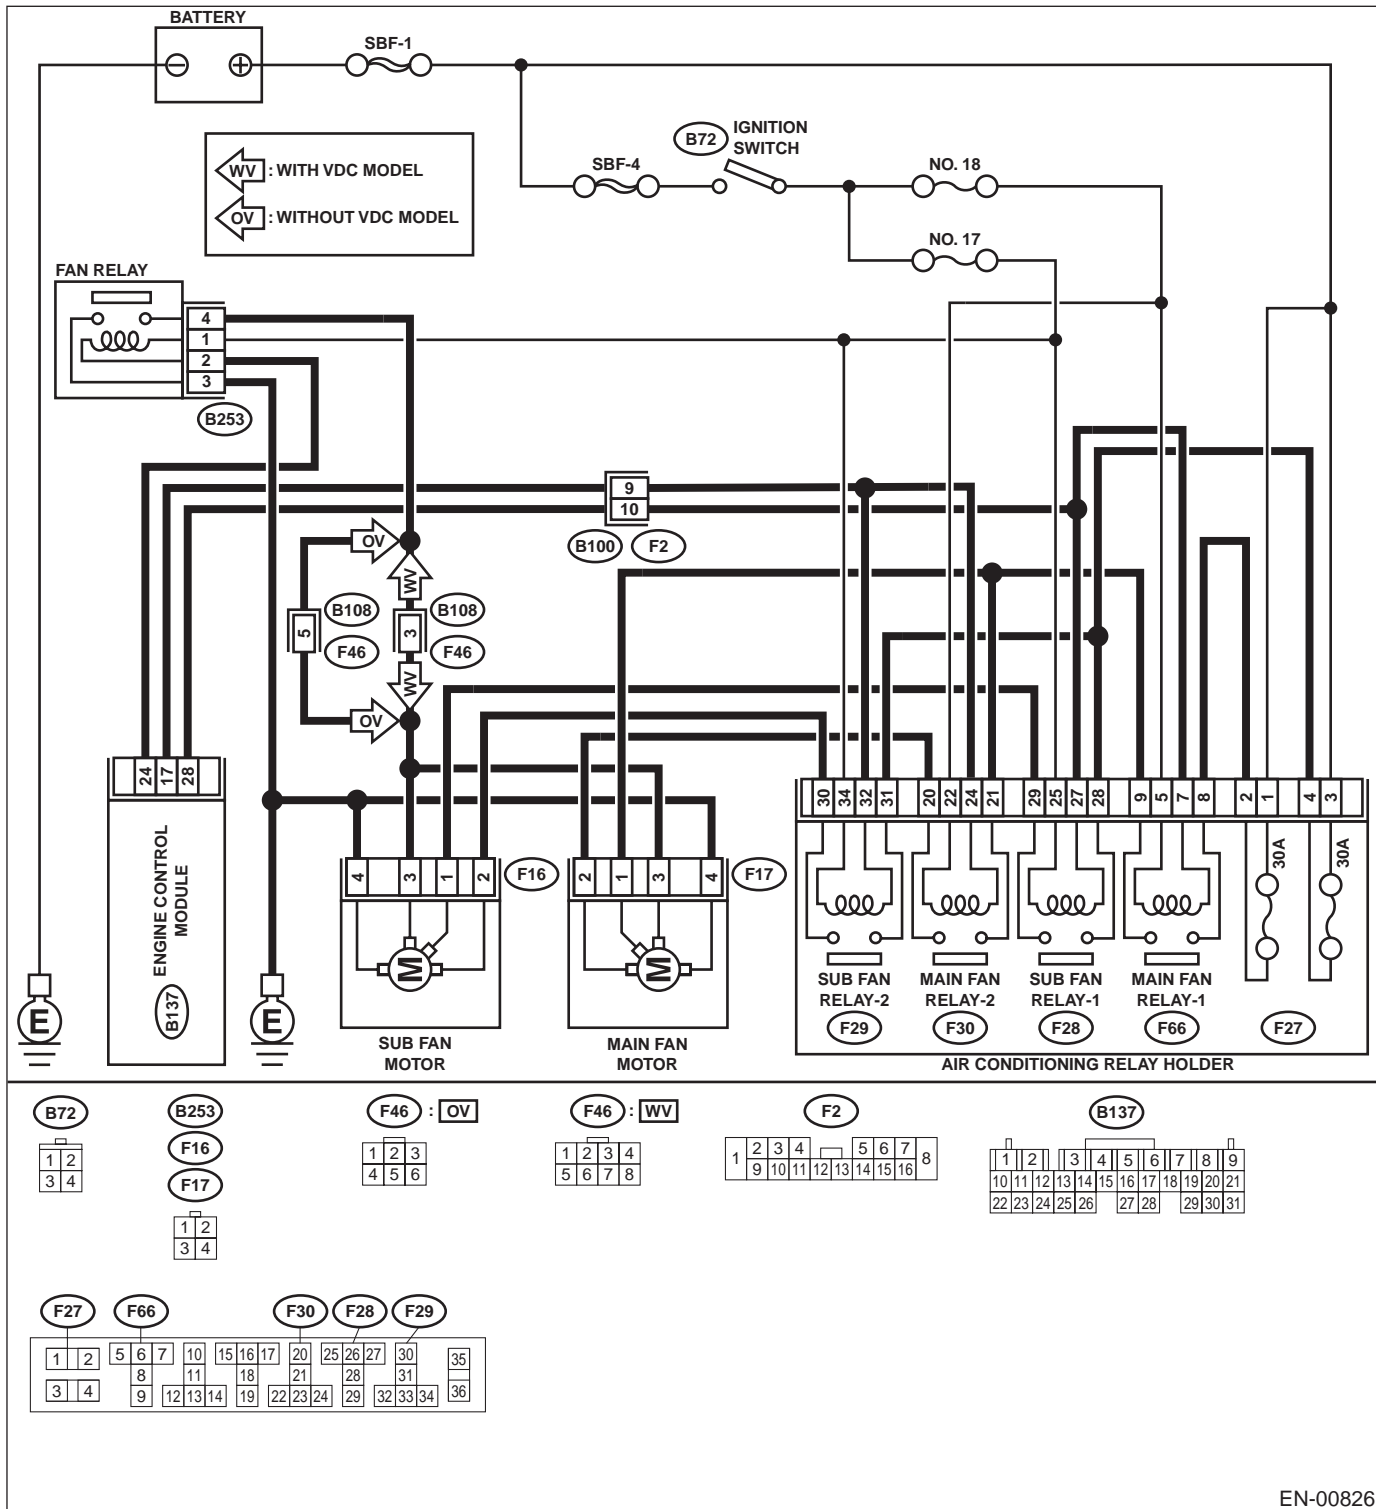

EN-00826

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1 CHECK OUTPUT SIGNAL FROM ECM.</p> <p>1) Turn ignition switch to OFF. 2) Connect test mode connector. 3) Turn ignition switch to ON. 4) While operating radiator fan relay, measure voltage between ECM terminal and ground.</p> <p>NOTE: Radiator fan relay operation can be executed using Subaru Select Monitor. For procedure, refer to "Compulsory Valve Operation Check Mode".<Ref. to EN(H6DO)-38, Subaru Select Monitor.></p> <p>Connector & terminal (B137) No. 28 (+) — Chassis ground (-): (B137) No. 17 (+) — Chassis ground (-):</p> <p>Does the measured value change within the specified range?</p>	0 — 10 V	Repair poor contact in ECM connector.	Go to step 2.
<p>2 CHECK GROUND SHORT CIRCUIT IN RADIATOR FAN RELAY 1 CONTROL CIRCUIT.</p> <p>1) Turn ignition switch to OFF. 2) Disconnect connectors from ECM and remove main fan relays from A/C relay holder. 3) Measure resistance of harness between ECM connector and chassis ground.</p> <p>Connector & terminal (B137) No. 28 — Chassis ground: (B137) No. 17 — Chassis ground:</p> <p>Does the measured value exceed the specified value?</p>	1 M Ω	Go to step 3.	Repair ground short circuit in radiator fan relay 1 control circuit.
<p>3 CHECK POWER SUPPLY FOR RELAY.</p> <p>1) Turn ignition switch to ON. 2) Measure voltage between fuse and relay box (F/B) connector and chassis ground.</p> <p>Connector & terminal (F66) No. 5 (+) — Chassis ground (-): (F30) No. 22 (+) — Chassis ground (-):</p> <p>Does the measured value exceed the specified value?</p>	10 V	Go to step 4.	Repair open circuit in harness between ignition switch and fuse and relay box (F/B) connector.
<p>4 CHECK MAIN FAN RELAYS.</p> <p>1) Turn ignition switch to OFF. 2) Measure resistance between main fan relay terminals.</p> <p>Terminal (F66) No. 5 — No. 7: (F30) No. 22 — No. 24:</p> <p>Is the measured value within the specified range?</p>	87 — 107 Ω	Go to step 5.	Replace main fan relay.
<p>5 CHECK OPEN CIRCUIT IN MAIN FAN RELAY CONTROL CIRCUIT.</p> <p>Measure resistance of harness between ECM and main fan relay connector.</p> <p>Connector & terminal (B137) No. 28 — (F66) No. 6: (B137) No. 17 — (F30) No. 24:</p> <p>Is the measured value less than the specified value?</p>	1 Ω	Go to step 6.	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and main fan relay connector • Poor contact in coupling connector

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
6 CHECK POOR CONTACT. Check poor contact in ECM or main fan relay connector. Is there poor contact in ECM or main fan relay connector?	There is poor contact.	Repair poor contact in ECM or main fan relay connector.	Contact with SOA (distributor) service.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

CH:DTC P0692 — COOLING FAN 1 CONTROL CIRCUIT HIGH —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Radiator fan does not operate properly.
 - Overheating


CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

• WIRING DIAGRAM:

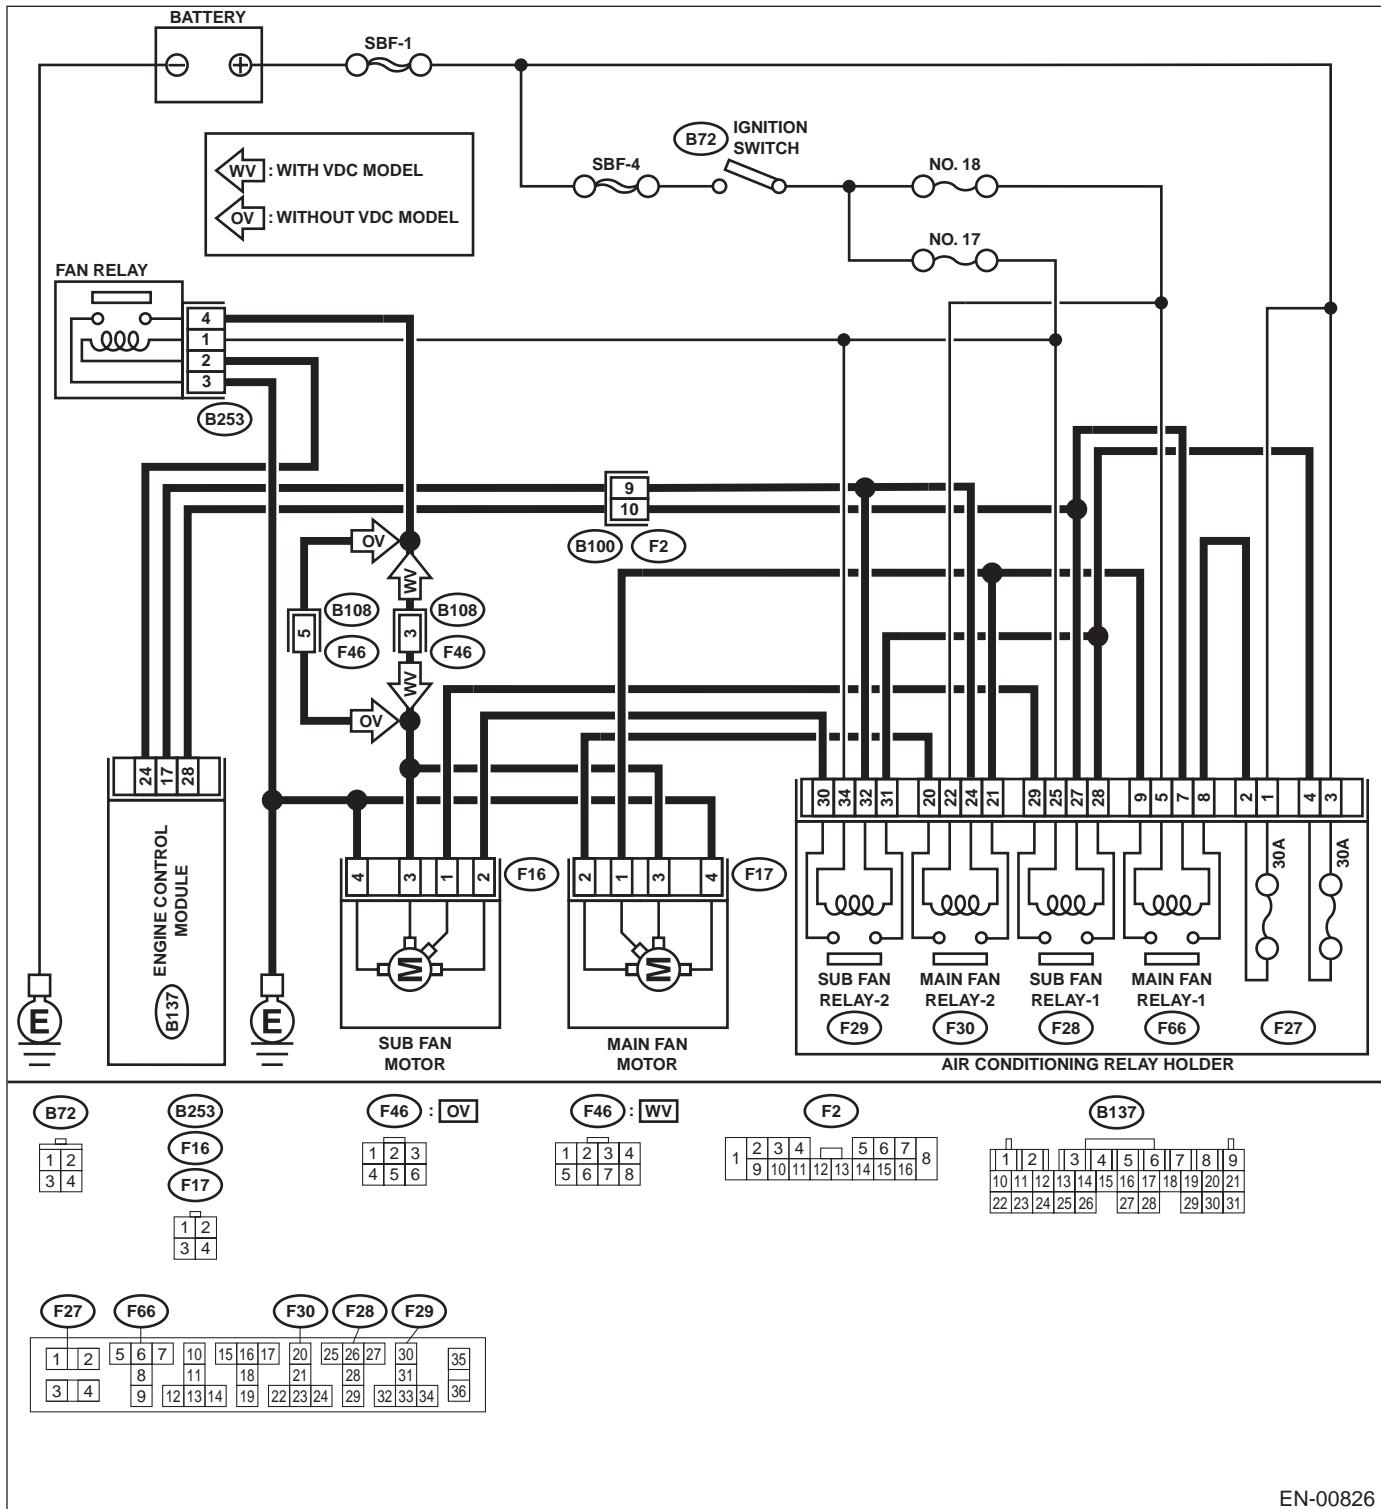

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1 CHECK OUTPUT SIGNAL FROM ECM.</p> <p>1) Turn ignition switch to OFF. 2) Connect test mode connector. 3) Turn ignition switch to ON. 4) While operating radiator fan relay, measure voltage between ECM and chassis ground.</p> <p>NOTE: Radiator fan relay operation can be executed using Subaru Select Monitor. For procedure, refer to "Compulsory Valve Operation Check Mode".<Ref. to EN(H6DO)-60, Compulsory Valve Operation Check Mode.></p> <p>Connector & terminal (B137) No. 28 (+) — Chassis ground (-): (B137) No. 17 (+) — Chassis ground (-):</p> <p>Does the measured value change within the specified range?</p>	0 — 10 V	Even if MIL lights up, the circuit has returned to a normal condition at this time. In this case, repair poor contact in ECM connector.	Go to step 2.
<p>2 CHECK SHORT CIRCUIT IN RADIATOR FAN RELAY CONTROL CIRCUIT.</p> <p>1) Turn ignition switch to OFF. 2) Remove main fan relay and sub fan relay. (with A/C models) 3) Disconnect test mode connector. 4) Turn ignition switch to ON. 5) Measure voltage between ECM and chassis ground.</p> <p>Connector & terminal (B137) No. 28 (+) — Chassis ground (-): (B137) No. 17 (+) — Chassis ground (-):</p> <p>Does the measured value exceed the specified value?</p>	10 V	Repair battery short circuit in radiator fan relay control circuit.	Go to step 3.
<p>3 CHECK MAIN FAN RELAY.</p> <p>1) Turn ignition switch to OFF. 2) Remove main fan relay. 3) Measure resistance between main fan relay terminals.</p> <p>Terminal (F66) No. 5 — No. 7: (F30) No. 22 — No. 24:</p> <p>Is the measured value less than the specified value?</p>	1 Ω	Replace main fan relay.	Go to step 4.
<p>4 CHECK SUB FAN RELAY.</p> <p>1) Remove sub fan relay. 2) Measure resistance between sub fan relay terminals.</p> <p>Terminal (F28) No. 25 — No. 27: (F29) No. 32 — No. 34:</p> <p>Is the measured value less than the specified value?</p>	1 Ω	Replace sub fan relay.	Go to step 5.
<p>5 CHECK POOR CONTACT.</p> <p>Check poor contact in ECM connector. Is there poor contact in ECM connector?</p>	There is poor contact.	Repair poor contact in ECM connector.	Replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

MEMO:

EN(H6DO)-317

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)


CI: DTC P0703 — TORQUE CONVERTER/BRAKE SWITCH “B” CIRCUIT —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>

• **WIRING DIAGRAM:**

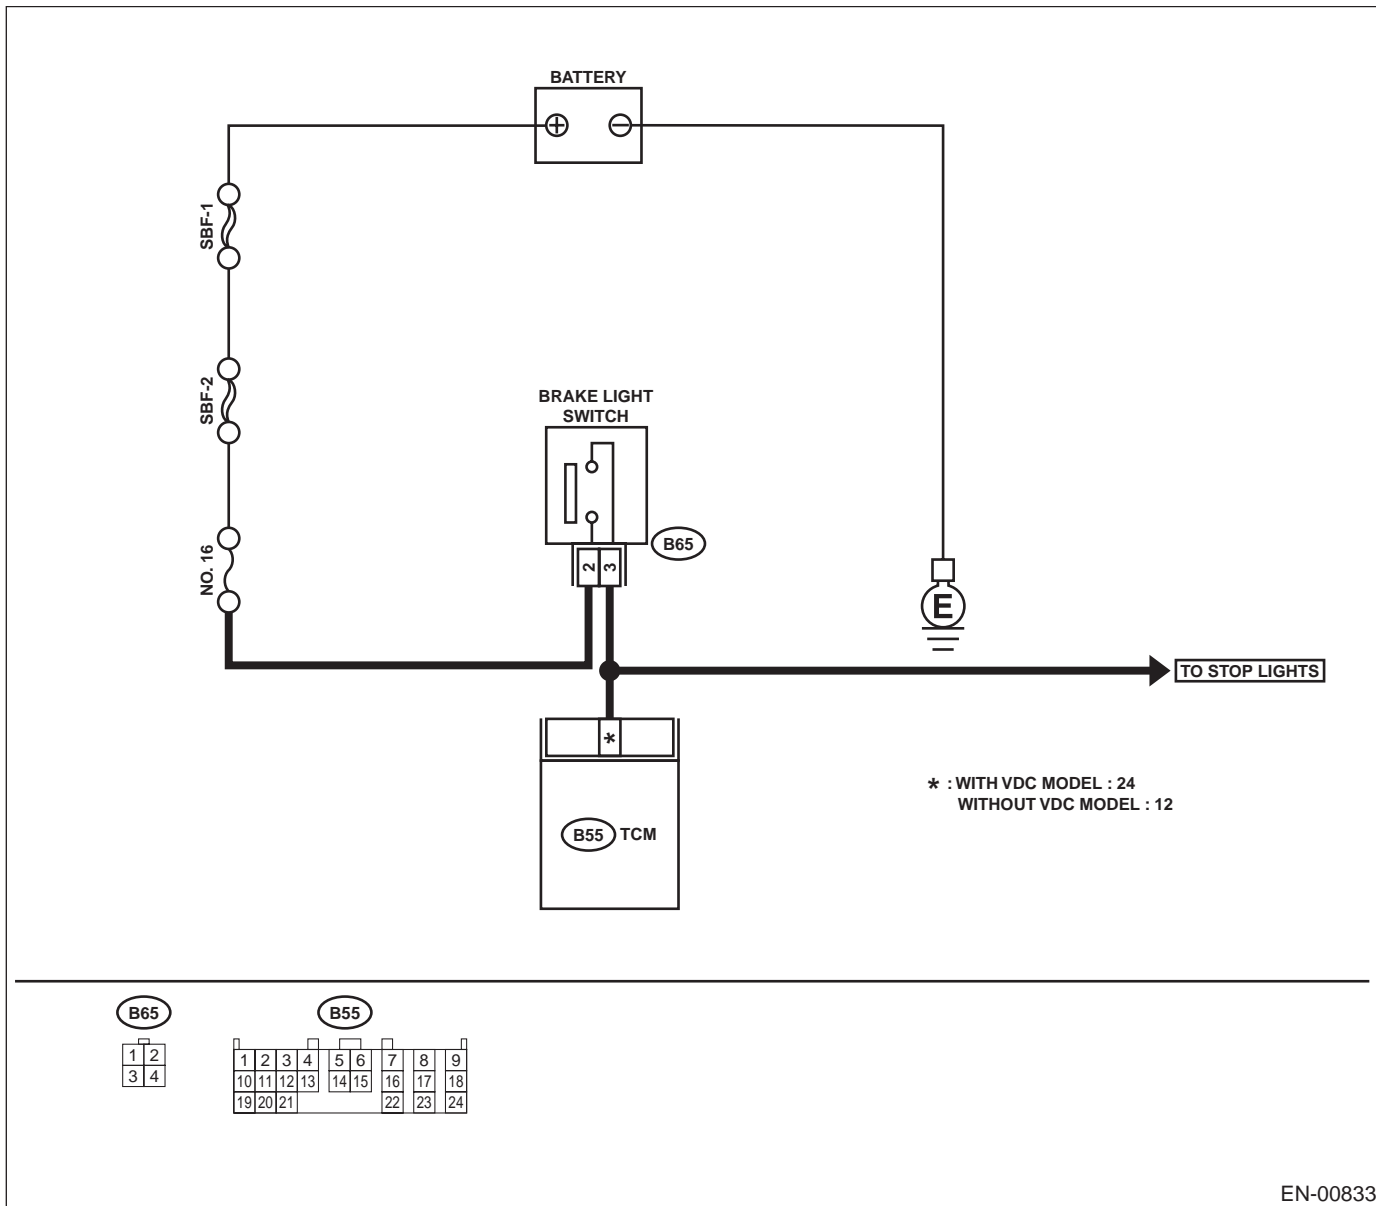

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK OPERATION OF BRAKE LIGHT. Does brake light come on when depressing the brake pedal?	Comes on.	Go to step 2.	Repair or replace brake light circuit.
2 CHECK HARNESS BETWEEN TCM AND BRAKE LIGHT SWITCH CONNECTOR. 1) Disconnect connectors from TCM and brake light switch. 2) Measure resistance of harness between TCM and brake light switch connector. Connector & terminal WITH VDC MODEL: (B55) No. 24 — (B65) No. 3: WITHOUT VDC MODEL: (B55) No. 12 — (B65) No. 3: Is the measured value less than the specified value?	1 Ω	Go to step 3.	Repair or replace harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between TCM and brake light switch connector • Poor contact in TCM connector • Poor contact in brake light switch connector
3 CHECK HARNESS BETWEEN TCM AND BRAKE LIGHT SWITCH CONNECTOR. Measure resistance of harness between TCM and chassis ground. Connector & terminal WITH VDC MODEL: (B55) No. 24 (+) — Chassis ground (-): WITHOUT VDC MODEL: (B55) No. 12 (+) — Chassis ground (-): Does the measured value exceed the specified value?	1 MΩ	Go to step 4.	Repair ground short circuit in harness between TCM and brake light switch connector.
4 CHECK INPUT SIGNAL FOR TCM. 1) Connect connectors to TCM and brake light switch. 2) Measure voltage between TCM and chassis ground. Connector & terminal WITH VDC MODEL: (B55) No. 24 (+) — Chassis ground (-): WITHOUT VDC MODEL: (B55) No. 12 (+) — Chassis ground (-): Is the measured value less than the specified value when releasing the brake pedal?	1 V	Go to step 5.	Adjust or replace brake light switch. <Ref. to LI-8, INSPECTION, Stop Light System.>
5 CHECK INPUT SIGNAL FOR TCM. Measure voltage between TCM and chassis ground. Connector & terminal WITH VDC MODEL: (B55) No. 24 (+) — Chassis ground (-): WITHOUT VDC MODEL: (B55) No. 12 (+) — Chassis ground (-): Does the measured value exceed the specified value when depressing the brake pedal?	10 V	Go to step 6.	Adjust or replace brake light switch. <Ref. to LI-8, INSPECTION, Stop Light System.>
6 CHECK POOR CONTACT. Check poor contact in TCM connector. Is there poor contact in TCM connector?	There is poor contact.	Repair poor contact in TCM connector.	Replace TCM. <Ref. to AT-75, Transmission Control Module (TCM).>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

CJ:DTC P0731 — GEAR 1 INCORRECT RATIO —

NOTE:

For the diagnostic procedure, refer to DTC P0734. <Ref. to EN(H6DO)-320, DTC P0734 — GEAR 4 INCORRECT RATIO —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

CK:DTC P0732 — GEAR 2 INCORRECT RATIO —

NOTE:

For the diagnostic procedure, refer to DTC P0734. <Ref. to EN(H6DO)-320, DTC P0734 — GEAR 4 INCORRECT RATIO —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

CL:DTC P0733 — GEAR 3 INCORRECT RATIO —

NOTE:

For the diagnostic procedure, refer to DTC P0734. <Ref. to EN(H6DO)-320, DTC P0734 — GEAR 4 INCORRECT RATIO —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

CM:DTC P0734 — GEAR 4 INCORRECT RATIO —

• **DTC DETECTING CONDITION:**

- Two consecutive driving cycles with fault

• **TROUBLE SYMPTOM:**

- Shift point too high or too low; engine brake not effective in “3” range; excessive shift shock; excessive tight corner “braking”

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

Step	Value	Yes	No	
1	CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect relevant DTC using “List of Diagnostic Trouble Code (DTC)”. <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).>	Go to step 2.
2	CHECK THROTTLE POSITION SENSOR CIRCUIT. Check throttle position sensor circuit. <Ref. to AT-52, DTC 31 THROTTLE POSITION SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> Is there any trouble in throttle position sensor circuit?	There is a malfunction.	Repair or replace throttle position sensor circuit.	Go to step 3.
3	CHECK FRONT VEHICLE SPEED SENSOR CIRCUIT. Check front vehicle speed sensor circuit. <Ref. to AT-58, DTC 33 FRONT VEHICLE SPEED SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> Is there any trouble in front throttle position sensor circuit?	There is a malfunction.	Repair or replace front vehicle speed sensor circuit.	Go to step 4.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
4 CHECK TORQUE CONVERTER TURBINE SPEED SENSOR CIRCUIT. Check torque converter turbine speed sensor circuit. <Ref. to AT-64, DTC 36 TORQUE CONVERTER TURBINE SPEED SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> Is there any trouble in torque converter turbine speed sensor circuit?	There is a malfunction.	Repair or replace torque converter turbine speed sensor circuit.	Go to step 5.
5 CHECK POOR CONTACT. Check poor contact in TCM connector. Is there poor contact in TCM connector?	There is poor contact.	Repair poor contact in TCM connector.	Go to step 6.
6 CHECK MECHANICAL TROUBLE. Check mechanical trouble in automatic transmission. Is there any mechanical trouble in automatic transmission?	There is a malfunction.	Repair or replace automatic transmission.	Replace TCM. <Ref. to AT-75, Transmission Control Module (TCM).>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

CN:DTC P0741 — TORQUE CONVERTER CLUTCH CIRCUIT PERFORMANCE OR STUCK OFF —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - No lock-up (after engine warm-up)
 - No shift or excessive tight corner “braking”

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using “List of Diagnostic Trouble Code (DTC)”. <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).>	Go to step 2.
2 CHECK LOCK-UP DUTY SOLENOID CIRCUIT. Check lock-up duty solenoid circuit. <Ref. to AT-104, DTC 77 LOCK-UP DUTY SOLENOID, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> Is there any trouble in lock-up duty solenoid circuit?	There is a malfunction.	Repair or replace lock-up duty solenoid circuit.	Go to step 3.
3 CHECK THROTTLE POSITION SENSOR CIRCUIT. Check throttle position sensor circuit. <Ref. to AT-52, DTC 31 THROTTLE POSITION SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> Is there any trouble in throttle position sensor circuit?	There is a malfunction.	Repair or replace throttle position sensor circuit.	Go to step 4.
4 CHECK TORQUE CONVERTER TURBINE SPEED SENSOR CIRCUIT. Check torque converter turbine speed sensor circuit. <Ref. to AT-64, DTC 36 TORQUE CONVERTER TURBINE SPEED SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> Is there any trouble in torque converter turbine speed sensor circuit?	There is a malfunction.	Repair or replace torque converter turbine speed sensor circuit.	Go to step 5.
5 CHECK ENGINE SPEED INPUT CIRCUIT. Check engine speed input circuit. <Ref. to AT-44, DTC 11 ENGINE SPEED SIGNAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> Is there any trouble in engine speed input circuit?	There is a malfunction.	Repair or replace engine speed input circuit.	Go to step 6.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
6 CHECK INHIBITOR SWITCH CIRCUIT. Check inhibitor switch circuit. <Ref. to AT-136, CHECK INHIBITOR SWITCH., Diagnostic Procedure for No-diagnostic Trouble Code (DTC).> Is there any trouble in inhibitor switch circuit?	There is a malfunction.	Repair or replace inhibitor switch circuit.	Go to step 7.
7 CHECK BRAKE LIGHT SWITCH CIRCUIT. Check brake light switch circuit. <Ref. to AT-133, CHECK BRAKE SWITCH., Diagnostic Procedure for No-diagnostic Trouble Code (DTC).> Is there any trouble in brake light switch circuit?	There is a malfunction.	Repair or replace brake light switch circuit.	Go to step 8.
8 CHECK ATF TEMPERATURE SENSOR CIRCUIT. Check ATF temperature sensor circuit. <Ref. to AT-48, DTC 27 ATF TEMPERATURE SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).> Is there any trouble in ATF temperature sensor circuit?	There is a malfunction.	Repair or replace ATF temperature sensor circuit.	Go to step 9.
9 CHECK POOR CONTACT. Check poor contact in TCM connector. Is there poor contact in TCM connector?	There is poor contact.	Repair poor contact in TCM connector.	Go to step 10.
10 CHECK MECHANICAL TROUBLE. Check mechanical trouble in automatic transmission. Is there any mechanical trouble in automatic transmission?	There is a malfunction.	Repair or replace automatic transmission.	Replace TCM. <Ref. to AT-75, Transmission Control Module (TCM).>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


CO:DTC P0851 — NEUTRAL SWITCH INPUT CIRCUIT LOW —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Erroneous idling

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

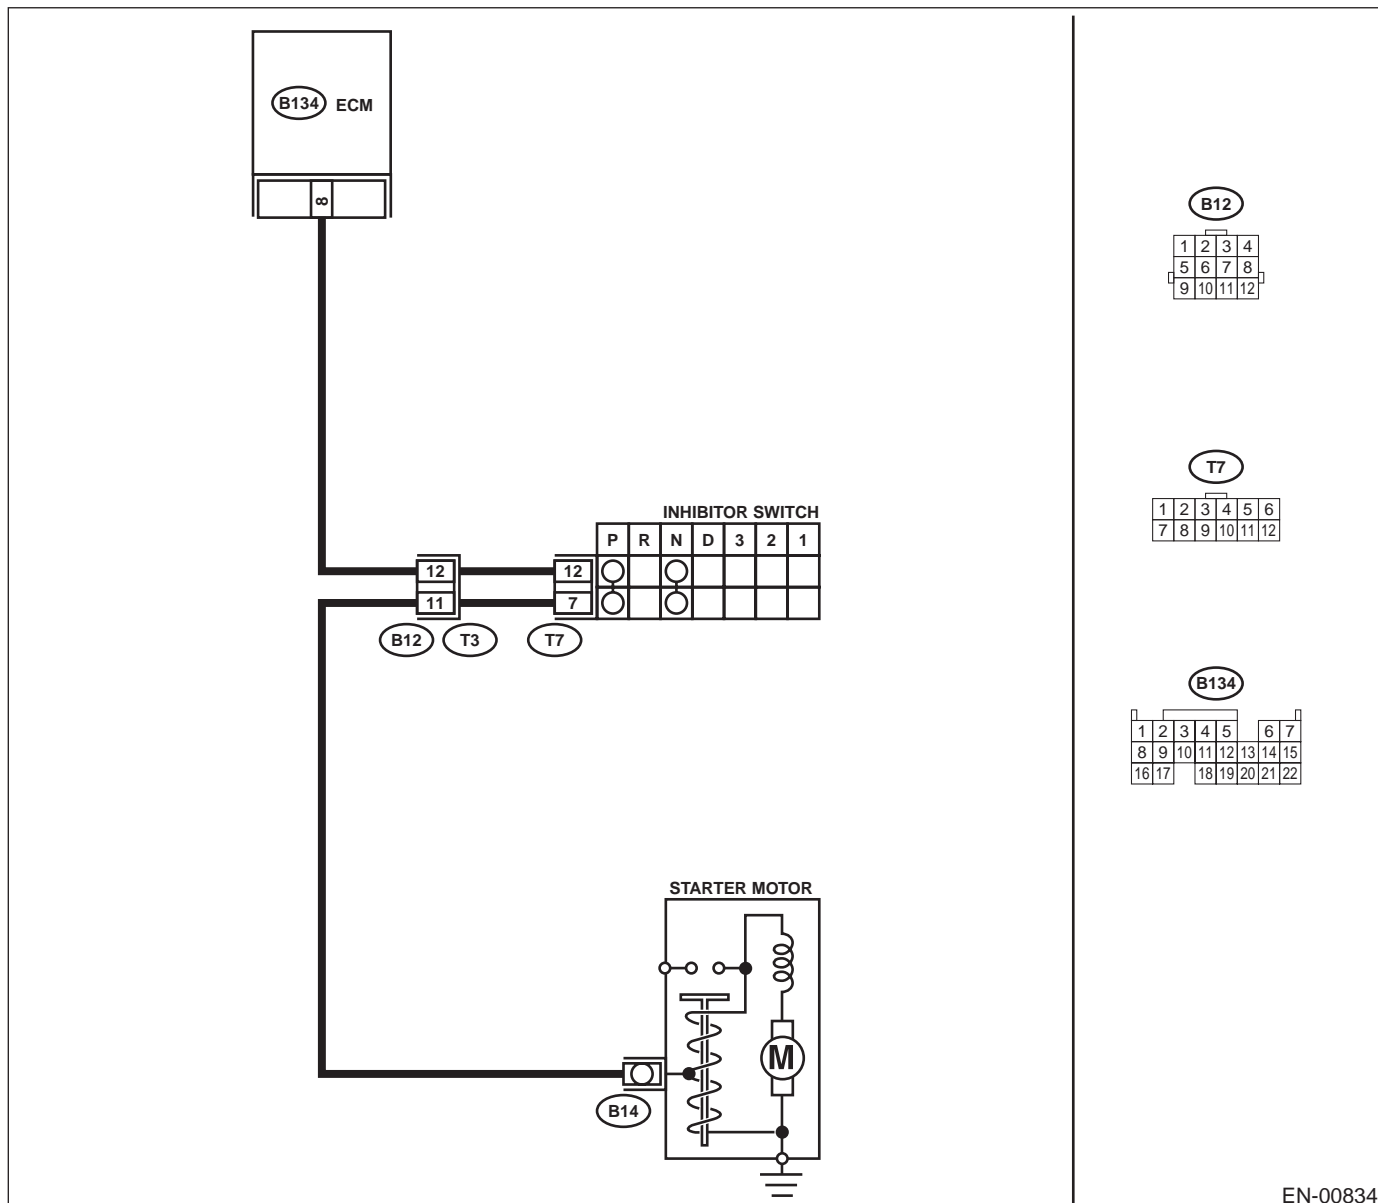

EN-00834

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).>	Go to step 2.
2 CHECK INPUT SIGNAL FOR ECM. 1) Turn ignition switch to ON. 2) Measure voltage between ECM and chassis ground. Connector & terminal (B134) No. 8 (+) — Chassis ground (-): Is the measured value within the specified range at except "N" and "P" positions?	4.5 — 5.5 V	Even if MIL lights up, the circuit has returned to a normal condition at this time.	Go to step 3.
3 CHECK HARNESS BETWEEN ECM AND TRANSMISSION HARNESS CONNECTOR. 1) Turn ignition switch to OFF. 2) Disconnect connectors from ECM and transmission harness connector (T3). 3) Measure resistance of harness between ECM connector and chassis ground. Connector & terminal (B134) No. 8 — Chassis ground: Is the measured value less than the specified value?	10 Ω	Repair ground short circuit in harness between ECM and transmission harness connector.	Go to step 4.
4 CHECK TRANSMISSION HARNESS CONNECTOR. 1) Disconnect connector from inhibitor switch. 2) Measure resistance of harness between transmission harness connector and engine ground. Connector & terminal (T3) No. 12 — Engine ground: Is the measured value less than the specified value?	10 Ω	Repair ground short circuit in harness between transmission harness and inhibitor switch connector.	Go to step 5.
5 CHECK INHIBITOR SWITCH. Measure resistance between inhibitor switch connector receptacle's terminals in selector lever except for "N" position. Terminals No. 7 — No. 12: Does the measured value exceed the specified value at except "N" and "P" positions?	1 MΩ	Go to step 6.	Replace inhibitor switch. <Ref. to AT-49, Inhibitor Switch.>
6 CHECK SELECTOR CABLE CONNECTION. Is there any fault in selector cable connection to inhibitor switch?	There is a malfunction.	Repair selector cable connection. <Ref. to CS-31, Select Cable.>	Contact with SOA (distributor) service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


CP:DTC P0852 — NEUTRAL SWITCH INPUT CIRCUIT HIGH —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Erroneous idling

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

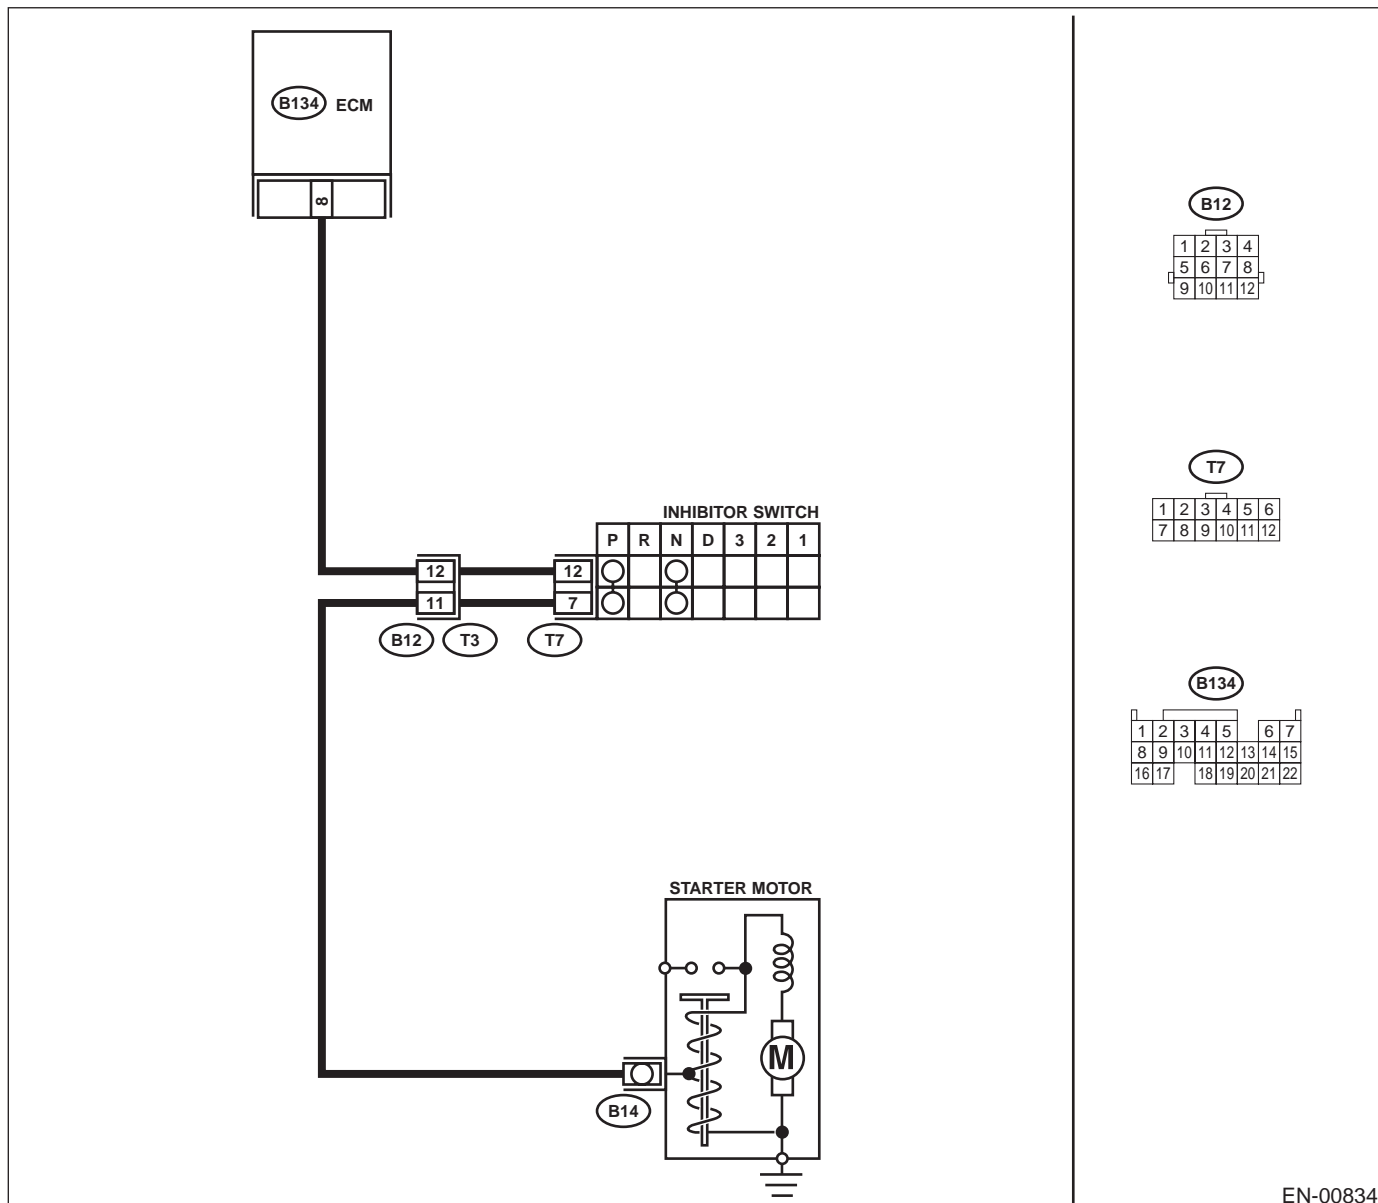

EN-00834

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).>	Go to step 2.
2 CHECK INPUT SIGNAL FOR ECM. 1) Turn ignition switch to ON. 2) Measure voltage between ECM and chassis ground in selector lever "N" and "P" positions. Connector & terminal (B134) No. 8 (+) — Chassis ground (-): Is the measured value less than the specified value?	1 V	Go to step 3.	Go to step 5.
3 CHECK INPUT SIGNAL FOR ECM. Measure voltage between ECM and chassis ground in selector lever except for "N" and "P" positions. Connector & terminal (B134) No. 8 (+) — Chassis ground (-): Is the measured value within the specified range?	4.5 — 5.5 V	Go to step 4.	Go to step 5.
4 CHECK POOR CONTACT. Check poor contact in ECM connector. Is there poor contact in ECM connector?	There is poor contact.	Repair poor contact in ECM connector.	Contact with SOA (distributor) service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.
5 CHECK INPUT SIGNAL FOR ECM. Measure voltage between ECM and chassis ground. Connector & terminal (B134) No. 8 (+) — Chassis ground (-): Does the measured value exceed the specified value?	10 V	Repair battery short circuit in harness between ECM and inhibitor switch connector.	Go to step 6.
6 CHECK HARNESS BETWEEN ECM AND INHIBITOR SWITCH CONNECTOR. 1) Turn ignition switch to OFF. 2) Disconnect connectors from ECM and inhibitor switch. 3) Measure resistance of harness between ECM and inhibitor switch connector. Connector & terminal (B134) No. 8 — (T7) No. 12: Is the measured value less than the specified value?	1 Ω	Go to step 7.	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and inhibitor switch connector • Poor contact in coupling connector • Poor contact in inhibitor switch connector • Poor contact in ECM connector

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>7 CHECK INHIBITOR SWITCH GROUND LINE. Measure resistance of harness between inhibitor switch connector and engine ground. Connector & terminal (T7) No. 7 — Engine ground: Is the measured value less than the specified value?</p>	5 Ω	Go to step 8 .	Repair open circuit in harness between inhibitor switch connector and starter motor ground line. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Open circuit in harness between inhibitor switch connector and starter motor ground line • Poor contact in starter motor connector • Poor contact in starter motor ground • Starter motor
<p>8 CHECK INHIBITOR SWITCH. Measure resistance between inhibitor switch connector receptacle's terminals in selector lever "N" and "P" positions. Terminals No. 7 — No. 12: Is the measured value less than the specified value?</p>	1 Ω	Go to step 9 .	Replace inhibitor switch. <Ref. to AT-49, Inhibitor Switch.>
<p>9 CHECK SELECTOR CABLE CONNECTION. Is there any fault in selector cable connection to inhibitor switch?</p>	There is a malfunction.	Repair selector cable connection. <Ref. to CS-31, Select Cable.>	Contact with SOA (distributor) service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

MEMO:

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

CQ:DTC P0864 — TCM COMMUNICATION CIRCUIT RANGE/PERFORMANCE —


• **DTC DETECTING CONDITION:**

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

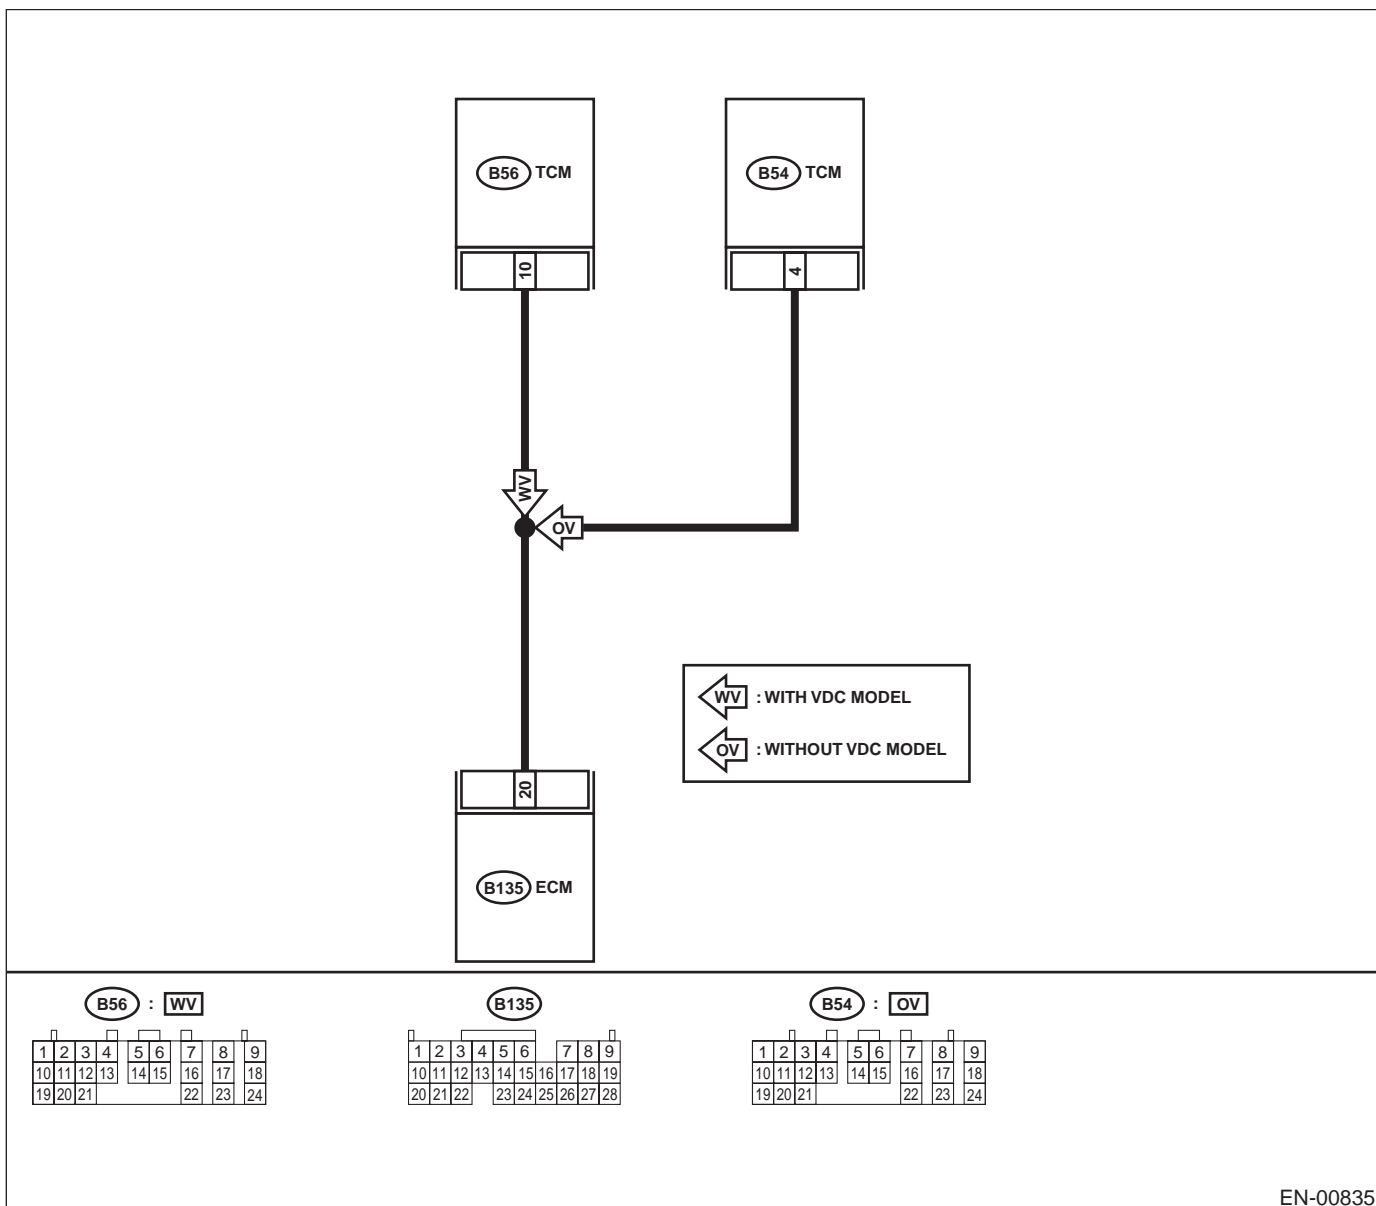

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK DRIVING CONDITION. 1) Start and warm-up the engine until the radiator fan makes one complete rotation. 2) Drive the vehicle. Is AT shift control functioning properly?	Operates properly.	Go to step 2.	Replace TCM. <Ref. to AT-75, Transmission Control Module (TCM).>
2 CHECK ACCESSORY. Are car phone and/or CB installed on vehicle?	Equipped.	Repair grounding line of car phone or CB system.	Replace TCM. <Ref. to AT-75, Transmission Control Module (TCM).>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

CR:DTC P0865 — TCM COMMUNICATION CIRCUIT LOW —


• **DTC DETECTING CONDITION:**

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

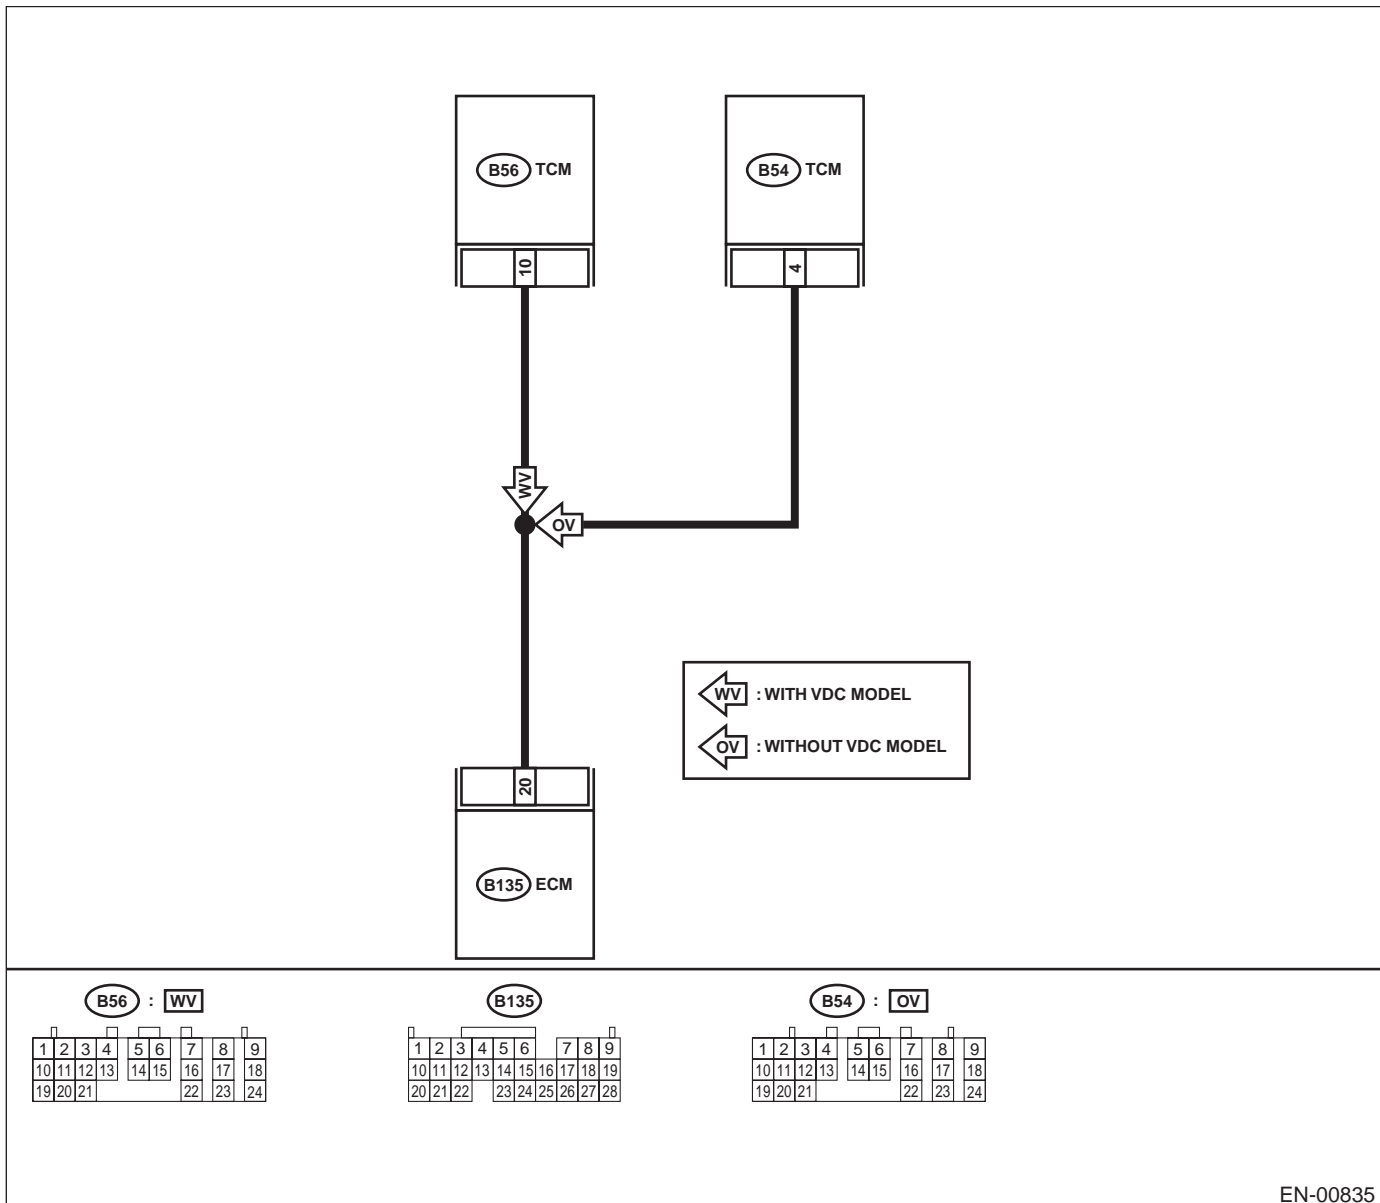

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1</p> <p>CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.</p> <p>1) Turn ignition switch to ON. 2) Measure voltage between ECM and chassis ground.</p> <p>Connector & terminal (B135) No. 20 (+) — Chassis ground (-):</p> <p>Is the measured value less than the specified value?</p>	1 V	Go to step 2.	<p>Even if MIL lights up, the circuit has returned to a normal condition at this time.</p> <p>NOTE: In this case, repair the following:</p> <ul style="list-style-type: none"> • Poor contact in ECM connector • Poor contact in TCM connector
<p>2</p> <p>CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.</p> <p>1) Turn ignition switch to OFF. 2) Disconnect connector from ECM and TCM. 3) Measure resistance of harness between ECM and chassis ground.</p> <p>Connector & terminal (B135) No. 20 — Chassis ground:</p> <p>Is the measured value less than the specified value?</p>	10 Ω	Repair ground short circuit in harness between ECM and TCM connector.	Go to step 3.
<p>3</p> <p>CHECK OUTPUT SIGNAL FOR ECM.</p> <p>1) Connect connector to ECM. 2) Turn ignition switch to ON. 3) Measure voltage between ECM and chassis ground.</p> <p>Connector & terminal (B135) No. 20 (+) — Chassis ground (-):</p> <p>Does the measured value exceed the specified value?</p>	5 V	Go to step 4.	Repair poor contact in ECM connector.
<p>4</p> <p>CHECK TROUBLE CODE FOR AUTOMATIC TRANSMISSION.</p> <p>Read trouble code for automatic transmission. <Ref. to AT-26, Read Diagnostic Trouble Code (DTC).></p> <p>Does trouble code appear for automatic transmission?</p>	Trouble code for automatic transmission is indicated.	Inspect trouble code for automatic transmission.	Replace TCM. <Ref. to AT-75, Transmission Control Module (TCM).>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

CS:DTC P0866 — TCM COMMUNICATION CIRCUIT HIGH —


• DTC DETECTING CONDITION:

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• WIRING DIAGRAM:

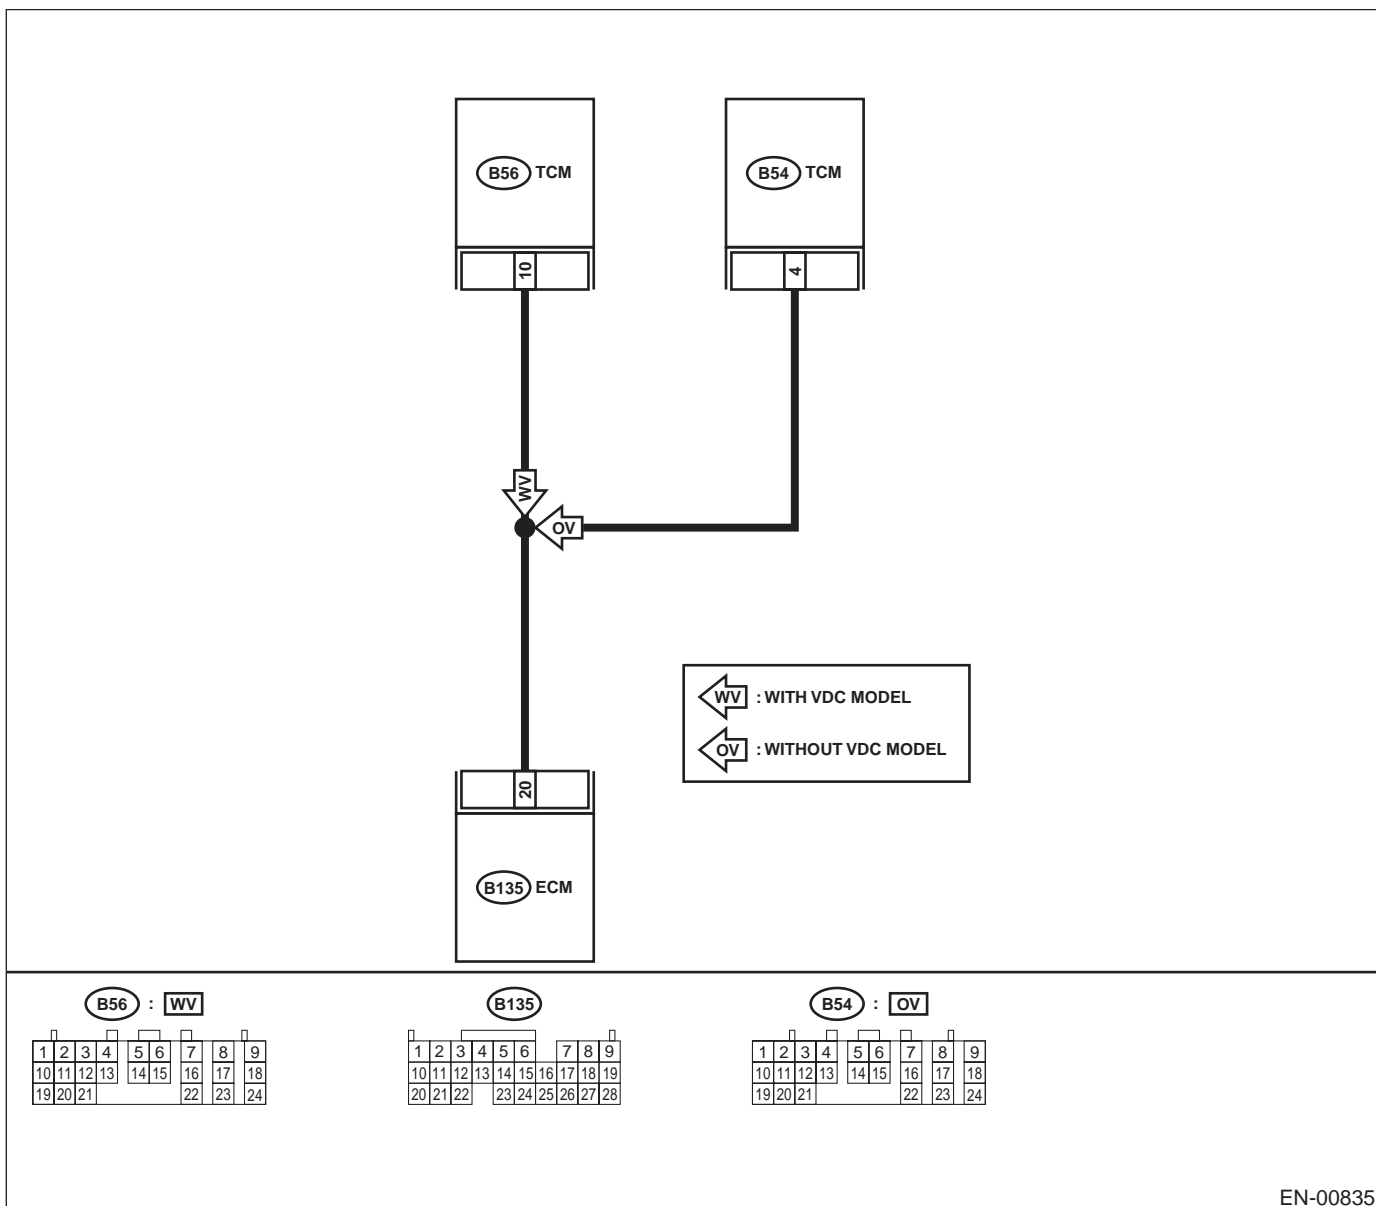

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR. 1) Turn ignition switch to ON. 2) Measure voltage between ECM and chassis ground. Connector & terminal (B135) No. 20 (+) — Chassis ground (-): Does the measured value exceed the specified value?	10 V	Repair battery short circuit in harness between ECM and TCM connector.	Go to step 2.
2 CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR. Measure voltage between ECM connector and chassis ground. Connector & terminal (B135) No. 20 (+) — Chassis ground (-): Does the measured value exceed the specified value?	4 V	Go to step 5.	Go to step 3.
3 CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR. Measure voltage between ECM connector and chassis ground. Connector & terminal (B135) No. 20 (+) — Chassis ground (-): Is the measured value less than the specified value?	1 V	Repair poor contact in ECM connector.	Go to step 4.
4 CHECK OUTPUT SIGNAL FROM ECM. Measure voltage between ECM and chassis ground. Connector & terminal (B135) No. 20 (+) — Chassis ground (-): Does the measured value change within the specified range?	1 V — 4 V	Even if MIL lights up, the circuit has returned to a normal condition at this time. NOTE: In this case, repair the following: • Poor contact in ECM connector • Poor contact in TCM connector	Contact with SOA (distributor) service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.
5 CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR. Measure voltage between TCM and chassis ground. Connector & terminal WITH VDC MODEL: (B56) No. 10 (+) — Chassis ground (-): WITHOUT VDC MODEL: (B54) No. 4 (+) — Chassis ground (-): Does the measured value exceed the specified value?	4 V	Go to step 6.	Repair open circuit in harness between ECM and TCM connector.
6 CHECK POOR CONTACT. Check poor contact in TCM connector. Is there poor contact in TCM connector?	There is poor contact.	Repair poor contact in TCM connector.	Check TCM power supply line and grounding line.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

CT:DTC P1110 — ATMOSPHERIC PRESSURE SENSOR CIRCUIT MALFUNCTION (LOW INPUT) —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P1110?	DTC P1110 is indicated.	Replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.> NOTE: Atmospheric pressure sensor is built into ECM.	It is not necessary to inspect DTC P1110.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

CU:DTC P1111 — ATMOSPHERIC PRESSURE SENSOR CIRCUIT MALFUNCTION (HIGH INPUT) —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P1111?	DTC P1111 is indicated.	Replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.> NOTE: Atmospheric pressure sensor is built into ECM.	It is not necessary to inspect DTC P1111.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


CV:DTC P1134 — A/F SENSOR MICRO-COMPUTER PROBLEM —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

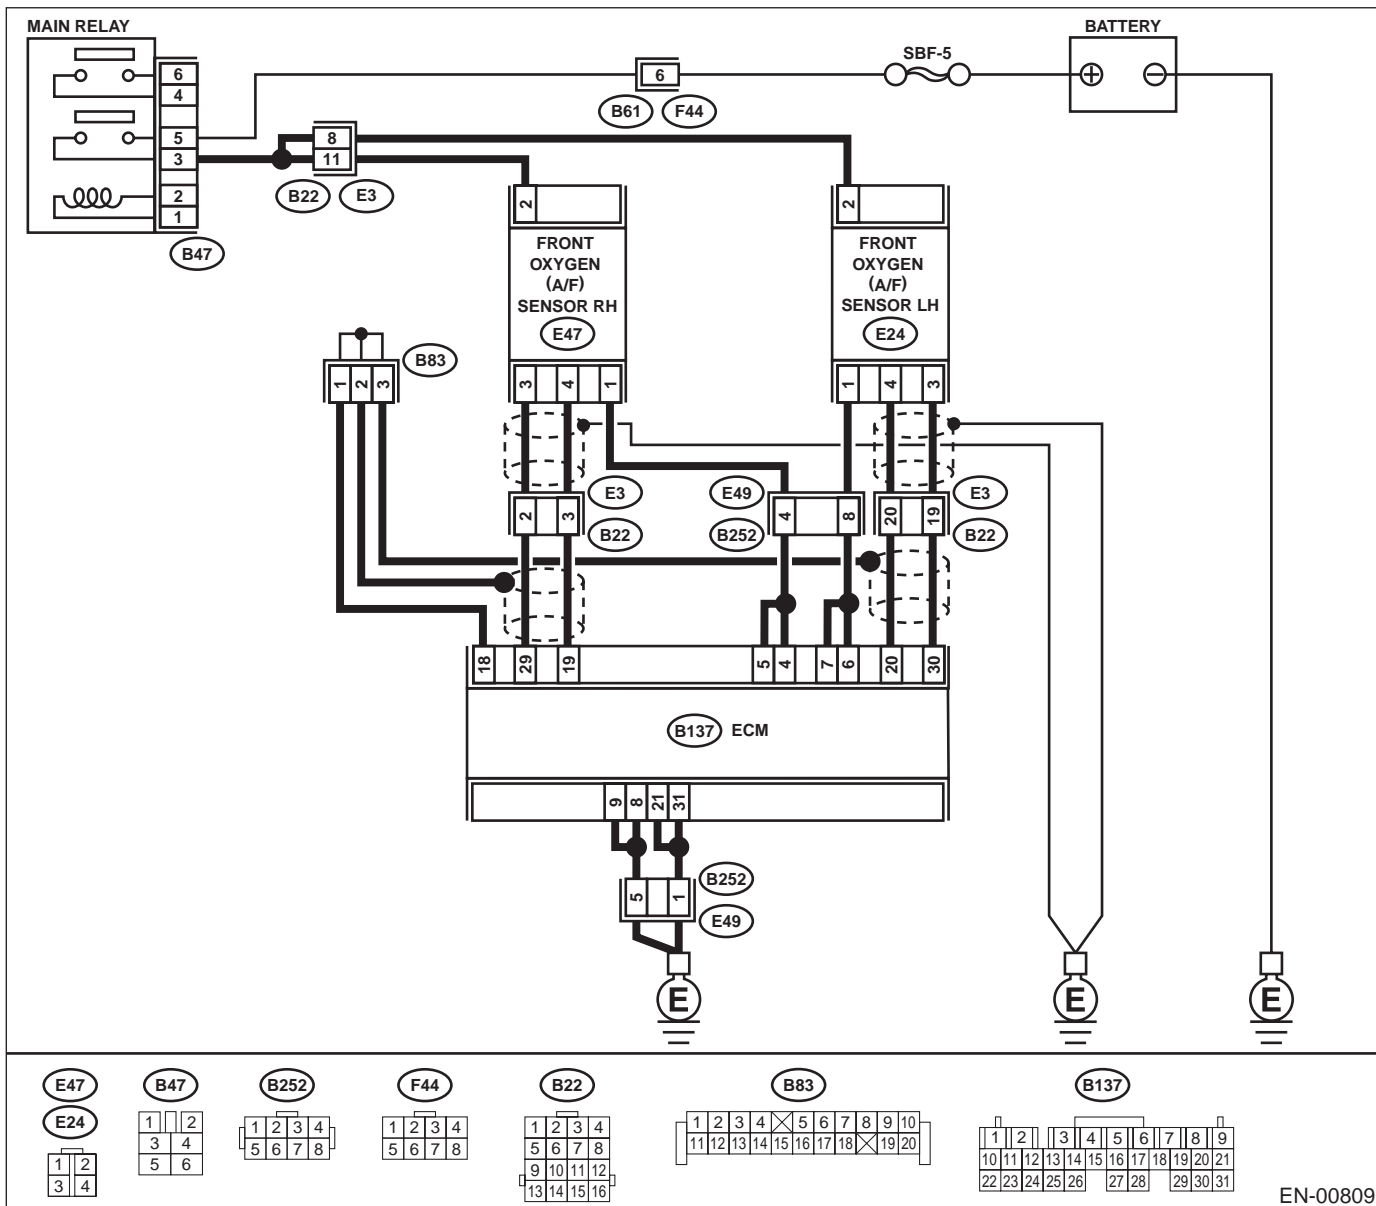

Step	Value	Yes	No
1	CHECK ANY OTHER DTC ON DISPLAY. Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P1134?	DTC P1134 is indicated. Replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>	It is not necessary to inspect DTC P1134.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

**CW:DTC P1152 — O2 SENSOR CIRCUIT RANGE/PERFORMANCE (LOW)
(BANK 1 SENSOR 1) —**

NOTE:

For the diagnostic procedure, refer to DTC P1153. <Ref. to EN(H6DO)-340, DTC P1153 — O2 SENSOR CIRCUIT RANGE/PERFORMANCE (HIGH) (BANK 1 SENSOR 1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


CX:DTC P1153 — O2 SENSOR CIRCUIT RANGE/PERFORMANCE (HIGH) (BANK 1 SENSOR 1) —

- DTC DETECTING CONDITION:
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• WIRING DIAGRAM:

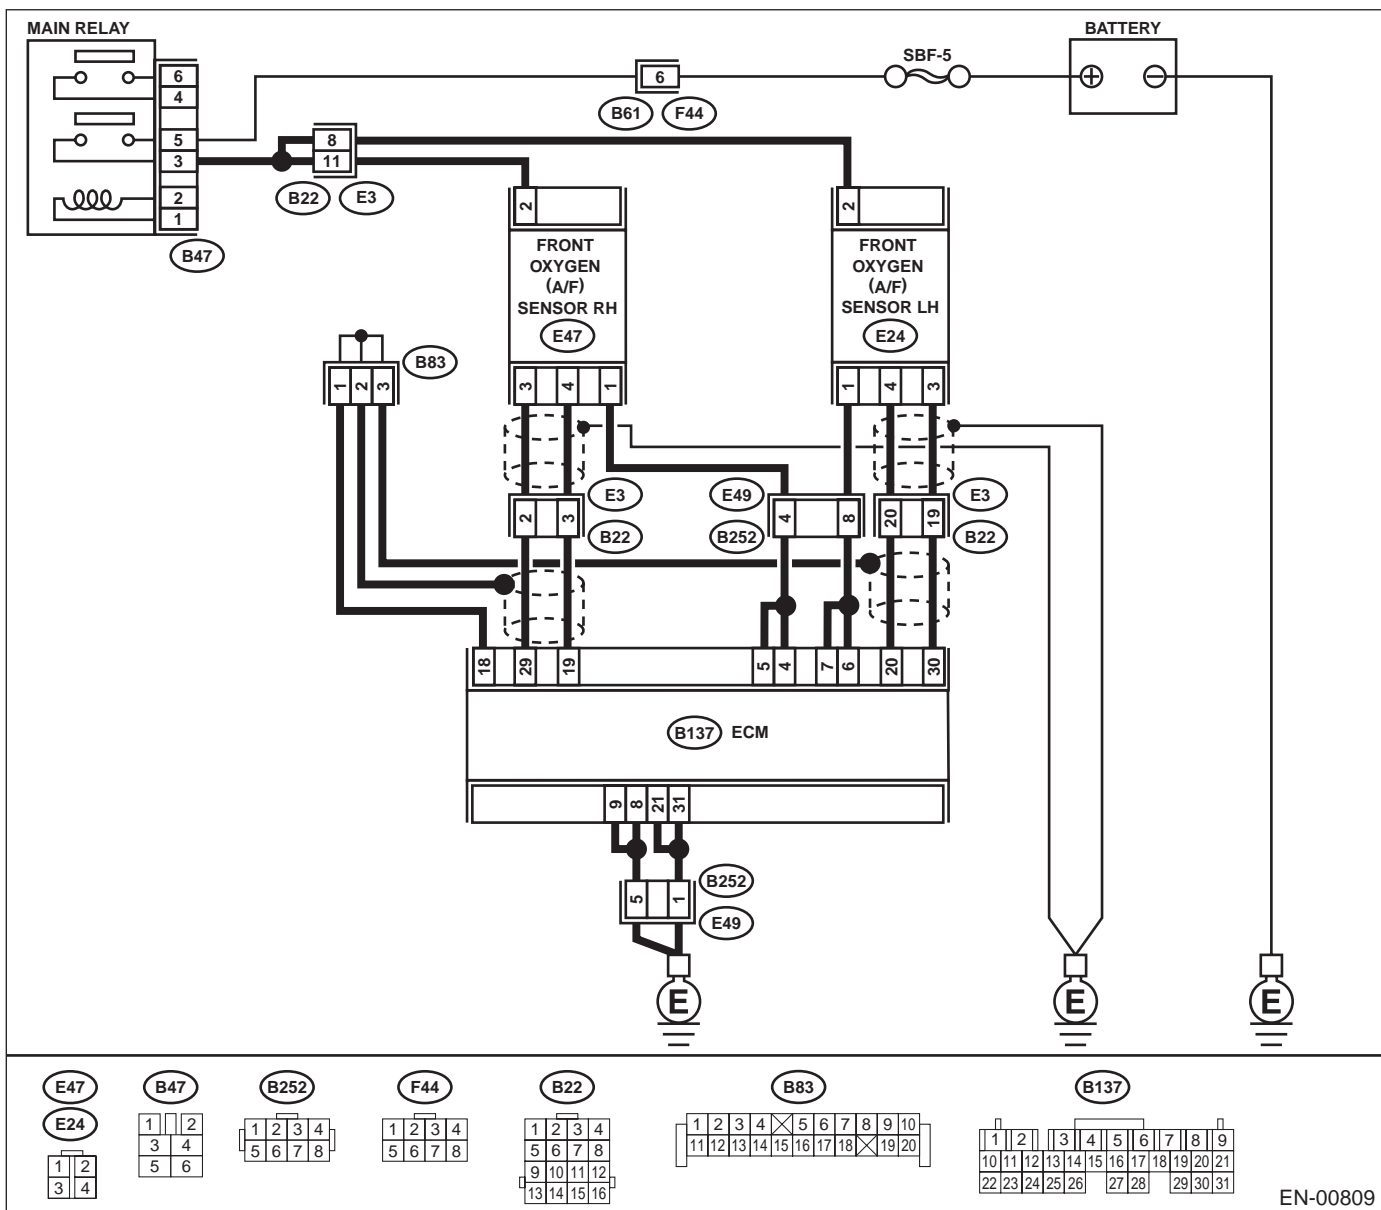

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).>	Go to step 2.
2 CHECK FRONT (A/F) OXYGEN SENSOR DATA. 1) Start engine. 2) While observing the Subaru Select Monitor or OBD-II general scan tool screen, warm-up the engine until coolant temperature is above 75°C (167°F). If the engine is already warmed-up, operate at idle speed for at least 1 minute. 3) Read data of front oxygen (A/F) sensor signal using Subaru Select Monitor or OBD-II general scan tool. Is the measured value within the specified range at idle? NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.> • OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	0.85 — 1.15	Go to step 3.	Go to step 4.
3 CHECK REAR OXYGEN SENSOR SIGNAL. 1) Race engine at speeds from idling to 5,000 rpm for a total of 5 cycles. NOTE: To increase engine speed to 5,000 rpm, slowly depress accelerator pedal, taking approximately 5 seconds, and quickly release accelerator pedal to decrease engine speed. 2) Operate the LED operation mode for engine. Does the LED of {Rear O2 Rich Signal} blink? NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "LED OPERATION MODE FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.>	LED blinks.	Repair poor contact in front oxygen (A/F) sensor and rear oxygen sensor connector.	Check rear oxygen sensor circuit. <Ref. to FU(H6DO)-45, Rear Oxygen Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
4 CHECK EXHAUST SYSTEM. Check exhaust system parts. NOTE: Check the following items. <ul style="list-style-type: none">• Loose installation of portions• Damage (crack, hole etc.) of parts• Looseness of front oxygen (A/F) sensor• Looseness and ill fitting of parts between front oxygen (A/F) sensor and rear oxygen sensor Is there a fault in exhaust system?	There is a malfunction.	Repair or replace faulty parts.	Replace front oxygen (A/F) sensor. <Ref. to FU(H6DO)-43, Front Oxygen (A/F) Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

**CY: DTC P1154 — O2 SENSOR CIRCUIT RANGE/PERFORMANCE (LOW)
(BANK 2 SENSOR 1) —**

NOTE:

For the diagnostic procedure, refer to DTC P1155. <Ref. to EN(H6DO)-344, DTC P1155 — O2 SENSOR CIRCUIT RANGE/PERFORMANCE (HIGH) (BANK 2 SENSOR 1) —, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


CZ:DTC P1155 — O2 SENSOR CIRCUIT RANGE/PERFORMANCE (HIGH) (BANK 2 SENSOR 1) —

- DTC DETECTING CONDITION:
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• WIRING DIAGRAM:

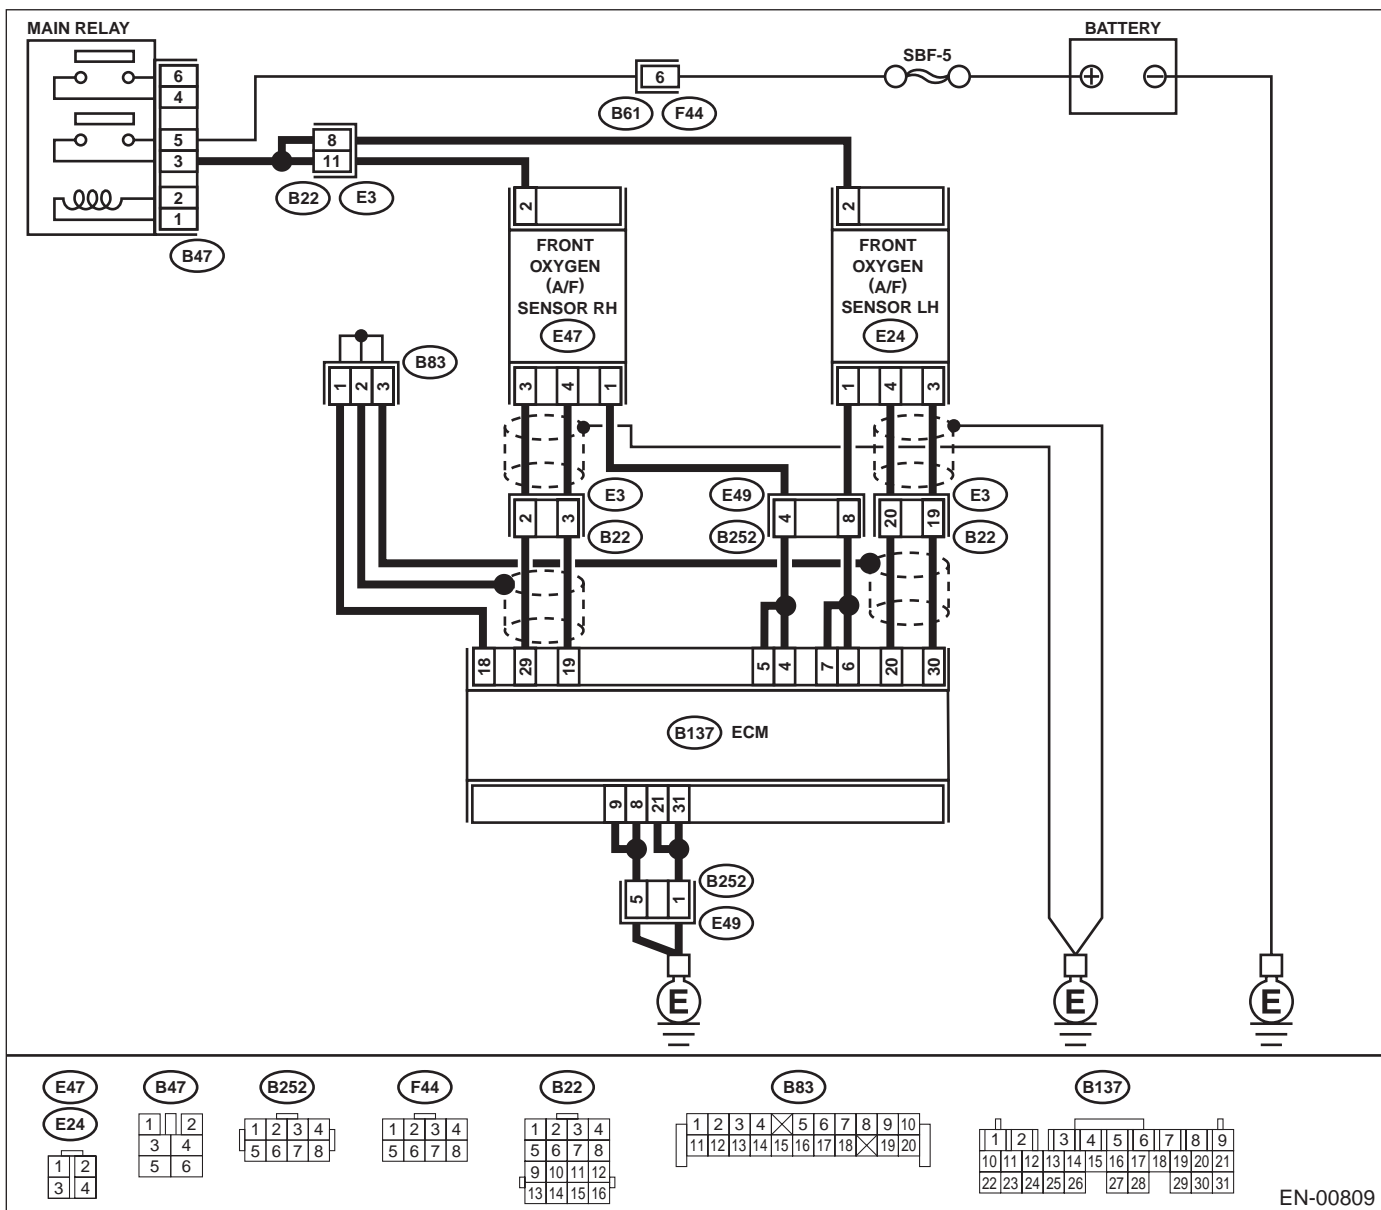

EN-00809

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).>	Go to step 2.
2 CHECK FRONT (A/F) OXYGEN SENSOR DATA. 1) Start engine. 2) While observing the Subaru Select Monitor or OBD-II general scan tool screen, warm-up the engine until coolant temperature is above 75°C (167°F). If the engine is already warmed-up, operate at idle speed for at least 1 minute. 3) Read data of front oxygen (A/F) sensor signal using Subaru Select Monitor or OBD-II general scan tool. Is the measured value within the specified range at idle? NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "READ CURRENT DATA FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.> • OBD-II general scan tool For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.	0.85 — 1.15	Go to step 3.	Go to step 4.
3 CHECK REAR OXYGEN SENSOR SIGNAL. 1) Race engine at speeds from idling to 5,000 rpm for a total of 5 cycles. NOTE: To increase engine speed to 5,000 rpm, slowly depress accelerator pedal, taking approximately 5 seconds, and quickly release accelerator pedal to decrease engine speed. 2) Operate the LED operation mode for engine. Does the LED of {Rear O2 Rich Signal} blink? NOTE: • Subaru Select Monitor For detailed operation procedure, refer to the "LED OPERATION MODE FOR ENGINE". <Ref. to EN(H6DO)-38, Subaru Select Monitor.>	LED blinks.	Repair poor contact in front oxygen (A/F) sensor and rear oxygen sensor connector.	Check rear oxygen sensor circuit. <Ref. to FU(H6DO)-45, Rear Oxygen Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
4 CHECK EXHAUST SYSTEM. Check exhaust system parts. NOTE: Check the following items. <ul style="list-style-type: none">• Loose installation of portions• Damage (crack, hole etc.) of parts• Looseness of front oxygen (A/F) sensor• Looseness and ill fitting of parts between front oxygen (A/F) sensor and rear oxygen sensor Is there a fault in exhaust system?	There is a malfunction.	Repair or replace faulty parts.	Replace front oxygen (A/F) sensor. <Ref. to FU(H6DO)-43, Front Oxygen (A/F) Sensor.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

MEMO:

EN(H6DO)-347

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

DA:DTC P1400 — FUEL TANK PRESSURE CONTROL SOLENOID VALVE CIRCUIT LOW —


DTC DETECTING CONDITION:

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

WIRING DIAGRAM:

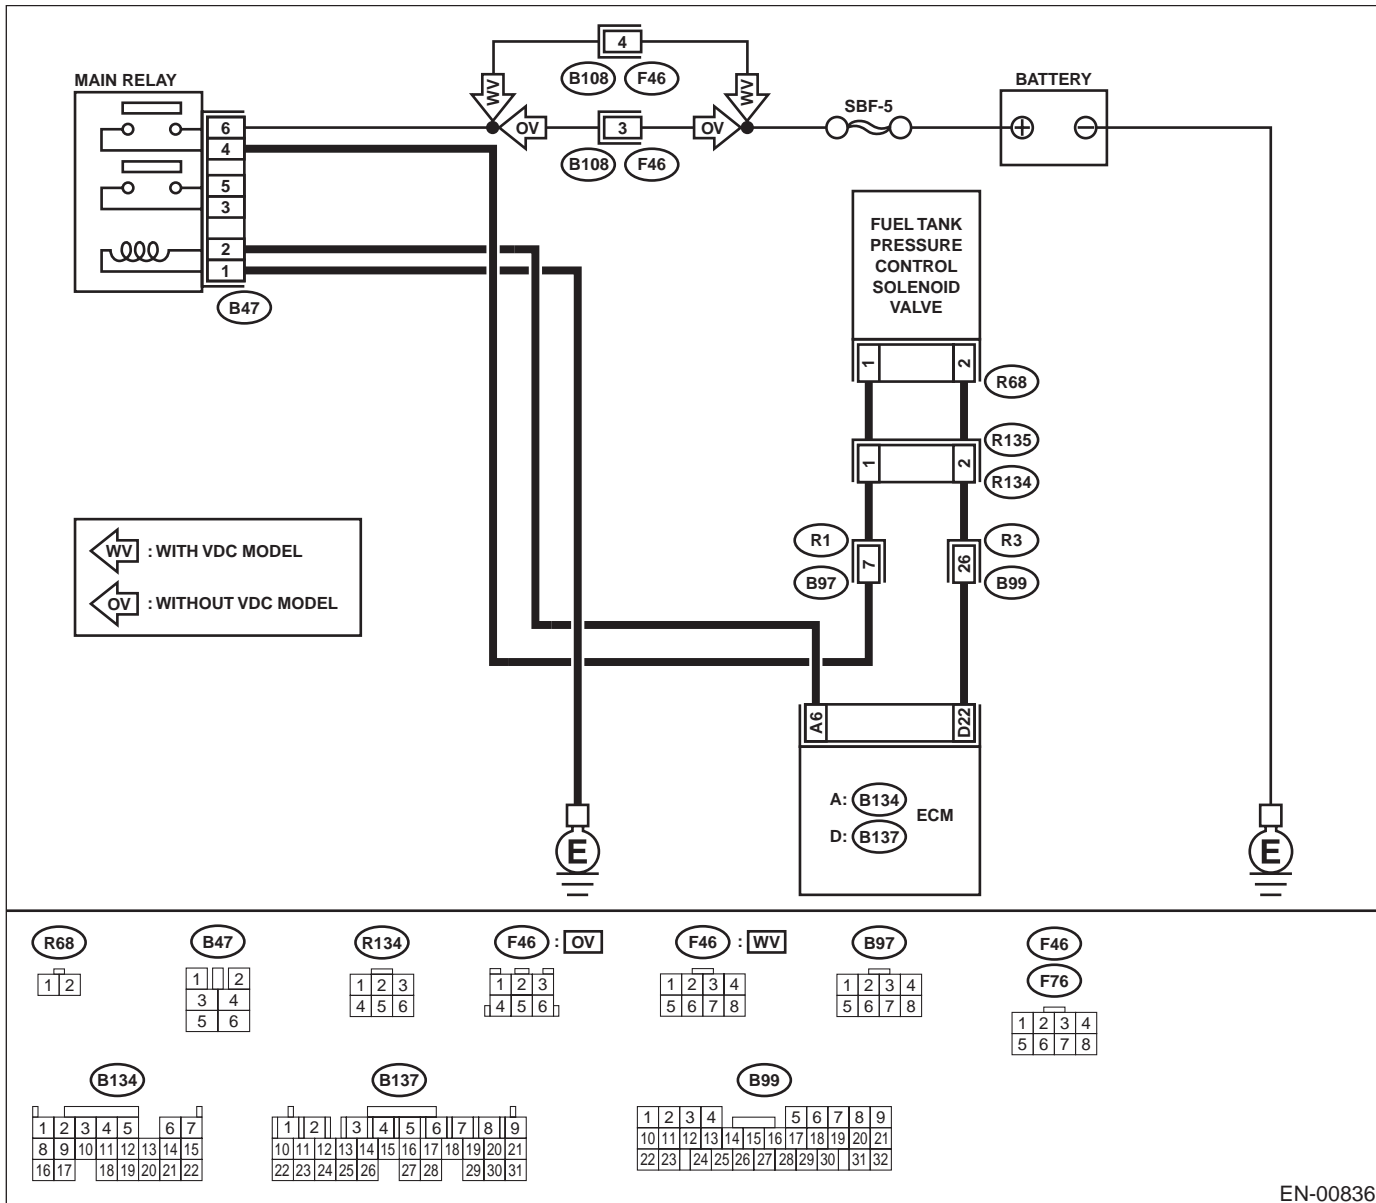

EN-00836

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK OUTPUT SIGNAL FROM ECM. 1) Turn ignition switch to ON. 2) Measure voltage between ECM and chassis ground. Connector & terminal (B137) No. 22 (+) — Chassis ground (-): Does the measured value exceed the specified value?	10 V	Go to step 2.	Go to step 3.
2 CHECK POOR CONTACT. Check poor contact in ECM connector. Is there poor contact in ECM connector?	There is poor contact.	Repair poor contact in ECM connector.	Contact with SOA (distributor) service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.
3 CHECK HARNESS BETWEEN FUEL TANK PRESSURE CONTROL SOLENOID VALVE AND ECM CONNECTOR. 1) Turn ignition switch to OFF. 2) Disconnect connectors from fuel tank pressure control solenoid valve and ECM. 3) Measure resistance of harness between fuel tank pressure control solenoid valve connector and chassis ground. Connector & terminal (R68) No. 2 — Chassis ground: Is the measured value less than the specified value?	10 Ω	Repair ground short circuit in harness between ECM and fuel tank pressure control solenoid valve connector.	Go to step 4.
4 CHECK HARNESS BETWEEN FUEL TANK PRESSURE CONTROL SOLENOID VALVE AND ECM CONNECTOR. Measure resistance of harness between ECM and fuel tank pressure control solenoid valve connector. Connector & terminal (B137) No. 22 — (R68) No. 2: Is the measured value less than the specified value?	1 Ω	Go to step 5.	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between ECM and fuel tank pressure control solenoid valve connector • Poor contact in coupling connectors
5 CHECK FUEL TANK PRESSURE CONTROL SOLENOID VALVE. Measure resistance between fuel tank pressure control solenoid valve terminals. Terminals No. 1 — No. 2: Is the measured value within the specified range?	10 — 100 Ω	Go to step 6.	Replace fuel tank pressure control solenoid valve. <Ref. to EC(H6DO)-16, Pressure Control Solenoid Valve.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>6</p> <p>CHECK POWER SUPPLY TO FUEL TANK PRESSURE CONTROL SOLENOID VALVE. 1) Turn ignition switch to ON. 2) Measure voltage between fuel tank pressure control solenoid valve and chassis ground. Connector & terminal (R68) No. 1 (+) — Chassis ground (-): Does the measured value exceed the specified value?</p>	10 V	Go to step 7.	Repair harness and connector. NOTE: In this case, repair the following: • Open circuit in harness between main relay and fuel tank pressure control solenoid valve connector • Poor contact in coupling connectors • Poor contact in main relay connector
<p>7</p> <p>CHECK POOR CONTACT. Check poor contact in fuel tank pressure control solenoid valve connector. Is there poor contact in fuel tank pressure control solenoid valve connector?</p>	There is poor contact.	Repair poor contact in fuel tank pressure control solenoid valve connector.	Contact with SOA (distributor) service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

MEMO:

EN(H6DO)-351

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

DB:DTC P1420 — FUEL TANK PRESSURE CONTROL SOLENOID VALVE CIRCUIT HIGH —


DTC DETECTING CONDITION:

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

WIRING DIAGRAM:

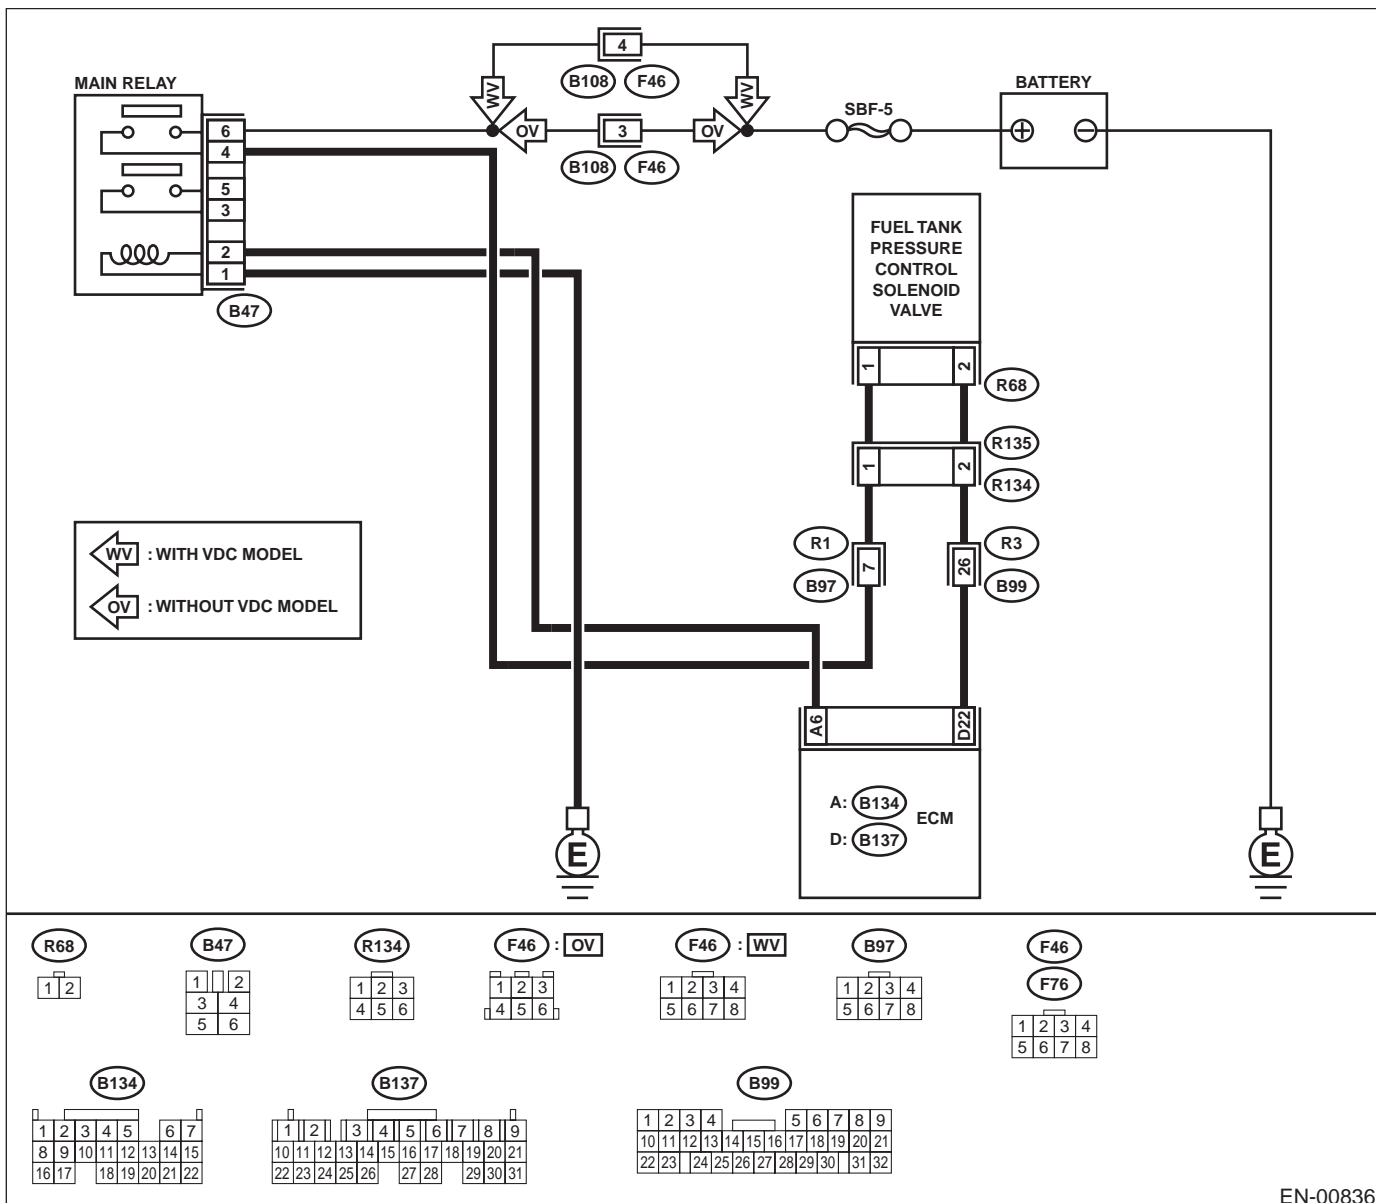

EN-00836

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1 CHECK OUTPUT SIGNAL FROM ECM.</p> <p>1) Turn ignition switch to OFF. 2) Connect test mode connector at the lower portion of instrument panel (on the driver's side), to the side of the center console box. 3) Turn ignition switch to ON. 4) While operating fuel tank pressure control solenoid valve, measure voltage between ECM and chassis ground.</p> <p>Connector & terminal (B137) No. 22 (+) — Chassis ground (-): Is the measured value within the specified range?</p> <p>NOTE: Fuel tank pressure control solenoid valve operation can be executed using Subaru Select Monitor. For procedure, refer to "Compulsory Valve Operation Check Mode". <Ref. to EN(H6DO)-60, Compulsory Valve Operation Check Mode.></p>	0 — 10 V	Go to step 2.	Even if MIL lights up, the circuit has returned to a normal condition at this time. In this case, repair poor contact in ECM connector.
<p>2 CHECK OUTPUT SIGNAL FROM ECM.</p> <p>1) Turn ignition switch to ON. 2) Measure voltage between ECM and chassis ground.</p> <p>Connector & terminal (B137) No. 22 (+) — Chassis ground (-): Does the measured value exceed the specified value?</p>	10 V	Go to step 4.	Go to step 3.
<p>3 CHECK POOR CONTACT.</p> <p>Check poor contact in ECM connector. Is there poor contact in ECM connector?</p>	There is poor contact.	Repair poor contact in ECM connector.	Replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>
<p>4 CHECK HARNESS BETWEEN FUEL TANK PRESSURE CONTROL SOLENOID VALVE AND ECM CONNECTOR.</p> <p>1) Turn ignition switch to OFF. 2) Disconnect connector from fuel tank pressure control solenoid valve. 3) Turn ignition switch to ON. 4) Measure voltage between ECM and chassis ground.</p> <p>Connector & terminal (B137) No. 22 (+) — Chassis ground (-): Does the measured value exceed the specified value?</p>	10 V	Repair battery short circuit in harness between ECM and fuel tank pressure control solenoid valve connector. After repair, replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>	Go to step 5.
<p>5 CHECK FUEL TANK PRESSURE CONTROL SOLENOID VALVE.</p> <p>1) Turn ignition switch to OFF. 2) Measure resistance between fuel tank pressure control solenoid valve terminals.</p> <p>Terminals No. 1 — No. 2: Is the measured value less than the specified value?</p>	1 Ω	Replace fuel tank pressure control solenoid valve <Ref. to EC(H6DO)-16, Pressure Control Solenoid Valve.> and ECM <Ref. to FU(H6DO)-46, Engine Control Module.>	Go to step 6.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
6 CHECK POOR CONTACT. Check poor contact in ECM connector. Is there poor contact in ECM connector?	There is poor contact.	Repair poor contact in ECM connector.	Replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

MEMO:

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


DC:DTC P1443 — VENT CONTROL SOLENOID VALVE FUNCTION PROBLEM —

- **DTC DETECTING CONDITION:**
 - Immediately after fault occurrence
- **TROUBLE SYMPTOM:**
 - Improper fuel supply

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>

• **WIRING DIAGRAM:**

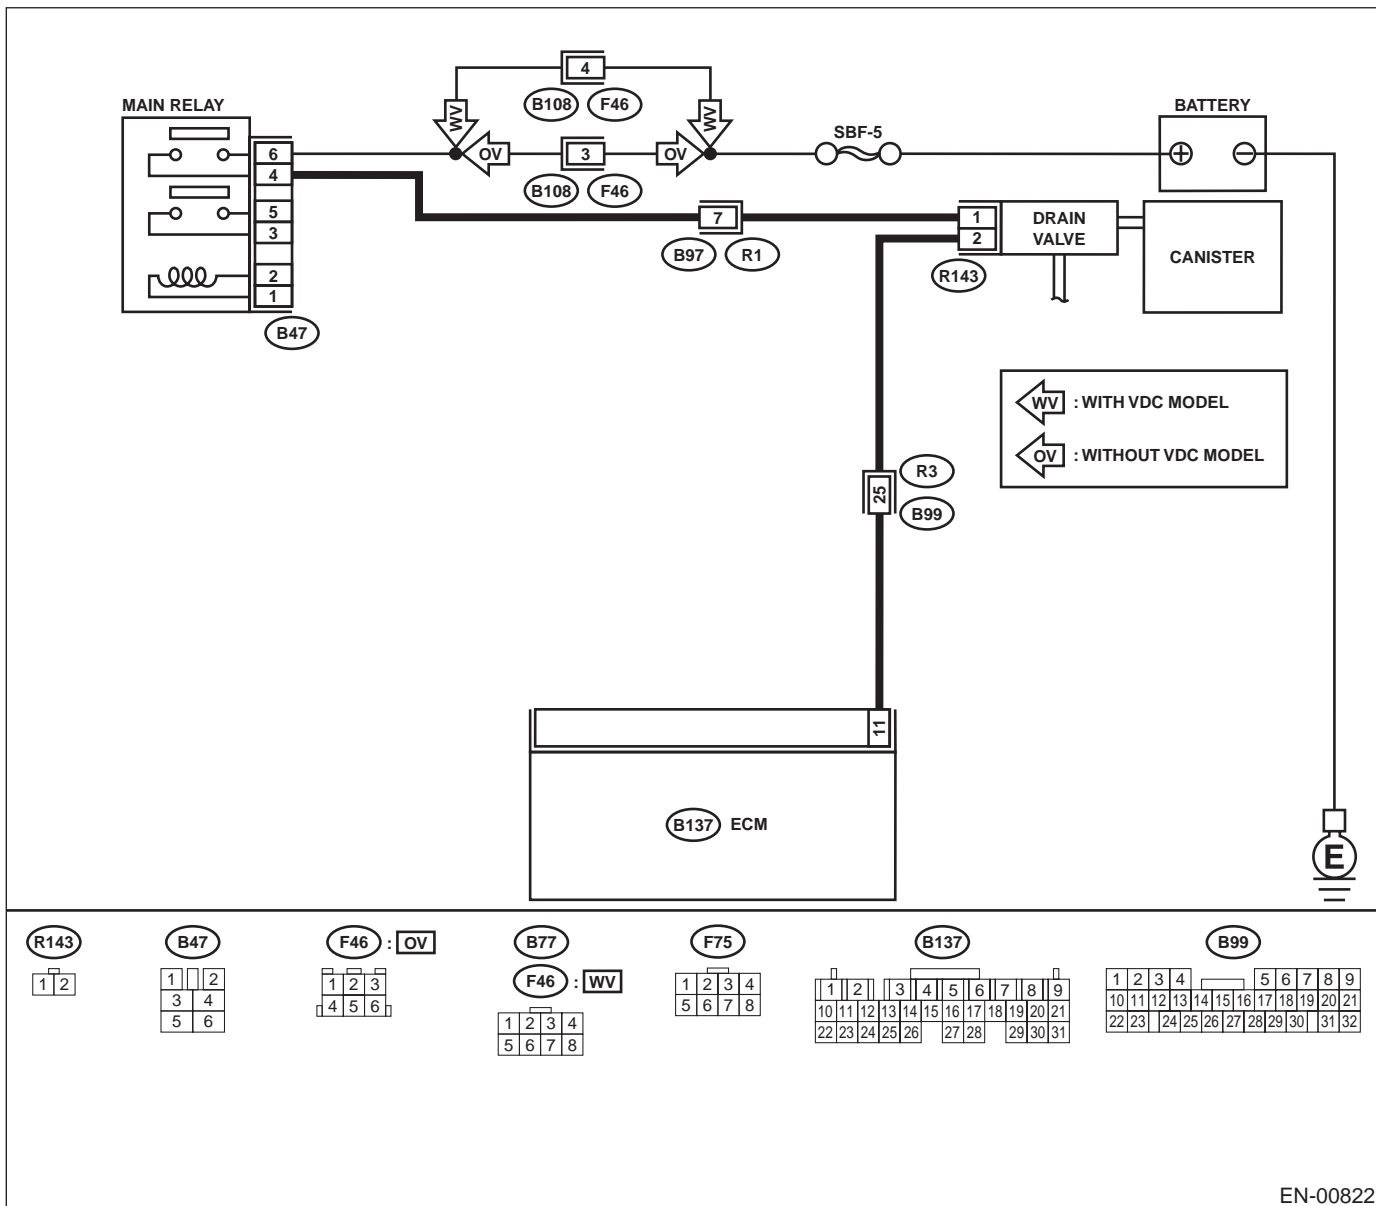

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is any other DTC displayed?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).>	Go to step 2.
2 CHECK VENT LINE HOSES. Check the following items. <ul style="list-style-type: none"> • Clogging of vent hoses between canister and drain valve • Clogging of vent hose between drain valve and air filter • Clogging of drain filter Is there a fault in vent line?	There is a malfunction.	Repair or replace the faulty part.	Go to step 3.
3 CHECK DRAIN VALVE OPERATION. <ol style="list-style-type: none"> 1) Turn ignition switch to OFF. 2) Connect test mode connector at the lower portion of instrument panel (on the driver's side), to the side of the center console box. 3) Turn ignition switch to ON. 4) Operate drain valve. Does drain valve produce operating sound? <p>NOTE: Drain valve operation can also be executed using Subaru Select Monitor. For the procedure, refer to the "Compulsory Valve Operation Check Mode".<Ref. to EN(H6DO)-60, Compulsory Valve Operation Check Mode.></p>	Operating sound produced.	Contact with SOA (distributor) service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.	Replace drain valve. <Ref. to EC(H6DO)-20, Drain Valve.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

DD:DTC P1446 — FUEL TANK SENSOR CONTROL VALVE CIRCUIT LOW —


• **DTC DETECTING CONDITION:**

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>

• **WIRING DIAGRAM:**

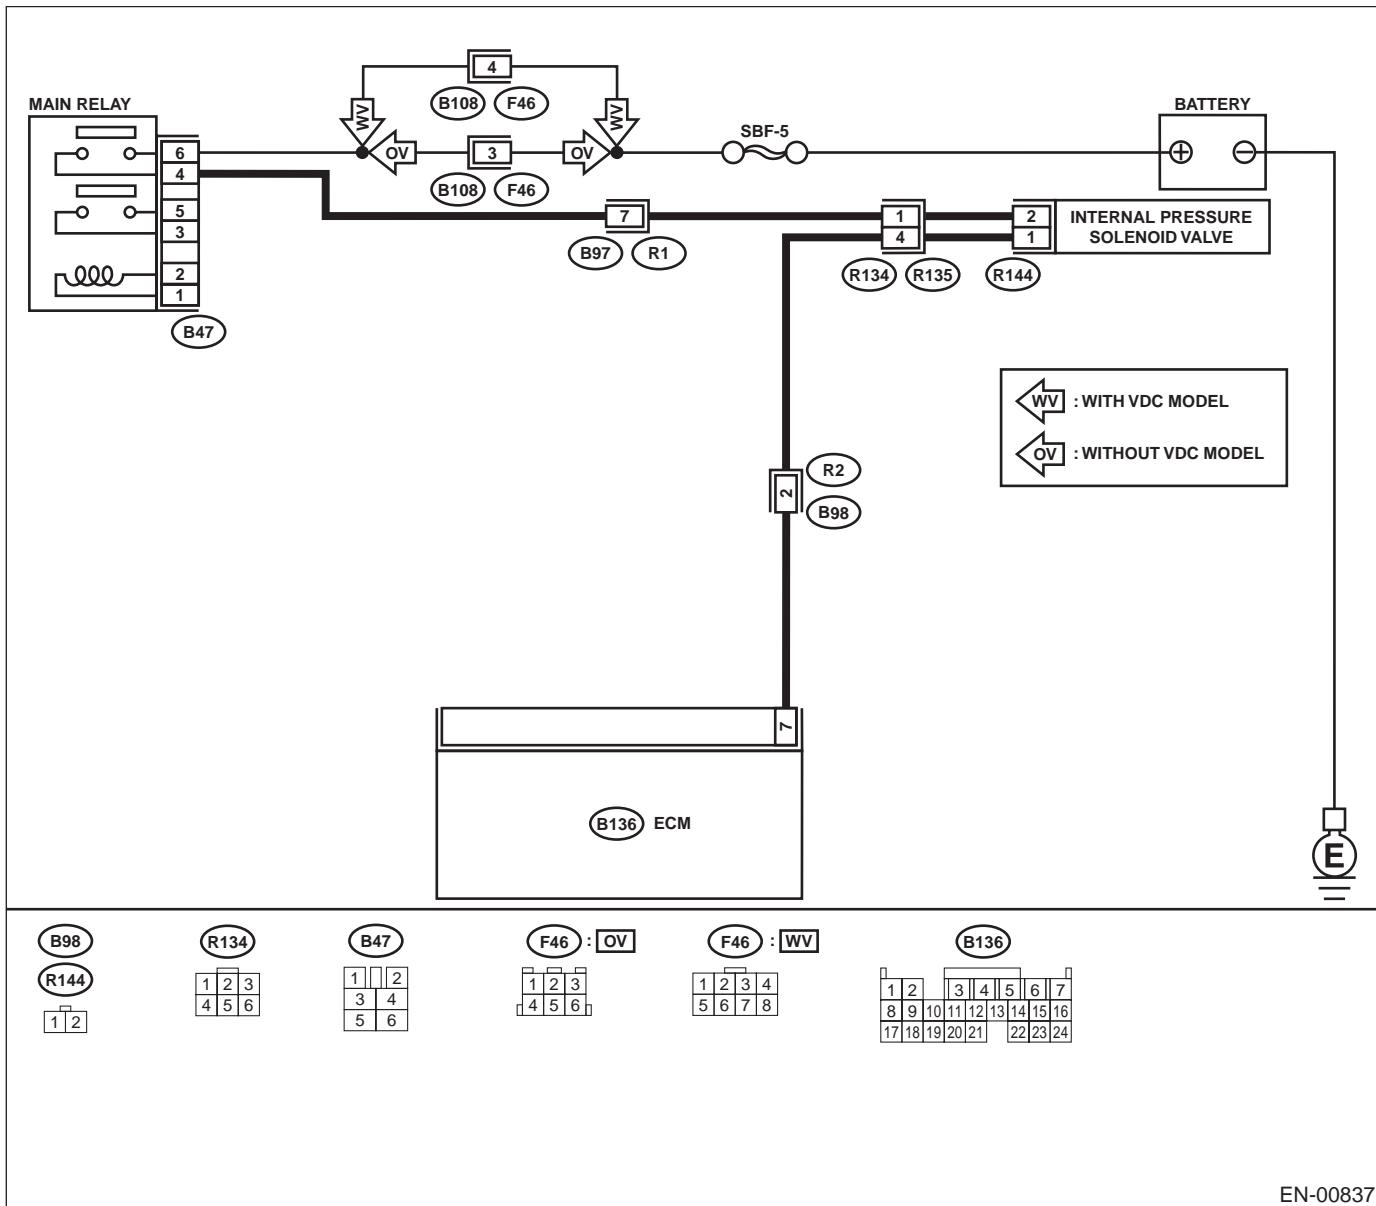

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1 CHECK INPUT SIGNAL FOR ECM. 1) Turn ignition switch to ON. 2) Measure voltage between ECM and chassis ground. Connector & terminal (B136) No. 7 (+) — Chassis ground (-): Does the measured value exceed the specified value?</p>	10 V	Go to step 2.	Go to step 3.
<p>2 CHECK POOR CONTACT. Check poor contact in ECM connector. Is there poor contact in ECM connector?</p>	There is poor contact.	Repair poor contact in ECM connector.	Even if MIL lights up, the circuit has returned to a normal condition at this time. (However, the possibility of poor contact still remains.) NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Poor contact in fuel tank sensor control valve connector • Poor contact in ECM connector • Poor contact in coupling connectors
<p>3 CHECK HARNESS BETWEEN FUEL TANK SENSOR CONTROL VALVE AND ECM CONNECTOR. 1) Turn ignition switch to OFF. 2) Disconnect connectors from fuel tank sensor control valve and ECM. 3) Measure resistance of harness between drain valve connector and chassis ground. Connector & terminal (R144) No. 1 — Chassis ground: Does the measured value exceed the specified value?</p>	1 M Ω	Go to step 4.	Repair ground short circuit in harness between ECM and fuel tank sensor control valve connector.
<p>4 CHECK HARNESS BETWEEN FUEL TANK SENSOR CONTROL VALVE AND ECM CONNECTOR. Measure resistance of harness between ECM and fuel tank sensor control valve connector. Connector & terminal (B136) No. 7 — (R144) No. 1: Is the measured value less than the specified value?</p>	1 Ω	Go to step 5.	Repair harness and connector. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Open circuit in harness between ECM and fuel tank sensor control valve connector • Poor contact in coupling connectors

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>5 CHECK FUEL TANK SENSOR CONTROL VALVE. Measure resistance between fuel tank sensor control valve terminals. Terminals No. 1 — No. 2: Is the measured value within the specified range?</p>	10 — 100 Ω	Go to step 6.	Replace fuel tank sensor control valve. <Ref. to EC(H6DO)-15, Fuel Tank Sensor Control Valve.>
<p>6 CHECK POWER SUPPLY TO FUEL TANK SENSOR CONTROL VALVE. 1) Turn ignition switch to ON. 2) Measure voltage between fuel tank sensor control valve and chassis ground. Connector & terminal (R144) No. 2 (+) — Chassis ground (-): Does the measured value exceed the specified value?</p>	10 V	Go to step 7.	<p>Repair harness and connector.</p> <p>NOTE: In this case, repair the following:</p> <ul style="list-style-type: none"> • Open circuit in harness between main relay and fuel tank sensor control valve • Poor contact in coupling connectors • Poor contact in main relay connector
<p>7 CHECK POOR CONTACT. Check poor contact in fuel tank sensor control valve connector. Is there poor contact in fuel tank sensor control valve connector?</p>	There is poor contact.	Repair poor contact in fuel tank sensor control valve connector.	<p>Contact with SOA (distributor) service.</p> <p>NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.</p>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

MEMO:

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

DE:DTC P1447 — FUEL TANK SENSOR CONTROL VALVE CIRCUIT HIGH —


• **DTC DETECTING CONDITION:**

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

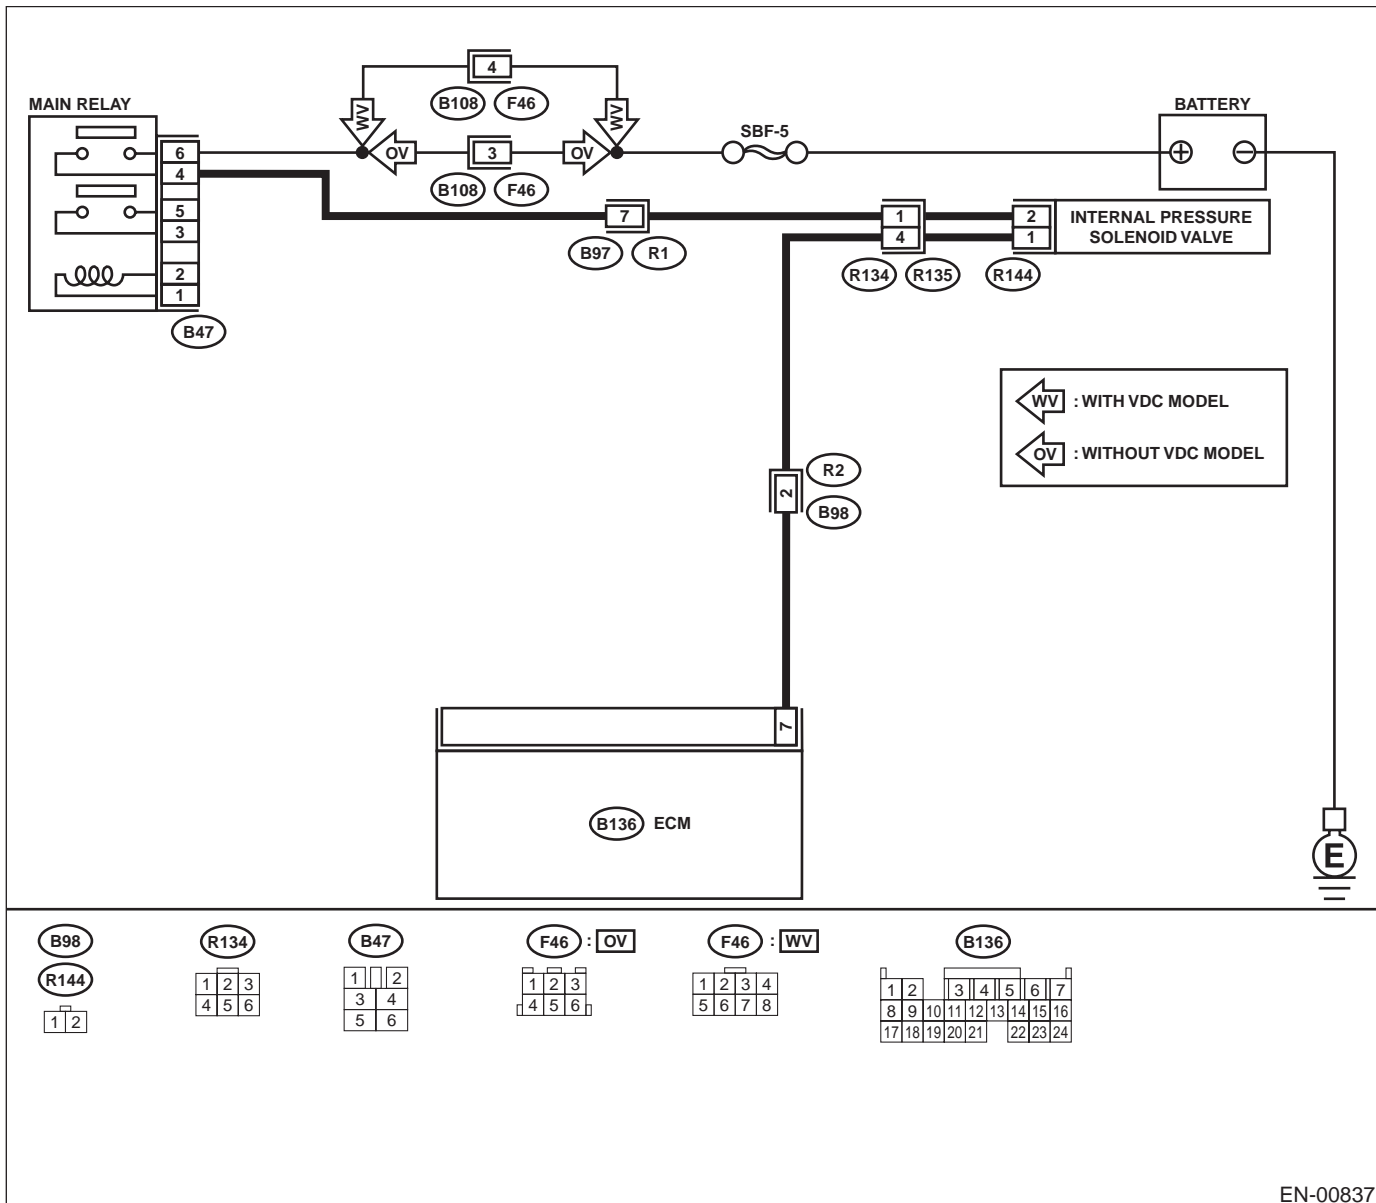

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK INPUT SIGNAL FOR ECM. 1) Turn ignition switch to ON. 2) Measure voltage between ECM and chassis ground. Connector & terminal (B136) No. 7 (+) — Chassis ground (-): Does the measured value exceed the specified value?	10 V	Go to step 3.	Go to step 2.
2 CHECK POOR CONTACT. Check poor contact in ECM connector. Is there poor contact in ECM connector?	There is poor contact.	Repair poor contact in ECM connector.	Replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>
3 CHECK HARNESS BETWEEN FUEL TANK SENSOR CONTROL VALVE AND ECM CONNECTOR. 1) Turn ignition switch to OFF. 2) Disconnect connector from fuel tank sensor control valve. 3) Turn ignition switch to ON. 4) Measure voltage between ECM and chassis ground. Connector & terminal (B136) No. 7 (+) — Chassis ground (-): Does the measured value exceed the specified value?	10 V	Repair battery short circuit in harness between ECM and fuel tank sensor control valve connector. After repair, replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>	Go to step 4.
4 CHECK FUEL TANK SENSOR CONTROL VALVE. 1) Turn ignition switch to OFF. 2) Measure resistance between fuel tank sensor control valve terminals. Terminals No. 1 — No. 2: Is the measured value less than the specified value?	1 Ω	Replace fuel tank sensor control valve <Ref. to EC(H6DO)-15, Fuel Tank Sensor Control Valve.> and ECM <Ref. to FU(H6DO)-46, Engine Control Module.>	Go to step 5.
5 CHECK POOR CONTACT. Check poor contact in ECM connector. Is there poor contact in ECM connector?	There is poor contact.	Repair poor contact in ECM connector.	Replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

DF:DTC P1448 — FUEL TANK SENSOR CONTROL VALVE RANGE/PERFORMANCE —


DTC DETECTING CONDITION:

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>

WIRING DIAGRAM:

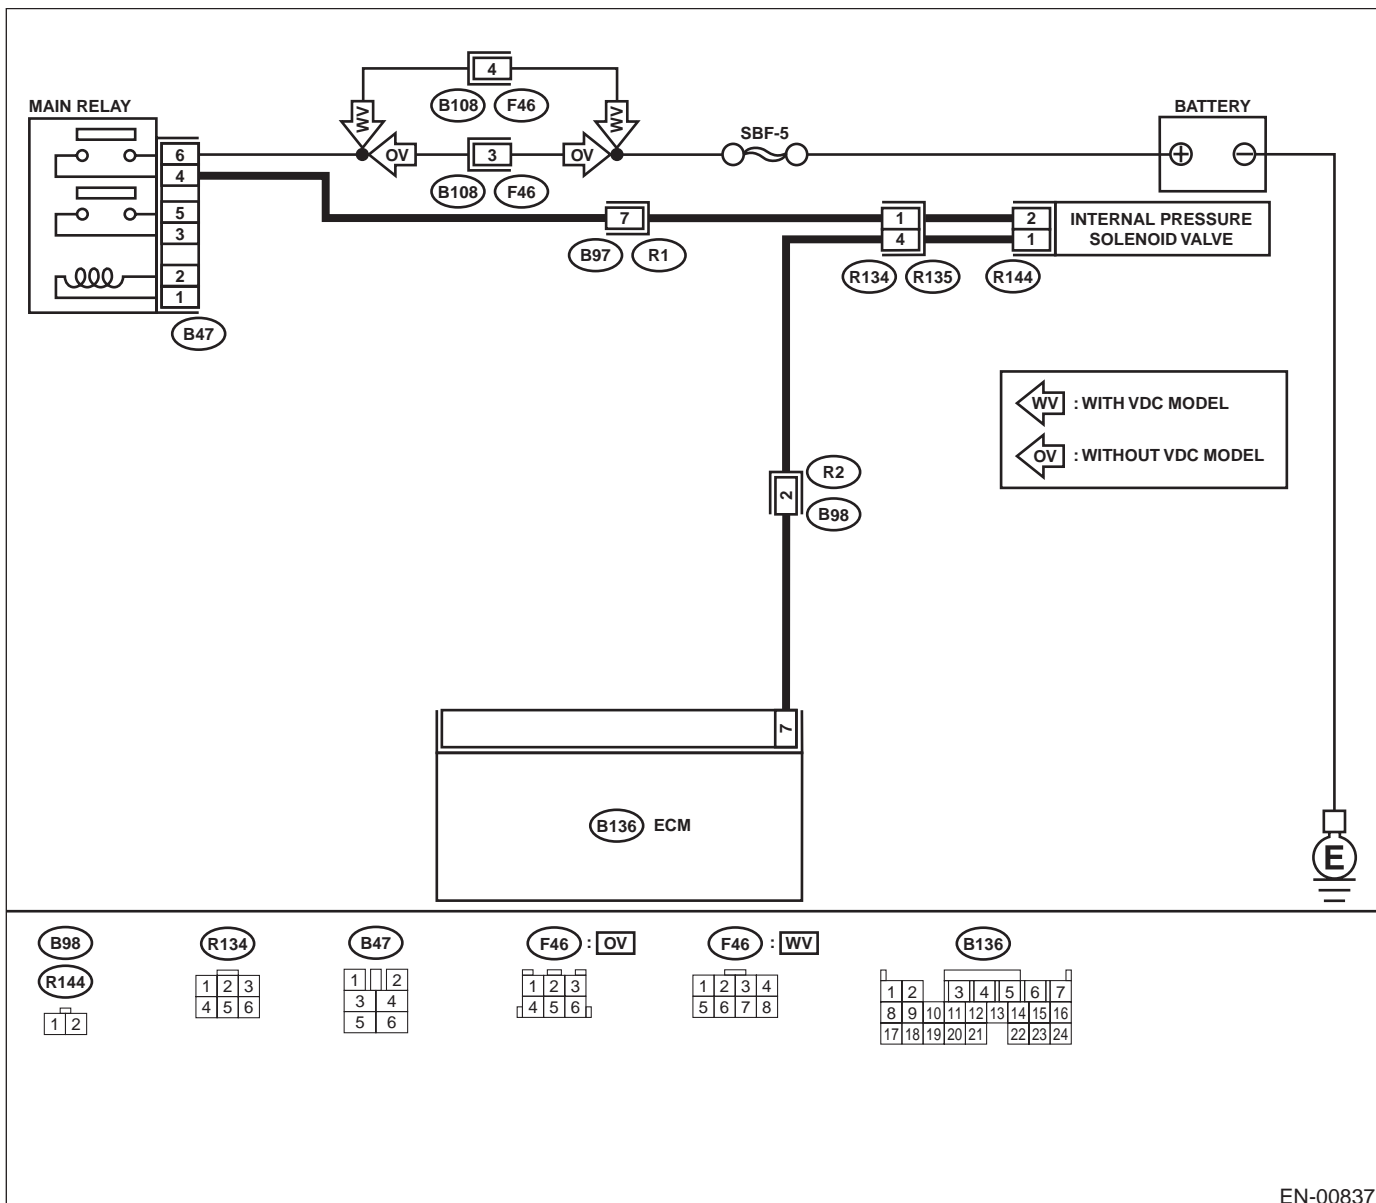

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK ANY OTHER DTC ON DISPLAY. Is there any DTC on display?	Another DTC is displayed.	Inspect the relevant DTC using "List of Diagnostic Trouble Code (DTC)". <Ref. to EN(H6DO)-93, List of Diagnostic Trouble Code (DTC).>	Go to step 2.
2 CHECK FUEL FILLER CAP. 1) Turn ignition switch to OFF. 2) Open the fuel flap. Is the fuel filler cap tightened securely?	Tightened securely.	Go to step 3.	Tighten fuel filler cap securely.
3 CHECK PRESSURE/VACUUM LINE. NOTE: Check the following items. • Disconnection, leakage and clogging of the vacuum hoses and pipes between fuel tank pressure sensor and fuel tank • Disconnection, leakage and clogging of air ventilation hoses and pipes between fuel filler pipe and fuel tank Is there a fault in pressure/vacuum line?	There is a fault.	Repair or replace hoses and pipes.	Replace fuel tank sensor control valve. <Ref. to EC(H6DO)-15, Fuel Tank Sensor Control Valve.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

DG:DTC P1518 — STARTER SWITCH CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Failure of engine to start


CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

• WIRING DIAGRAM:

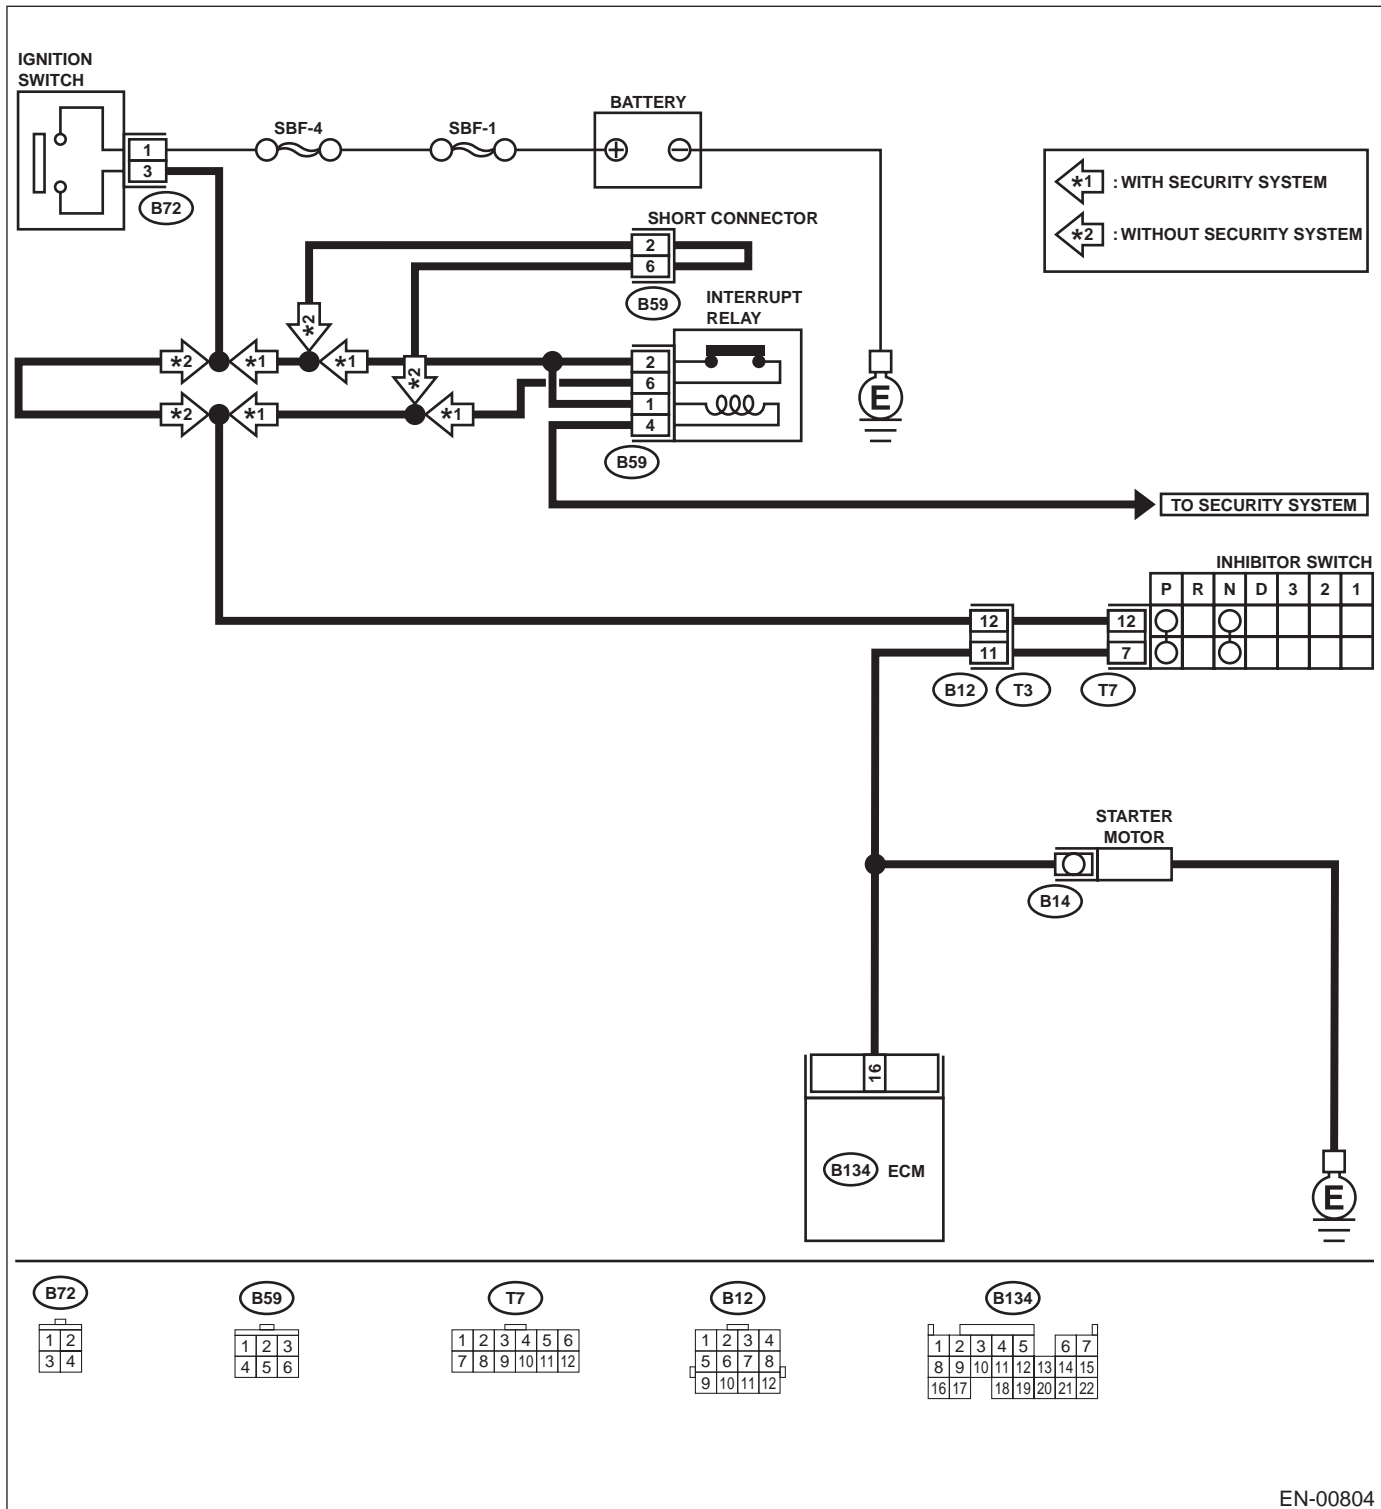

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK OPERATION OF STARTER MOTOR. NOTE: Place the inhibitor switch in the "P" or "N" position. Does starter motor operate when turning ignition switch to "ST"?	Starter motor operates.	Repair harness and connector. NOTE: In this case, repair the following: <ul style="list-style-type: none">• Open or ground short circuit in harness between ECM and starter motor connector.• Poor contact in ECM connector.	Check starter motor circuit. <Ref. to EN(H6DO)-76, STARTER MOTOR CIRCUIT, Diagnostics for Engine Starting Failure.>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)
ENGINE (DIAGNOSTICS)

MEMO:

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


DH:DTC P1560 — BACK-UP VOLTAGE CIRCUIT MALFUNCTION —

- DTC DETECTING CONDITION:
 - Immediately at fault recognition

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

- WIRING DIAGRAM:

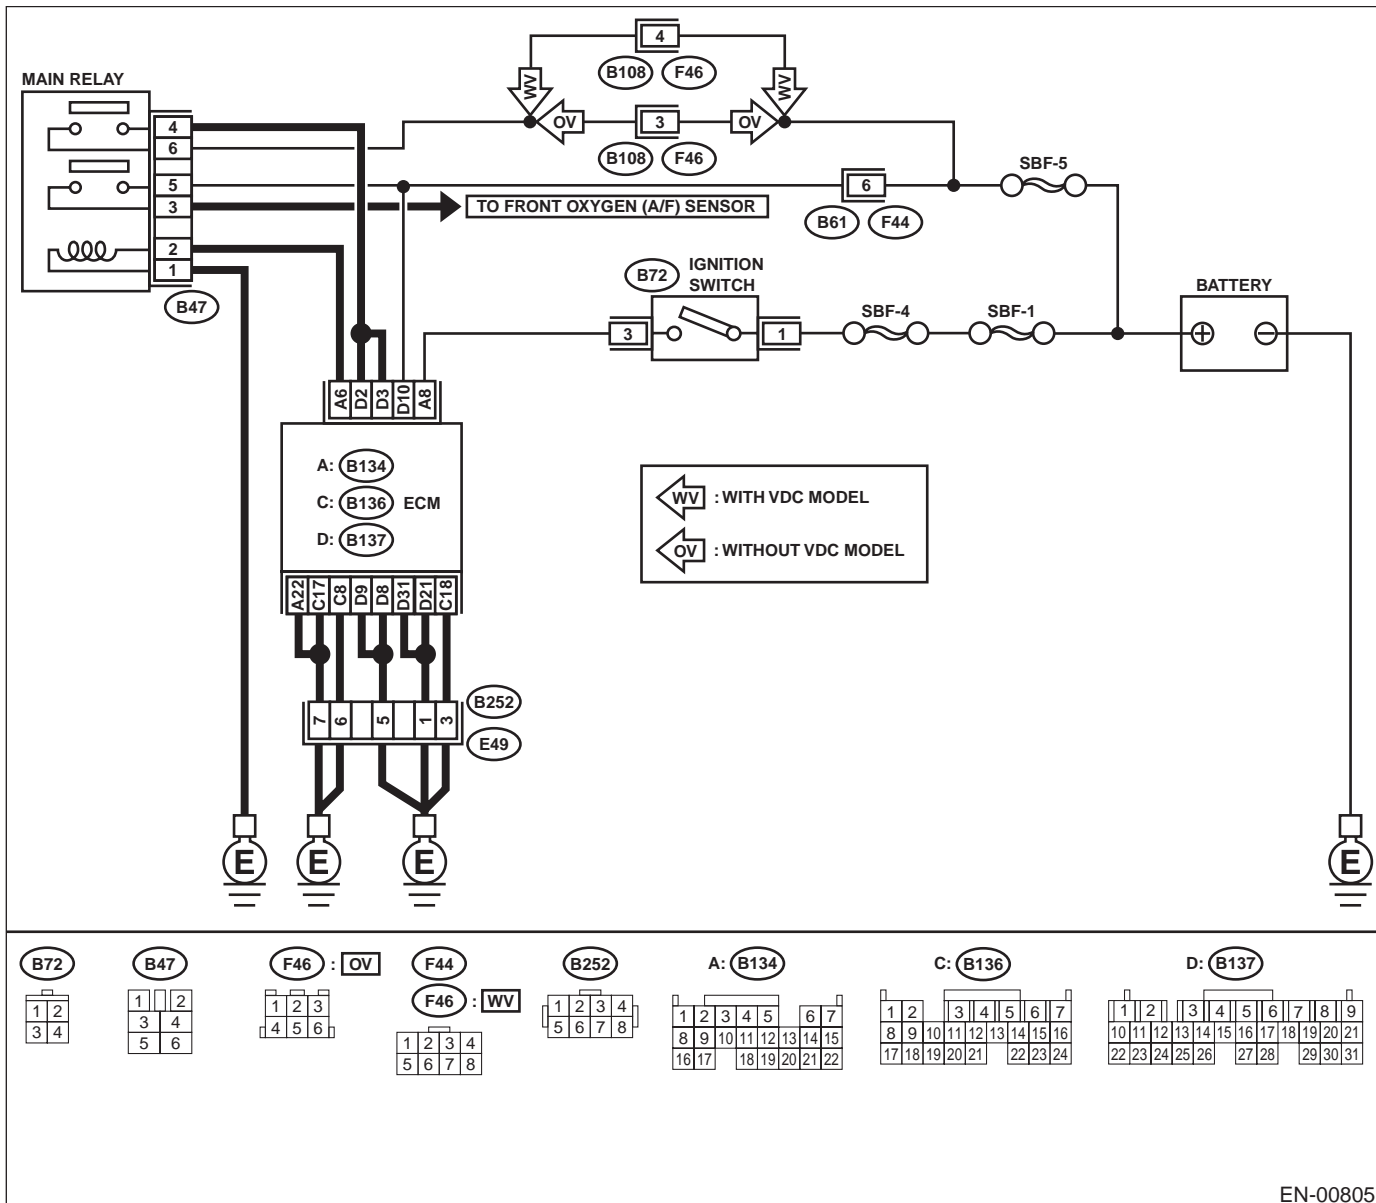

EN-00805

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK INPUT SIGNAL FOR ECM. 1) Turn ignition switch to OFF. 2) Measure voltage between ECM and chassis ground. Connector & terminal (B137) No. 10 (+) — Chassis ground (-): Does the measured value exceed the specified value?	10 V	Repair poor contact in ECM connector.	Go to step 2.
2 CHECK HARNESS BETWEEN ECM AND MAIN FUSE BOX CONNECTOR. 1) Disconnect connector from ECM. 2) Measure resistance of harness between ECM and chassis ground. Connector & terminal (B137) No. 10 — Chassis ground: Is the measured value less than the specified value?	10 Ω	Repair ground short circuit in harness between ECM connector and battery terminal.	Go to step 3.
3 CHECK FUSE SBF-5. Is fuse blown?	Fuse blown out.	Replace fuse.	Repair harness and connector. NOTE: In this case, repair the following: <ul style="list-style-type: none"> • Open circuit in harness between ECM and battery • Poor contact in ECM connector • Poor contact in battery terminal

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

DI: DTC P1698 — ENGINE TORQUE CONTROL CUT SIGNAL CIRCUIT MALFUNCTION (LOW INPUT) —


• **DTC DETECTING CONDITION:**

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

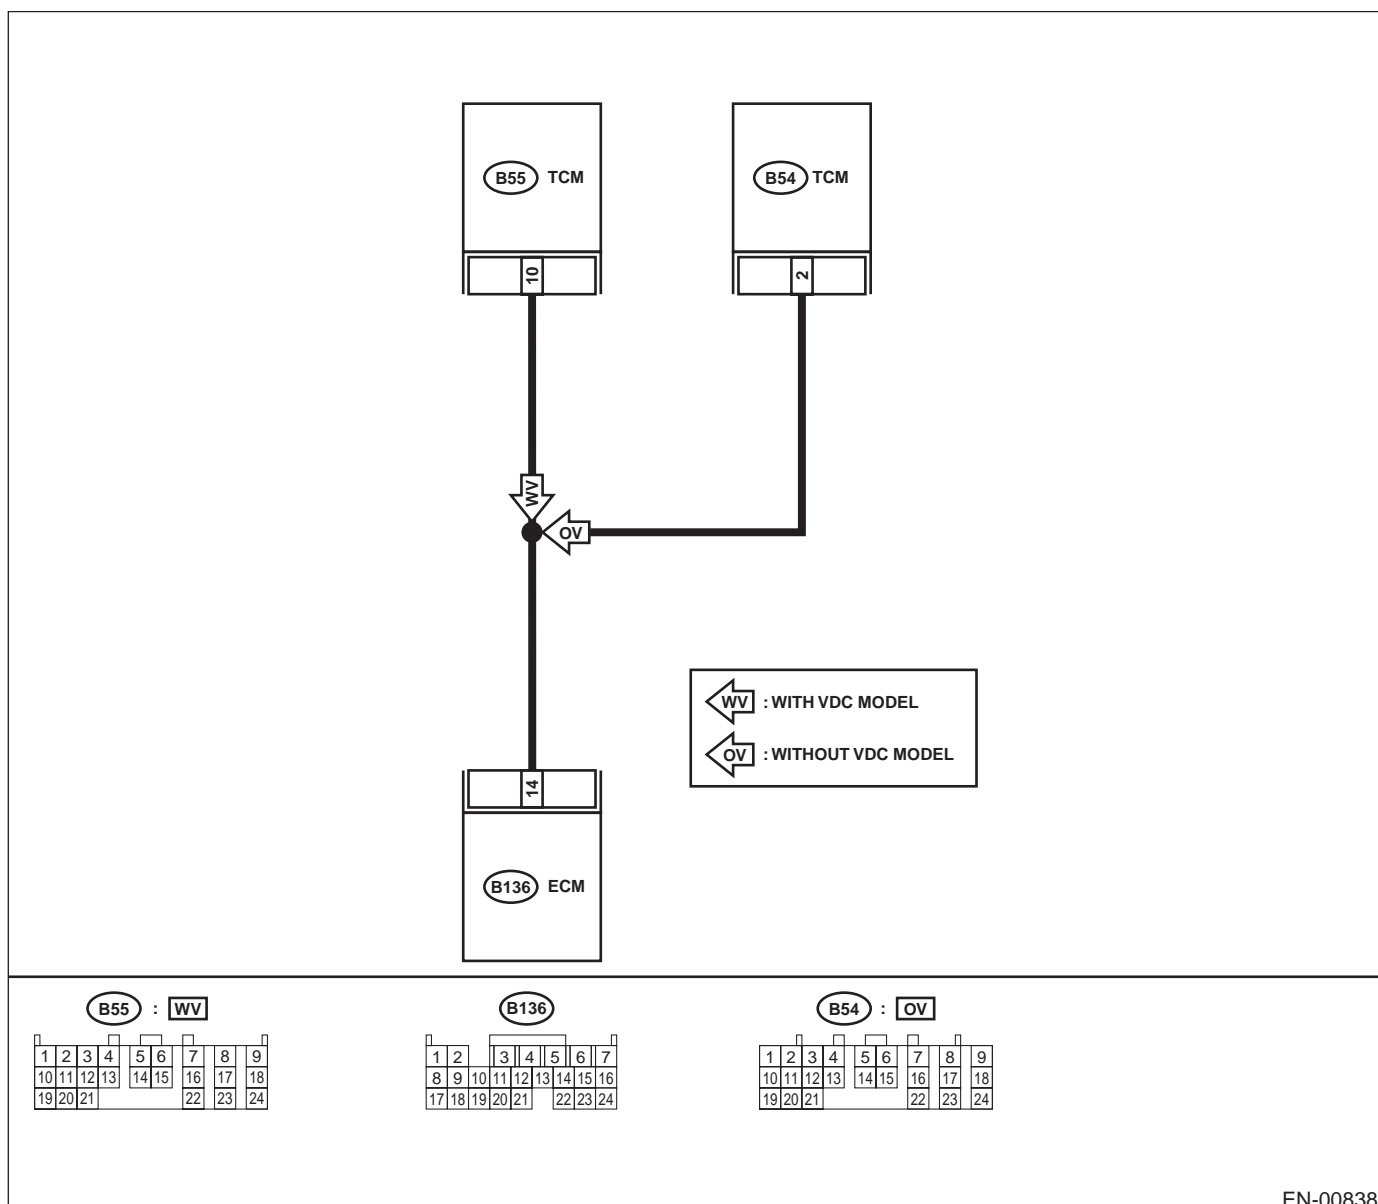

EN-00838

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK OUTPUT SIGNAL FROM ECM. 1) Start engine, and warm-up the engine. 2) Turn ignition switch to OFF. 3) Turn ignition switch to ON. 4) Measure voltage between ECM and chassis ground. Connector & terminal (B136) No. 14 (+) — Chassis ground (-): Does the measured value exceed the specified value?	3 V	Repair poor contact in ECM connector.	Go to step 2.
2 CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR. 1) Turn ignition switch to OFF. 2) Disconnect connectors from ECM and TCM. 3) Measure resistance of harness between ECM and chassis ground. Connector & terminal (B136) No. 14 — Chassis ground: Is the measured value less than the specified value?	10 Ω	Repair ground short circuit in harness between ECM and TCM connector.	Go to step 3.
3 CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR. Measure resistance of harness between ECM and TCM connector. Connector & terminal (B136) No. 14 — (B55) No. 20: Is the measured value less than the specified value?	1 Ω	Repair poor contact in ECM or TCM connector.	Repair open circuit in harness between ECM and TCM connector.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

DJ:DTC P1699 — ENGINE TORQUE CONTROL CUT SIGNAL CIRCUIT MALFUNCTION (HIGH INPUT) —


• **DTC DETECTING CONDITION:**

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode <Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

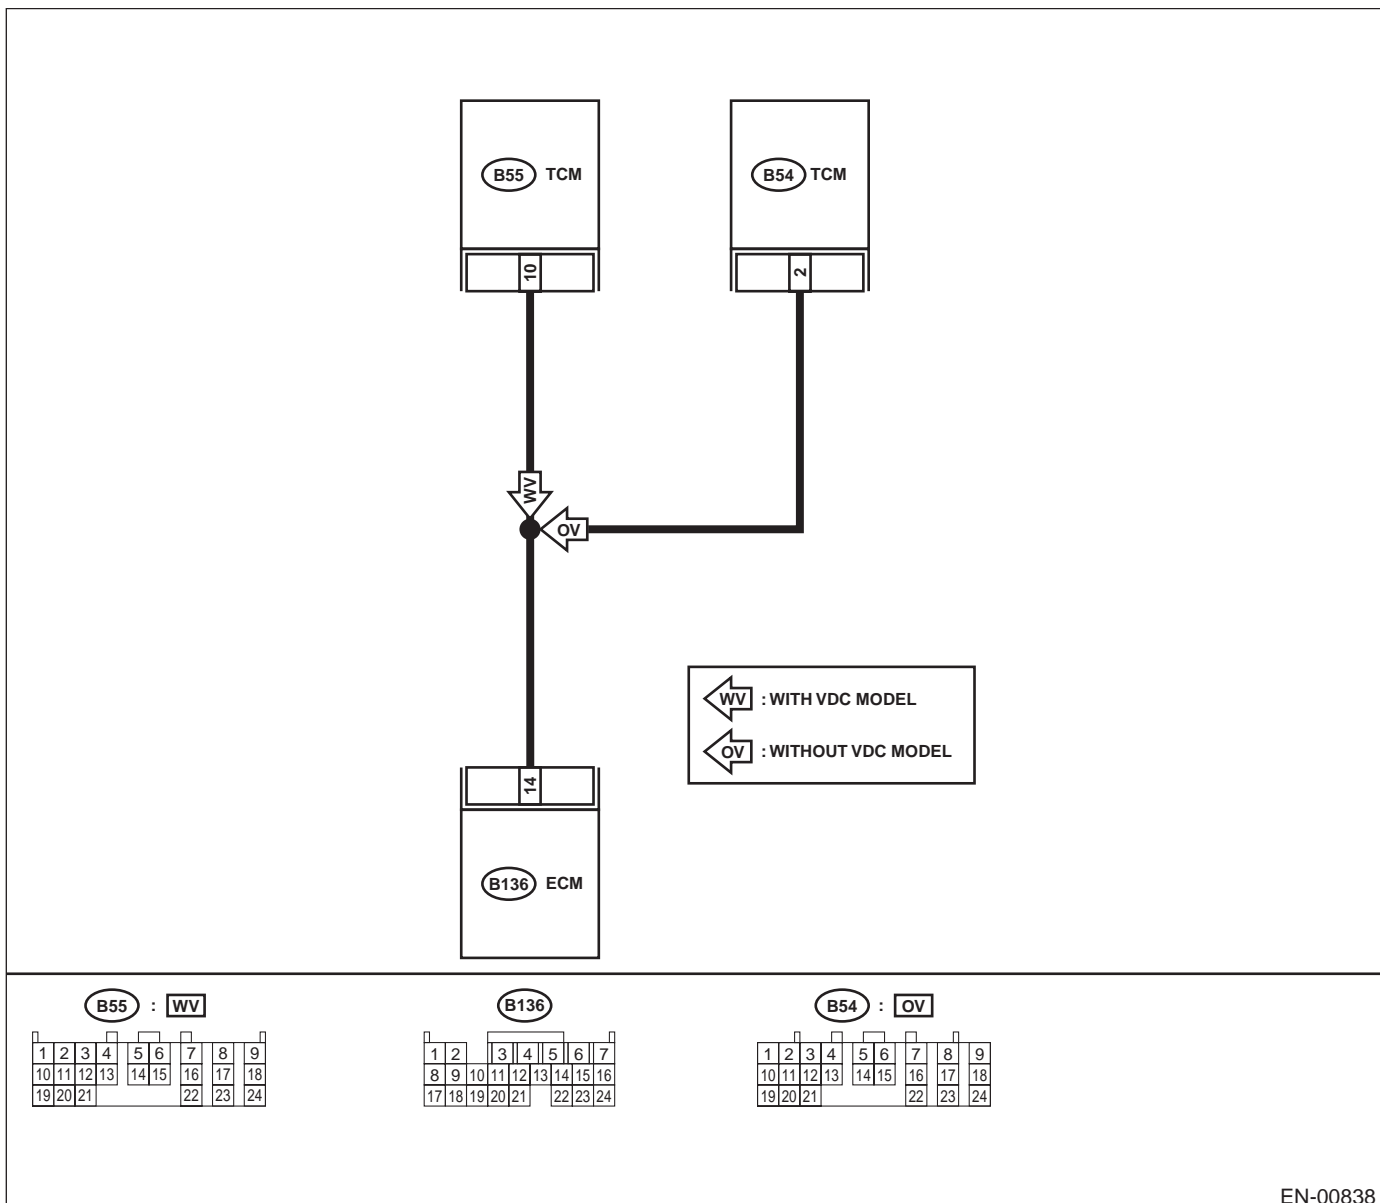

EN-00838

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
<p>1</p> <p>CHECK OUTPUT SIGNAL FROM ECM.</p> <p>1) Start engine, and warm-up the engine. 2) Turn ignition switch to OFF. 3) Disconnect connector from TCM. 4) Turn ignition switch to ON. 5) Measure voltage between ECM and chassis ground.</p> <p>Connector & terminal (B136) No. 14 (+) — Chassis ground (-): Is the measured value less than the specified value?</p>	3 V	Go to step 2.	Repair battery short circuit in harness between ECM and TCM connector. After repair, replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>
<p>2</p> <p>CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.</p> <p>1) Turn ignition switch to OFF. 2) Measure voltage between ECM and chassis ground.</p> <p>Connector & terminal (B136) No. 14 (+) — Chassis ground (-): Does the voltage change exceed the specified value by shaking harness and connector of ECM while monitoring the value with voltage meter?</p>	10 V	Repair battery short circuit in harness between ECM and TCM connector. After repair, replace ECM. <Ref. to FU(H6DO)-46, Engine Control Module.>	Contact with SOA (distributor) service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


DK:DTC P1711 — ENGINE TORQUE CONTROL SIGNAL #1 CIRCUIT MALFUNCTION —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Excessive shift shock

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

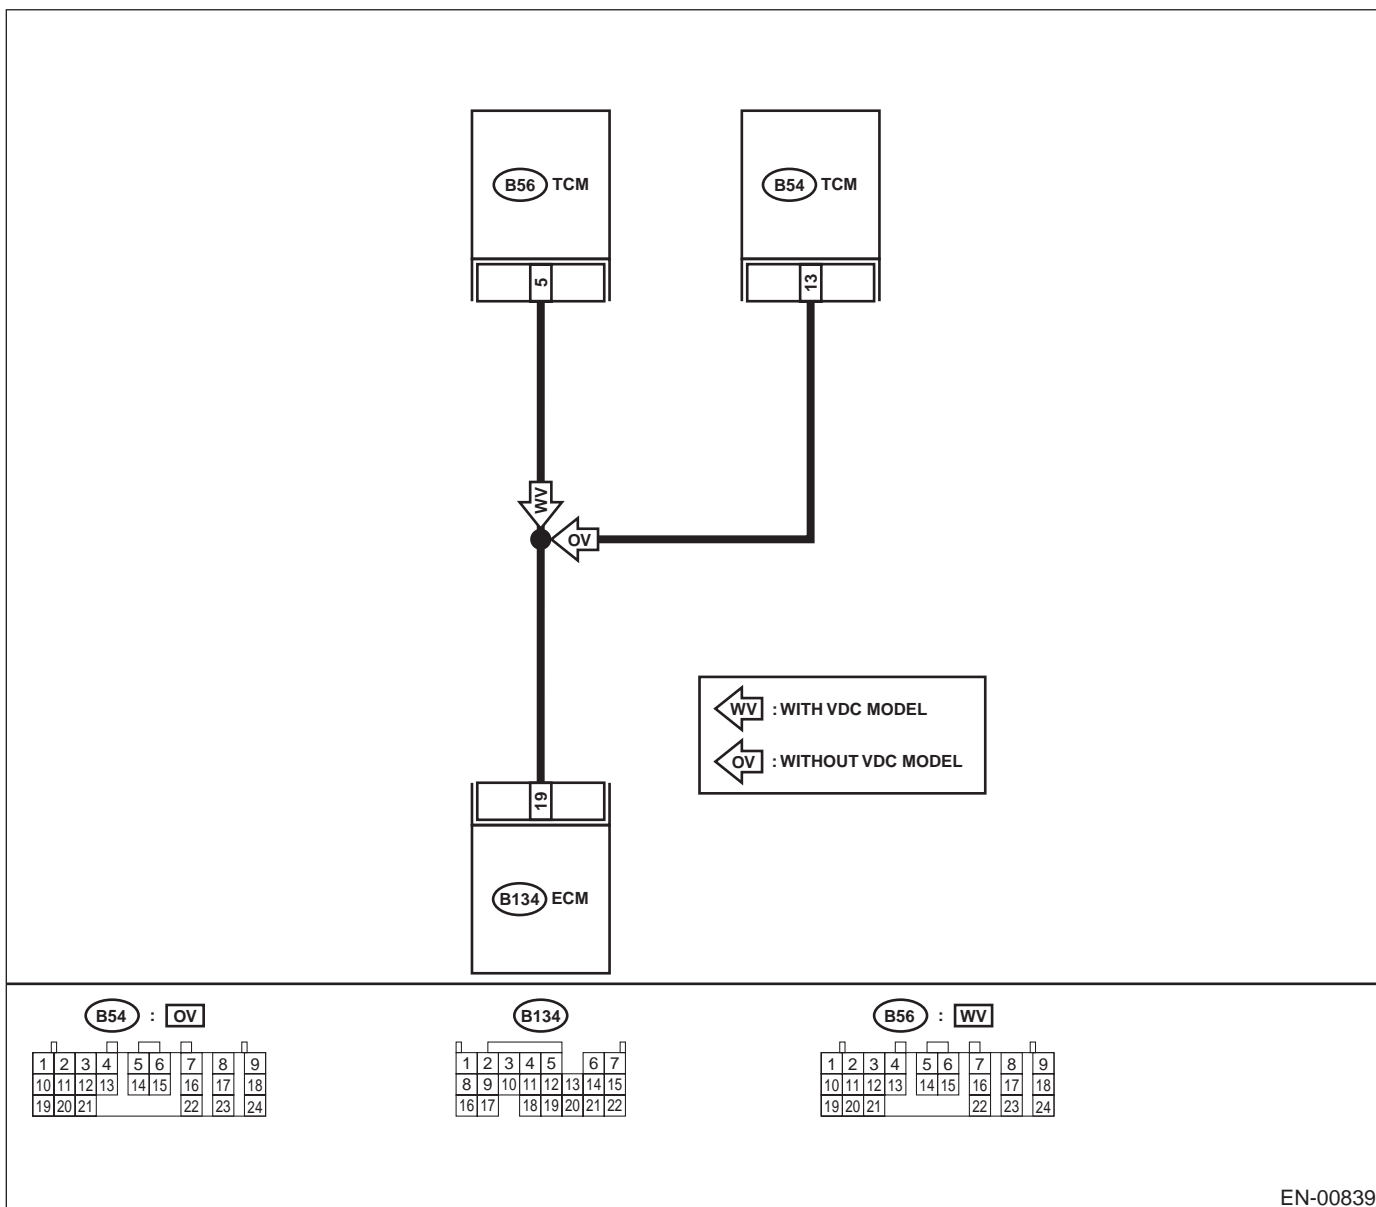

EN-00839

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK INPUT SIGNAL FOR ECM. 1) Turn ignition switch to ON. 2) Measure voltage between ECM and chassis ground. Connector & terminal (B135) No. 19 (+) — Chassis ground (-): Does the measured value exceed the specified value?	4.5 V	Go to step 2.	Go to step 4.
2 CHECK INPUT SIGNAL FOR ECM. Measure voltage between ECM and chassis ground. Connector & terminal (B135) No. 19 (+) — Chassis ground (-): Does the measured value exceed the specified value?	10 V	Repair battery short circuit in harness between ECM and TCM connector.	Go to step 3.
3 CHECK POOR CONTACT. Check poor contact in ECM connector. Is there poor contact in ECM connector?	There is poor contact.	Repair poor contact in ECM connector.	Contact with SOA (distributor) service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.
4 CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR. 1) Turn ignition switch to OFF. 2) Disconnect connectors from ECM and TCM. 3) Measure resistance of harness between ECM and TCM connector. Connector & terminal Model with VDC: (B134) No. 19 — (B56) No. 5: Model without VDC: (B134) No. 19 — (B54) No. 13: Is the measured value less than the specified value?	1 Ω	Go to step 5.	Repair open circuit in harness between ECM and TCM connector.
5 CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR. Measure resistance of harness between ECM and chassis ground. Connector & terminal (B135) No. 19 — Chassis ground: Is the measured value less than the specified value?	10 Ω	Repair ground short circuit in harness between ECM and TCM connector.	Go to step 6.
6 CHECK POOR CONTACT. Check poor contact in TCM connector. Is there poor contact in TCM connector?	There is poor contact.	Repair poor contact in TCM connector.	Replace TCM. <Ref. to AT-75, Transmission Control Module (TCM).>

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)


DL:DTC P1712 — ENGINE TORQUE CONTROL SIGNAL #2 CIRCUIT MALFUNCTION —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Excessive shift shock

CAUTION:

After repair or replacement of faulty parts, conduct Clear Memory Mode<Ref. to EN(H6DO)-59, OPERATION, Clear Memory Mode.> and Inspection Mode <Ref. to EN(H6DO)-51, OPERATION, Inspection Mode.>.

• **WIRING DIAGRAM:**

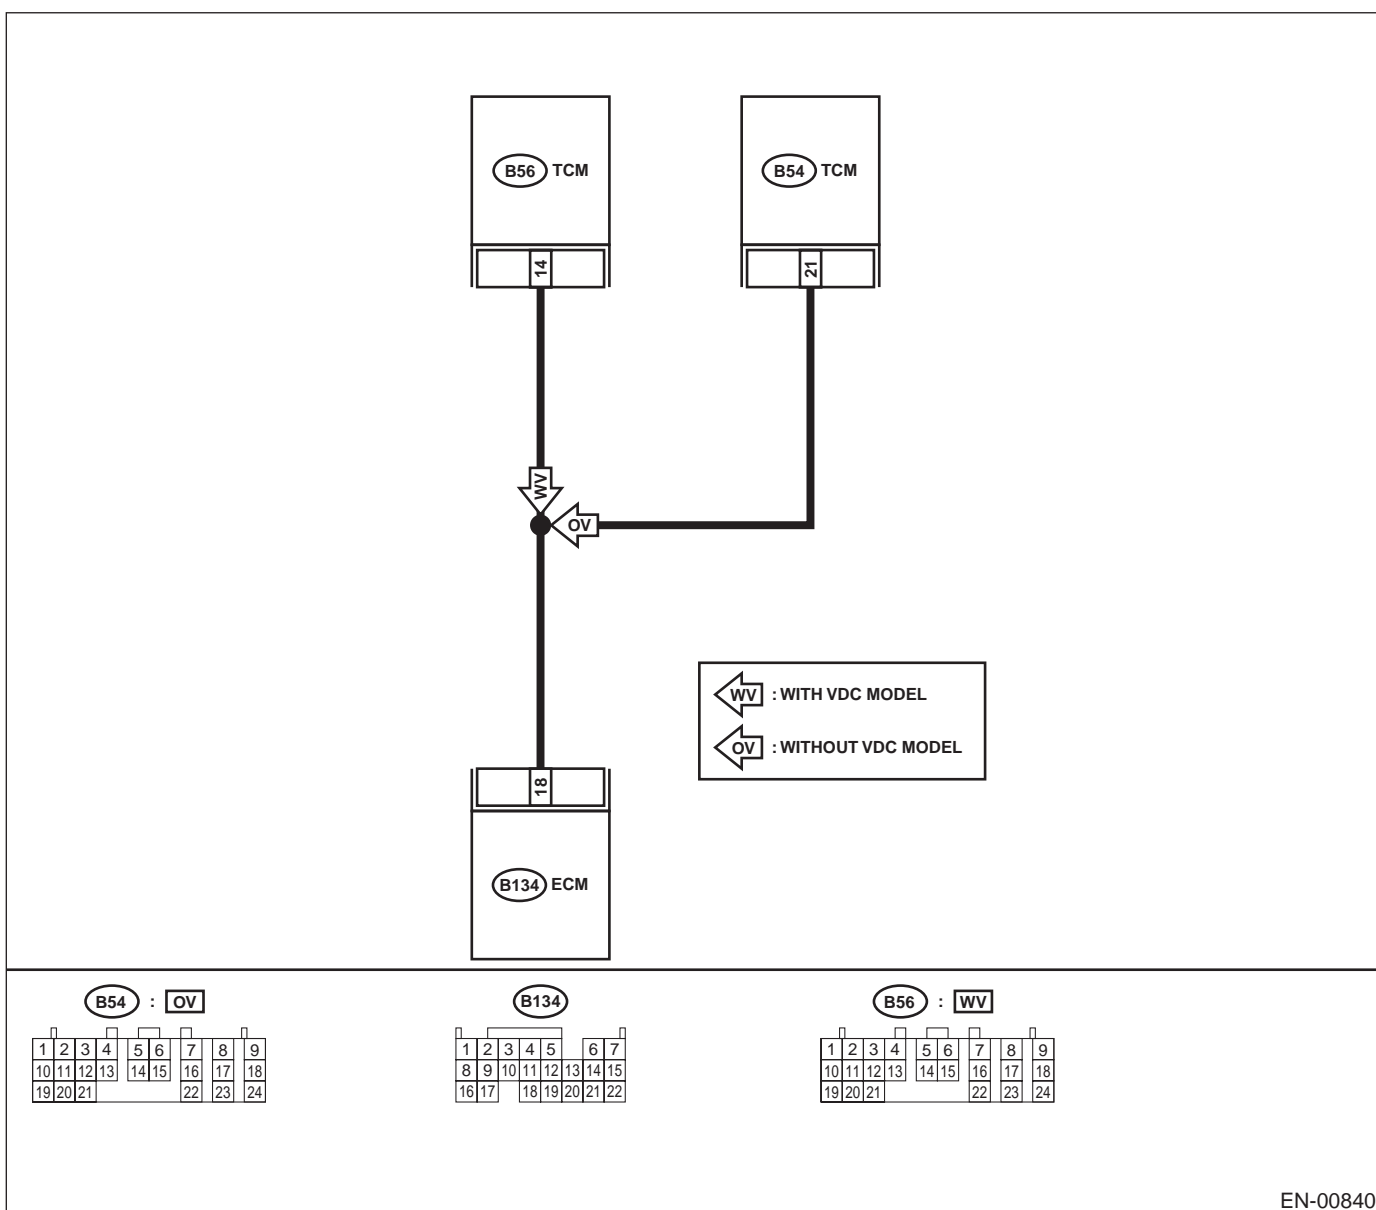

DIAGNOSTIC PROCEDURE WITH DIAGNOSTIC TROUBLE CODE (DTC)

ENGINE (DIAGNOSTICS)

Step	Value	Yes	No
1 CHECK INPUT SIGNAL FOR ECM. 1) Turn ignition switch to ON. 2) Measure voltage between ECM and chassis ground. Connector & terminal (B134) No. 18 (+) — Chassis ground (-): Does the measured value exceed the specified value?	4.5 V	Go to step 2.	Go to step 4.
2 CHECK INPUT SIGNAL FOR ECM. Measure voltage between ECM and chassis ground. Connector & terminal (B134) No. 18 (+) — Chassis ground (-): Does the measured value exceed the specified value?	10 V	Repair battery short circuit in harness between ECM and TCM connector.	Go to step 3.
3 CHECK POOR CONTACT. Check poor contact in ECM connector. Is there poor contact in ECM connector?	There is poor contact.	Repair poor contact in ECM connector.	Contact with SOA (distributor) service. NOTE: Inspection by DTM is required, because probable cause is deterioration of multiple parts.
4 CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR. 1) Turn ignition switch to OFF. 2) Disconnect connectors from ECM and TCM. 3) Measure resistance of harness between ECM and TCM connector. Connector & terminal Model with VDC: (B134) No. 18 — (B56) No. 14: Model without VDC: (B134) No. 18 — (B54) No. 21: Is the measured value less than the specified value?	1 Ω	Go to step 5.	Repair open circuit in harness between ECM and TCM connector.
5 CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR. Measure resistance of harness between ECM and chassis ground. Connector & terminal (B134) No. 18 — Chassis ground: Is the measured value less than the specified value?	10 Ω	Repair ground short circuit in harness between ECM and TCM connector.	Go to step 6.
6 CHECK POOR CONTACT. Check poor contact in TCM connector. Is there poor contact in TCM connector?	There is poor contact.	Repair poor contact in TCM connector.	Replace TCM. <Ref. to AT-75, Transmission Control Module (TCM).>