

#### **DIAGNOSTICS**

### 1. AT Shift Lock System

#### **A: WIRING DIAGRAM**

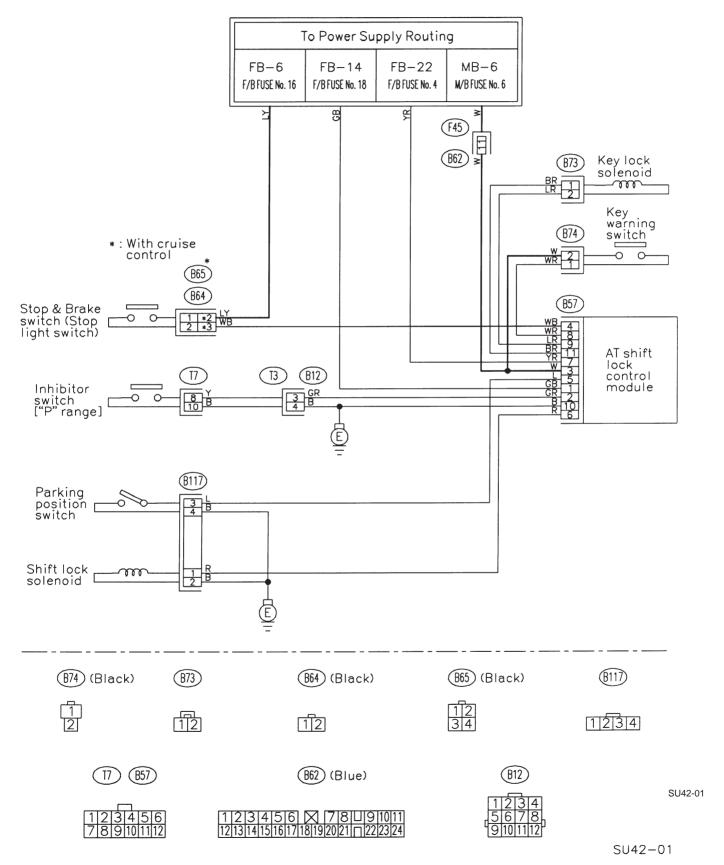


#### **B: BASIC DIAGNOSTICS CHART**

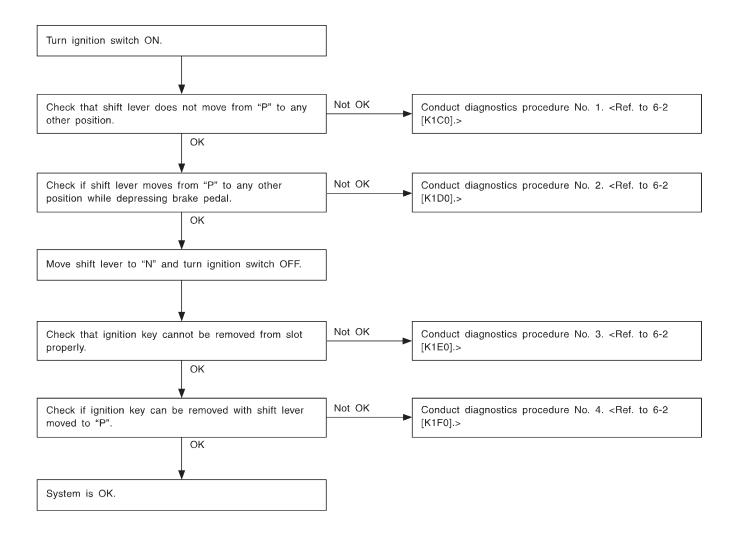


H6M0504A


### **C: DIAGNOSTICS PROCEDURE NO. 1**

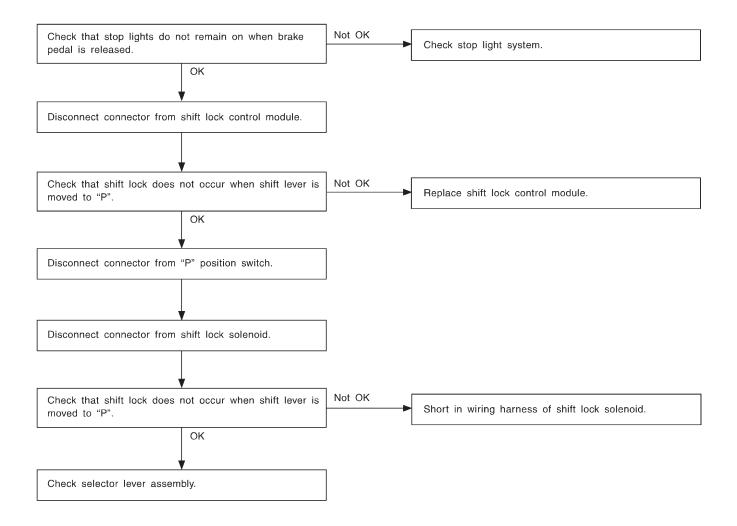

### D: DIAGNOSTICS PROCEDURE NO. 2 (SHIFT LOCK DOES NOT RELEASE.)

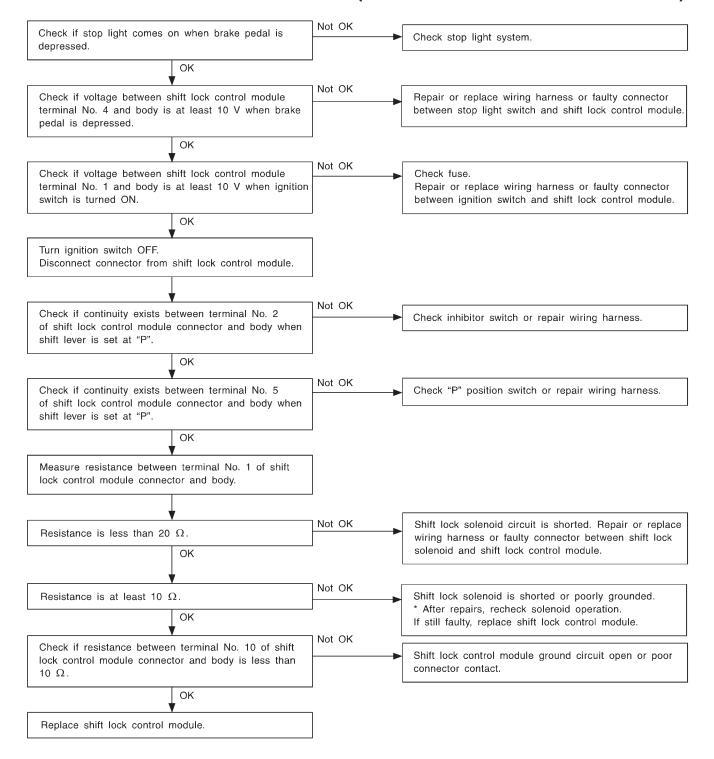


## E: DIAGNOSTICS PROCEDURE NO. 3 (KEY INTERLOCK DOES NOT OPERATE.)

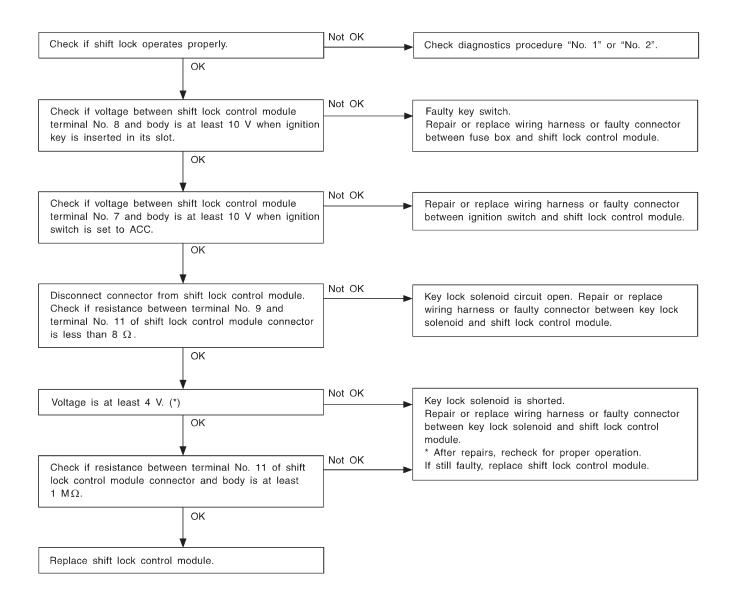

<sup>\*:</sup> When conducting operational checks of the key lock solenoid, do not apply 12 V to solenoid for more than one second, since this may break solenoid circuit.

# F: DIAGNOSTICS PROCEDURE NO. 4 (KEY INTERLOCK DOES NOT RELEASE.)

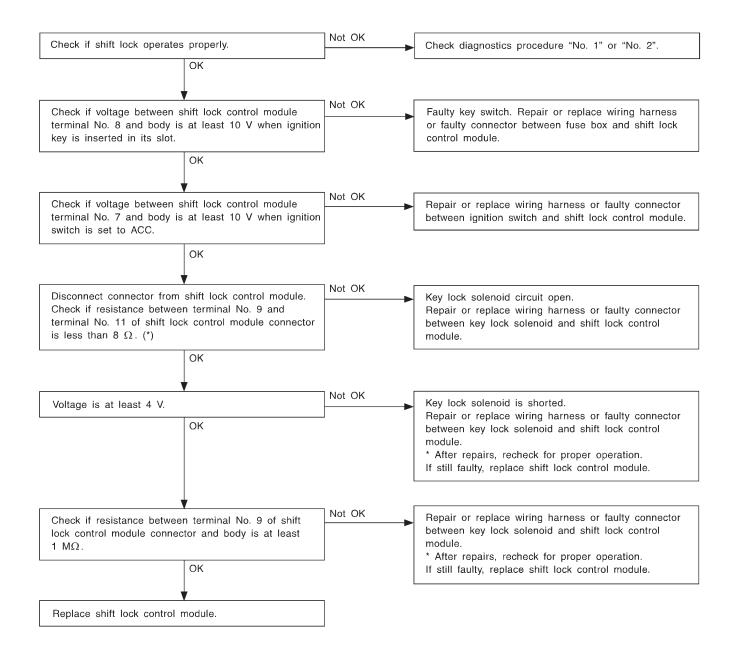

<sup>\*:</sup> When conducting operational checks of the key lock solenoid, do not apply 12 V to solenoid for more than one second, since this may break solenoid circuit.