


4) Installation is in the reverse order of removal.


Tightening torque:

$6.4 \pm 0.5 \text{ N}\cdot\text{m}$ ($0.65 \pm 0.05 \text{ kg}\cdot\text{m}$, $4.7 \pm 0.4 \text{ ft}\cdot\text{lb}$)

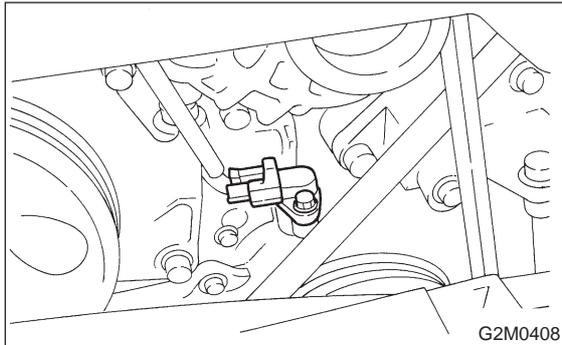


7. Camshaft Position Sensor A: REMOVAL AND INSTALLATION


1) Disconnect battery ground cable.

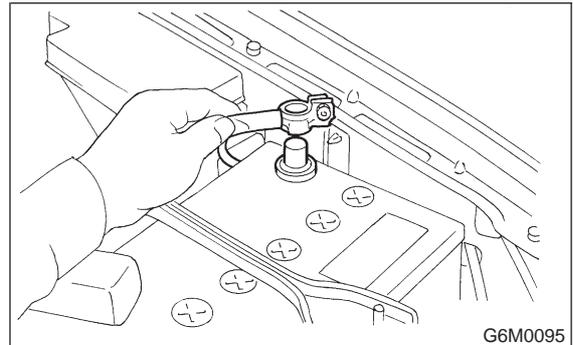

2) Disconnect connector from camshaft position sensor.

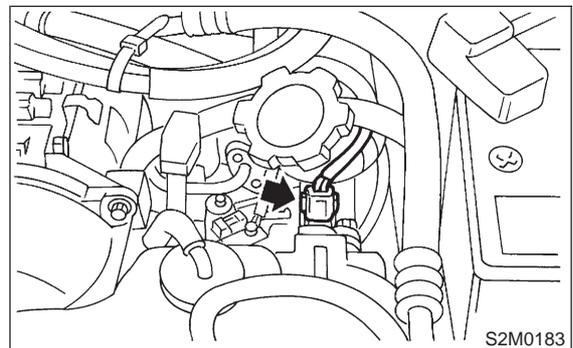


3) Remove camshaft position sensor from camshaft support LH.

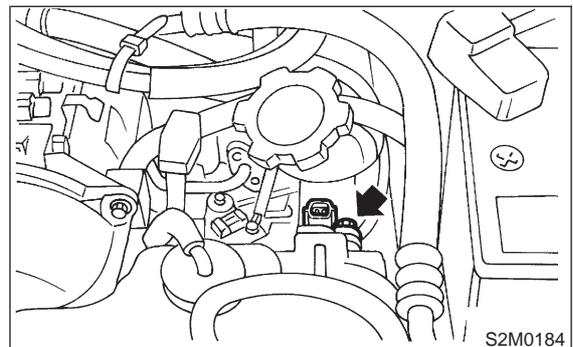

4) Installation is in the reverse order of removal.

Tightening torque:


$6.4 \pm 0.5 \text{ N}\cdot\text{m}$ ($0.65 \pm 0.05 \text{ kg}\cdot\text{m}$, $4.7 \pm 0.4 \text{ ft}\cdot\text{lb}$)

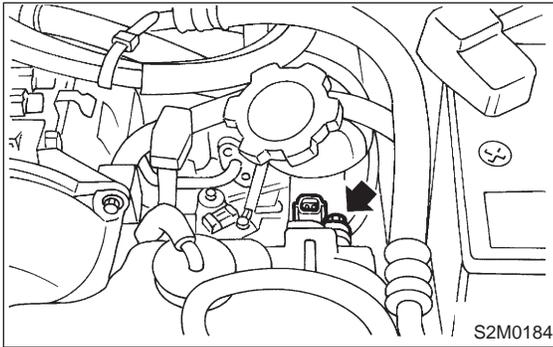


8. Knock Sensor

A: REMOVAL

1) Disconnect battery ground cable from battery ground terminal.

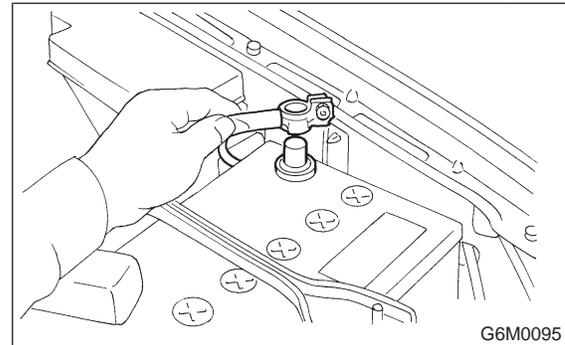

2) Remove air intake chamber.
<Ref. to 2-7 [W19A0].>

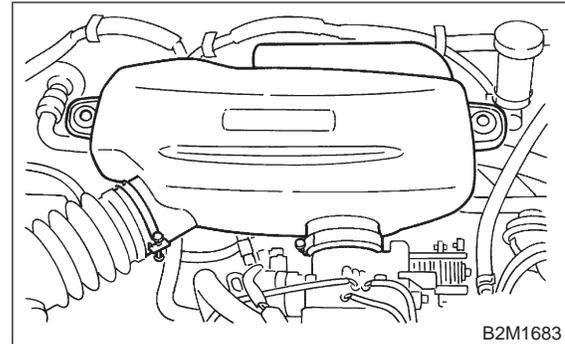

3) Remove operating cylinder. (MT vehicles only)

