


# RADIATOR SUB FAN SYSTEM

COOLING

## 3. Radiator Sub Fan System

### A: SCHEMATIC

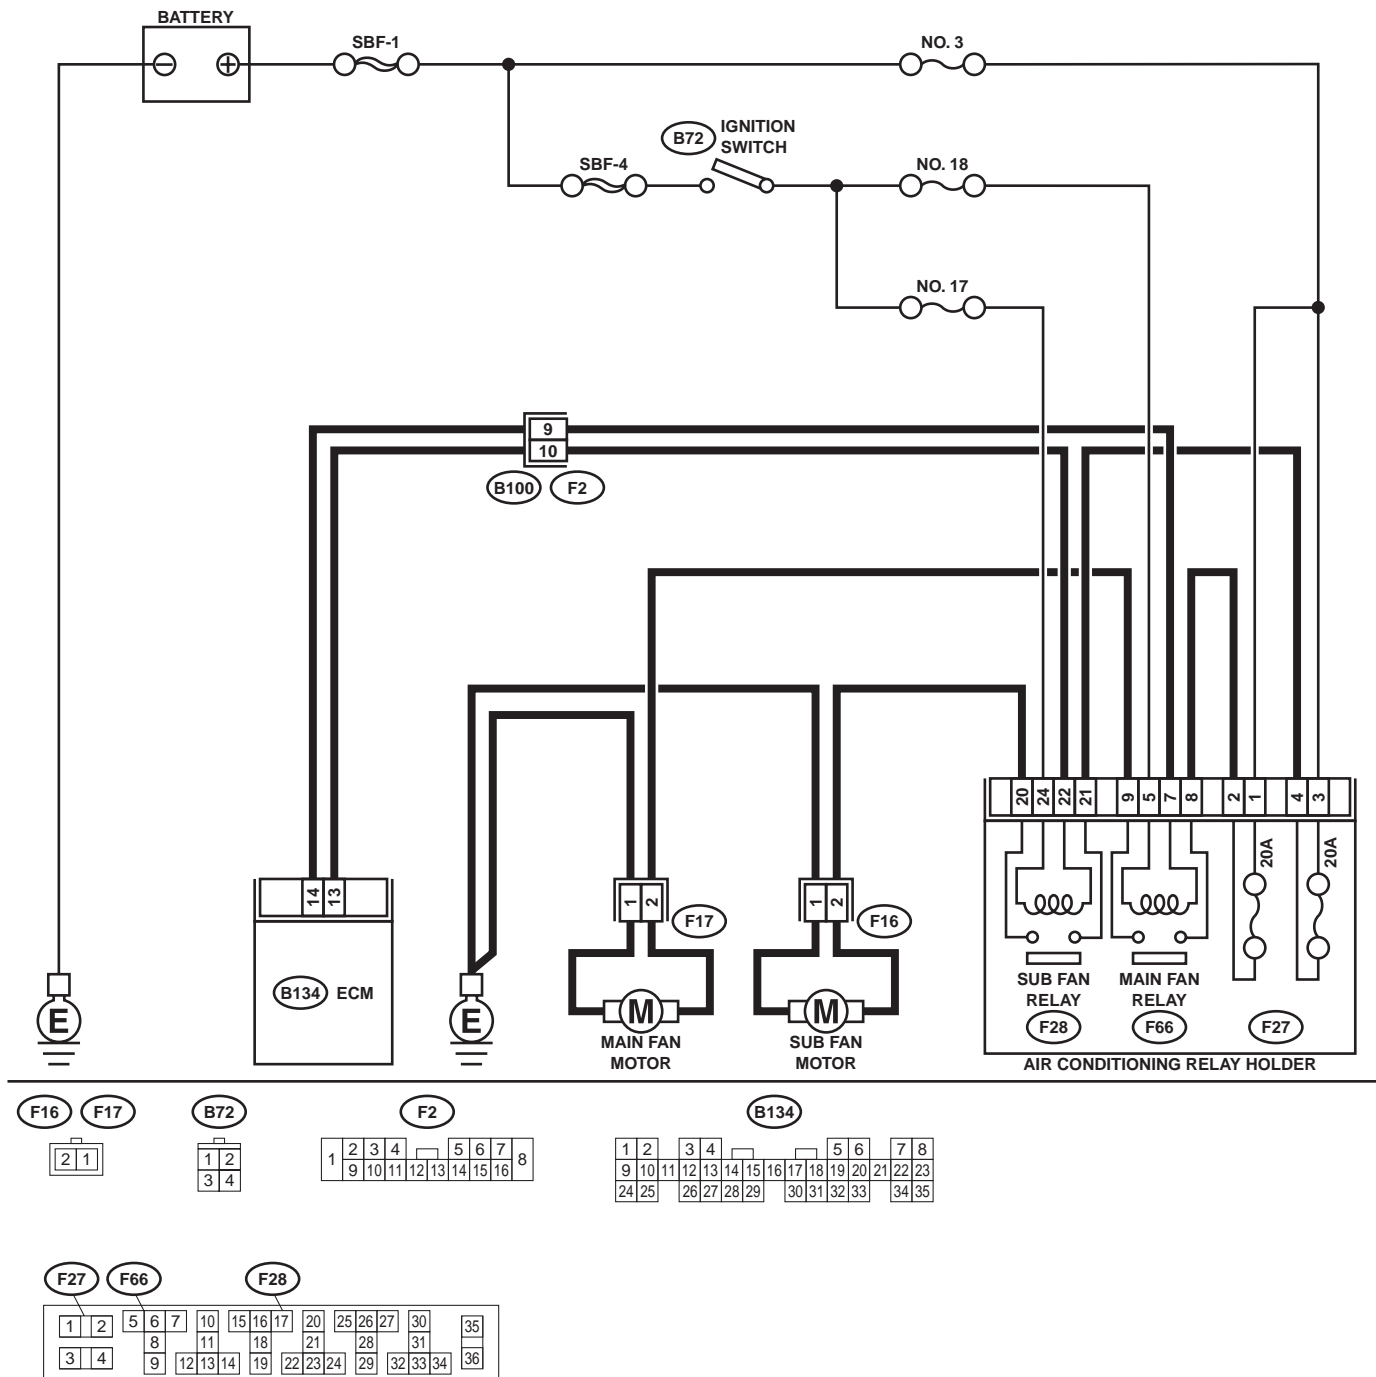

CO-00082

CO(H4SO)-10

## RADIATOR SUB FAN SYSTEM

COOLING

### B: INSPECTION

NOTE:

Radiator sub fan system is for model with A/C.

#### DETECTING CONDITION:

##### **Condition (1):**

- Engine coolant temperature is below 95°C (203°F).
- A/C switch is turned ON.
- Vehicle speed is below 19 km/h (12 MPH).

##### **Condition (2):**

- Engine coolant temperature is above 100°C (212°F).
- A/C switch is turned OFF.
- Vehicle speed is below 19 km/h (12 MPH).

#### TROUBLE SYMPTOM:

- Radiator sub fan does not rotate under conditions (1) and (2) above.

Step	Value	Yes	No
<b>1</b> <b>CHECK POWER SUPPLY TO SUB FAN MOTOR.</b> <b>CAUTION:</b> <b>Be careful not to overheat engine during repair.</b> 1) Turn ignition switch to OFF. 2) Disconnect connector from sub fan motor and main fan motor. 3) Start the engine, and warm it up until engine coolant temperature increases over 100°C (212°F). 4) Stop the engine and turn ignition switch to ON. 5) Measure voltage between sub fan motor connector and chassis ground. <b>Connector &amp; terminal</b> <b>(F16) No. 2 (+) — Chassis ground (-):</b> Does the measured value exceed the specified value?	10 V	Go to step 2.	Go to step 5.
<b>2</b> <b>CHECK GROUND CIRCUIT OF SUB FAN MOTOR.</b> 1) Turn ignition switch to OFF. 2) Measure resistance between sub fan motor connector and chassis ground. <b>Connector &amp; terminal</b> <b>(F16) No. 1 — Chassis ground:</b> Is the measured value less than the specified value?	5 Ω	Go to step 3.	Repair open circuit in harness between sub fan motor connector and chassis ground.
<b>3</b> <b>CHECK POOR CONTACT.</b> Check poor contact in sub fan motor connector. Is there poor contact in sub fan motor connector?		Repair poor contact in sub fan motor connector.	Go to step 4.
<b>4</b> <b>CHECK SUB FAN MOTOR.</b> Connect battery positive (+) terminal to terminal No. 2, and negative (-) terminal to terminal No. 1 of sub fan motor connector. Does the sub fan rotate?	Sub fan rotates.	Repair poor contact in sub fan motor connector.	Replace sub fan motor with a new one.

## RADIATOR SUB FAN SYSTEM

### COOLING

Step	Value	Yes	No
<b>5 CHECK POWER SUPPLY TO SUB FAN RELAY.</b> 1) Turn ignition switch to OFF. 2) Remove sub fan relay from A/C relay holder. 3) Measure voltage between sub fan relay terminal and chassis ground. <b>Connector &amp; terminal</b> <b>(F28) No. 21 (+) — Chassis ground (-):</b> Does the measured value exceed the specified value?	10 V	Go to step 6.	Go to step 7.
<b>6 CHECK POWER SUPPLY TO SUB FAN RELAY.</b> 1) Turn ignition switch to ON. 2) Measure voltage between sub fan relay terminal and chassis ground. <b>Connector &amp; terminal</b> <b>(F28) No. 24 (+) — Chassis ground (-):</b> Does the measured value exceed the specified value?	10 V	Go to step 10.	Go to step 9.
<b>7 CHECK 20 A FUSE.</b> 1) Remove 20 A fuse from A/C relay holder. 2) Check condition of fuse. Is the fuse blown-out?	Fuse is blown-out.	Replace fuse.	Go to step 8.
<b>8 CHECK POWER SUPPLY TO A/C RELAY HOLDER 20 A FUSE TERMINAL.</b> Measure voltage of harness between A/C relay holder 20 A fuse terminal and chassis ground. <b>Connector &amp; terminal</b> <b>(F27) No. 3 (+) — Chassis ground (-):</b> Does the measured value exceed the specified value?	10 V	Repair open circuit in harness between 20 A fuse and sub fan relay terminal.	Repair open circuit in harness between main fuse box connector and 20 A fuse terminal.
<b>9 CHECK FUSE.</b> 1) Turn ignition switch to OFF. 2) Remove fuse No. 17 from joint box. 3) Check condition of fuse. Is the fuse blown-out?	Fuse is blown-out.	Replace fuse.	Repair open circuit in harness between sub fan relay and ignition switch.
<b>10 CHECK SUB FAN RELAY.</b> 1) Turn ignition switch to OFF. 2) Measure resistance of sub fan relay. <b>Terminal</b> <b>No. 20 — No. 21:</b> Does the measured value exceed the specified value?	1 M $\Omega$	Go to step 11.	Replace sub fan relay.
<b>11 CHECK SUB FAN RELAY.</b> 1) Connect battery to terminals No. 22 and No. 24 of sub fan relay. 2) Measure resistance of sub fan relay. <b>Terminal</b> <b>No. 20 — No. 21:</b> Is the measured value less than the specified value?	1 $\Omega$	Go to step 12.	Replace sub fan relay.

## RADIATOR SUB FAN SYSTEM

COOLING

Step	Value	Yes	No
<b>12</b> <b>CHECK HARNESS BETWEEN SUB FAN RELAY TERMINAL AND SUB FAN MOTOR CONNECTOR.</b> Measure resistance of harness between sub fan motor connector and sub fan relay terminal. <i><b>Connector &amp; terminal</b></i> <i><b>(F16) No. 2 — (F28) No. 20:</b></i> Is the measured value less than the specified value?	1 Ω	Go to step 13.	Repair open circuit in harness between sub fan motor and sub fan relay connector.
<b>13</b> <b>CHECK HARNESS BETWEEN SUB FAN RELAY AND ECM.</b> 1) Turn ignition switch to OFF. 2) Disconnect connector from ECM. 3) Measure resistance of harness between sub fan relay connector and ECM connector. <i><b>Connector &amp; terminal</b></i> <i><b>(F28) No. 22 — (B134) No. 13:</b></i> Is the measured value less than the specified value?	1 Ω	Go to step 14.	Repair open circuit in harness between sub fan relay and ECM.
<b>14</b> <b>CHECK POOR CONTACT.</b> Check poor contact in connector between sub fan and ECM. Is there poor contact in connector between sub fan motor and ECM?	There is poor contact.	Repair poor contact connector.	Contact with SOA (distributor) service.

**NOTE:**

Inspection by SOA (distributor) service is required, because probable cause is deterioration of multiple parts.