

General Description

MECHANICAL

1. General Description

A: SPECIFICATION

Engine	Cylinder arrangement		Horizontally opposed, liquid cooled, 4-cylinder, 4-stroke gasoline engine		
	Valve system mechanism		Belt driven, double overhead camshaft, 4-valve/cylinder		
	Bore × Stroke		mm (in)	99.5 × 79.0 (3.92 × 3.11)	
	Displacement		cm ³ (cu in)	2,457 (149.94)	
	Compression ratio			8.2	
	Compression pressure (at 400 rpm)		kPa (kg/cm ² , psi)	981 — 1,177 (10 — 12, 142 — 171)	
	Number of piston rings			Pressure ring: 2, Oil ring: 1	
	Intake valve timing		Open	Max.retard	ATDC 5°
				Min. advance	BTDC 15°
			Close	Max.retard	ABDC 65°
				Min. advance	ABDC 45°
	Exhaust valve timing		Open	BBDC 55°	
			Close	ATDC 5°	
	Valve clearance		mm (in)	Intake	0.20±0.02 (0.0079±0.0008)
				Exhaust	0.35±0.02 (0.0138±0.0008)
	Idle rpm ["P" or "N" range]		rpm	No load	750±100
A/C ON				875±100	
Ignition order			1 → 3 → 2 → 4		
Ignition timing		BTDC/rpm	MT model	12°±10°/750	
			AT model	17°±10°/750	

NOTE:

OS: Oversize US: Undersize

General Description

MECHANICAL

Belt tension adjuster	Protrusion of adjuster rod		mm (in)	5.2 — 6.2 (0.205 — 0.244)	
Belt tensioner	Spacer O.D.		mm (in)	17.955 — 17.975 (0.7069 — 0.7077)	
	Tensioner bushing I.D.		mm (in)	18.0 — 18.08 (0.7087 — 0.7118)	
	Clearance between spacer and bushing	mm (in)	Standard	0.025 — 0.125 (0.0010 — 0.0049)	
	Side clearance of spacer	mm (in)	Standard	0.2 — 0.55 (0.0079 — 0.0217)	
Camshaft	Bending limit		mm (in)	0.020 (0.00079)	
	Side clearance		mm (in)	Standard	0.068 — 0.116 (0.0027 — 0.0047)
	Cam lobe height	mm (in)	Intake	Standard	46.55 — 46.65 (1.833 — 1.837)
			Exhaust	Standard	46.75 — 46.85 (1.841 — 1.844)
	Journal O.D.	mm (in)	Standard	Front	37.946 — 37.963 (1.4939 — 1.4946)
				Center rear	29.946 — 29.963 (1.1790 — 1.1796)
Journal clearance		mm (in)	Standard	0.037 — 0.072 (0.0015 — 0.0028)	
Cylinder head	Surface warpage limit		mm (in)	0.035 (0.0014)	
	Grinding limit		mm (in)	0.3 (0.012)	
	Standard height		mm (in)	127.5 (5.02)	
Valve seat	Seating angle			90°	
	Contacting width	mm (in)	Intake	Standard	0.6 — 1.4 (0.024 — 0.055)
			Exhaust	Standard	1.2 — 1.8 (0.047 — 0.071)
Valve guide	Inside diameter		mm (in)	6.000 — 6.012 (0.2362 — 0.2367)	
	Protrusion above head		mm (in)	15.8 — 16.2 (0.622 — 0.638)	
Valve	Head edge thickness	mm (in)	Intake	Standard	1.0 — 1.4 (0.039 — 0.055)
			Exhaust	Standard	1.3 — 1.7 (0.051 — 0.067)
	Stem outer diameter	mm (in)	Intake		5.955 — 5.970 (0.2344 — 0.2350)
			Exhaust		5.945 — 5.960 (0.2341 — 0.2346)
	Valve stem gap	mm (in)	Standard	Intake	0.030 — 0.057 (0.0012 — 0.0022)
				Exhaust	0.040 — 0.067 (0.0016 — 0.0026)
Overall length	mm (in)	Intake		104.4 (4.110)	
		Exhaust		104.65 (4.1201)	
Valve spring	Free length		mm (in)	47.32 (1.863)	
	Squareness			2.5°, 2.1 mm (0.083 in)	
	Tension/spring height	N (kgf, lb)/mm (in)	Set	205 — 235 (20.9 — 24.0, 46.1 — 52.8)/36.0 (1.417)	
			Lift	426 — 490 (43.4 — 50.0, 95.8 — 110)/26.50 (1.043)	
Cylinder block	Surface warpage limit (Mating surface with cylinder head)		mm (in)	0.025 (0.0098)	
	Grinding limit		mm (in)	0.1 (0.004)	
	Standard height		mm (in)	201.0 (7.91)	
	Cylinder inner diameter	mm (in)	Standard	A	99.505 — 99.515 (3.9175 — 3.9179)
				B	99.495 — 99.505 (3.9171 — 3.9175)
	Taper		mm (in)	Standard	0.015 (0.0006)
	Out-of-roundness		mm (in)	Standard	0.010 (0.0004)
Piston clearance		mm (in)	Standard	-0.010 — 0.010 (-0.00039 — 0.00039)	
Piston	Outer diameter	mm (in)	Standard	A	99.505 — 99.515 (3.9175 — 3.9179)
				B	99.495 — 99.505 (3.9171 — 3.9175)
			0.25 (0.0098)	OS	99.745 — 99.765 (3.9270 — 3.9278)
			0.50 (0.0197)	OS	99.995 — 100.015 (3.9368 — 3.9376)
Piston pin	Standard clearance between piston and piston pin		mm (in)	Standard	0.004 — 0.008 (0.0002 — 0.0003)
	Degree of fit				Piston pin must be fitted into position with thumb at 20°C (68°F).

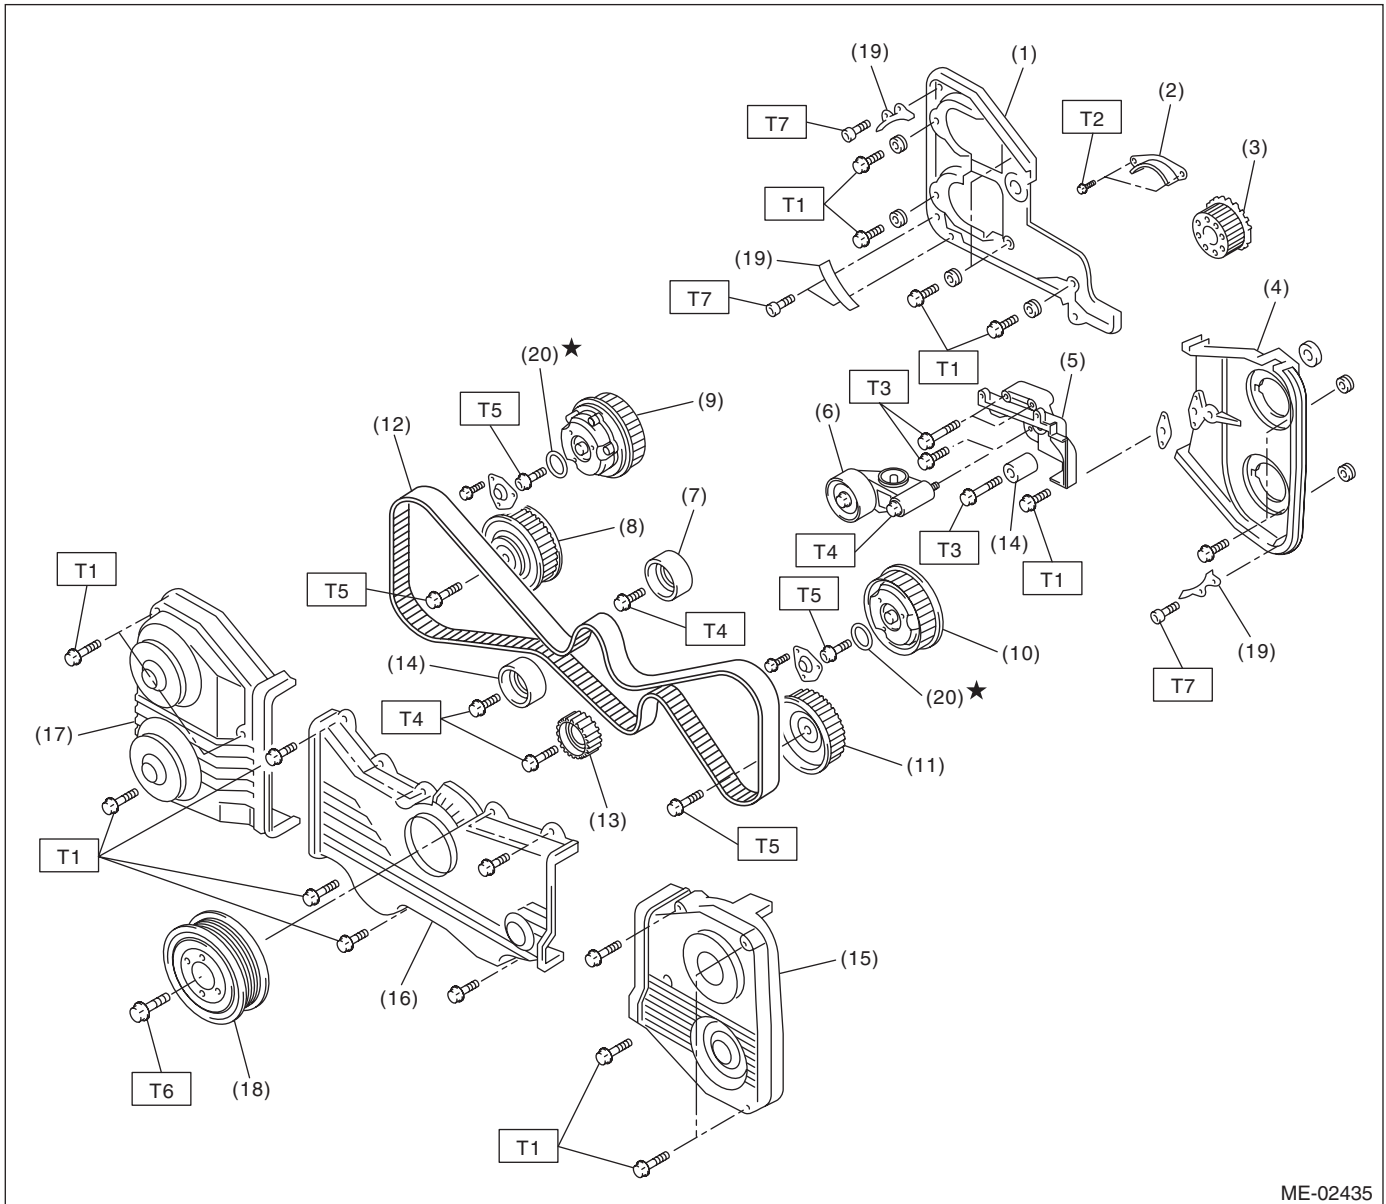
General Description

MECHANICAL

Piston ring	Ring closed gap	mm (in)	Top ring	Standard	0.20 — 0.25 (0.0079 — 0.0098)
			Second ring	Standard	0.37 — 0.52 (0.015 — 0.0203)
			Oil ring	Standard	0.20 — 0.50 (0.0079 — 0.0197)
	Ring groove gap	mm (in)	Top ring	Standard	0.040 — 0.080 (0.0016 — 0.0031)
Second ring			Standard	0.030 — 0.070 (0.0012 — 0.0028)	
Connecting rod	Bend or twist per 100 mm (3.94 in) in length	mm (in)	Limit		0.10 (0.0039)
	Side clearance of large end	mm (in)	Standard		0.070 — 0.330 (0.0028 — 0.0130)
Bearing of large end	Oil clearance	mm (in)	Standard		0.017 — 0.045 (0.0007 — 0.0018)
	Bearing size (Thickness at center)	mm (in)	Standard		1.490 — 1.502 (0.0587 — 0.0591)
			0.03 (0.0012) US		1.504 — 1.512 (0.0592 — 0.0595)
			0.05 (0.0020) US		1.514 — 1.522 (0.0596 — 0.0599)
0.25 (0.0098) US				1.614 — 1.622 (0.0635 — 0.0639)	
Bushing of small end	Clearance between piston pin and bushing	mm (in)	Standard		0 — 0.022 (0 — 0.0009)
Crankshaft	Bending limit		mm (in)		0.035 (0.0014)
	Crank pin	Out-of-roundness	mm (in)		0.003 (0.0001)
		Cylindricity	mm (in)		0.004 (0.0002)
		Grinding limit (dia.)	mm (in)		To 51.750 (2.0374)
	Crank journal	Out-of-roundness	mm (in)		0.005 (0.0002)
		Cylindricity	mm (in)		0.006 (0.0002)
		Grinding limit (dia.)	mm (in)		To 59.750 (2.3524)
	Crank pin outer diameter	mm (in)	Standard		51.984 — 52.000 (2.0466 — 2.0472)
			0.03 (0.0012) US		51.954 — 51.970 (2.0454 — 2.0461)
			0.05 (0.0020) US		51.934 — 51.950 (2.0447 — 2.0453)
			0.25 (0.0098) US		51.734 — 51.750 (2.0368 — 2.0374)
	Crank journal outer diameter	mm (in)	Standard		59.992 — 60.008 (2.3619 — 2.3625)
			0.03 (0.0012) US		59.962 — 59.978 (2.3607 — 2.3613)
0.05 (0.0020) US				59.942 — 59.958 (2.3599 — 2.3605)	
0.25 (0.0098) US				59.742 — 59.758 (2.3520 — 2.3527)	
Side clearance		mm (in)	Standard		0.030 — 0.115 (0.0012 — 0.0045)
Oil clearance		mm (in)			0.010 — 0.030 (0.0004 — 0.0012)
Main bearing	Bearing size (Thickness at center)	#1, #3	Standard		1.998 — 2.011 (0.0787 — 0.0792)
			0.03 (0.0012) US		2.017 — 2.020 (0.0794 — 0.0795)
			0.05 (0.0020) US		2.027 — 2.030 (0.0798 — 0.0799)
			0.25 (0.0098) US		2.127 — 2.130 (0.0837 — 0.0839)
		#2, #4, #5	Standard		2.000 — 2.013 (0.0787 — 0.0793)
			0.03 (0.0012) US		2.019 — 2.022 (0.0795 — 0.0796)
			0.05 (0.0020) US		2.029 — 2.032 (0.0799 — 0.0800)
			0.25 (0.0098) US		2.129 — 2.132 (0.0838 — 0.0839)

B: COMPONENT

1. TIMING BELT



ME-02435

- | | |
|--|-----------------------------------|
| (1) Timing belt cover No. 2 (RH) | (11) Exhaust cam sprocket (LH) |
| (2) Timing belt guide | (12) Timing belt |
| (3) Crank sprocket | (13) Belt idler No. 2 |
| (4) Timing belt cover No. 2 (LH) | (14) Belt idler |
| (5) Tensioner bracket | (15) Timing belt cover (LH) |
| (6) Automatic belt tension adjuster ASSY | (16) Front belt cover |
| (7) Belt idler | (17) Timing belt cover (RH) |
| (8) Exhaust cam sprocket (RH) | (18) Crank pulley |
| (9) Intake cam sprocket (RH) | (19) Timing belt guide (MT model) |
| (10) Intake cam sprocket (LH) | (20) O-ring |

Tightening torque: N·m (kgf·m, ft·lb)

T1: 5 (0.5, 3.6)

T2: 9.75 (1.0, 7.2)

T3: 24.5 (2.5, 18.1)

T4: 39 (4.0, 28.9)

T5: <Ref. to ME(H4DOTC)-50, INSTALLATION, Cam Sprocket.>

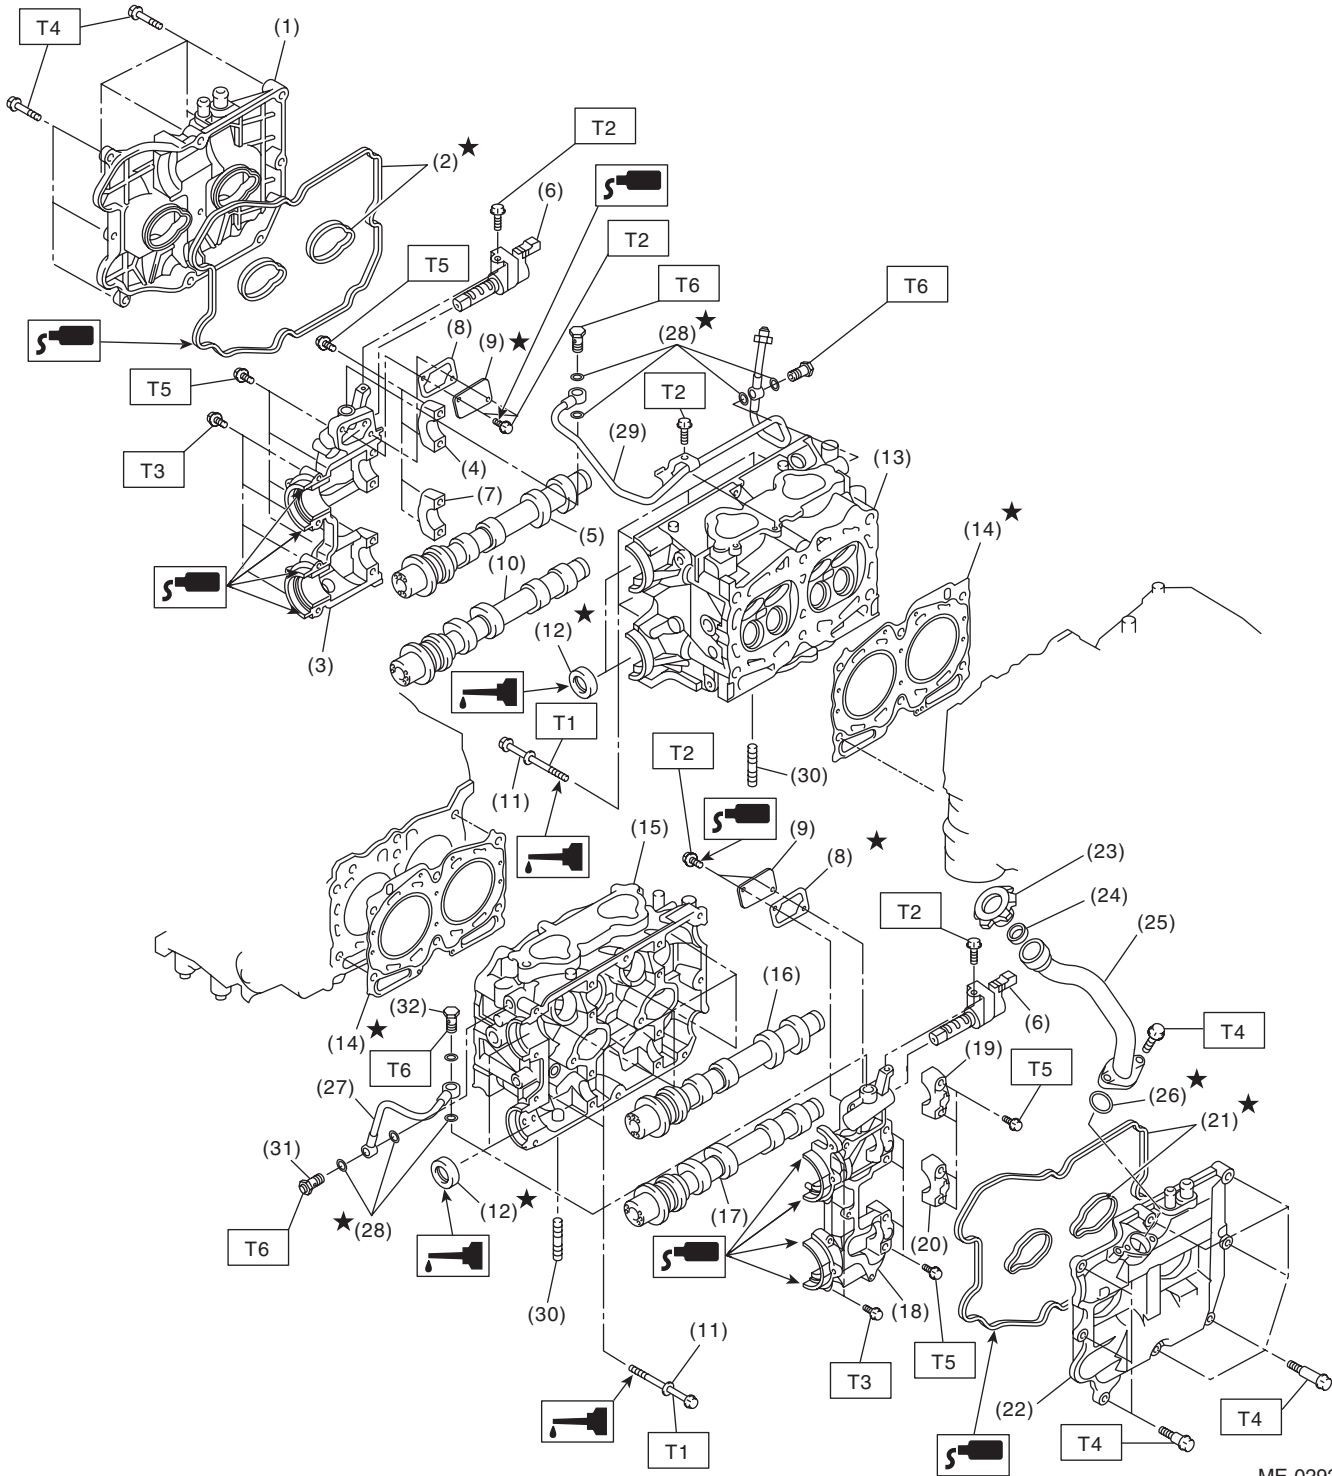
T6: <Ref. to ME(H4DOTC)-39, INSTALLATION, Crank Pulley.>

T7: 6.4 (0.65, 4.7)

General Description

MECHANICAL

2. CYLINDER HEAD AND CAMSHAFT



ME-02924

ME(H4DOTC)-6

General Description

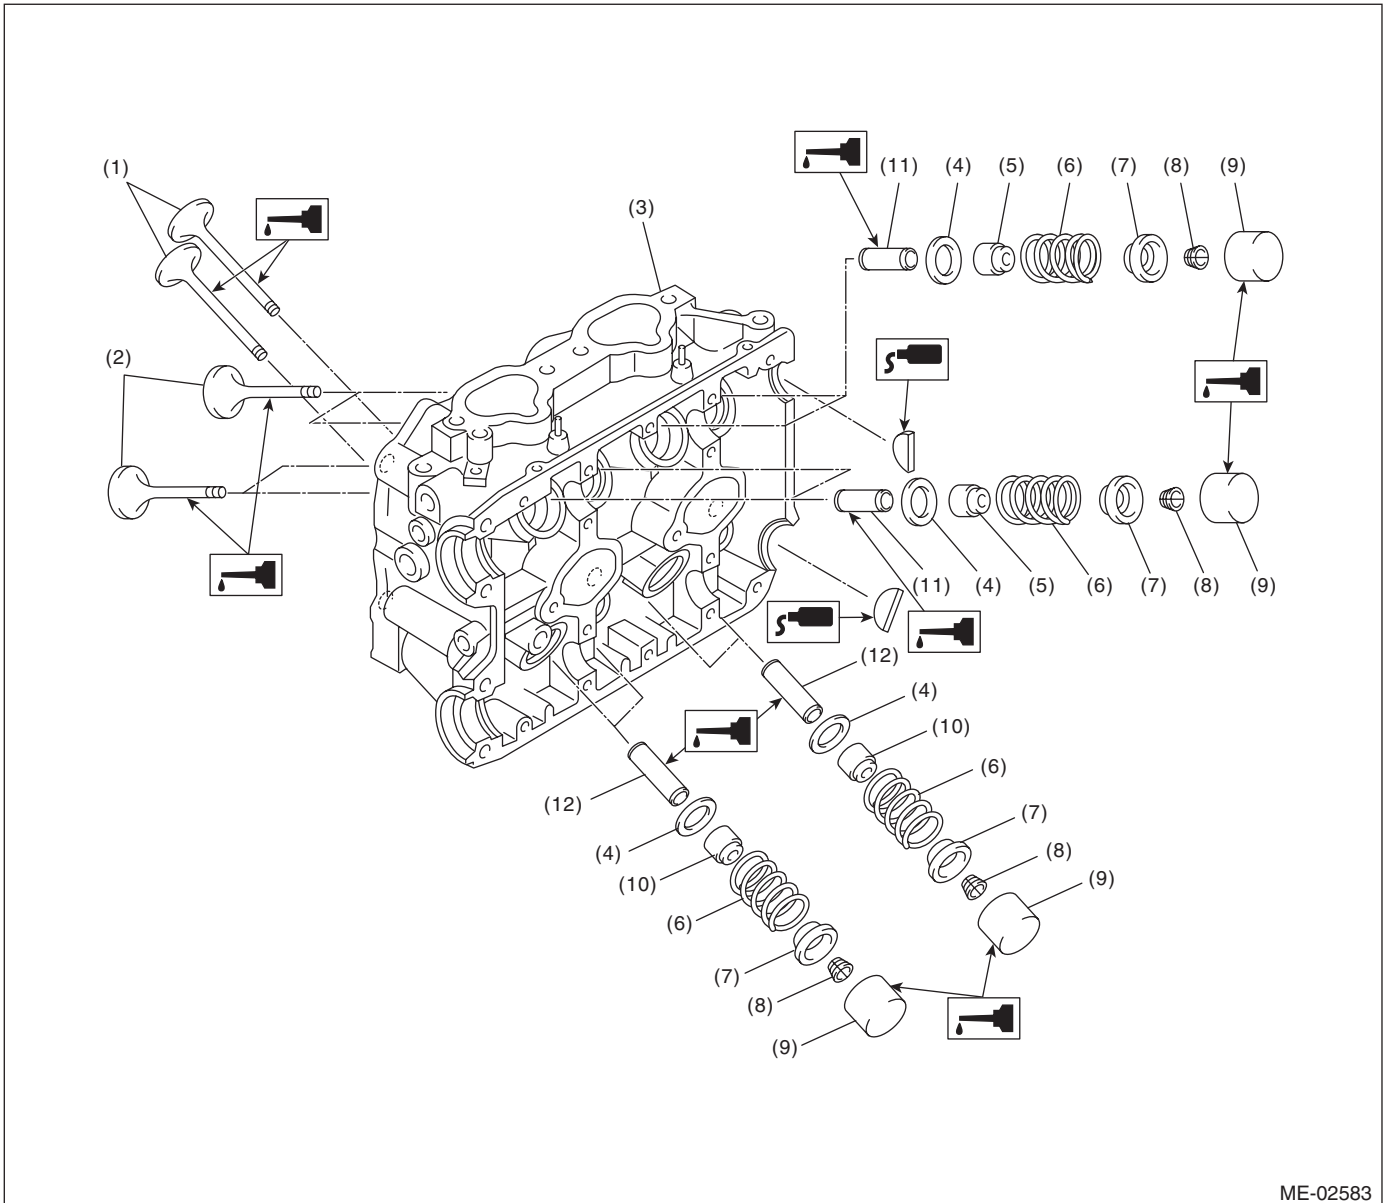
MECHANICAL

(1) Rocker cover (RH)	(16) Intake camshaft (LH)	(31) Union screw (With protrusion)
(2) Rocker cover gasket (RH)	(17) Exhaust camshaft (LH)	(32) Union screw (Without protrusion)
(3) Camshaft cap (Front RH)	(18) Camshaft cap (Front LH)	
(4) Intake camshaft cap (Rear RH)	(19) Intake camshaft cap (Rear LH)	<hr/> Tightening torque: N-m (kgf-m, ft-lb)
(5) Intake camshaft (RH)	(20) Exhaust camshaft cap (Rear LH)	T1: <Ref. to ME(H4DOTC)-57, INSTALLATION, Cylinder Head.>
(6) Oil flow control solenoid valve	(21) Rocker cover gasket (LH)	
(7) Exhaust camshaft cap (Rear RH)	(22) Rocker cover (LH)	T2: 8 (0.8, 5.9)
(8) Gasket	(23) Oil filler cap	T3: <Ref. to ME(H4DOTC)-53, INSTALLATION, Camshaft.>
(9) Oil return cover	(24) Gasket	
(10) Exhaust camshaft (RH)	(25) Oil filler duct	T4: 6.4 (0.65, 4.7)
(11) Cylinder head bolt	(26) O-ring	T5: <Ref. to ME(H4DOTC)-53, INSTALLATION, Camshaft.>
(12) Oil seal	(27) Oil pipe (LH)	
(13) Cylinder head (RH)	(28) Gasket	T6: 29 (3.0, 21.4)
(14) Cylinder head gasket	(29) Oil pipe (RH)	<hr/>
(15) Cylinder head (LH)	(30) Stud bolt	

General Description

MECHANICAL

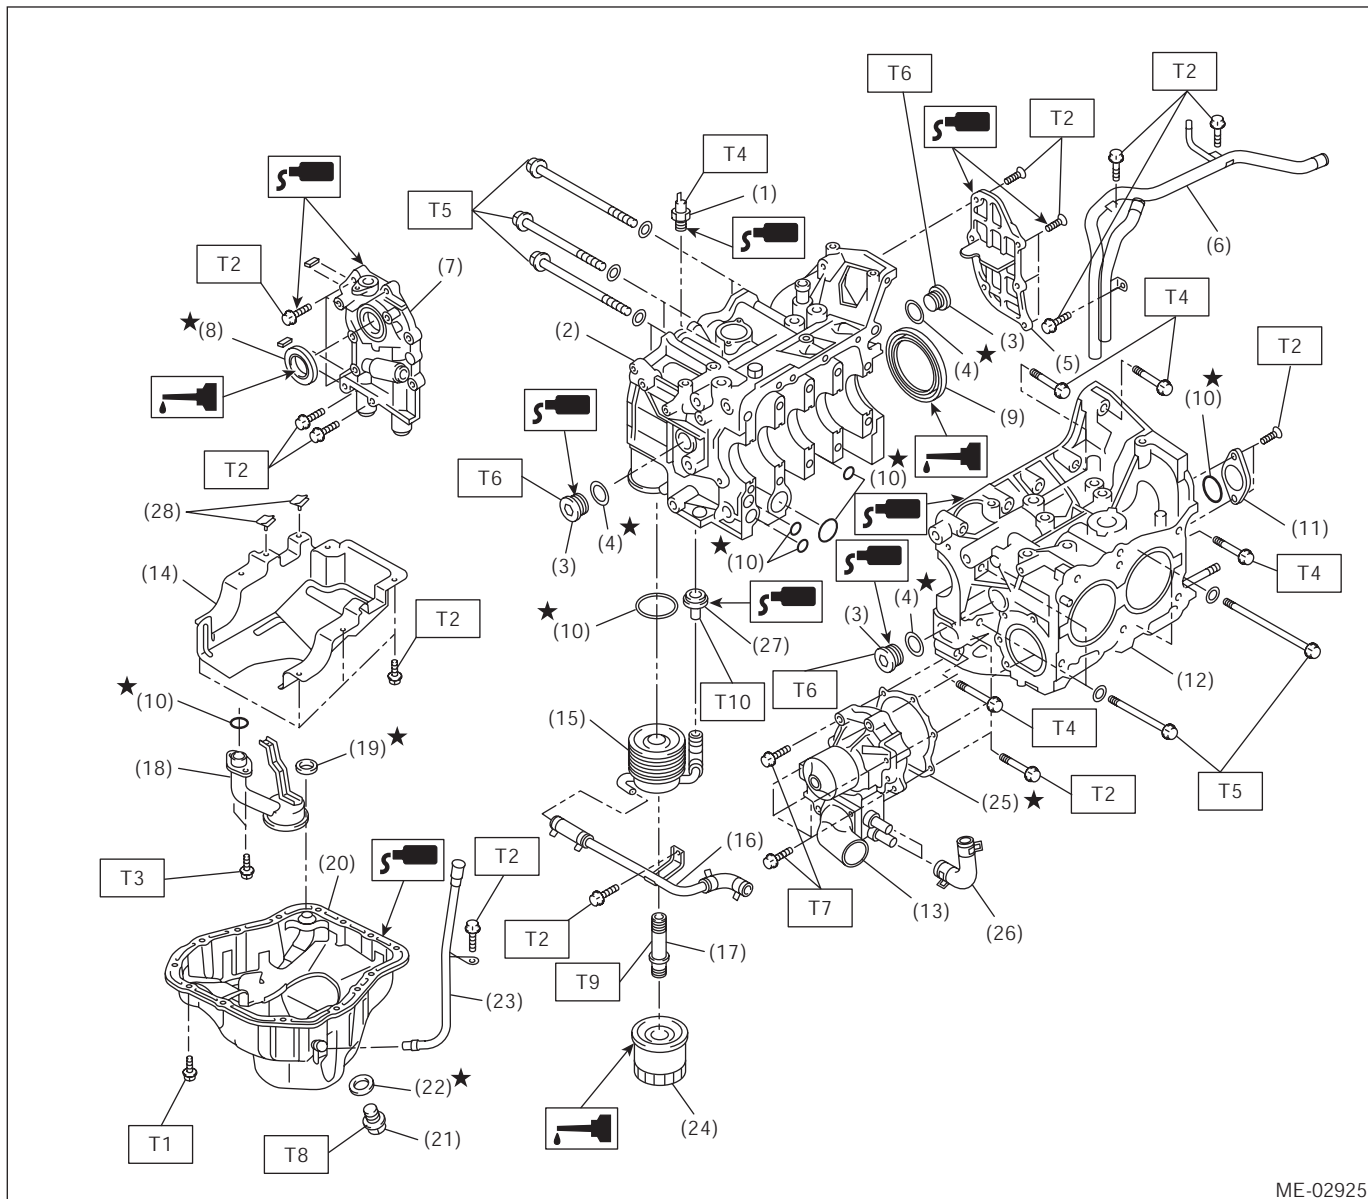
3. CYLINDER HEAD AND VALVE ASSEMBLY



ME-02583

- | | | |
|-----------------------|---------------------------|-----------------------------|
| (1) Exhaust valve | (5) Intake valve oil seal | (9) Valve lifter |
| (2) Intake valve | (6) Valve spring | (10) Exhaust valve oil seal |
| (3) Cylinder head | (7) Retainer | (11) Intake valve guide |
| (4) Valve spring seat | (8) Retainer key | (12) Exhaust valve guide |

4. CYLINDER BLOCK



ME-02925

- | | |
|--------------------------|----------------------------|
| (1) Oil pressure switch | (15) Oil cooler |
| (2) Cylinder block (RH) | (16) Water by-pass pipe |
| (3) Service hole plug | (17) Connector |
| (4) Gasket | (18) Oil strainer |
| (5) Oil separator cover | (19) Gasket |
| (6) Water by-pass pipe | (20) Oil pan |
| (7) Oil pump | (21) Drain plug |
| (8) Front oil seal | (22) Metal gasket |
| (9) Rear oil seal | (23) Oil level gauge guide |
| (10) O-ring | (24) Oil filter |
| (11) Service hole cover | (25) Gasket |
| (12) Cylinder block (LH) | (26) Water pump hose |
| (13) Water pump | (27) Plug |
| (14) Baffle plate | (28) Seal |

Tightening torque: N-m (kgf-m, ft-lb)

T1: 5 (0.5, 3.6)

T2: 6.4 (0.65, 4.7)

T3: 10 (1.0, 7.2)

T4: 25 (2.5, 18.1)

**T5: <Ref. to ME(H4DOTC)-69,
INSTALLATION, Cylinder
Block.>**

T6: 70 (7.1, 51.6)

T7: First 12 (1.2, 8.9)

Second 12 (1.2, 8.9)

T8: 44 (4.5, 33)

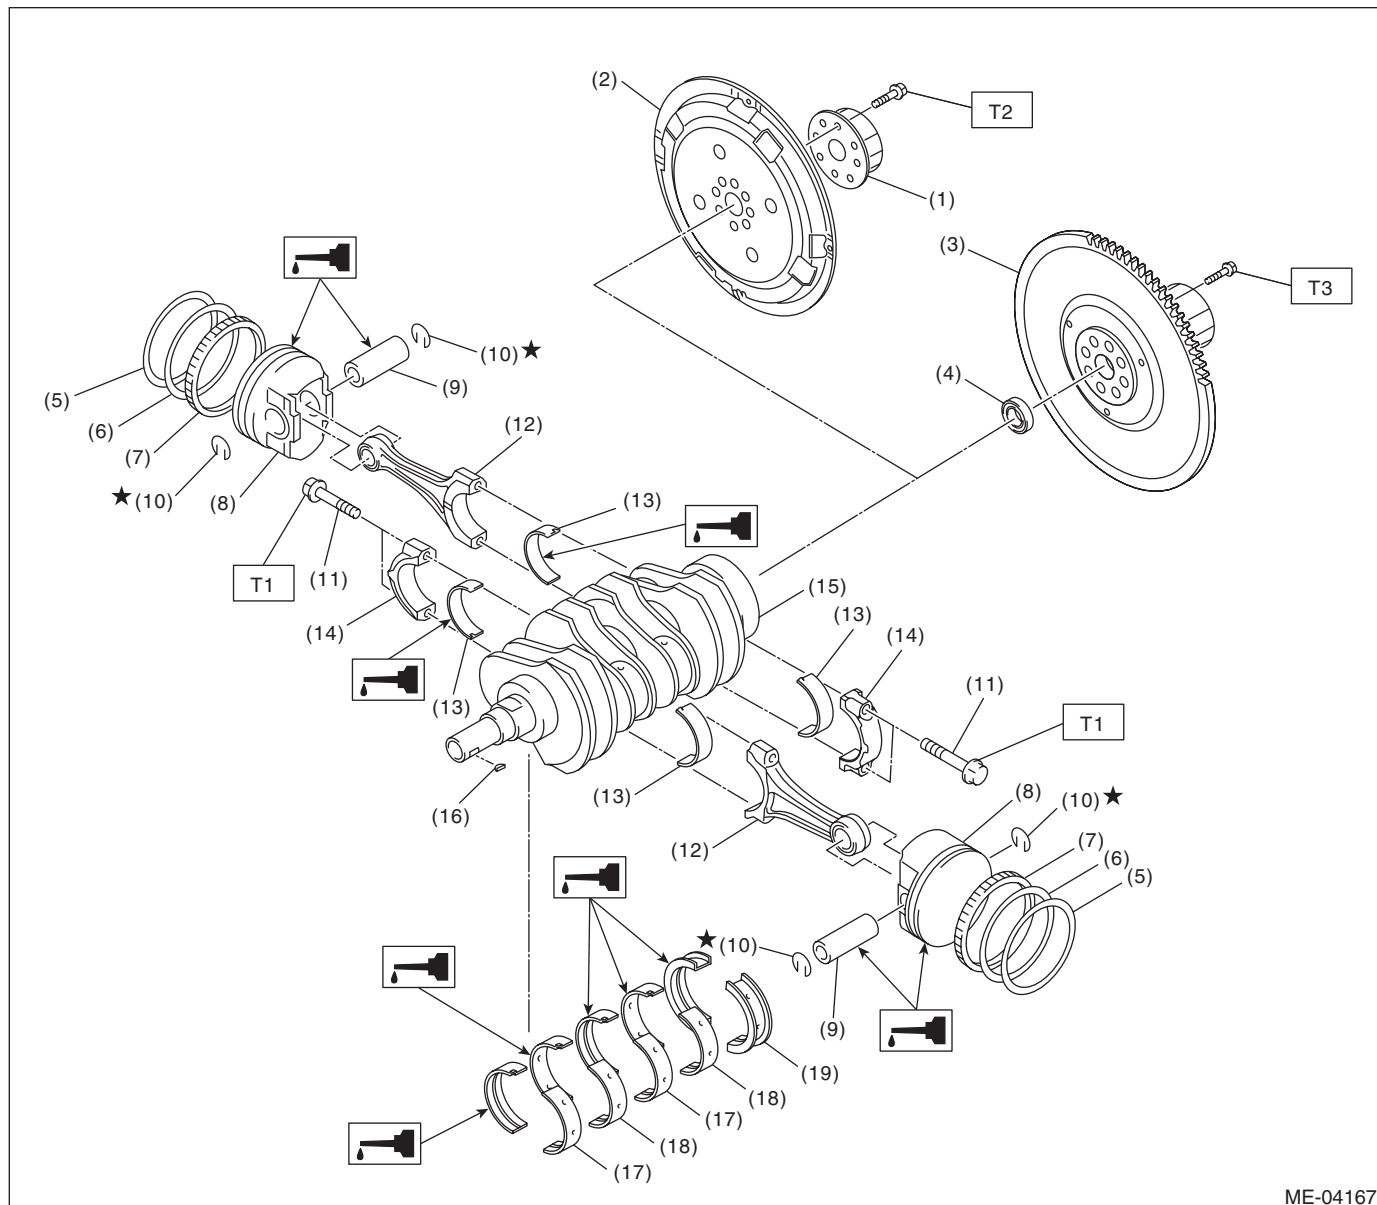
T9: 54 (5.5, 40)

T10: 69 (7.0, 50.9)

General Description

MECHANICAL

5. CRANKSHAFT AND PISTON



ME-04167

- (1) Reinforcement (AT model)
- (2) Drive plate (AT model)
- (3) Flywheel (MT model)
- (4) Ball bearing (MT model)
- (5) Top ring
- (6) Second ring
- (7) Oil ring
- (8) Piston
- (9) Piston pin

- (10) Snap ring
- (11) Connecting rod bolt
- (12) Connecting rod
- (13) Connecting rod bearing
- (14) Connecting rod cap
- (15) Crankshaft
- (16) Woodruff key
- (17) Crankshaft bearing #1, #3
- (18) Crankshaft bearing #2, #4

- (19) Crankshaft bearing #5

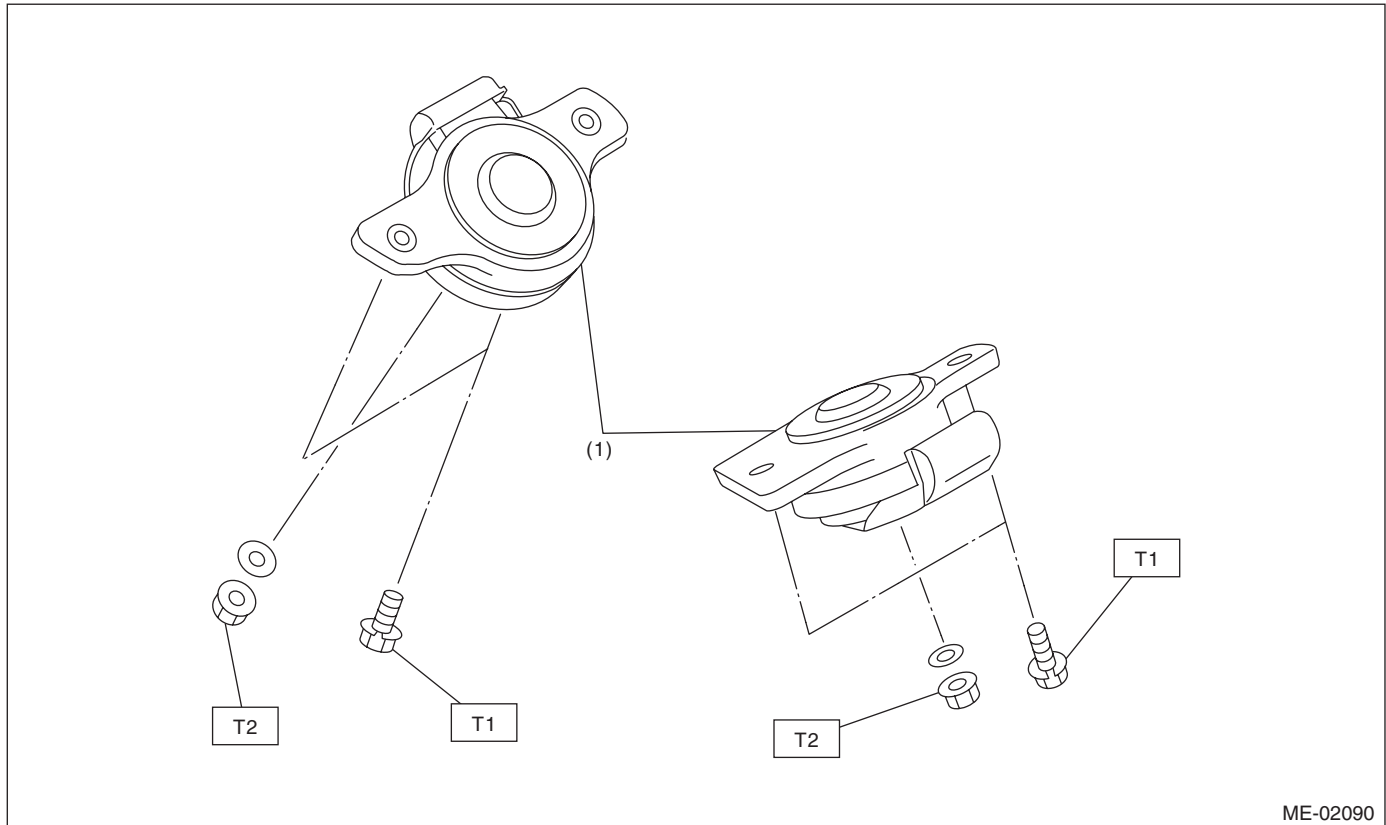
Tightening torque: N-m (kgf-m, ft-lb)

T1: 52 (5.3, 38.4)

T2: <Ref. to 5AT-64, INSTALLATION, Drive Plate.>

T3: <Ref. to CL-13, INSTALLATION, Flywheel.>

6. ENGINE MOUNTING



(1) Front cushion rubber

Tightening torque: N·m (kgf·m, ft·lb)

T1: 35 (3.6, 25.8)

T2: 75 (7.6, 55.3)

C: CAUTION

- Wear appropriate work clothing, including a cap, protective goggles and protective shoes when performing any work.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust and dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from battery.
- All parts should be thoroughly cleaned, paying special attention to engine oil passages, pistons and bearings.

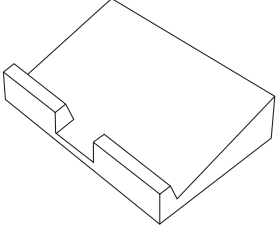
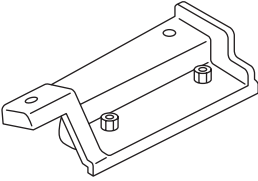
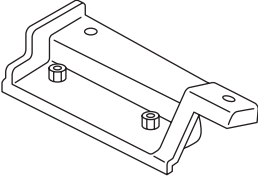
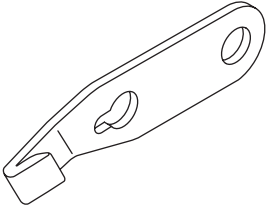
- Rotating parts and sliding parts such as piston, bearing and gear should be coated with oil prior to assembly.
- Be careful not to let oil, grease or coolant contact the timing belt, clutch disc and flywheel.
- All removed parts, if to be reused, should be re-installed in the original positions and directions.
- Bolts, nuts and washers should be replaced with new parts as required.
- Even if necessary inspections have been made in advance, proceed with assembly work while making rechecks.
- Remove or install the engine in an area where chain hoists, lifting devices, etc. are available for ready use.
- Be sure not to damage coated surfaces of body panels with tools, or not to stain seats and windows with coolant or oil. Place a cover over fender, as required, for protection.
- Prior to starting work, prepare the following:
Service tools, clean cloth, containers to catch coolant and oil, wire ropes, chain hoist, transmission jacks, etc.
- Lift-up or lower the vehicle when necessary. Make sure to support the correct positions.

General Description

MECHANICAL

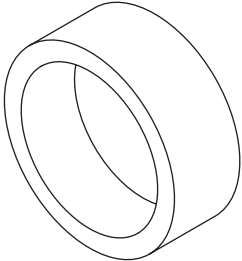
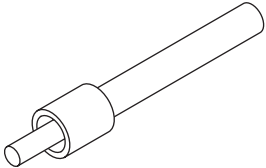
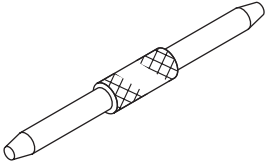
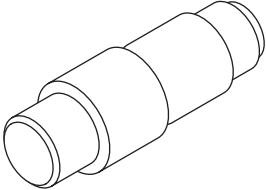
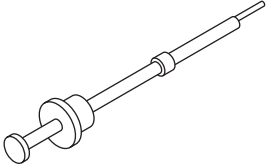
D: PREPARATION TOOL

1. SPECIAL TOOL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-498267600	498267600	CYLINDER HEAD TABLE	<ul style="list-style-type: none">• Used for replacing valve guides.• Used for removing and installing valve spring.
 ST-498457000	498457000	ENGINE STAND ADAPTER RH	Used with ENGINE STAND (499817000).
 ST-498457100	498457100	ENGINE STAND ADAPTER LH	Used with ENGINE STAND (499817000).
 ST-498497100	498497100	CRANKSHAFT STOPPER	Used for stopping rotation of the drive plate when loosening/tightening the crank pulley bolt.

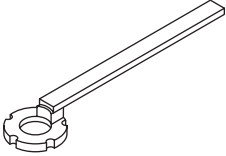
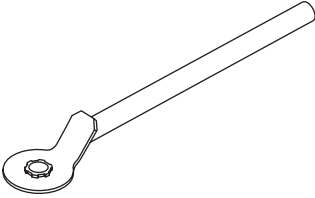
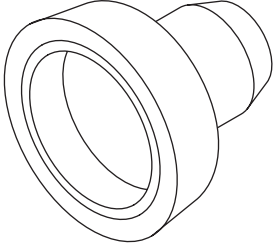
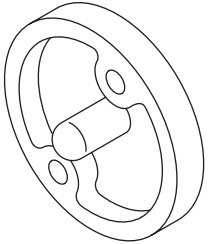
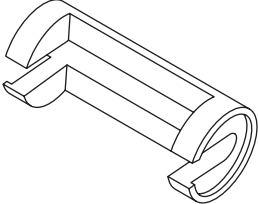
General Description

MECHANICAL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p data-bbox="337 516 467 537">ST-498747300</p>	498747300	PISTON GUIDE	Used for installing the cup to the wheel cylinder piston. (2.5 L model)
 <p data-bbox="337 867 467 888">ST-498857100</p>	498857100	VALVE OIL SEAL GUIDE	Used for press-fitting of intake and exhaust valve guide oil seals.
 <p data-bbox="337 1218 467 1239">ST-499017100</p>	499017100	PISTON PIN GUIDE	Used for installing piston pin, piston and connecting rod.
 <p data-bbox="337 1568 467 1589">ST-499037100</p>	499037100	CONNECTING ROD BUSHING REMOVER AND INSTALLER	Used for removing and installing connecting rod bushing.
 <p data-bbox="337 1919 467 1940">ST-499097700</p>	499097700	PISTON PIN REMOVER ASSY	Used for removing piston pin.

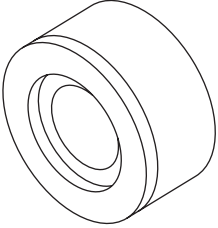
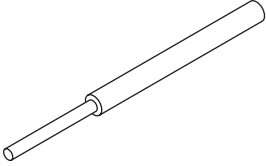
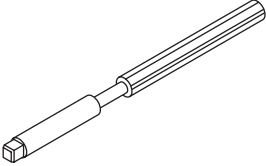
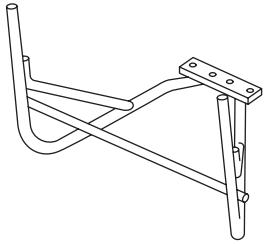
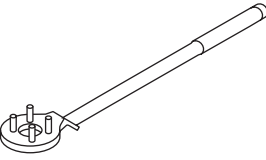
General Description

MECHANICAL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p style="text-align: center;">ST-499207400</p>	499207400	CAM SPROCKET WRENCH	Used for removing and installing exhaust cam sprocket.
 <p style="text-align: center;">ST-499977500</p>	499977500	CAM SPROCKET WRENCH	Used for removing and installing intake cam sprocket.
 <p style="text-align: center;">ST-499587200</p>	499587200	CRANKSHAFT OIL SEAL INSTALLER	<ul style="list-style-type: none"> • Used for installing crankshaft oil seal. • Used with CRANKSHAFT OIL SEAL GUIDE (499597100).
 <p style="text-align: center;">ST-499597100</p>	499597100	CRANKSHAFT OIL SEAL GUIDE	<ul style="list-style-type: none"> • Used for installing crankshaft oil seal. • Used with CRANKSHAFT OIL SEAL INSTALLER (499587200).
 <p style="text-align: center;">ST-499718000</p>	499718000	VALVE SPRING REMOVER	Used for removing and installing valve spring.

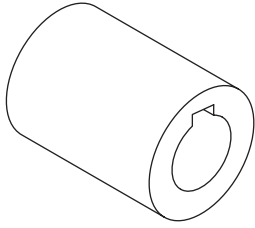
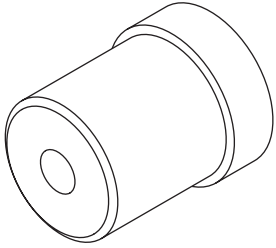
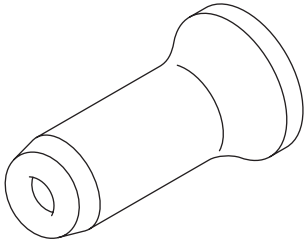
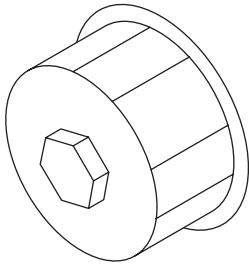
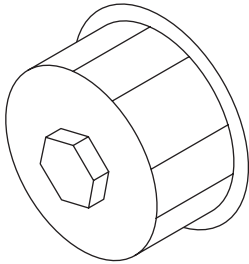
General Description

MECHANICAL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p style="text-align: center;">ST18251AA020</p>	18251AA020	VALVE GUIDE ADJUSTER	Used for installing intake and exhaust valve guides.
 <p style="text-align: center;">ST-499767200</p>	499767200	VALVE GUIDE REMOVER	Used for removing valve guides.
 <p style="text-align: center;">ST-499767400</p>	499767400	VALVE GUIDE REAMER	Used for reaming valve guides.
 <p style="text-align: center;">ST-499817000</p>	499817000	ENGINE STAND	<ul style="list-style-type: none"> • Stand used for engine disassembly and assembly. • Used with ENGINE STAND ADAPTER RH (498457000) & LH (498457100).
 <p style="text-align: center;">ST-499977100</p>	499977100	CRANK PULLEY WRENCH	Used for stopping rotation of crank pulley when loosening/tightening crank pulley bolt.

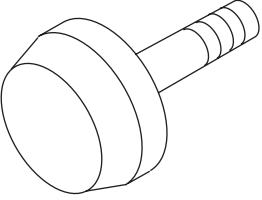
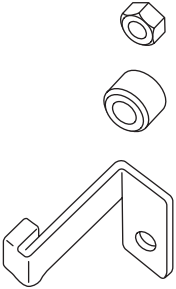

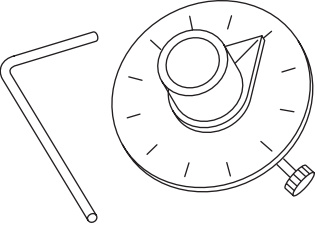
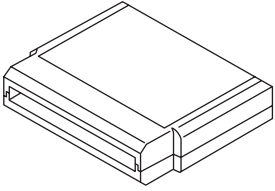
General Description

MECHANICAL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p style="text-align: center;">ST-499987500</p>	499987500	CRANKSHAFT SOCKET	Used for rotating crankshaft.
 <p style="text-align: center;">ST-499587100</p>	499587100	OIL SEAL INSTALLER	Used for installing oil pump oil seal.
 <p style="text-align: center;">ST-499587600</p>	499587600	OIL SEAL INSTALLER	Used for installing camshaft oil seal for DOHC engine.
 <p style="text-align: center;">ST18332AA000</p>	18332AA000	OIL FILTER WRENCH	Used for removing and installing oil filter. (Outer diameter: 68 mm (2.68 in))
 <p style="text-align: center;">ST18332AA010</p>	18332AA010	OIL FILTER WRENCH	Used for removing and installing oil filter. (Outer diameter: 65 mm (2.56 in))


General Description

MECHANICAL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p data-bbox="337 516 467 537">ST-499597200</p>	499597200	OIL SEAL GUIDE	<ul style="list-style-type: none"> • Used for installing camshaft oil seal for DOHC engine. • Used with OIL SEAL INSTALLER (499587600).
 <p data-bbox="337 867 467 888">ST-498277200</p>	498277200	STOPPER SET	Used for installing automatic transmission assembly to engine.
 <p data-bbox="321 1220 474 1241">ST42099AE000</p>	42099AE000	CONNECTOR REMOVER	Used for disconnecting quick connector of the engine compartment.
 <p data-bbox="326 1566 466 1587">ST18854AA000</p>	18854AA000	ANGLE GAUGE	Used for installing the crank pulley.
 <p data-bbox="326 1919 466 1940">ST18482AA010</p>	18482AA010	CARTRIDGE	Troubleshooting for electrical system.

General Description

MECHANICAL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST22771AA030	22771AA030	SUBARU SELECT MONITOR KIT	Troubleshooting for electrical system.

2. GENERAL TOOL

TOOL NAME	REMARKS
Compression gauge	Used for measuring compression.

E: PROCEDURE

It is possible to conduct the following service procedures with engine on vehicle, however, the procedures described in this section are based on the condition that the engine is removed from vehicle.

- V-belt
- Timing belt
- Camshaft
- Cylinder head