

19. Steering Satellite Switch


A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Set the tire to the straight-ahead position.
- 3) Remove the airbag module. <Ref. to AB-17, REMOVAL, Driver's Airbag Module.>

WARNING:

If there are airbag modules mounted, always refer to "Airbag System" when performing airbag module service. <Ref. to AB-17, INSPECTION, Driver's Airbag Module.>

- 4) Remove the steering wheel. <Ref. to PS-14, REMOVAL, Steering Wheel.>
- 5) Remove the cover from steering wheel.
- 6) Remove 1 satellite switch mounting screws each from the left and right sides.

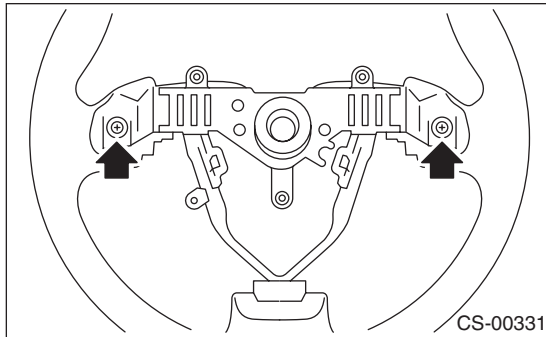

- 7) Remove the satellite switch.


B: INSTALLATION

Install in the reverse order of removal.

Steering Satellite Switch

ENTERTAINMENT

C: INSPECTION

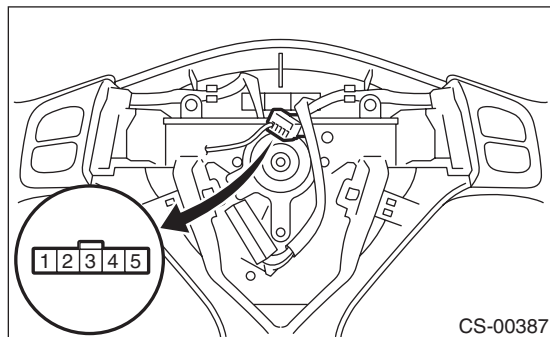

	Step	Check	Yes	No
1	<p>MUTE SWITCH CONTINUITY CHECK.</p> <p>1) Press the mute switch. 2) Measure the resistance between satellite switch connector terminals.</p> <p>Terminals No. 1 — No. 2:</p>	Is the resistance approx. 22 Ω ?	Go to step 2.	Replace the satellite switch.
2	<p>VOLUME SWITCH CONTINUITY CHECK.</p> <p>1) Press the volume switch. 2) Measure the resistance between satellite switch connector terminals.</p> <p>Terminals No. 1 — No. 2: Volume up No. 1 — No. 2: Volume down</p>	Is the resistance approx. 90 Ω ? (Volume up) And is the resistance approx. 200 Ω ? (Volume down)	Go to step 3.	Replace the satellite switch.
3	<p>MODE SWITCH CONTINUITY CHECK.</p> <p>1) Press the MODE switch. 2) Measure the resistance between satellite switch connector terminals.</p> <p>Terminals No. 1 — No. 2:</p>	Is the resistance approx. 360 Ω ?	Go to step 4.	Replace the satellite switch.
4	<p>SEEK SWITCH CONTINUITY CHECK.</p> <p>1) Press the seek switch. 2) Measure the resistance between satellite switch connector terminals.</p> <p>Terminals No. 1 — No. 2: Seek up No. 1 — No. 2: Seek down</p>	Is the resistance approx. 690 Ω ? (Seek up) And is the resistance approx. 1.5 k Ω ? (Seek down)	Go to step 5.	Replace the satellite switch.
5	<p>CHECK SATELLITE SWITCH INSULATION.</p> <p>1) Not to operate the satellite switch. 2) Measure the resistance between satellite switch connector terminals.</p> <p>Terminals No. 1 — No. 2:</p>	Is the resistance approx. 4.7 k Ω ?	Satellite switch is normal.	Replace the satellite switch.

COMMUNICATION SYSTEM

COM

	Page
1. General Description	2
2. Horn System	3
3. Horn	4
4. Horn Switch	5